



Getting to know the appliance

Appliance

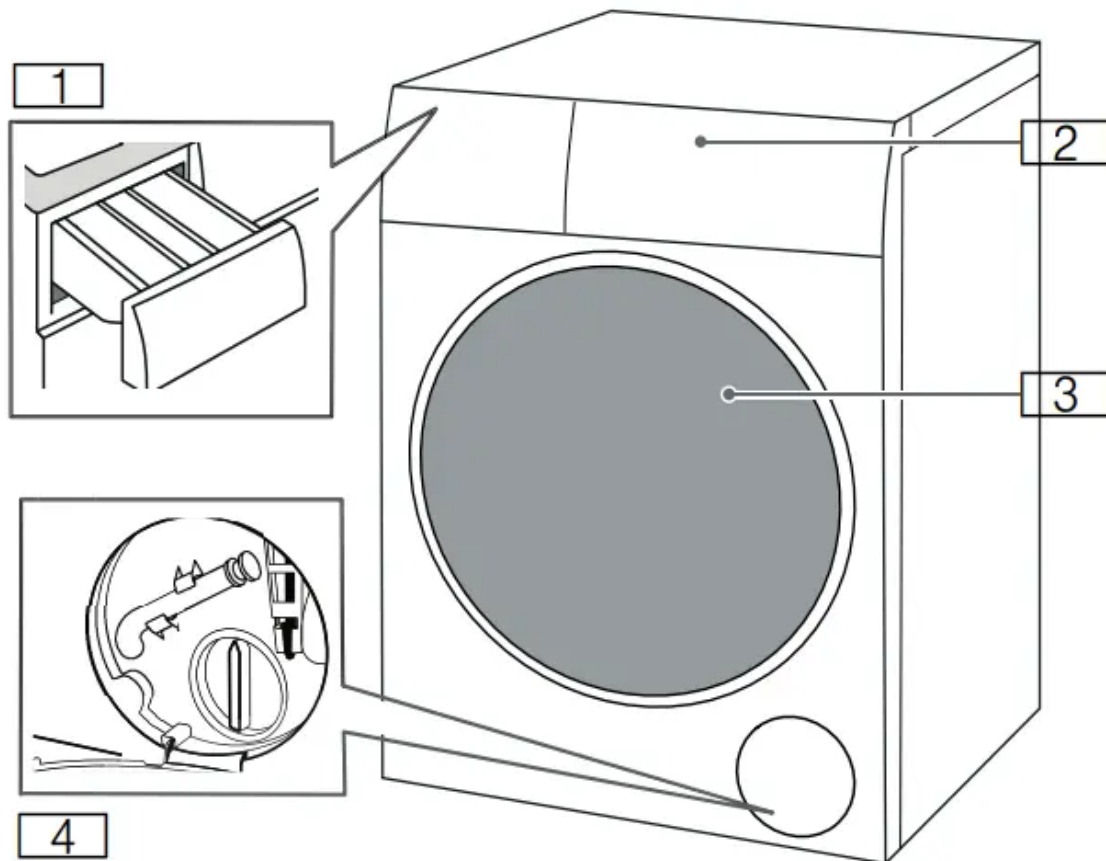


- 1** Detergent drawer
- 2** Control panel
- 3** Loading door
- 4** Service flap

Control panel

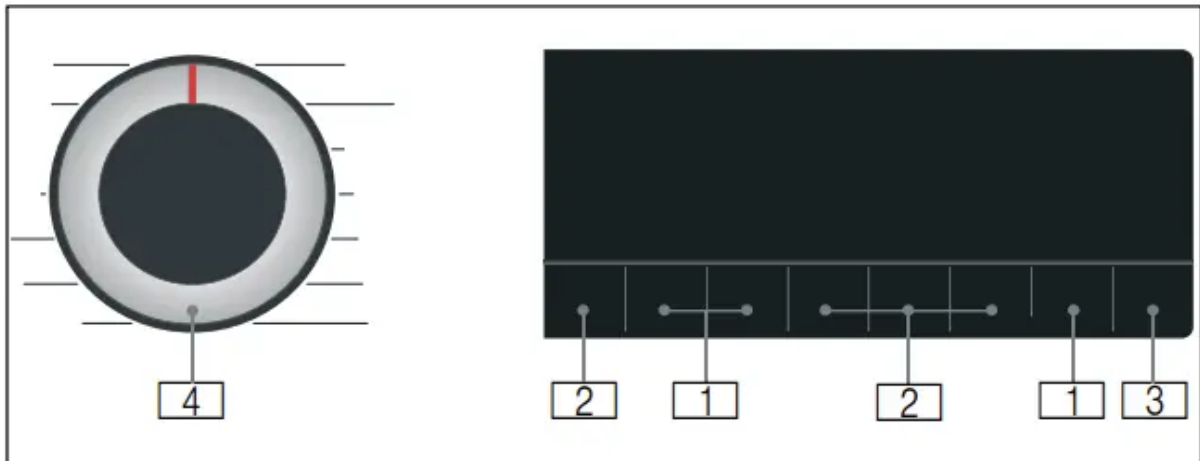

1 Programme default settings can be changed. Overview of all programme default settings
→ Page 33


2 Additional programme settings can be selected. Overview of all additional programme settings → Page 34

3  **Start/Reload** button for starting, interrupting, (e.g. adding laundry) and cancelling a programme.

4 Programme selector for selecting the programme and for switching the appliance on and off.


Display panel

Programme default settings

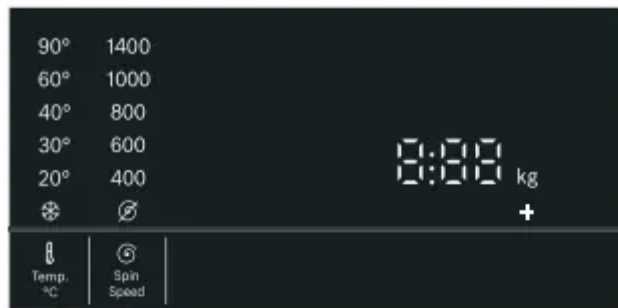


Display	Setting	Description
* - 90°	Temp. °C	Temperature that can be set in °C * = cold
∅ - 1400*	Spin Speed	Spin speed in rpm (revolutions per minute) ∅ = No spin
2:30*	Programme remaining time	Programme remaining time depends on the programme selection in h:min (hours:minutes)
0.5 - 24 h	Finish in/ Time Dry	Programme ends after ... h (h = hours)
9,0* kg/ 6,0* kg	Maximum load for washing/drying	Recommended load in kg
* Depending on the selected model and programme.		

Additional programme settings

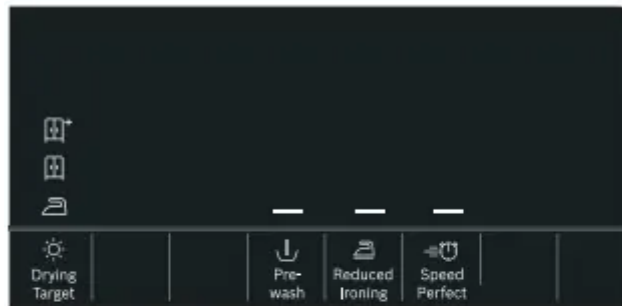

Display	Setting
☀️/☀️/☀️	☀️ Drying Target
—	⬇️ Prewash
—	👕 Reduced Ironing
—	⌚ SpeedPerfect

Status indicators for the programme progress (programme sequence)

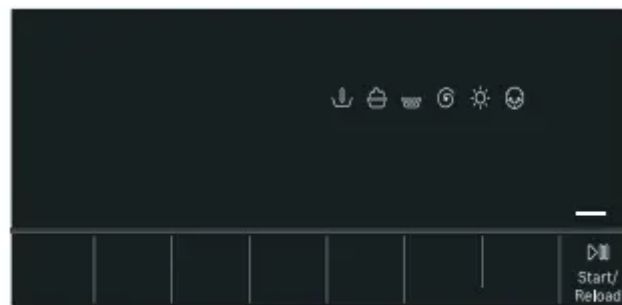

Display	Setting
—	▶️ Start/Reload
⬇️	Prewash
👕	Wash
👕	Rinse
🌀	Spin/Drain
☀️	Dry
😊	Wrinkle guard
End	Programme end

Laundry

Preparing laundry for washing

Protecting your laundry and appliance

Caution! Damage to the appliance/textiles

Foreign objects (e.g. coins, paper clips, needles, nails) may damage the washing or components of the appliance.

The following instructions must be observed when preparing your laundry:

 
- Always follow the manufacturer's instructions when dosing all detergents, cleaning aids, care products and cleaning agents.
- Do not exceed maximum load. Overfilling will impair the washing result.
- Keep detergents and agents for the pretreatment of laundry (e.g. stain remover, prewash sprays, etc.) away from the surfaces of the appliance. Using a damp cloth, immediately remove any fine spray residue and other residue or droplets.
- Empty any pockets. Remove any foreign objects.
- Remove metal parts (paper clips, etc.).
- Trousers, knitwear and knitted textiles, e.g. jersey garments, T-shirts or sweatshirts, should be turned inside out.
- Ensure that underwired bras are appliance-washable.
- Wash delicates in a net or bag (tights, underwired bras, etc).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or place in a net/bag.







Sorting laundry

Sort your laundry according to the care instructions and manufacturer's information on the care labels, depending on:

- Type of fabric/fibre
- Colour

Note: Laundry may discolour. Wash white and coloured items separately. Wash new coloured items separately the first time you wash them.

- Soiling Wash laundry with the same level of soiling together
 - Light: No need to pretreat, adjust the  SpeedPerfect setting if necessary.
 - Normal
 - Heavy: Load less laundry, need to pretreat or soak laundry firstly.
 - Stains: Remove/pretreat stains while they are fresh. First dab with soapy water; do not rub. Then wash the items of laundry with the appropriate programme. Stubborn or dried-in stains can sometimes only be removed by washing several times
- Symbols on the care labels


-  Suitable for normal washing process; e.g. Cottons programme
-  A gentle washing process is required; e.g. Easy Care programme
-  An especially gentle washing process is required; e.g. Delicates/ Silk programme
-  Suitable for washing by hand; e.g. Wool  programme
-  Do not machine wash.

Preparing laundry for drying


Note: To ensure an even drying result, sort the laundry according to the:

- Type of fabric
- Care symbols which are indicated on the care labels.

Only dry laundry which is labelled “dryer-proof” or which has the following care symbols:

 : You can select
 **Intensive Dry**
 : You can select
 **Gentle Dry**

The following textiles must not be dried:


 
-  = care symbol “Do not dry”
- Delicates (silk, synthetic curtains).
- Textiles which contain foam rubber or similar materials.
- Textiles which were treated with flammable liquids, e.g. with stain remover, petroleum ether, thinners. Risk of explosion!
- Textiles which still contain hairspray or similar substances.

Notes

- Before drying, hand-washed textiles must be spun at the appropriate spin speed.
- Before drying, spin at the optimum speed. A spin speed of more than 1000 rpm is recommended for cotton, more than 800 rpm for easycare textiles.
- Do not iron washing immediately after drying. It is recommended to roll the washing up first to distribute residual moisture evenly.
- To ensure a good drying performance, quilts, terry cloths and other large textiles should be dried separately.
- Do not exceed the maximum load.

Starching

Note: Laundry should not be treated with fabric softener.

1. Switch on the appliance.
2. Select the Rinse programme.
3. Measure starch into dispenser  in accordance with the manufacturer's instructions (clean first if necessary).
4. Touch the  Start/Reload button.

Dyeing/bleaching


Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions.

Do not use the appliance to bleach clothes.

Detergents and care products

You can protect your appliance and your laundry by selecting and using the correct detergents and care products.

You can use all detergents and care products which are suitable for your appliance.

Note: Please read the safety information  Page 5 to ensure that you use the appliance safely. The manufacturer's instructions for use and dosage can be found on the packaging.

Notes

- Only use liquid detergents that are self-flowing
- Do not mix different liquid detergents
- Do not mix detergent and fabric softener
- Do not use products which have developed a top layer or are highly congealed
- Do not use products containing solvents, caustic agents or volatile substances (e.g. bleach)
- Use dyes sparingly as salt may damage stainless steel
- Do not use bleaching agents in the appliance

Detergent recommendation




 

 
 
 

This information is intended to help you to choose the right detergent for your items.

 
 
 

 
 


 
 
 
 
 



 
 
 
 
 
 
 


Fabrics	Detergent	Programme	Temperature
Heat-resistant white fabrics made from cotton or linen	Standard detergent with optical brighteners	Cottons	From cold up to 90 °C
Coloured fabrics made from linen or cotton	Detergent for colours without bleach or optical brighteners	Cottons	From cold up to 60 °C
Coloured fabrics made from easy-care fabrics or synthetic materials	Detergent for colours/ delicates without optical brighteners	Easy Care	From cold up to 60 °C
Delicate fabrics made from silk or viscose	Delicates	Delicates/ Silk	From cold up to 40 °C
Wool	Detergent for Woollens	Wool	From cold up to 40 °C




 











 
Tip: Visit cleanright to find further information on detergents, care products and cleaning agents for domestic use.















Overview of programmes

             Selectable programme

 

 

 
Programme/Type of laundry	Options/Information
<p>Name of the programme</p> <p>Brief explanation of the programme and for which fabrics it is suitable.</p>	<p>Max. load for washing/ Max. load for drying</p> <p>Max. load as kg depending on the model and the programme</p> <p>selectable temperature* as °C</p> <p>selectable spin speed* in rpm</p> <p>possible additional programme settings*</p> <p>possible setting for drying* (De)selectable ✓, not selectable -</p> <p>softener</p>
<p>Cottons</p> <p>Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.</p> <p>Notes</p> <ul style="list-style-type: none"> ■ The symbol  (drum clean information signal) flashes if you have not used any programme at a temperature of 60°C or higher for an extended period. Do not load any laundry, and select the Cottons 90°C programme to clean and care for the drum and the outer tub, then the symbol will disappear. → <i>Page 44</i> ■ Switching the drum clean information signal on/off. → <i>"Appliance settings" on page 39</i> 	<p>9,0 (5,0**) kg/6,0 kg</p> <p>* - 90 °C</p> <p>400 - 1400 rpm</p> <p> Prewash,  Reduced Ironing,  SpeedPerfect</p> <p> Drying Target ✓ ( ✓,  ✓,  ✓)</p> <p>possible</p>
<p>* Depending on the model and the programme.</p> <p>** Reduced load with  SpeedPerfect additional programme setting.</p>	


Programme/Type of laundry	Options/Information
Eco 40-60 Suitable for washing normally soiled cotton, linen and mixed fabric textiles, and drying it to be immediately stored in a cupboard. Notes <ul style="list-style-type: none"> Textiles which are washable based on the laundry symbol from 40°C  up to 60°C  can be washed together in the same cycle. The washing performance conforms to the highest possible washing performance class as defined by the legal standards. To reach the optimal energy efficiency with the best possible washing performance, the washing temperature is automatically adjusted according to the load capacity and cannot be changed. Wash and dry programme can be achieved by selecting Eco 40-60 programme and activating ☀ Drying Target. 	9,0 kg/6,0 kg - 400 - 1400 rpm  Prewash,  Reduced Ironing ☀ Drying Target ✓ ( + ✓,  ✓,  ✓) possible
Easy Care Textiles made of synthetic materials or blended fabrics.	4,0 kg/2,5 kg * - 60 °C 400 - 1400 rpm  Prewash,  Reduced Ironing,  SpeedPerfect ☀ Drying Target ✓ ( + ✓,  ✓,  ✓) possible
Mixed Load Mixed load of cottons and synthetic fabrics.	4,0 kg/2,5 kg * - 60 °C 400 - 1400 rpm  Prewash,  Reduced Ironing,  SpeedPerfect ☀ Drying Target ✓ ( + ✓,  ✓,  ✓) possible
AllergyPlus Hard-wearing fabrics made of cotton or linen. Note: Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	6,5 kg/5,0 kg * - 60 °C 400 - 1400 rpm  Prewash,  Reduced Ironing,  SpeedPerfect ☀ Drying Target ✓ ( + ✓,  ✓,  ✓) possible


Programme/Type of laundry	Options/Information
Super Quick 15'/ Wash & Dry 60' For small amount lightly soiled garments made of cotton, linen, synthetic or blended fabrics. Approx. 15 mins for washing. If drying function is selected, it's followed by another approx. 45 mins drying process. Note: The default programme is Super Quick 15' . You can switch to Wash & Dry 60' programme by touching  Drying Target button.	2,0 kg/1,0 kg * - 40 °C 400 - 1000 rpm -  Drying Target ✓ (☒ ⁺ -, ☒ ✓, ☒ -) possible
Rinse For rinsing with a subsequent spin cycle.	-/ -  - 1400 rpm  Reduced Ironing  Drying Target ✓ (☒ ⁺ ✓, ☒ ✓, ☒ ✓) possible
Spin/Drain For spinning with a selectable spin speed and subsequent draining. If you have selected  , it will run Drain programme, the water is only drained after rinse process, no spin cycle.	-/ -  - 1400 rpm  Reduced Ironing  Drying Target ✓ (☒ ⁺ ✓, ☒ ✓, ☒ ✓) not possible
Wool  Hand- or appliance-washable fabrics that are made of wool or contain wool; particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water). Note: In order to prevent clothing shrink, after drying still contain a small amount of water, please take out the clothes as soon as possible after the end of the programme to dry.	2,0 kg/1,0 kg * - 40 °C  - 800 rpm -  Drying Target ✓ (☒ ⁺ -, ☒ -, ☒ ✓) possible
Delicates/Silk For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blends (e.g. silk blouses, silk scarves).	2,0 kg/- * - 40 °C  - 800 rpm  Prewash,  Reduced Ironing  Drying Target - possible


Programme/Type of laundry	Options/Information
Iron Assist  Odor removal and wrinkle reduction program, suitable for wool, linen, suits, etc. which do not need frequent washing. Notes <ul style="list-style-type: none"> It is recommended to hang the clothing in a ventilated environment for 3-5mins after program finished. In case of continuously using the refresh program, it is recommended to run a washing cycle between each refresh program cycle to remove odor from the appliance. The detergent can not be added for this programme. 	-/1,0 kg - - - ☀ Drying Target - not possible
☀ My Time Dry Mixed fabrics; for lightly soiled laundry made of cotton and synthetics. The length of the programme can be set each time from the minimum 20 minutes. The maximum programme length is 120 minutes, it can be reduced in 10-minute increments. Notes <ul style="list-style-type: none"> The  Finish in/ Time Dry programme default setting can not be selected for this programme. This programme is only used for drying process, the detergent can not be added. It is recommended to use automatic drying function to get better drying result and save energy. 	-/6,0 kg - - - ☀ Drying Target - not possible
☀ Gentle Dry Single gentle dry programme for drying garments with lower temperature, - by selecting  to achieve automatic cupboard+ dry result, - by selecting  to achieve automatic cupboard dry result, - by selecting  to achieve automatic iron dry result.	-/2,5 kg - - - ☀ Drying Target ✓ ( ✓,  ✓,  ✓) not possible
☀ Intensive Dry Single normal dry program for drying garments with higher temperature, - by selecting  to achieve automatic cupboard+ dry result, - by selecting  to achieve automatic cupboard dry result, - by selecting  to achieve automatic iron dry result.	-/6,0 kg - - - ☀ Drying Target ✓ ( ✓,  ✓,  ✓) not possible


Drying table


Recommended drying programme	Drying load (kg)	Estimated drying time (min)		
		 (IronDry)	 (CupboardDry)	 (CupboardDry+)
 Intensive Dry	1.0-2.0	45-60	50-80	65-100
	2.0-4.0	60-90	80-140	100-160
	4.0-6.0	90-140	140-200	160-270
 Gentle Dry	0.5-1.5	35-45	50-70	65-100
	1.5-2.5	45-55	70-100	100-125


 Drying time table is only for reference. For wash + dry program, washing duration shall be added for total program time

 The time listed above is the reference value, the actual drying effect may be affected by the clothing type, clothing weight, dehydration degree and ambient temperature.

 In order to achieve uniform drying effect, it is recommended to distinguish between heavy and lightweight clothing. For example, separate the thick towel and the shirt to dry.

  (CupboardDry+) is recommended for drying bulky or heavy clothing.

 In order to reduce the folding of clothing after drying, it is recommended to put a small amount of clothing drying.

 Please refer to the panel display for the drying time of the programme not mentioned in the table above.

Programme default settings



Program default settings You can change the default settings for selected programmes. The settings can be changed even while the selected programme is running. The effects depending on the progress of the programme.

Temp.°C

Before and after the programme starts, you can change the temperature setting, depending on what stage the programme is in, by adjusting the desired temperature on the display. The maximum temperature that can be set depends on the programme that has been selected.

Spin Speed

Depending on what stage the programme is in, you can change the spin speed (in rpm; revolutions per minute) before and during the programme by adjusting the desired speed on the display.

setting  :  = "No spin". The rinsing water is drained but there is no final spin. The laundry stays wet inside the drum, e.g. for items that should not be spun.




You can select "No spin" to prevent creasing if the laundry will not be taken out of the appliance immediately after the programme has ended.

The maximum speed that can be set depending on the model and the programme that has been selected.

Finish in/Time Dry



 
Before starting the programme, you can preselect the programme end ("Finish in" time) in 0.5h (h = hour) increments (between "minimum selectable ending time" and 9.5h) or 1 hour increments (between 10h and 24h) up to a maximum of 24 hours.

To do this:

1. Select a programme (except  My Time Dry* programme). The programme duration is displayed for the selected programme, e.g. 2:30 (hours:minutes).
2. Select the  Finish in/Time Dry button repeatedly until the required number of hours is displayed.
3. Select the  Start/Reload button. The programme starts. The selected number of hours (e.g. 8h) is shown in the display panel and counts down until the programme starts. The duration of the programme is then displayed.

Note: The length of the programme is automatically adjusted when the programme is running. Changes to the programme default settings or additional programme settings may also change the programme duration.

After starting the programme (if a "Finish in" time has been selected and the programme has not yet started), you can change the preselected number of hours as follows:

1. Select the  Start/Reload button.
2. Select the  Finish in/Time Dry button repeatedly to change the number of hours.
3. Select the  Start/Reload button.

Additional programme settings

Note: You can find possible additional programme settings in the overview; these differ depending on the model.


By selecting additional programme settings, you can better adapt the washing/drying process to your items of laundry.


The settings can be selected or deselected depending on the progress of the programme.

 
The button indicator lamps light up if a setting is activated.


The settings are not retained after the appliance is switched off.





Drying Target

Touch  Drying Target to activate or deactivate the drying function. Washing and drying without interruption is possible when the function is activated (only for Optional drying programmes). There are three drying target mode can be selected as desired:

 (CupboardDry): For single-layer fabrics. Garments can be folded or hung up in a cupboard. It is the standard drying target mode. In this mode the drying time is automatically set according to the amount of laundry to be dried.

 (CupboardDry+): For fabrics made of thick, multilayered items of clothing, which need to be dried longer. Garments can be folded or hung up in a cupboard. Laundry more dry than Cupboard dry.

   (IronDry): For delicate laundry. Fabrics suitable for ironing (iron fabrics in order to avoid creasing). Garments can be additionally hung up to dry.


The drying process would proceed followed washing process when the  Drying Target activated. If you only need the individual drying programme, you can select  Intensive Dry,  Gentle Dry or  My Time Dry.

Notes

- Do not exceed the maximum loads for drying. Overview of programmes → "Selectable programme" on page 28
- Maximum spin speed for programme with drying phase will be selected automatically to obtain a good drying result.

Prewash


Prewash for heavily soiled laundry.


Touch  Prewash to activate or deactivate it.

Note: Put the detergent into dispenser I and II.

 
Reduced Ironing


A special operation using reduced spin speed followed by fluffing to help reduce creasing.

Touch  Reduced Ironing to activate or deactivate it.

Note: If  Reduced Ironing has been activated, the laundry will have retained a higher than average level of moisture after spinning.

SpeedPerfect

 Washing in a shorter time while achieving a washing result that is consistent with the normal performance. Touch  SpeedPerfect to activate or deactivate this additional programme setting.

Note: With the  SpeedPerfect additional programme setting activated, the maximum load of washing will be reduced, and extra water will be needed for the washing process.

Operating the appliance

Preparing the appliance

The appliance was tested before delivery. To remove residual water from the test procedure, the first wash cycle should be run without laundry using the Cottons 90°C programme.

→ "Before washing for the first time" on page 20

Notes

- Never switch on a damaged appliance!

- Inform customer service!


1. Insert mains plug.

Warning Risk of death from electric shock! Risk of death if live parts are touched.

- Never pull out the mains plug by tugging the power cord.

- Insert/pull out the mains plug with dry hands only.

2. Turn the water tap on.

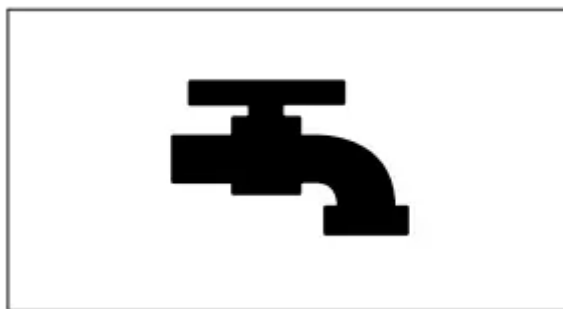

3. Open the appliance door.



Select programme/switch on the appliance

Note: If you have activated the childproof lock, you must first deactivate it before you can set a programme.

Use the programme selector to select the required programme. The programme selector can be rotated in either direction.


The appliance is switched on.

The programme default settings for the selected programme alternately appear in the display panel:

- The maximum load and
- the duration of the programme and
- ...

Placing laundry into the drum

Open the door, place laundry in the drum, make sure that no items of laundry are trapped between the door and the rubber seal, and close the door.

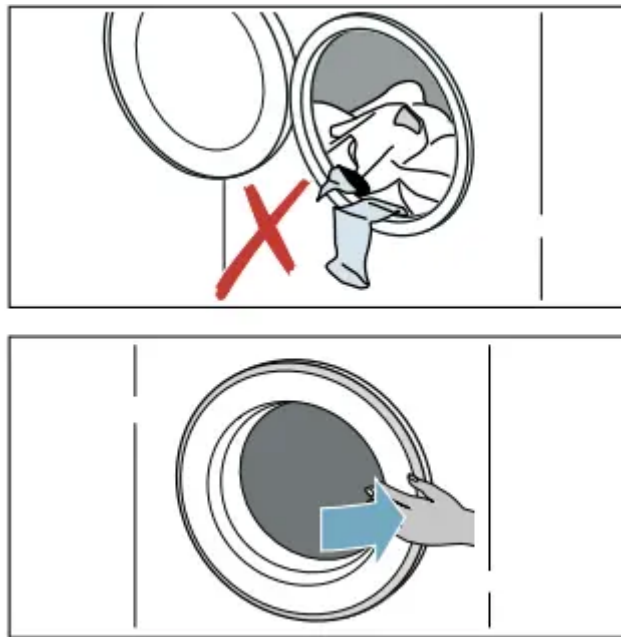

Notes

- Unfold and load presorted items of laundry. Mix large and small items. Washing items of different size distribute themselves better during the spin cycle. Individual items of washing may cause an unbalanced load.
- Observe the maximum specified load. Overfilling adversely affects the washing/drying result and promotes creasing.

Dosing and adding detergent and care products

Caution!

Damage to the appliance

Detergents and agents for the pretreatment of laundry (e.g. stain remover, prewash sprays, etc.) may damage the surfaces of the appliance. Keep these agents away from the surfaces of the appliance. Using a damp cloth, immediately remove any fine spray residue and other residue/droplets.

Dosing

Dose the detergents and care products according to:


- water hardness (ask your water supply company),
- the manufacturer's specifications on the packaging,
- the amount of laundry,
- soiling.

Filling the dispensers


1. Pull out the detergent drawer.

Warning Eye / skin irritation! If the detergent drawer is opened while the appliance is running, detergent/care product may run out. Carefully open the drawer. If detergent/care product comes into contact with eyes or skin, rinse thoroughly. If accidentally swallowed, seek medical advice.

2. Pour in detergent and/or cleaning product.

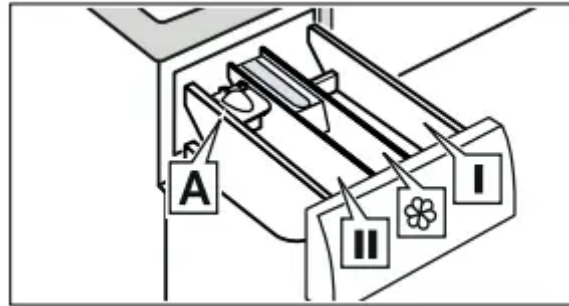

Dispenser I Detergent for pretreat and clothing disinfectant. (only for the appliance with pretreat and disinfectant function)

Dispenser  Softener, starch. Do not exceed the maximum load.

Dispenser II Detergent for main wash, water softener, bleach, stain remover.

Dispenser A* For dosing liquid detergent.

*depending on the model

Notes


- Always follow the manufacturer's instructions when dosing all detergents, cleaning aids, care products and cleaning agents.
- Dilute viscous fabric softener and fabric conditioner with water. This will prevent blockages.
- Be careful when opening the detergent drawer while the appliance is running.

Measuring aid A* for liquid detergent


*depending on the model

Position the measuring aid A for measuring the correct amount of liquid detergent:

1. Pull out the detergent drawer. Press down the insert and fully remove the drawer.

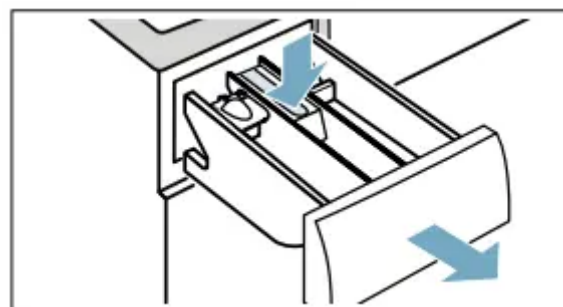

2. Slide the measuring aid forwards, fold it down and click it into place.

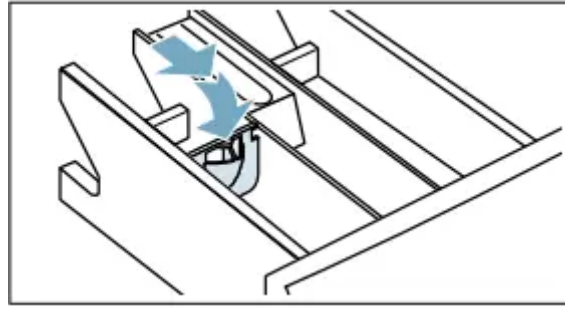


3. Reinsert the drawer.

Note: Do not use the measuring aid for gel detergents and washing powder, or for programmes with pretreat or when "Finish in" time is selected.

For models without a measuring aid, pour the liquid detergent into the appropriate dispenser and place it in the drum.

 Starting the programme




Touch and hold  Start/Reload button for 1~2 seconds, then release the button. The programme starts and the appliance door is locked.

The finish-in time is shown in the display panel and counts down until the programme starts. After the programme has started, the programme duration is displayed. And the symbols for the programme progress are lighting up.

Childproof lock

 You can lock the appliance to prevent the settings you have set from being changed inadvertently. To do this, activate the childproof lock.

To activate the childproof lock:



After the programme starts, Touch and hold the  SpeedPerfect and  Finish in/Time Dry buttons for 3 seconds. The symbol  lights up in the display panel.

Adding/removing laundry

After starting the programme (only for washing), you can add or remove laundry if necessary.

Touch the  Start/Reload button. The appliance checks whether reloading is possible.

If the following appears on the display panel:

- The symbol  disappears, reloading is possible.
- The symbol  lights up, reloading is not possible.

 
 
To continue the programme, touch the  Start/Reload button. The programme continues automatically


Notes

- Do not leave the door open for too long when adding laundry as water from the laundry may leak out.
- For safety reasons, the door remains locked when the water level or temperature is high, or while the drum is turning, and it is not possible to add laundry during this time.

Changing the programme



If you have started the wrong programme by mistake, you can change the programme as follows:

 1. Touch the  Start/Reload button.
2. Select another programme.
3. And touch the  Start/Reload button again. The new programme starts from the beginning.



Note: If drying is activated, after touching the  Start/Reload button, when the **Hot** is displayed, waiting for the appliance running to cool down the laundry till the **Hot** disappears, then select another programme.

Cancel the programme

  
For programmes washing at high temperatures:

1. Touch the  Start/Reload button.
2. To cool down laundry: Select Rinse.
3. Touch the  Start/Reload button.

  
For programmes washing at low temperatures:


1. Touch the  Start/Reload button.
2. Select Spin/Drain.
3. Touch the  Start/Reload button.

 For programmes in drying process:


1. Touch the  Start/Reload button.
2. If the **Hot** on the display panel, waiting for the appliance running to cool down the laundry till the **Hot** disappears.

Programme end

End lights up on the display and — and  displays are off.

If you have selected , the water is only drained after rinse process, no spin cycle.

Notes

- If *Hot* flashes in the display before the drying programme ends, the temperature in the drum is high. The programme for cooling the drum runs until the temperature in the drum has dropped.
- If you do not take laundry out within mins after drying process finished, wrinkle guard process will start to prevent laundry getting wrinkled. The process lasts about 30 minutes. 0:00, *WRP*, *to* and *End* will be displayed alternately on the display and  symbol will be displayed as the status symbol. You can touch any button to terminate this process, then the door will be released and laundry can be taken out.


Removing laundry/switching off the appliance

1. Set programme selector to Off.
2. Open the door and remove the laundry.
3. Turn off the water tap.

Note: Not required for Aqua-Stop models.

Notes

- Do not leave any items of laundry in the drum. They may shrink in the next wash or discolour another item.
- Remove any foreign objects from the drum and the rubber seal – risk of rusting.
- Wipe the rubber seal dry.

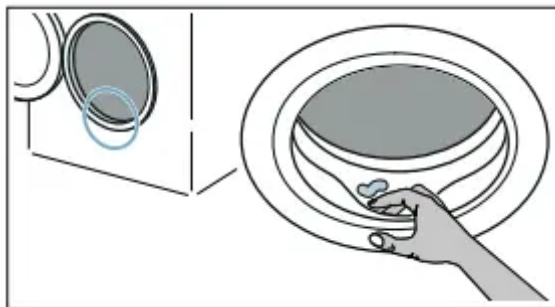

- Leave the door and detergent drawer open so that any residual water can evaporate.
- Always wait until the programme ends, as the appliance could still be locked. Then switch the appliance on and wait for it to unlock.

Appliance settings

You can change the following settings:



- The volume of the end signal.
- The volume of the button signal.
- Switching the drum care information signal on/off.

You will need to activate the setting mode in order to change these settings.




1/2/3/4... positions on the programme selector

Activate setting mode:

1. Set the programme selector to position 1. The appliance is switched on.
2. Touch and hold the  Spin Speed button and, at the same time, turn the programme selector clockwise to position 2. Release the  Spin Speed button.

The setting mode is activated and the preset setting appears in the display panel.

Changing the volume and drum care information

Use the  Finish in/ Time Dry button to change the following settings at the corresponding programme selector positions:

- 2: The volume of the end signal.
- 3: The volume of the button signals.



0 = off, 1 = quiet, 2 = medium, 3 = loud, 4 = very loud

- 4: Switching the drum care information signal on/off.

On on
OFF off

Exiting setting mode

You can now end the process and set the programme selector to the Off position. The settings are saved.

Cleaning and maintenance

Warning Risk of death! There is a risk of electric shock if touch live components. Turn the programme selector to Off. Pull out the mains plug.

Caution! Fire and explosion hazard! Toxic vapours can be produced by cleaning agents that contain solvents, e.g. cleaning solvent. Do not use cleaning agents that contain solvents.

Caution! The appliance may be damaged! Cleaning agents that contain solvents, e.g. cleaning solvent, can damage surfaces and components in the appliance. Do not use cleaning agents that contain solvents.

Appliance housing/control panel

- Remove the detergent residue immediately.
- Wipe the housing and the control panel with a soft, damp cloth.
- Do not use abrasive cloths, sponges or detergents (stainless steel cleaner).
- Do not clean the appliance with a water jet.

Drum

Warning Risk of injury/material damage/ damage to the appliance!

Permanently washing at low temperatures and a lack of ventilation for the appliance may damage the drum and cause injury. Regularly run a programme for cleaning the drum or wash at temperatures of at least 60°C. Leave the appliance to dry after every operation with the door open, and leave the detergent drawer to dry.

Use chlorine-free cleaning agents, do not use steel wool. If there are odours in the appliance, or to clean the drum, run the Cottons 90°C programme without laundry.


Descaling

Descaling should not be necessary if the detergent is measured out correctly. However, if it is required, follow the manufacturer's instructions for the descaling agent. Suitable descalers can be obtained via our website or from customer services.


Emptying the detergent draw, cleaning the detergent drawer and its housing

If the appliance contains detergent or fabric softener residues:


1. Pull out the detergent drawer. Press down the insert and fully remove the drawer.

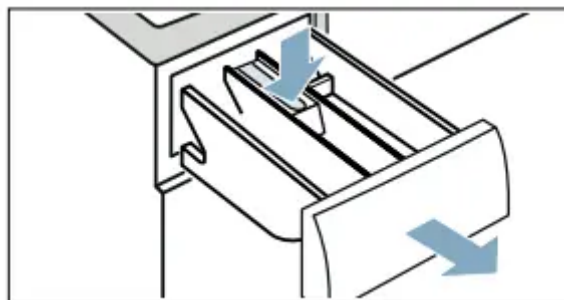


2. To remove the insert: Push the insert upwards from below with your finger.

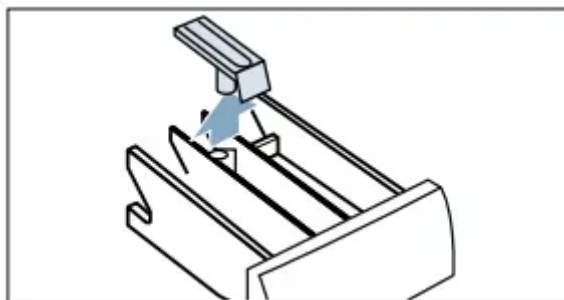


3. Clean the detergent dispenser tray and insert with water and a brush, and dry it. Clean the inside of the housing as well.

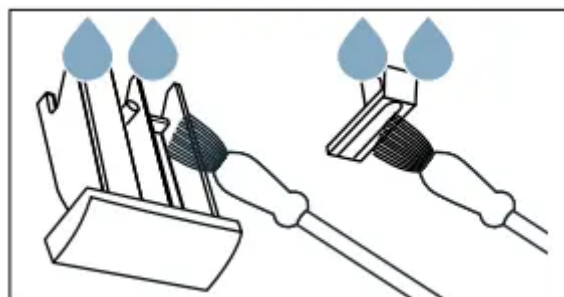

4. Fit the insert and lock it in place (push the cylinder onto the guide pin).

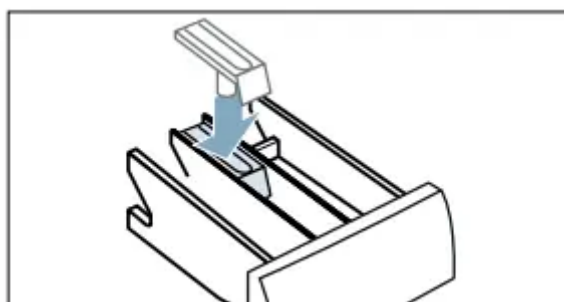

5. Push in the detergent drawer.

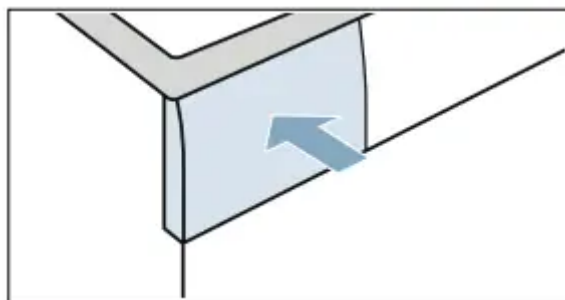


Note: Leave the detergent drawer open so that any residual water can evaporate.

Drain pump is blocked


Note: Turn the water tap off to prevent more water from flowing in and to ensure that it is drained via the pump.

Warning Risk of scalding! When you wash at high temperatures, the water gets very hot. If you come into contact with the hot water, you may be scalded. Allow the water to cool down first.


1. Turn the programme selector to Off. Pull out the mains plug.
2. Open the service flap.

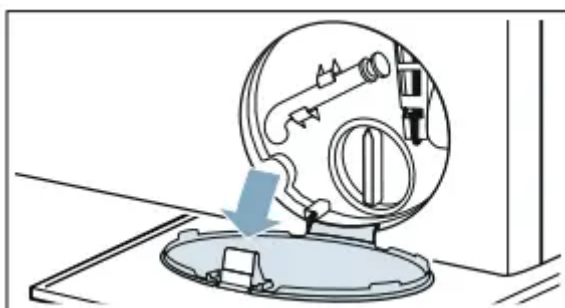


3. Take the drain hose out of the retainer. Remove the sealing cap and pour the water out into a suitable container. Replace the sealing cap and place the drain hose back in the retainer.

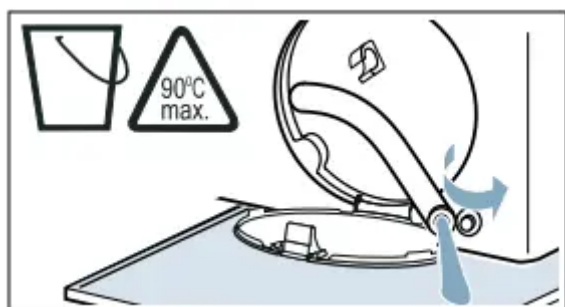


4. Carefully unscrew the pump cover; residual water may leak out. Clean the interior, pump cover thread and pump housing. The impeller in the drain pump must be able to rotate.

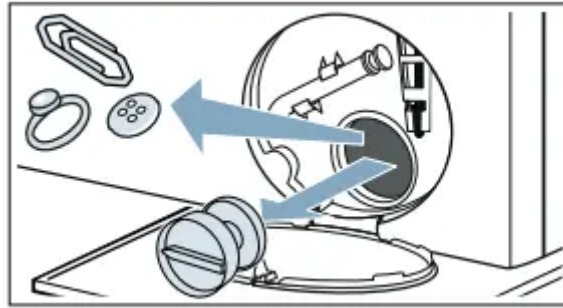

5. Refit and screw on the pump cover. The handle must be in a vertical position.

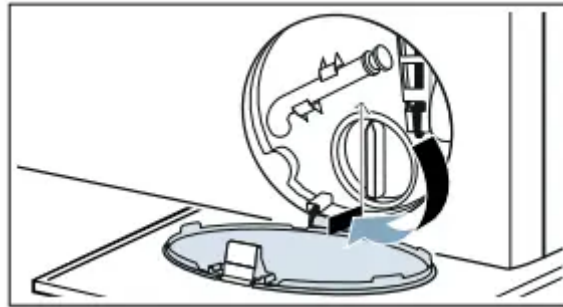


6. Close the service flap.

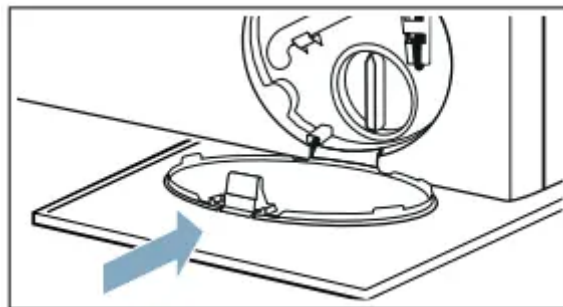

Note: To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into dispenser II and start the Drain programme.

The drain hose at the siphon is blocked



1. Turn the programme selector to Off. Pull out the mains plug.
2. Loosen the hose clamp. Carefully remove the drain hose; residual water may leak out.
3. Clean the drain hose and siphon connecting piece.

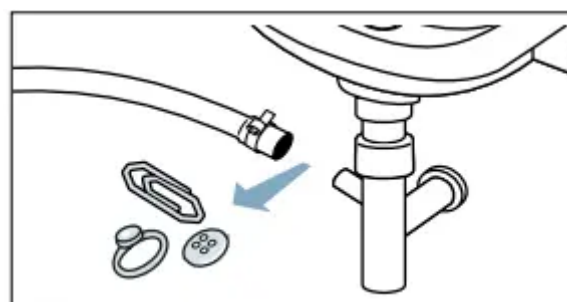

4. Re-attach the drain hose and secure the connection point using the hose clamp.


Filter in the water supply is blocked

  Release water pressure in the supply hose:


1. Turn off the water tap.
2. Select the Cottons (activate  SpeedPerfect setting) programme. **Note:** If your appliance with intelligent dosing system*, you also need to deactivate the intelligent dosing system.
3. Select the  Start/Reload button. Allow the programme to run for approx. 40 seconds.
4. Turn the programme selector to Off.
5. Pull out the mains plug.

Clean the filters:

1. Disconnect the hose from the rear of the appliance.

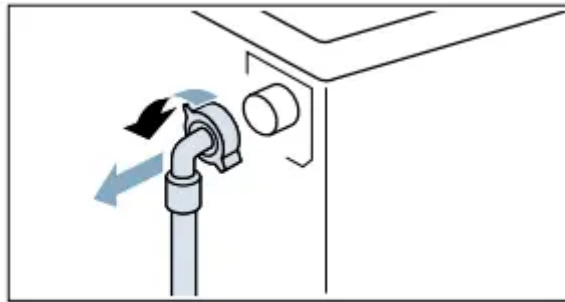


2. Use pliers to remove the filter.

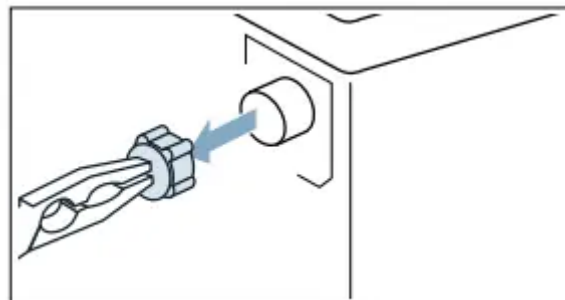

3. Clean the filter with a small brush.



4. Connect the hose and check for leaks.

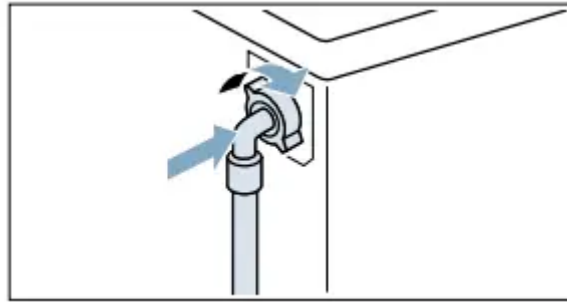

Faults and what to do about them

Emergency release

E.g. power outage or in the event of a loss of power

The programme continues when the power supply is restored.


However, if the laundry has to be removed, the appliance door can be opened as follows:

Warning Risk of scalding! When you are washing at high temperatures, there is a risk of scalding if you come into contact with hot water and laundry. If possible, leave it to cool down first.

Warning Risk of injury! Reaching into the drum while it is still turning may cause hand injuries. Do not reach into the drum when it is turning. Wait until the drum has stopped turning.


Caution! Water damage! Any escaping water may cause water damage. Do not open the door if water can be seen through the glass.

1. Turn the programme selector to Off. Pull out the mains plug.
2. Open the service flap.

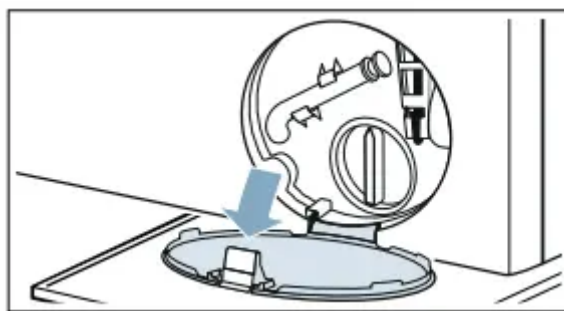


 
 


3. Drain the water. → Page 42

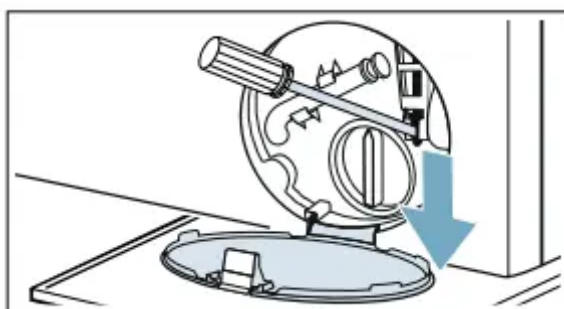4. Pull the emergency release downwards with a tool and release. The door can then be opened.




 






Information on the display panel






Display	Cause/Remedy
	<ul style="list-style-type: none"> ■ Flashes fast + signal: The door was opened and the water level is too high. Close the door, continue the programme with  Start/Reload button or select Drain. ■ Flashes slowly: The door lock temperature is too high to open the door. Wait approx. 30 seconds until the door lock temperature cools down.
<p style="text-align: center;"><i>Hot</i></p>	<p>The temperature in the drum is too high. Wait for the appliance running to cool down the laundry till the <i>Hot</i> disappears on the display panel, then the door can be opened.</p>
	<ul style="list-style-type: none"> ■ Flashes (no water supply): Water tap turned on? Filter in the water supply is blocked? → "Filter in the water supply is blocked" on page 43 Is the supply hose kinked or trapped? ■ Lights up (low water pressure): For information only. This will not affect the programme progress. The programme duration is extended.
<p> lights up</p>	<p>The childproof lock is activated – deactivate it.</p>
<p>The symbol  flashes</p>	<p>Run the Cottons 90°C programme to clean and care for the drum and the outer tub.</p> <p>Notes</p> <ul style="list-style-type: none"> ■ Run the programme without laundry. ■ Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergent designed for woollens or delicates. ■ Switching the drum care information signal on/off. → Page 39
<p>E:36 alternating with -10</p>	<ul style="list-style-type: none"> ■ Drain pipe or water drain hose is blocked. Clean the drain pipe and the water outlet hose. ■ Drain pipe or water drain hose is caught or jammed. Ensure that the drain pipe and water drain hose are not kinked or trapped. ■ The drain pump is blocked. → "Drain pump is blocked" on page 42

    

	<ul style="list-style-type: none"> ■ The drain hose at the siphon is blocked. → "The drain hose at the siphon is blocked" on page 43 ■ The water drain hose is connected too high. Install the water outlet hose at a maximum height of 1 meter. → Page 16
E:35 alternating with -10 (Suitable for special models)	There is water in the base trough, the appliance is leaking. Turn off the tap. Call customer services.
H:95 alternating with <i>End</i> when programme is finished	No water detected in drying phase, may get bad drying result. → "Filter in the water supply is blocked" on page 43
H:32 alternating with <i>End</i> when programme is finished	The unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed. Distribute small and large items of laundry evenly in the drum.
Other displays	Turn the programme selector to Off, wait for five seconds and then switch it on again. If the display appears again, call customer services.

Faults and what to do about them

Faults	Cause/Remedy
<p>Water is leaking from the appliance.</p>	<ul style="list-style-type: none"> ■ Attach the drain hose correctly or replace it. ■ Tighten the screw fitting on the supply hose.
<p>The door cannot be opened.</p>	<ul style="list-style-type: none"> ■  (Rinse hold = no final drain) is activated (depending on the model). Continue the programme by selecting Spin/Drain and pressing  Start/Reload . ■ The temperature in drum is too high to open the door. ■ The safety function is activated. Stop the programme? ■ The water level in drum is too high. ■ Can the door only be opened by the emergency release? → "Emergency release" on page 44
<p>The appliance is not filling with water.</p> <p>Detergent is not being dispensed.</p>	<ul style="list-style-type: none"> ■ Programme does not start? ■ Is the tap turned on? ■ Could the filter in the water supply be blocked? → "Filter in the water supply is blocked" on page 43 <p>Note: If an additional water filter has been installed (depending on the model), check for contaminants and clean if required → separate installation and cleaning instruction for water filter.</p> <ul style="list-style-type: none"> ■ Is the supply hose kinked or trapped?
<p>The programme will not start.</p>	<ul style="list-style-type: none"> ■ Have you touched the  Start/Reload button or selected  Finish in/ Time Dry? ■ Is the door closed? ■ Childproof lock activated? Deactivate childproof lock. ■ Shop mode activated? If the display shows  for 5 s after you have switched on the appliance, the appliance is in shop mode. Wait for the display message  to disappear. Touch and hold  Start/Reload for at least 5 s.  will appear in the display panel. Turn the programme selector to Off. Now you already turned off the shop mode. You can use the appliance now as usual.

<p>The programme has started and the drum is rotating, but the drum is not filling with water.</p>	<p>Not a fault – Some programme specifically detect and weigh the load after the programme has started in order to calculate the optimum amount of water for washing. The drum will then start filling with water.</p>
<p>The water is not draining.</p>	<ul style="list-style-type: none"> ■ Drain pipe or water drain hose is blocked. Clean the drain pipe and the water drain hose. ■ Drain pipe or water drain hose is caught or jammed. Ensure that the drain pipe and the water drain hose are not kinked or trapped. ■ Could the drain pump be blocked? → "Drain pump is blocked" on page 42 ■ Could the drain hose at the siphon be blocked? → "The drain hose at the siphon is blocked" on page 43 ■  (Rinse hold = no final drain) is activated (depending on the model). Continue the programme by selecting Spin/Drain and pressing  Start/Reload . ■ The water drain hose is connected too high. Install the water drain hose at a maximum height of 1 meter. → Page 16
<p>Water is not visible in the drum.</p>	<p>Not a fault – the water is below the visible area.</p>
<p>The wrong detergent/fabric softener has been poured into the dispenser(s).</p>	<p>Empty the dispenser(s), clean it/them and pour in the correct product. → "Emptying the detergent draw, cleaning the detergent drawer and its housing" on page 41</p>
<p>Detergent/fabric softener has congealed in the dispensers.</p>	<p>Empty the dispenser(s), clean it/them and pour in the correct product.</p>
<p>Foam is leaking from the detergent drawer.</p>	<p>Too much detergent used?</p> <p>Mix 1 tablespoon of fabric softener with ½ litre of water and pour into dispenser II. (Not for outdoor, sports and down-filled textiles!)</p> <p>Reduce detergent dosage for the next wash cycle.</p> <p>Use commercially available low foam detergent and care product which are suitable for machine</p>

<p>Repeated, intensive foaming.</p>	<p>Have you used too much detergent? Add less detergent in the next time you run a wash cycle with the same load.</p>
<p>Detergent/fabric softener drips off the seal and collects on the door or in the seal fold.</p>	<p>There is too much detergent/fabric softener in the dispensers. Do not fill the dispensers above the max. mark.</p>
<p>The spin result is not satisfactory.</p> <p>Laundry wet/too damp.</p>	<ul style="list-style-type: none"> ■ Not a fault – the unbalanced load detection system has interrupted the spin cycle because the laundry is unevenly distributed. Distribute small and large items of laundry evenly in the drum. ■ Is  Reduced Ironing additional programme setting selected (depending on the model)? ■ Is Silent additional programme setting or Silent programme selected (depending on the model)? ■ Is the selected speed too low?
<p>The spin cycle runs several times.</p>	<p>Not a fault – the unbalanced load detection system is adjusting an imbalance.</p>
<p>The programme is taking longer than usual.</p>	<ul style="list-style-type: none"> ■ Not a fault – the unbalanced load detection system is adjusting an imbalance by repeatedly distributing the laundry. ■ Not a fault – the foam detection system is activated – a rinse cycle has been switched on.
<p>The length of the programme changes during the wash/dry cycle.</p>	<p>Not a fault – the programme sequence is optimised for the specific washing/ drying process. This may change the length of the programme shown on the display panel.</p>
<p>Odours, stain formation in the appliance.</p>	<p>Run the Cottons 90°C programme without laundry.</p> <p>Add washing powder or a detergent containing bleach.</p> <p>Note: To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.</p>
<p>Loud noises, vibrations and appliance</p>	<ul style="list-style-type: none"> ■ Is the appliance aligned? → "Alignment" on page 19 ■ Are the appliance's feet fixed? Secure the appliance's feet.

<p>"movement" during the spin cycle.</p>	<ul style="list-style-type: none"> ■ Have the transport locks been removed? → "Removing the transport locks" on page 14
<p>The display panel indicator lights do not work while the appliance is running.</p>	<ul style="list-style-type: none"> ■ Has there been a power failure? ■ Have the fuses blown? Reset/replace the fuses. ■ If the fault occurs repeatedly, call customer services.
<p>There is detergent residue on the laundry.</p>	<ul style="list-style-type: none"> ■ Some phosphate-free detergents contain water-insoluble residue. ■ Select Rinse or brush the laundry after washing.
<p>Spin during the drying phase</p>	<p>This is an innovative process known as thermal spinning used to reduce energy consumption during the drying phase. It is designed like this, please wait until program finished.</p>
<p>Fluff found on the laundry.</p>	<p>Run the Cottons  (cold) programme without laundry and detergent to remove fluff which have accumulated inside the drum during the previous drying cycle.</p>
<p>Water inlet noise during the drying phase.</p>	<p>The washer dryer uses water condensation technology, water is constantly needed to dry the laundry. Therefore the water tap must be on all the time, till the end of the drying phase.</p>
<p>Drying duration extended.</p>	<ul style="list-style-type: none"> ■ Run the Cottons  (cold) programme to remove fluff which has collected in the washer drum during the drying phase. ■ If the ambient temperature is higher than 30 °C, this may extend the drying time. ■ Insufficient air circulation in the room may increase the drying time. Ventilate the room.
<p>Drying programme does not start.</p>	<ul style="list-style-type: none"> ■ Drying additional programme setting not selected? ■ Door not closed properly?
<p>Creasing.</p>	<ul style="list-style-type: none"> ■ Creasing occurs when you have exceeded the maximum load or selected the wrong program for the type of fabric. All the required information can be found in the programme overview table. ■ Remove clothes immediately after drying; creasing may occur if they are left in the drum.

The drying result is not satisfactory (laundry is not dry enough).

- After the end of the programme, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse.
- Excessively high ambient temperature (above 30 °C) or inadequate ventilation in the room in which the washer dryer is situated.
- The laundry has not been spun well enough before drying. Always set the highest selectable spin speed for the particular washing programme.
- Washer dryer overloaded: Observe the recommendations for the maximum load in the programme table and on the load display. Do not overload the washer dryer, as the maximum load for the drying phase is less than the maximum load for the wash cycle. Unload the washer dryer after washing with the maximum load and divide the laundry into two drying cycles.
- The power supply voltage is too low (below 200 V) – provide a suitable power supply.
- The water pressure is low. According to water condensing principle, low water pressure will cause evaporated steam to not condense properly and completely.
- The water tap is closed during drying. Due to the use of the water condensation technology for drying, please keep the connected water tap open during the drying process, otherwise proper drying cannot be guaranteed.
- Thick multilayered textiles or textiles with thick fillings dry easily on the surface, but not inside. This equalisation process may take longer.

If you cannot rectify a fault yourself (after turning the programme selector to Off and on again) or a repair is required:

- Turn the programme selector to Off. Pull out the mains plug.
- Turn off the tap and call customer services.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

