

Parts & Accessories







1. FRY TRAY
2. RUBBER BUMPERS*
3. BASKET
4. HANDLE
5. MAIN UNIT HOUSING
6. AIR INLET VENT
7. CONTROL PANEL
8. HOT AIR OUTLET VENT
9. POWER CABLE

NOTE: Unpack all listed contents from the packaging. Contents vary by model. Please remove any clear or blue protective film on the components before use.

*Removing bumpers is not recommended.

CAUTION: Unit may be hot. Be careful not to touch the Unit while in use. Keep the Unit away from other objects.

IMPORTANT: Please make sure that your PowerXL Vortex Air Fryer has been shipped with the components that you ordered (some accessories may be sold separately). Check everything carefully before use. If any part is missing or damaged, do not use this product. Contact the shipper using the customer service number located on the back of this manual.

Unit Specifications



2 Qt. - HF-2096TS



3 Qt. - HF-5096TS





5 Qt. - HF-8096TS






7 Qt. - HF-1096TS

Technical Specifications


Model Number	Supply Power	Rated Power	Capacity	Temperature
HF-2096TS	120V ~60Hz	1000W	2 qt.	180° F-400° F
HF-5096TS	120V ~60Hz	1200W	3 qt.	90° F-400° F
HF-8096TS	120V ~60Hz	1500W	5 qt.	90° F-400° F
HF-1096TS	120V ~60Hz	1700W	7 qt.	90° F-400° F




Using The Control Panel

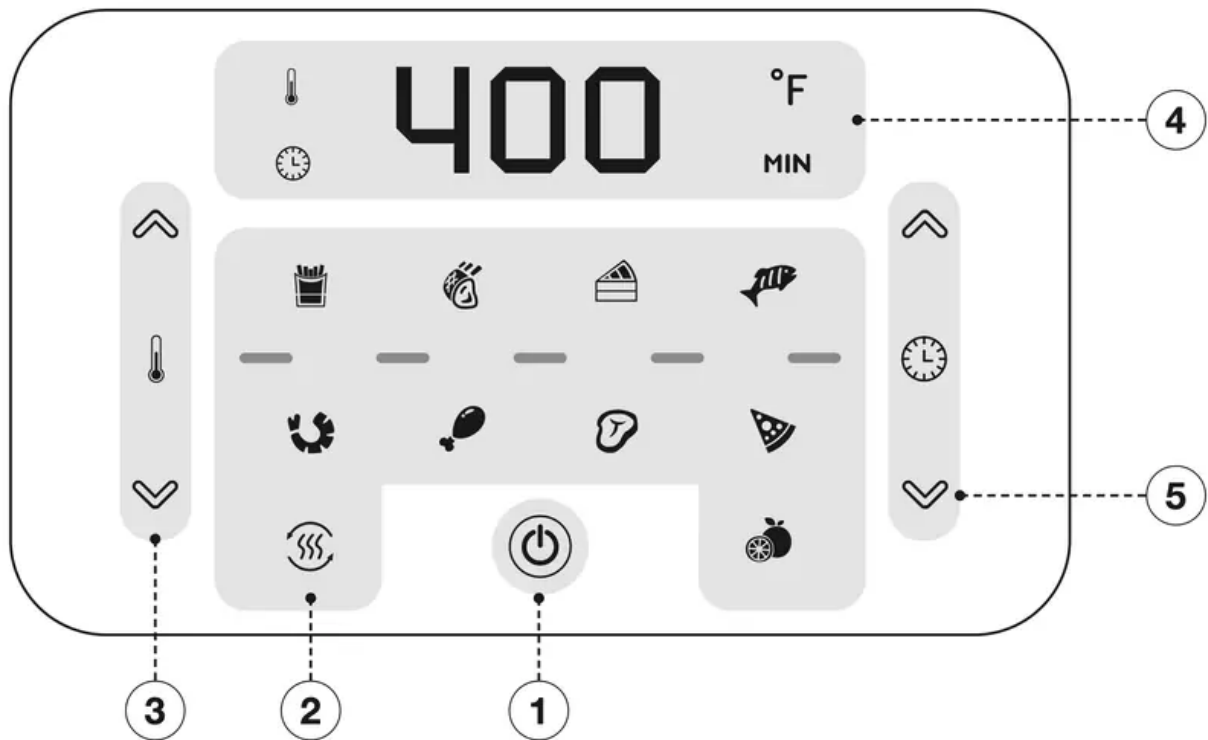

5-7-Qt. Display Panel
Model (5-Qt.): HF-8096TS
Model (7-Qt.): HF-1096TS

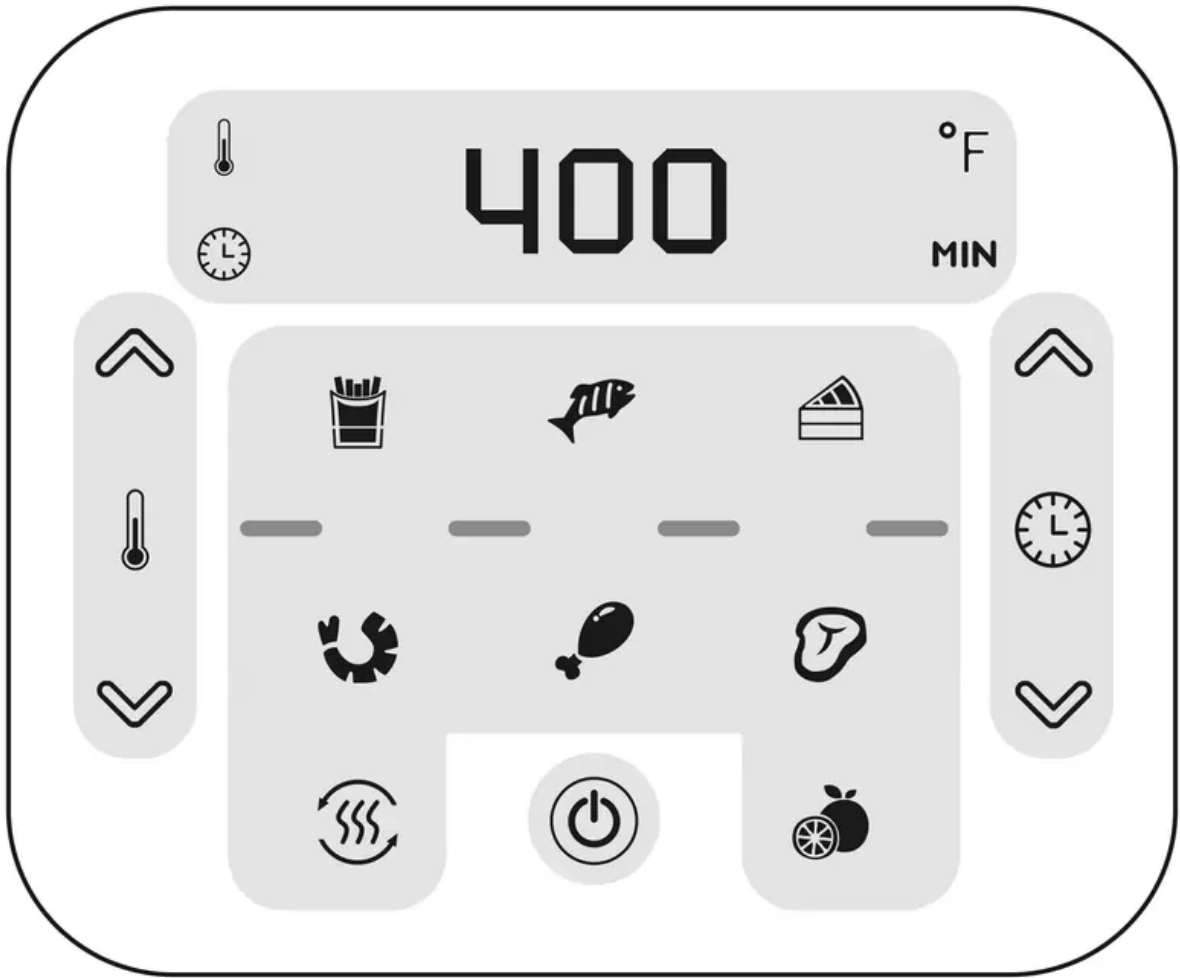

3-Qt. Display Panel
Model: HF-5096TS

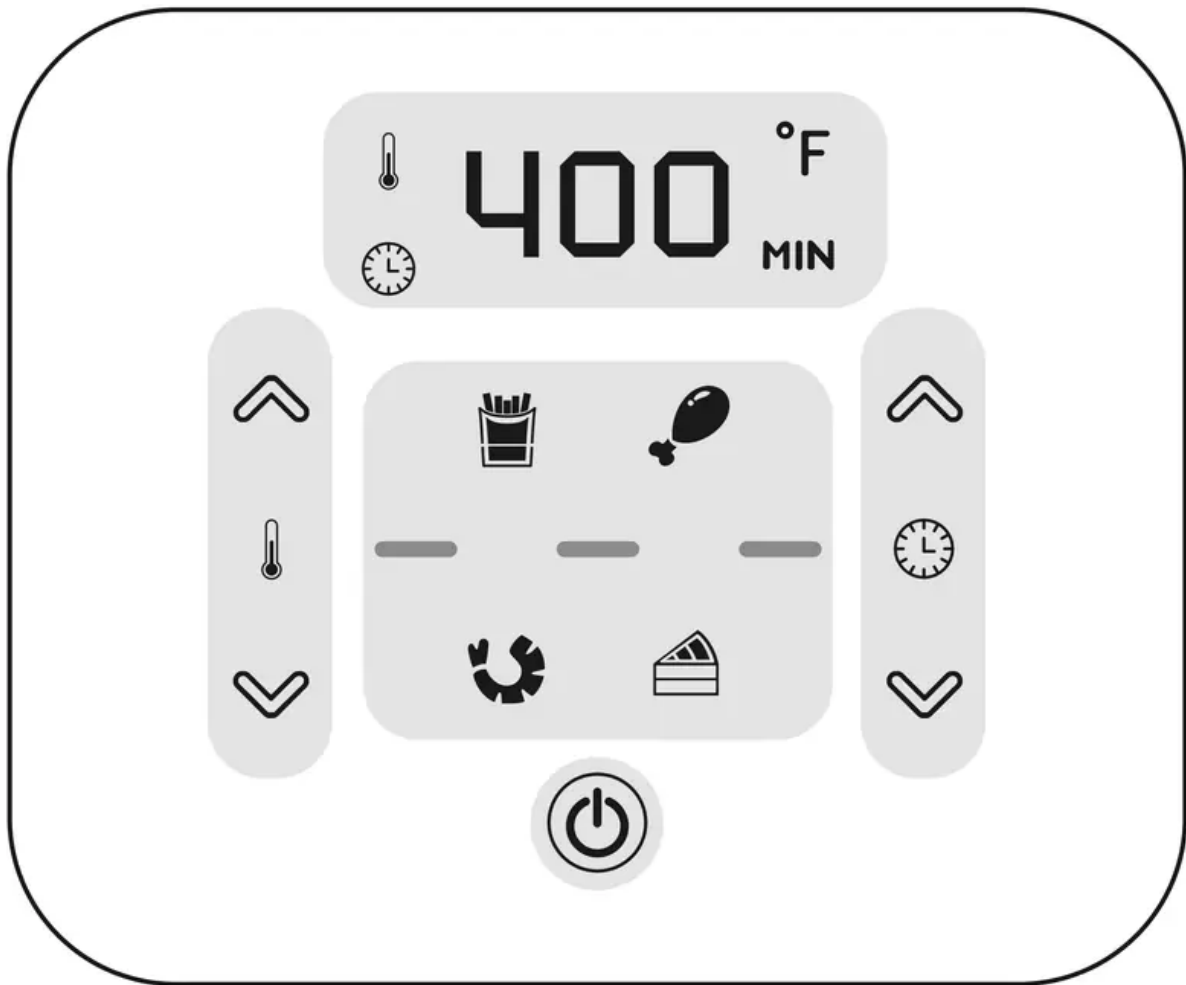

2-Qt. Display Panel
Model: HF-2096TS

1. Power Button

Once the Basket and Fry Tray are properly placed in the Main Unit Housing, the Control Panel will be illuminated. Pressing the Power Button once will set the Unit to a default cooking temperature of 370° F and time of 15 mins. Pressing the Power Button a second time will start the cooking process. Pressing the Power Button during the cooking cycle will turn the Unit off.

2. Cooking Presets

Press the cooking preset buttons to choose from up to ten cooking presets (smaller models have fewer presets; see Fig. 1). See the Preset Chart below for the cooking times and temperatures associated with each preset.

NOTE: The running lights on the Control Panel will illuminate when the cooking cycle begins and will stay illuminated for up to 20 seconds after the cooking cycle is complete.

3. Temperature Control Buttons

The + and – symbols enable you to increase or decrease cooking temperature 5° F at a time. Keeping a button held down will rapidly change the temperature. Temperature control range: 180° F–400° F (Dehydrate temperature control range: 90° F–170° F).

4. Time and Temperature Display

This display will keep track of the temperature and remaining cook time.

5. Timer Control Buttons

The + and – symbols enable you to increase or decrease cooking time 1 min. at a time (30 mins. at a time for Dehydrate). Keeping the Button held down will rapidly change the time. Time control range: 1–60 mins. (Dehydrate time control range: 2–24 hrs.).

Preset Chart

Once you are familiar with the Unit, you may want to experiment with your own recipes. Simply choose the time and temperature that suits your personal taste.

NOTE: The Pizza and Roast presets are only available with the 5-quart and 7-quart models. The Fish, Steak, Dehydrate, and Reheat presets are not available on the 2-quart model.

* For the 2-quart model, the cooking time for the Chicken preset is 25 mins.











Preset	Temperature	Time	Models
<i>Default</i>	370° F (188° C)	15 mins.	-
 French Fry	400° F (204° C)	18 mins.	All models
 Roast	350° F (177° C)	30 mins.	(5 & 7 Quart)
 Bake	320° F (160° C)	30 mins.	All models
 Fish	325° F (163° C)	15 mins.	(3, 5 & 7-Quart)
 Shrimp	320° F (160° C)	12 mins.	All models
 Chicken	370° F (188° C)	40 mins.*	All models
 Steak	400° F (204° C)	10 mins.	(3, 5 & 7-Quart)
 Pizza	360° F (182° C)	15 mins.	(5 & 7 Quart)
 Reheat	240° F (116° C)	12 mins.	(3, 5 & 7-Quart)
 Dehydrate	120° F (49° C)	2 hrs.	(3, 5 & 7-Quart)

Fig. 1: Only the 5-quart and 7-quart models have all ten presets listed in this chart.

Instructions for Use

Before First Use

1. Remove all the packaging material.
2. Remove any stickers or labels from the Unit.
3. Before initial use, wipe the inside and outside of the Unit with a warm, moist cloth and mild detergent. Handwash all cooking accessories.
4. Before cooking food, preheat the PowerXL Vortex Air Fryer for a few minutes to allow the Unit to burn off the manufacturer's protective coating of oil. Wipe the Unit with warm, soapy water and a washcloth after this burn-in cycle.
5. Place the Unit on a stable, horizontal, and level surface. Do not place the Unit on a surface that is not heat resistant. Ensure that the Unit is used in an area with good air circulation and away from hot surfaces and any combustible materials. Do not place on the stove top.
6. Place the Fry Tray in the Basket. Slide the Basket into the Unit. If the Basket is placed properly, it will click into place.

NOTE: The PowerXL Vortex Air Fryer cooks using hot air. Do not fill the Basket with oil or frying fat. Do not put anything on top of the Unit. This disrupts the airflow and affects the cooking results.

Using the PowerXL Vortex Air Fryer

1. Plug the Unit into a grounded wall socket.
2. To preheat, push the Power Button.
3. Press the Temperature Increase or Decrease Buttons to set the cooking temperature.
4. Press the Time Decrease Button to set the preheat time to 3 mins. When the preheat cycle finishes, carefully pull the Basket out of the Unit and place the ingredients inside.
NOTE: For better performance, always use the Fry Tray with the Basket.
5. Do not touch the Basket directly because the Basket becomes very hot during operation. Only hold the Basket by its handle.
6. Press the Power Button. Set the appropriate time and temperature for the ingredients you are cooking.
7. When the timer beeps five times, the set cooking time has elapsed. Pull the Basket out of the Unit and place it on a heat-resistant surface.
8. If the food is fully cooked, use tongs to remove food.

CAUTION: Do not turn the Basket upside down because any excess oil that has collected on the bottom of the basket will leak onto the ingredients.

9. If the food is not fully cooked, simply slide the Basket back into the Unit and add a few minutes to the cooking time.
10. The Unit is instantly ready for preparing another batch.

Shaking

To ensure even cooking, some foods require shaking during the cooking process. Remove the Basket from the Unit. Gently shake the contents as needed and place them back in the Unit to continue cooking.

CAUTION: The Basket will be hot. Wear an oven mitt during this procedure.

1. Place the Basket on a heat-resistant surface.
2. Shake the ingredients in the Basket.
3. Return the Basket to the Unit to finish cooking.

Tips

- Foods that are smaller in size usually require a slightly shorter cooking time than larger foods.
- Large quantities of food only require a longer cooking time than smaller quantities.
- Shaking smaller-sized foods halfway through the cooking process ensures that all the pieces are fried evenly.
- Adding a bit of vegetable oil to fresh potatoes is suggested for a crispier result. When adding oil, do so just before cooking and add only a small amount onto the potato.
- Snacks normally cooked in an oven can also be cooked in the PowerXL Vortex Air Fryer.
- Use premade dough to prepare filled snacks quickly and easily. Premade dough also requires a shorter cooking time than homemade dough.
- You can use the PowerXL Vortex Air Fryer to reheat foods. Simply set the temperature and time to however warm you want your food.

Capacity Chart

Model/Size	French Fries Quantity
2 qt.	12 oz.
3 qt.	16 oz.
5 qt.	22 oz.
7 qt.	28 oz.

General Cooking Guidelines

NOTE: Keep in mind that these settings are guidelines. Since ingredients differ in origin, size, shape, and brand, we cannot guarantee the best settings for your ingredients.cooking results.

FOOD ITEM	QUANTITY	SHAKE	TEMP	COOK TIME	COMMENTS
				Adjustable Range (Increments)	
Thin Frozen Fries	1¼ cups	YES	400° F	15-16 mins. (1 min.)	-
Thick Frozen Fries	1¼ cups	YES	400° F	15-20 mins. (1 min.)	-
Homemade Fries	1¼ cups	YES	400° F	10-16 mins. (1 min.)	Add ½ tbsp. oil
Homemade Potato Wedges	1¼ cups	YES	360° F	18-22 mins. (1 min.)	Add ½ tbsp. oil
Hash Browns	1 cup	YES	360° F	15-18 mins. (1 min.)	-
Steak	¼-1.1 lb		360° F	8-12 mins. (1 min.)	-
Pork Chops	¼-1.1 lb		360° F	10-14 mins. (1 min.)	-
Hamburger	¼-1.1 lb		360° F	7-14 mins. (1 min.)	-
Sausage Roll	¼-1.1 lb		400° F	13-15 mins. (1 min.)	-
Chicken Drumstick	¼-1.1 lb		360° F	18-22 mins. (1 min.)	-
Chicken Breast	¼-1.1 lb		360° F	10-15 mins. (1 min.)	-
Spring Rolls	¼-¾ lb	YES	400° F	15-20 mins. (1 min.)	Use oven-ready
Frozen Chicken Nuggets	¼-1.1 lb	YES	400° F	10-15 mins. (1 min.)	Use oven-ready
Frozen Fish Sticks	¼-1.1 lb		400° F	6-10 mins. (1 min.)	Use oven-ready
Mozzarella Sticks	¼-1.1 lb		360° F	8-10 mins. (1 min.)	Use oven-ready
Cake	1 ¼ cups		320° F	20-25 mins. (1 min.)	Use baking tin
Quiche	1 ½ cups		360° F	20-22 mins. (1 min.)	Use baking tin/oven dish
Muffins	1 ¼ cups		400° F	15-18 mins. (1 min.)	Use baking tin
Baked Goods	1 ½ cups		320° F	20 mins. (1 min.)	Use baking tin/oven dish

Cleaning

Clean the PowerXL Vortex Air Fryer after each use.

The Basket and the Fry Tray are coated with a special nonstick surface. Never use abrasive cleaning materials or utensils on these surfaces.

1. Remove the Power Cable from the wall socket and be certain the Unit is thoroughly cooled before cleaning.

2. Wipe the outside of the Unit with a warm, moist cloth and mild detergent.
3. Clean the Basket and the Fry Tray with hot water, a mild detergent, and a nonabrasive sponge.

NOTE: The Fry Tray is dishwasher safe.

TIP: Should the Fry Tray contain difficult-to-remove food particles, soak in hot, soapy water for 10 mins.

NOTE: The rubber bumpers on the Fry Tray are part of the Fry Tray and should generally not be removed. However, if the rubber bumpers need to be cleaned, they can be removed and reattached: To remove the rubber bumpers, locate the capped end of the bumpers and push the capped end off of the Fry Tray.

There will be some resistance, but keep pushing until the rubber bumpers come off of the Fry Tray. Take note of the slot on which the bumpers were sitting. To reattach the rubber bumpers, align the hole in the rubber bumpers with the slots from which the rubber bumpers were removed. Slide the rubber bumpers all the way back onto the slot on the Fry Tray.

4. Clean the inside of the Unit with hot water, a mild detergent, and a nonabrasive sponge.
5. If necessary, remove unwanted food residue from the heating element with a soft cleaning brush.

Storage

1. Unplug the Unit and let it cool down thoroughly.
2. Make sure all components are clean and dry.
3. Place the Unit in a clean, dry place.

Troubleshooting



Symptom	Possible Cause	Solution
The PowerXL Vortex AirFryer does not work	The Unit is not plugged in.	Plug the Power Cable into a wall socket.
	You have not turned the Unit On by setting the preparation time and temperature.	Press the Power Button. Select a time and temperature. Press the Power Button again and cooking will begin.
	You have probably turned Off the Unit. If you press the Power Button while the Unit is cooking, you will trigger the Auto Shut-Off mode.	Press the Power Button. Select a time and temperature. Press the Power Button again and cooking will begin.
Food is not cooked	The Basket is overloaded.	Use smaller batches for more even frying.
	The temperature is set too low.	Raise temperature and continue cooking.
Food is not fried evenly	Some foods need to be shaken during the cooking process.	See Shaking in Instructions for Use, p. 11.
Basket will not slide into Unit properly	The Basket is overloaded.	Do not fill the Basket above the Maximum line.
	The Fry Tray is not placed in the Basket correctly.	Gently push the Fry Tray into the Basket until it clicks.
White smoke coming from Unit	Too much oil is being used.	Wipe down to remove excess oil.
	The Basket has grease residue from the previous operation.	Clean the Basket after each use.

Symptom	Possible Cause	Solution
French fries are not fried evenly	Potatoes are not prepped properly.	Consult a recipe for potato type and prep.
	Fries are not cut evenly.	Cut fries thinner or reshape fries.
	Fries are too crowded.	Spread fries out or cook a smaller batch.
	Potatoes are not rinsed properly during preparation.	Pat dry to remove excess starch.
Fries are not crispy	Raw fries have too much water.	Dry potato sticks properly before misting oil.
		Cut sticks smaller.
		Add a bit more oil.
Error	E1 - Broken circuit of the thermal sensor	Call Customer Service at 1-973-287-5129
	E2 - Short circuit of the thermal sensor	

Frequently Asked Questions

1. Can I prepare foods other than fried dishes with my PowerXL Vortex Air Fryer?

You can prepare a variety of dishes, including steaks, chops, burgers, and baked goods. See the PowerXL Vortex Air Fryer Recipe Guide.

2. Is the PowerXL Vortex Air Fryer good for making or reheating soups and sauces?

Never cook or reheat liquids in the Unit.

3. Is it possible to shut off the Unit at any time?

Press the Power Button once or remove the Basket.

4. What do I do if the Unit shuts off while cooking?

As a safety feature, the PowerXL Vortex Air Fryer has an Auto Shut-Off device that



prevents damage from overheating. Remove the Basket and set it on a heat-resistant surface. Allow the Unit to cool down. Remove the Power Cable from the outlet. Once cool, plug the Power Cable back into the socket. Restart by pressing the Power Button.

5. Does the Unit need time to heat up?

If you are cooking from a cold start, add 3 mins. to the cooking time to compensate.

6. Can I check the food during the cooking process?

You can remove the Basket at any time while cooking is in progress. During this time, you can shake the contents in the Basket if needed to ensure even cooking.

7. Is the PowerXL Vortex Air Fryer dishwasher safe?

Only the Fry Tray is dishwasher safe. The Unit itself, which contains the heating coil and electronics, should never be submerged in liquid of any kind or cleaned with anything more than a warm, moist cloth or nonabrasive sponge with a small amount of mild detergent.

8. What happens if the Unit still does not work after I have tried all the troubleshooting suggestions?

Never attempt a home repair. Contact customer service and follow the procedures set forth by the guarantee. Failure to do so could render your guarantee null and void.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.