



FEATURES

- Wirelessly stream from any Bluetooth device
- Rechargeable battery lasts up to 30 hours
- Integrated power bank charges your mobile devices
- Water-resistant body

Top view

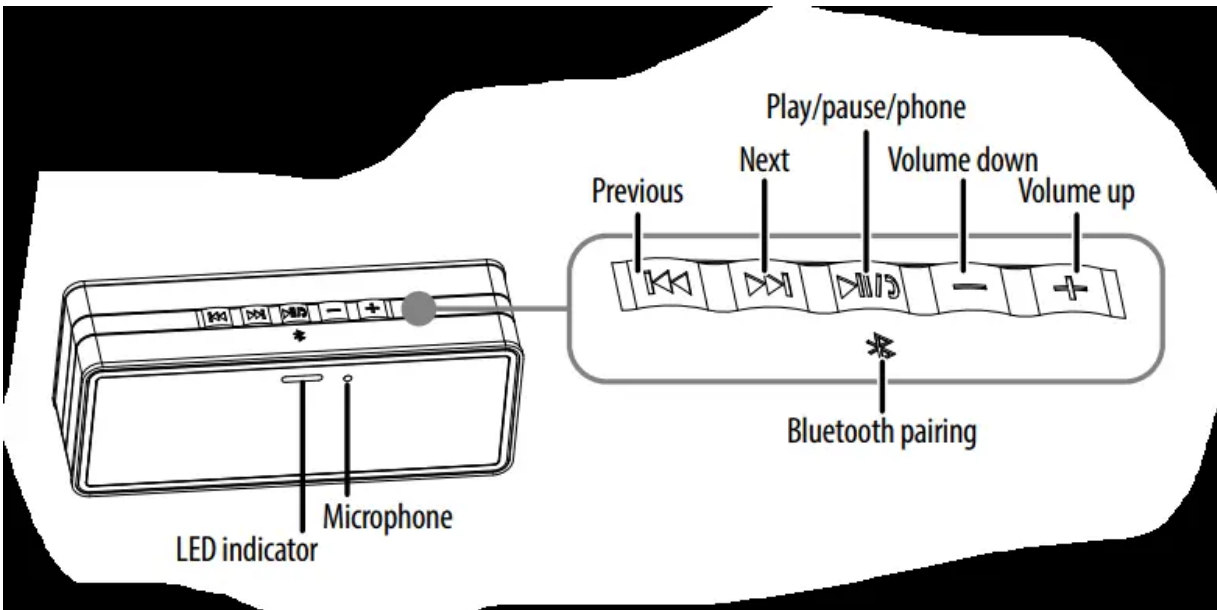

Back view

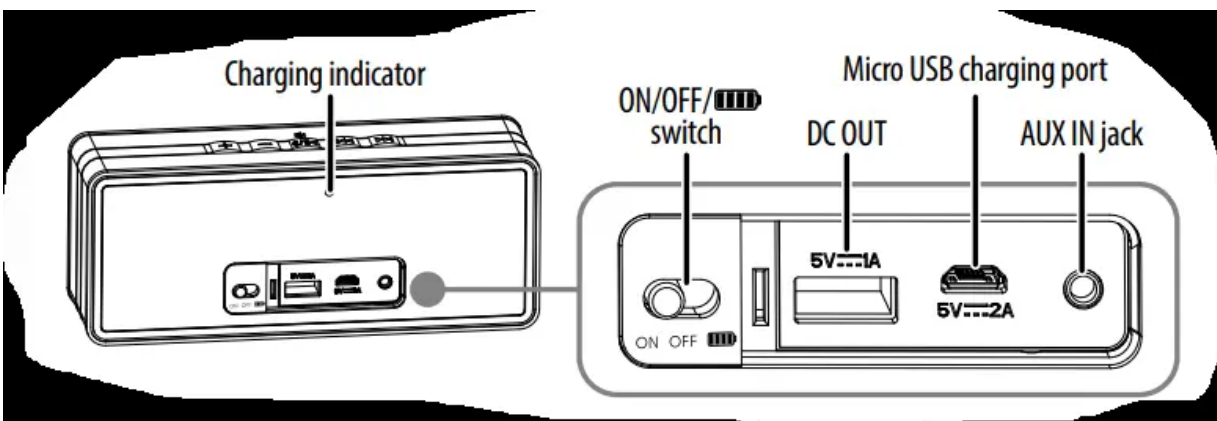

CHARGING YOUR SPEAKER

1. Connect the small end of the charging cable to the micro USB port on the back of your speaker.



2. Connect the other end to a USB port on your computer.

Note: When the battery is low, you will hear beeps. About five minutes later, the speaker will power off automatically.



CHARGING INDICATOR	DESCRIPTION
Solid red	Charging
Off	Fully charged

CHARGING AN EXTERNAL DEVICE

1. Open the port cover on the back of the speaker.
2. Plug one end of a USB cable into your external device and the other end into the DC OUT port on the speaker.


3. Switch the ON/OFF switch to . Your external device is being charged.

TURNING YOUR SPEAKER ON AND OFF

- Slide the ON/OFF to ON. The LED indicator blinks quickly and the speaker enters pairing mode.

CONNECTING WITH BLUETOOTH

1. Make sure that your Bluetooth device is turned on and within 33 feet meters) of your speaker.


2. On your speaker, press and hold the  button. Your speaker enters pairing mode, and the LED on your speaker blinks. Your speaker remains in pairing mode until it pairs with a Bluetooth device.

Note: Press and hold the  button to return to pairing mode.

3. Turn on your Bluetooth device and turn on Bluetooth. Set your device to pairing mode, then select **NS-SPBTBRICK**. See the instructions that came with your Bluetooth device for information about pairing.

4. If you are asked for a password, enter 0000. When pairing is complete, the LED on your speaker lights solid blue.

5.

To disconnect from the paired Bluetooth device, press and hold the  button on your speaker for three seconds. You will hear a beep. Your speaker disconnects from the Bluetooth device and enters pairing mode again.

LED	DESCRIPTION
Blinks blue	Speaker is in pairing mode
Solid blue	Speaker is paired OR an AUX device is connected

RECONNECTING TO A PAIRED DEVICE




When your speaker is not paired to a device, the LED blinks blue.

Your speaker loses the Bluetooth connection if you...	To reconnect...
Turn off your speaker.	Turn on your speaker. Your speaker searches for the last connected Bluetooth device and reconnects.
Move the Bluetooth device out of range.	Make sure that your Bluetooth device is within 33 feet of your speaker.
Turn off your Bluetooth device	Turn on your Bluetooth device, then make sure that Bluetooth is on.
Turn off Bluetooth on your Bluetooth device.	Turn on Bluetooth on your Bluetooth device
Connect your Bluetooth device to another Bluetooth device.	Disconnect your Bluetooth device from the other Bluetooth device, then set your device to pairing mode. Select NS-SPBTBRICK on your Bluetooth device.

Notes:


- If a device does not automatically reconnect, you may need to reselect **NS-SPBTBRICK** on your Bluetooth device.
- If you move your device out of range, it will remain paired for 10 minutes, but no sound will come from the speaker until you come back within range. After minutes, the speaker will reenter pairing mode.

LISTENING TO MUSIC


1. Slide the ON/OFF switch to ON, then connect to your Bluetooth device.
2. Begin playback on your Bluetooth device.
3. Adjust the volume on your speaker by pressing the + or - buttons. Note: Press the  to start playback. Press the  and  to go to the next or previous track.

PLAYING MUSIC FROM AN EXTERNAL SOUND SOURCE


1. Connect an external sound source, such as an MP3 player, by plugging an audio cable with a 3.5 mm plug (not included) into the AUX IN jack on the right side of your speaker.

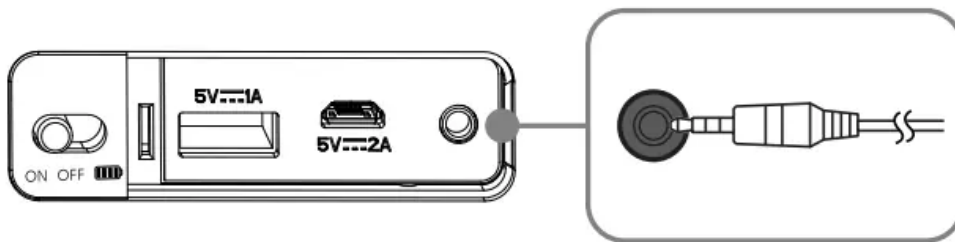


Notes:


- When an AUX cable is connected, Bluetooth goes into standby mode. To play music from your Bluetooth device, press play () on the speaker or your Bluetooth device. To return to AUX mode, press pause or stop on the speaker or your Bluetooth device.
 - When playing music via audio cable, you should pause the Bluetooth sound source paired to your speaker or disconnect the Bluetooth device.
2. Start playback on the external device.
 3. Press + or – to adjust the volume.
 4. Control playback using the controls on the external device.

TAKING A CALL

1. Press the  button briefly to accept an incoming call.


OR

Press and hold the  button to reject an incoming call.

2. Press the  button during a call to end the call.



RESETTING THE SPEAKER

Caution: This will remove all paired Bluetooth devices.

- Turn on the speaker, then press and hold the previous button () and the volume up + buttons at the same time for approximately five seconds. You will hear a warning tone and LED indicator will blink, then power off.

TROUBLESHOOTING



PROBLEM	SOLUTION
No power	<ul style="list-style-type: none"> • Make sure that your speaker's battery is charged. • Make sure that your speaker is turned on.
No sound or low volume	<ul style="list-style-type: none"> • Make sure that your Bluetooth device is turned on, Bluetooth is turned on, and NS-SPBTBRICK is selected. • Turn up the volume on your speaker. • Turn up the volume on your Bluetooth device. • Make sure that your Bluetooth device is not muted. • Make sure that your speaker is not paired to another Bluetooth device. • Make sure that your Bluetooth device is not paired to another Bluetooth device. • Shorten the distance between your speaker and your Bluetooth device.
Cannot establish Bluetooth connection	<ul style="list-style-type: none"> • Make sure that your speaker is in pairing mode. <p style="text-align: center;">  </p> <p>Press and hold the  button to reenter pairing mode.</p> <ul style="list-style-type: none"> • Shorten the distance between your speaker and your Bluetooth device. • Turn your devices off, then on. Re-pair your speaker and your Bluetooth device. • Make sure that your speaker is not paired to another Bluetooth device. • Make sure that your speaker and Bluetooth device are both in pairing mode. • Make sure that your Bluetooth device supports Bluetooth v4.0 and below. • Make sure that your Bluetooth device is not connected to any other device.

PROBLEM	SOLUTION
	<ul style="list-style-type: none"> • Make sure that you have selected NS-SPBTBRICK on your Bluetooth device. • Make sure that AUX external device is not connected. Disconnect the AUX cable and reenter pairing mode.
My Bluetooth device keeps unpairing	<ul style="list-style-type: none"> • Shorten the distance between your speaker and your Bluetooth device. • If the battery on your Bluetooth device is low, recharge the battery. • If the battery on your speaker is low, recharge the battery.
"NS-SPBTBRICK" does not appear on my Bluetooth device	<ul style="list-style-type: none"> • Shorten the distance between your speaker and your Bluetooth device. • Put your speaker into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device.

SAFETY INSTRUCTIONS

- Never expose the product to fire as this could result in personal injury.
- Do not store the product in an extremely cold or warm environment.
- Never dismantle the product.
- Never let children play with the product.
- Do not expose the product to dampness or moisture.
- The product should not be exposed to dripping or splashing

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.



