

 
 
INSTRUCTION MANUAL TOASTER OVEN

BEFORE FIRST USE

1. Remove all accessories and packing materials before operating the oven.
2. Wash the rack and grill tray in warm soapy water. Wipe the inside of the oven with a damp cloth or sponge. Blot dry with paper towels to be sure the unit is dry before using it.
3. Place oven on a flat counter or other stable surface. **DO NOT OPERATE ON THE SAME CIRCUIT WITH ANOTHER APPLIANCE.**
4. Make sure the crumb tray is properly installed before using it.
5. Before working, place the crumb tray under the bottom heating pipes. For the first time only, set the temperature knob to MAX, the function setting on roast and the timer to 15 minutes. This will burn off any oils still on the oven.

NOTE The oven may smoke during this process. This is normal for a new oven and will not last more than 10-15 minutes.

NAME OF PARTS

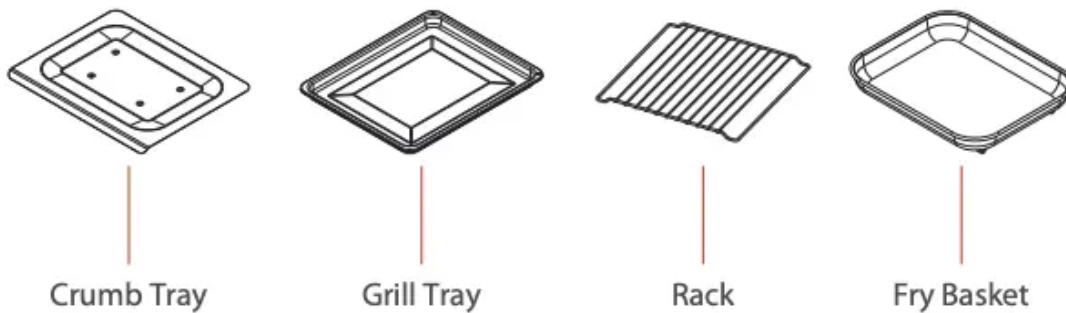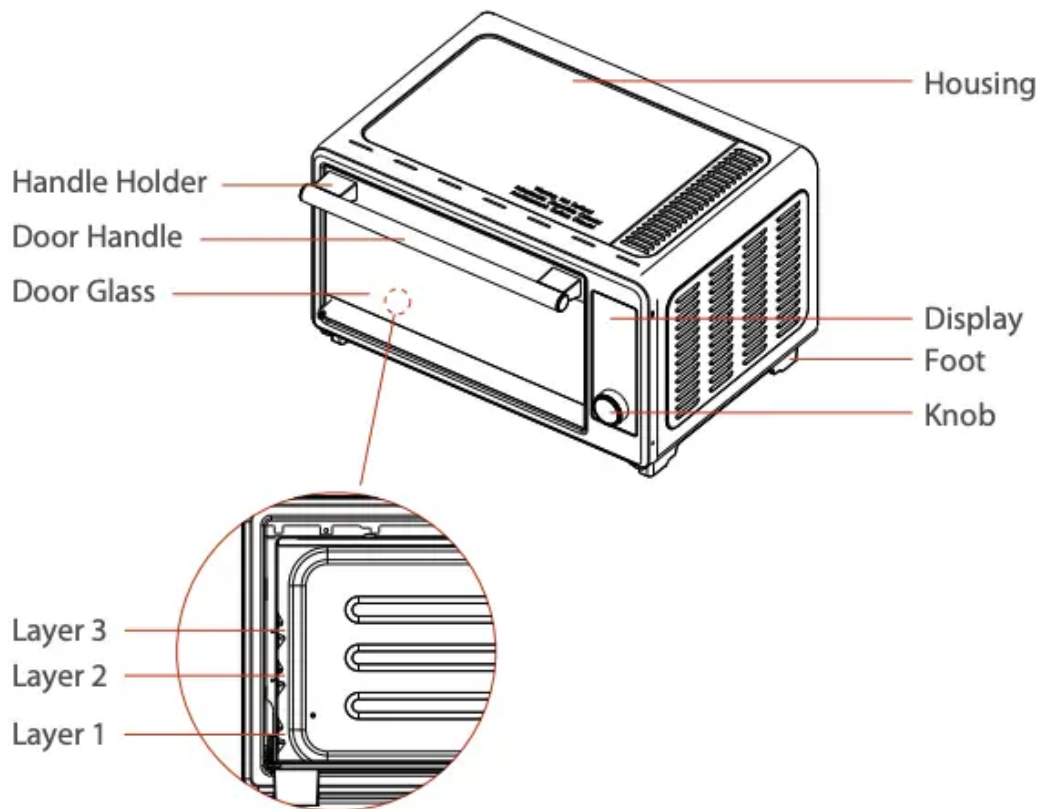

HOW TO USE

 
CAUTION: THE OVEN SURFACES ARE HOT DURING AND AFTER USE

GENERAL INSTRUCTIONS

 
1. Place the rack in position that will accommodate the height of the food to be cooked.
2. The food must be put into the grill tray to avoid the fire danger that caused by the accumulation of food chipping on the heating pipes.

3. Make sure that you always use an ovenproof container in the oven, never use plastic or cardboard containers in the oven.
4. Clean the heating pipe periodically.
5. Never use glass or ceramic pans or lids.
6. DO NOT let juice run to the bottom of the oven. Use the crumb tray when cooking.
7. Set the temperature as suggested by the recipe or as desired.
8. Securely shut the door and set the cooking time to begin operating the oven.
9. When you use the rack, please put the convex upward.
10. Please don't unplug the power cord when the oven finish working. The cooling fan will stop delay working 1 min.

CONTROL PANEL

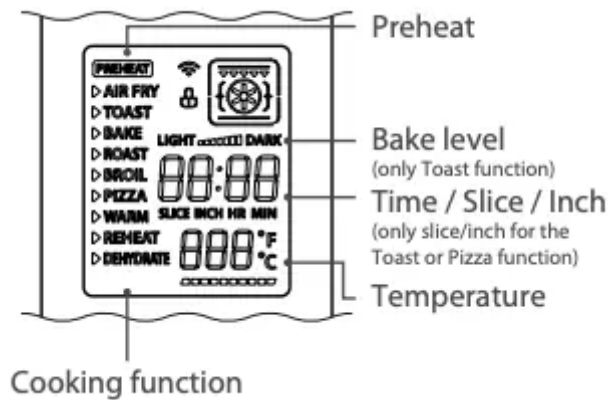

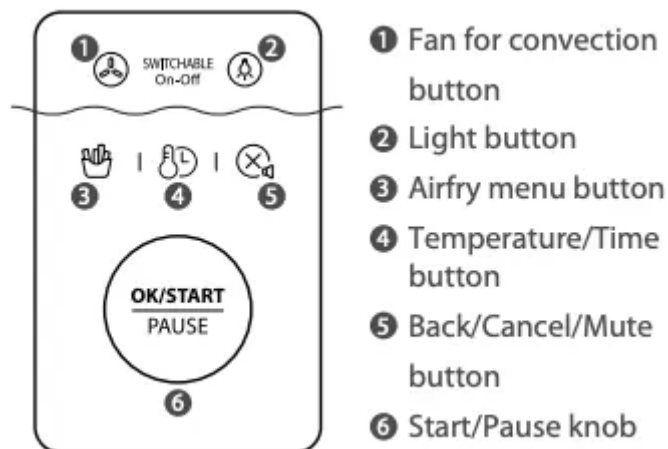

COOKING STEP





 
OPERATION

When the oven is powered, the buzzer will ring once. The default function is AIRFRY. In the process of cooking, you can press "OK/START/PAUSE" to pause cooking.




MUTE

 
 

When you want the oven to go silent, long press " for 3 seconds. The display screen will show "oFF". Then the machine will be in the mute function. And long press " 3 seconds, it will be cancel the mute function. The display screen will show "on".

AIRFRY

1. Turn on the power and machine is at original state. The default function is AirFry. "AIRFRY" and " will display on the display screen.
2. Press and rotate the "OK/START/PAUSE" knob to adjust the temperature. The default temperature is 410°F. This temperature is the cooking temperature after preheating.
3. Press the " button and rotate the "OK/START/PAUSE" knob to set the cooking time. The default cooking time is 15 minutes. This time is the cooking time after preheating.
4. Press the "OK/START/PAUSE" button to preheat.
5. After preheating, put the food into the cooking machine and close the door. Press the "OK/START/PAUSE" button to start cooking.
6. You can press the " button and rotate the "OK/START/PAUSE" knob to adjust the temperature and the time during cooking process.
7. After the cooking finishes, the machine will beep 3 times and the display screen will show "End". Pay attention to the high temperature of both the food and the machine when you take out the food.

AIRFRY MENU


 
1. When the function is AirFry, press the " button once, it will into the AirFry menu. "AIRFRY", "A01" and " will display on the display screen.
2. Rotate the "OK/START/PAUSE" knob and you can choose functions from A01-A08 in the menu. The default function is A01 (Chicken nuggets). **Note:** if you choose A08 (frozen French fries), "A08" and " will display on the display screen.

3. Press the “” button and rotate the “OK/START/PAUSE” knob to adjust the temperature. The default temperature of A01 is 410°F. This temperature is the cooking temperature after preheating.
4. Press the “” button and rotate the “OK/START/PAUSE” knob to set the cooking time. The default cooking time of A01 is 15 minutes 30 seconds. This time is the cooking time after preheating.
5. Press the “OK/START/PAUSE” button to preheat.
6. After preheating, put the food into the cooking machine and close the door. Press the “OK/START/PAUSE” button to start cooking. (If you choose A08 function, put French fries on the bottom of the fry basket. You are recommended to select the temperature and time shown on the menu. You also can adjust them after the cooking starts.)
7. You can press the “” button and rotate the “OK/START/PAUSE” knob to adjust the temperature and the time during cooking process.
8. After the cooking finishes, the machine will beep 3 times and the display screen will show “End”. Pay attention to the high temperature of both the food and the machine when you take out the food.





Display	AIR FRY Menu
A01	Chicken nuggets
A02	Breaded squid rings
A03	Breaded cod sticks
A04	Spring rolls

Display	AIR FRY Menu
A05	Potato cheese strips
A06	Vegetables
A07	Chicken leg
A08	Frozen french fries





TOAST

1. Rotate the “OK/START/PAUSE” knob to the right once. The display screen will show “TOAST” and “”. Then the machine will be in the TOAST function.
2. Press and rotate the “OK/START/PAUSE” knob to choose the slice number of toast. The default number is 4 slices.
3. Press the “” button and rotate the “OK/START/PAUSE” knob to choose the degrees of toastiness. The default setting is 4.
4. Press the “OK/START/PAUSE” button to start cooking. The default cooking time is 4 minutes and 15 seconds, which cannot be adjusted during cooking process.
5. After the cooking finishes, the machine will beep 3 times and the display screen will show “End”. Pay attention to the high temperature of both the food and the machine when you take out the food.




BAKE


1. Rotate the “OK/START/PAUSE” knob to the right twice. The display screen will show “BAKE” and “”. Then the machine will be in the BAKE function. The fan is closed by default. You can open it by selecting “” and the “” icon will display.
2. Press and rotate the “OK/START/PAUSE” knob to adjust the temperature. The default temperature is 350°F.
3. Press the “” button and rotate the “OK/START/PAUSE” knob to adjust the cooking time. The default time is 25 minutes.
4. Press the “OK/START/PAUSE” button to start cooking.
5. After the cooking finishes, the machine will beep 3 times and the display screen will show “End”. Pay attention to the high temperature of both the food and the machine when you take out the food.

ROAST





1. Rotate the “OK/START/PAUSE” knob to the right 3 times. The display screen will show “ROAST” and “”. Then the machine will be in the ROAST function. The fan is closed by default. You can open it by selecting “” and the “” icon will display.
2. Press and rotate the “OK/START/PAUSE” knob to adjust the temperature. The default temperature is 350°F.
3. Press the “” button and rotate the “OK/START/PAUSE” knob to adjust the cooking time. The default time is 10 minutes.
4. Press the “OK/START/PAUSE” button to start cooking.
5. After the cooking finishes, the machine will beep 3 times and the display screen will show “End”. Pay attention to the high temperature of both the food and the machine when you take out the food

BROIL


 
1. Rotate the “OK/START/PAUSE” knob to the right 4 times. The display screen will show “BROIL” and “”. Then the machine will be in the BROIL function. The fan is closed by default. You can open it by selecting “” and the “” icon will display.
2. Rotate the “OK/START/PAUSE” knob to adjust the temperature. The default temperature is 350°F.

3. Press the “” button and rotate the “OK/START/PAUSE” knob to adjust the cooking time. The default time is 10 minutes.
4. Press the “OK/START/PAUSE” button to start cooking.
5. After the cooking finishes, the machine will beep 3 times and the display screen will show “End”. Pay attention to the high temperature of both the food and the machine when you take out the food.

PIZZA





1. Rotate the “OK/START/PAUSE” knob to the right 5 times. The display screen will show “PIZZA” and “”. Then the machine will be in the PIZZA function.
2. Press and rotate the “OK/START/PAUSE” knob to choose pizza sizes, including inches, 9 inches, and 12 inches. The default size is 9 inches.
3. Press the “” button and rotate the “OK/START/PAUSE” knob to adjust the temperature. The default temperature is 380°F for a 9-inch pizza.
4. Press the “” button and rotate the “OK/START/PAUSE” knob to adjust the cooking time. The default time is 10 minutes for a 9-inch pizza.
5. Press the “OK/START/PAUSE” button to preheat. “Preheat” will flash.
6. After preheating, put the food into the cooking machine and close the door.
7. Press the “OK/START/PAUSE” button to start cooking.
8. Press the “” button and rotate the “OK/START/PAUSE” knob to adjust the temperature and the time during cooking process.
9. After the cooking finishes, the machine will beep 3 times and the display screen will show “End”. Pay attention to the high temperature of both the food and the machine when you take out the food.

WARM



1. Rotate the “OK/START/PAUSE” knob to the right 6 times. The display screen will show “WARM” and “”. Then the machine will be in the WARM function.
2. Press and rotate the “OK/START/PAUSE” knob to adjust the temperature. The default temperature is 180°F.
3. Press the “” button and rotate the “OK/START/PAUSE” knob to adjust the cooking time. The default time is 1 hour.
4. Press the “OK/START/PAUSE” button to start cooking.

5. After the cooking finishes, the machine will beep 3 times and the display screen will show “End”. Pay attention to the high temperature of both the food and the machine when you take out the food.

REHEAT

1. Rotate the “OK/START/PAUSE” knob to the right 7 times. The display screen will show “REHEAT” and “”. Then the machine will be in the REHEAT function. The fan is closed by default. You can open it by selecting “” and the “” icon will display.
2. Press and rotate the “OK/START/PAUSE” knob to adjust the temperature. The default temperature is 350°F.
3. Press the “” button and rotate the “OK/START/PAUSE” knob to adjust the cooking time. The default time is 3 minutes.
4. Press the “OK/START/PAUSE” button to start cooking.
5. After the cooking finishes, the machine will beep 3 times and the display screen will show “End”. Pay attention to the high temperature of both the food and the machine when you take out the food.

DEHYDRATE

1. Rotate the “OK/START/PAUSE” knob to the right 8 times. The display screen will show “DEHYDRATE” and “”. Then the machine will be in the DEHYDRATE function.
2. Press and rotate the “OK/START/PAUSE” knob to adjust the temperature. The default temperature is 150°F.
3. Press the “” button and rotate the “OK/START/PAUSE” knob to adjust the cooking time. The default time is 4 hours.
4. Press the “OK/START/PAUSE” button to start cooking.
5. After the cooking finishes, the machine will beep 3 times and the display screen will show “End”. Pay attention to the high temperature of both the food and the machine when you take out the food.

CARE AND CLEANING

1. Before cleaning, unplug the oven and allow it to cool completely.
2. Wash all the attachments with mild, soaped water including the rack and the grill Tray.
3. Do not use abrasive cleansers, scrubbing brushes and chemical cleaner as these will cause damage to the non-stick coating of grill tray.

4. Using a wet cloth to wipe the inner of the oven.
5. To clean the door by using a wet cloth saturated with detergent or soap.
6. Never immerse the unit in water or other liquid.
7. Any other servicing should be performed by an authorized service representative.

CAUTION : HOT SURFACE

Warning: Hot Surface!

Advertencia: ¡Superficie Caliente!

Avertissement: Surface Chaude!

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.