

OPERATING INSTRUCTIONS & IMPORTANT SAFEGUARDS SAVE THESE INSTRUCTIONS

When using your Micro Finish, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

WARNING

1. This appliance can be used by children aged from 14 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Do not use this appliance with a damaged or broken comb nor with teeth missing from the blades, as injury may occur.
4. When discarding an old battery, do not throw it into fire where heat could cause it to rupture or explode. Also, do not attempt to recharge alkaline, heavy-duty, or lithium batteries in a battery charger. Dispose batteries properly.
5. Risk of fire and burns. Do not recharge, disassemble, or incinerate. Keep battery out of reach of children. Dispose of used batteries promptly.

BATTERY INSTALLATION/REPLACEMENT

1. Holding the trimmer with the cutting head facing you, pull the aluminum casing off, toward you.
2. Insert one AAA battery.
3. Replace the battery compartment cover.
4. To maximize battery life, turn the trimmer "OFF" immediately after each use.
5. Replace the battery as soon as you notice the trimmer running slower than normal, to avoid pulling of hairs

Installation of Trimming Heads

1. Make sure trimmer is turned "OFF".
2. Turn trimmer head counterclockwise 1/4 turn and lift off.
3. Place trimmer head on trimmer and turn trimmer head clockwise 1/4 turn to lock on.

Before Trimming:

Remove the protective cap and turn the trimmer "ON" by pushing the switch up.

Trimming Bikini Area:

For detailing the bikini area, slowly move the detailing attachment on the outside of the bikini area to trim and shape until desired look is accomplished.

Trimming Toes:

For trimming hair on toes, slowly move the defining trimmer with the grain of the hair.

Trimming Arm Hair:

Simply glide the defining trimmer over arm until desired "look" is achieved.


Trimming Eyebrows:

Trimming with eyebrow attachment comb, place eyebrow attachment comb over it (See Fig. A). The attachment comb allows you to trim and shape eyebrows. Trim by following in the direction of hair growth.



Fig. A

NOTE: Only use on eyebrows. Be cautious around the eye area. The eyebrow attachment comb has two settings; approximately 2mm (S) and 4mm (L) (See Fig. B). The settings will create very short lengths to create a thin brow.

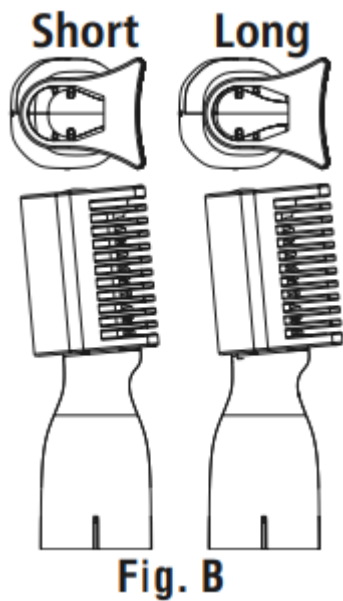

1. Choose the desired length. The shortest is nearest to the comb and the longest is the furthest. The first time using the eyebrow attachment comb, it is better to start with the longest setting to see what length works best.
2. Slide the track of the blade into the chosen slot on the eyebrow attachment comb. The eyebrow attachment comb should slide in easily, otherwise it may be misaligned.
3. Slide the eyebrow attachment comb until you feel it fasten. The entire length of the blade should be covered.

CAUTION: Do not insert the Vertical Blade or any other foreign object into the inner ear. For hair growing on the outside of the ear, simply move the vertical blade slowly along the edges of the ear.

Cleaning Your Trimmer

Periodically after use, turn the trimmer "OFF" and rinse cutting heads under warm, running water. For more thorough cleaning, remove the attached cutting head by turning it slightly counterclockwise. Then rinse the entire head under running water. After cleaning, replace desired cutting head by turning slightly clockwise and wipe the entire trimmer dry with a soft cloth. Always replace the protective cap before storing.

NOTE: Do not submerge any of the blades under water.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

