




GETTING TO KNOW YOUR COFFEE WARMER

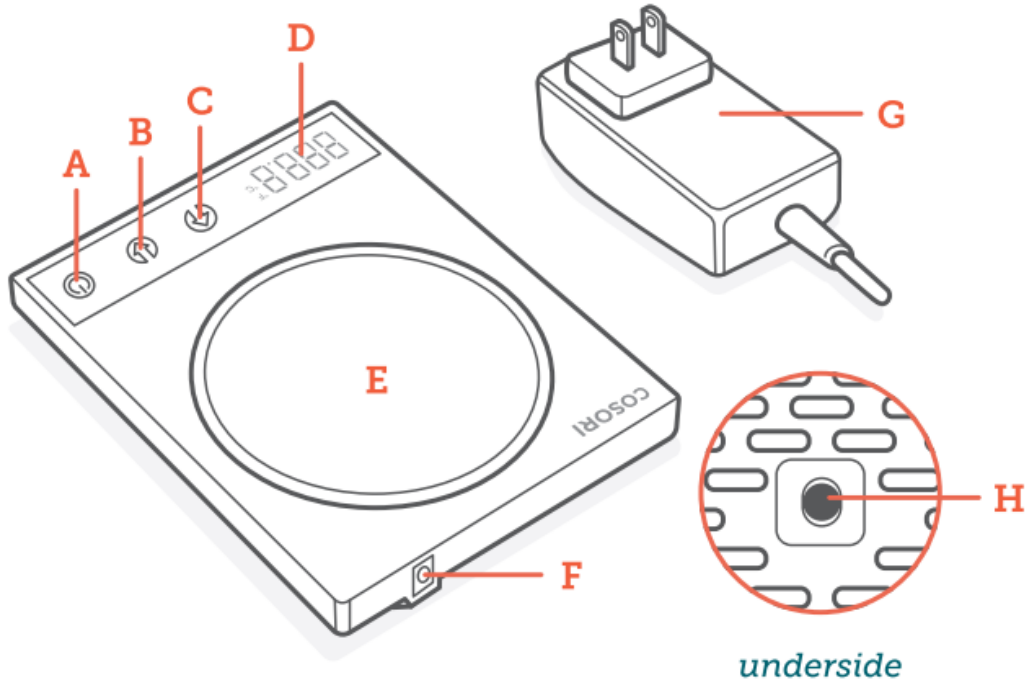

A.	Power Button	E.	Heating Plate
B.	Decrease Temperature 	F.	DC Port
C.	Increase Temperature 	G.	Adapter
D.	Temperature Display	H.	Gravity Induction Switch

USING YOUR COFFEE WARMER

ATTENTION

The coffee warmer should **only** be used to keep drinks warm. The warmer cannot effectively heat up cold or lukewarm drinks. For best results, use heat-safe cups that are thin and have a flat bottom.



Flat Bottom




Recessed Bottom





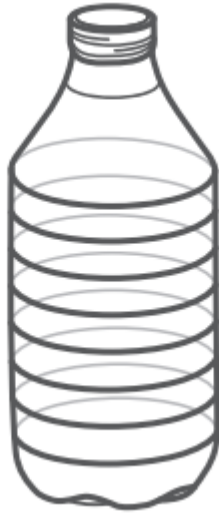


Double Walled

X





Not Heat-Safe

1. Place the coffee warmer on a flat, level surface.
 2. Connect the adapter to the DC port, then plug the adapter into an outlet. The coffee warmer will beep once and the display will light up for 3 seconds.  will turn red.
 3. Place a heat-safe cup with a liquid that weighs at least 10.4 oz / 295 g on the heating plate to activate the gravity induction switch. Then, tap .
 4. Tap  or  to set a custom temperature from 77°-194°F / 25°-90°C.
- Note:** The temperature on the display shows the temperature of the heating plate, **not** the temperature of the liquid in your cup. Set the display temperature higher than the temperature you want for your drink.
5. Tap  at any time to turn off the coffee warmer.

Note: If you remove your cup from the coffee warmer, the heating plate will hold its temperature for 60 seconds before turning off for safety reasons.

Temperature Conversion

To change temperature units, turn on the coffee warmer and press and hold  and  simultaneously for 3 seconds.

Automatic Shutoff

The coffee warmer will automatically turn off after 8 hours.

Coffee Warmer Sounds

To turn coffee warmer sounds on/off.

1. Turn the coffee warmer off.

2. Press and hold  and  simultaneously for 3 seconds.

CARE & MAINTENANCE





Cleaning

- Unplug the coffee warmer and allow the heating surface to completely cool before cleaning.
- Use a damp cloth to wipe down the surface of the coffee warmer. Dry immediately with a clean, dry cloth.
- **Do not** immerse the coffee warmer in water or liquids.

Specifications

Adapter	
Input	AC 100-240V, 50-60HZ
Output	DC 12V, 2.5A
Coffee Warmer	
Input	DC 12V, 2.5A
Rated Power	24W
Temperature Range	77°-194°F / 25°-90°C
Auto-Off	8 hours
Dimensions	5.4 x 4.3 x 0.7 in / 13.7 x 10.9 x 1.8 cm
Weight	0.5 lb / 220 g

TROUBLESHOOTING

Problem	Possible Solution
<p>The coffee warmer does not heat up.</p>	<p>Make sure the coffee warmer is plugged in and the power button light is on.</p>
	<p>Place a cup that weighs at least 10.4 oz / 295 g on the heating plate to activate the gravity induction switch, then tap  to turn on the coffee warmer.</p>
<p>All lights are flashing.</p>	<p>Place a cup on the heating plate to activate the gravity induction switch. The lights will stop flashing and the coffee warmer will resume heating.</p>
<p>The coffee warmer doesn't beep.</p>	<p>Tap  to turn off the coffee warmer. Then, press and hold  and  simultaneously for 3 seconds to turn the sounds on.</p>
<p>"E1" or "E2" appears on the display.</p>	<p>Internal temperature sensor is damaged or broken. Contact Customer Support.</p>

IMPORTANT SAFEGUARDS

Follow basic safety precautions when using your coffee warmer. Read all instructions.

- **Do not** touch hot surfaces. **Always** use caution when near or working with a hot surface.
- To protect against electric shock, **do not** immerse the coffee warmer or adapter in water or other liquid.

- Close supervision is necessary when this appliance is being used by or near children. **Do not** allow children to play with this device.
- This coffee warmer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety.
- Unplug the coffee warmer when it is not being used.
- Allow the coffee warmer to completely cool down before cleaning or storing.
- **Do not** use the coffee warmer if the cord, plug, or the coffee warmer itself is damaged in any way. Contact **Customer Support** if your coffee warmer has been damaged.
- **Do not** try to repair or take apart the coffee warmer.
- **Always** use extreme caution when moving cups containing hot liquids.
- **Do not** cook foods on the coffee warmer.
- **Do not** use the coffee warmer outdoors.
- **Do not** place the coffee warmer on or near a hot gas or electric stove or inside a heated oven.
- **Do not** let the cord hang over the edge of a table or counter or near a hot surface.
- To prevent electric shock, **always** connect the adapter to the coffee warmer first, then plug the adapter into a wall outlet.
- **Only** use the coffee warmer as directed in this manual.
- Household use **only**.

WARRANTY INFORMATION

Product	Original Automatic Coffee Warmer
Model	C0294-CW
Default Warranty Period	1 year
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Order ID	
Date of Purchase	

TERMS & POLICY

Arovast Corporation warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Arovast Corporation will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use for which the product is not intended. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Arovast Corporation is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety or use warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.

- Unsupervised use by children under 18 years of age.

Arovast Corporation and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Extend Your Warranty by 1 Year

Register your product at www.cosori.com/warranty to extend your 1-year warranty by an additional year.

Please fill out all required fields and include your order ID, place of purchase, and purchase date, if applicable.

Defective Products & Returns

If you discover your product is defective within the specified warranty period, please contact Customer Support via support@cosori.com with a copy of your invoice and order ID. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

