


COMPONENTS

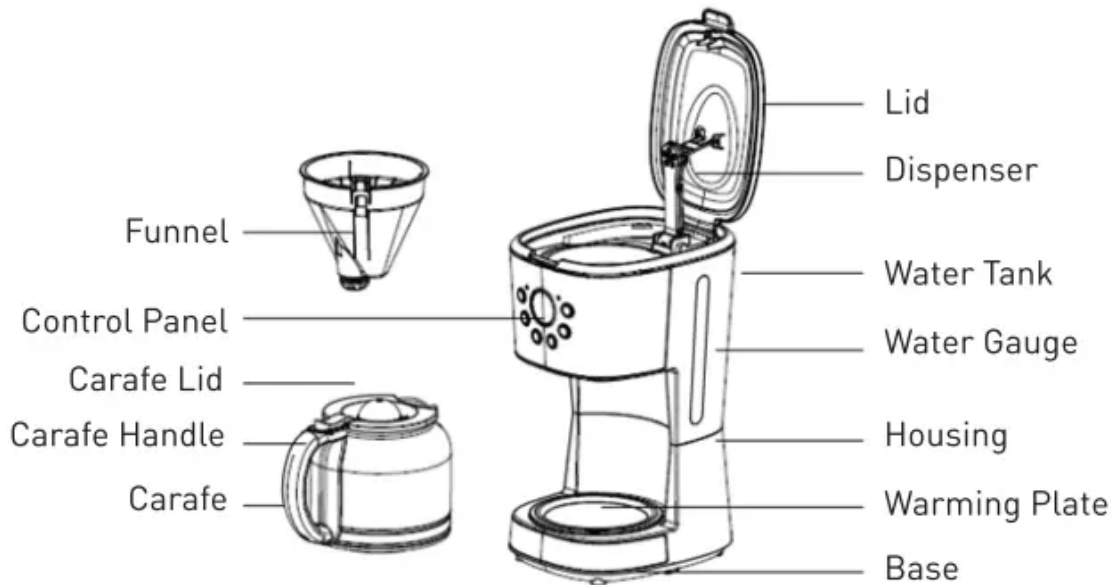

USING YOUR COFFEE MACHINE

1. Open the top lid and fill the water tank with drinking water. The water level should not exceed **MAX** level as indicated on the water gauge.
2. Place the funnel into the funnel support. make sure it is assembled correctly, otherwise the top lid cannot be closed. Place permanent filter in the funnel.
3. Add coffee powder into permanent filter. Usually a cup of coffee needs a level spoon of coffee powder, but you may adjust according to personal taste. Close the top lid completely.
4. Insert the carafe with handle closed onto warming plate horizontally.
5. Plug the power cord into the outlet. If you want to adjust the coffee strength, you can press "**STRENGTH**" button once, and then its corresponding indicator will illuminate in orange and the appliance will brew thick coffee. If you do not want to adjust the coffee strength. just follow the following operation to brew normal coffee.
6. Press **ON/OFF** button. its indicator illuminates in red, the LCD display indicates " 12:00". and then the appliance begins to work.

Note: The brewing process can be interrupted by pressing the ON/OFF button at any time. and the indicator of ON/OFF button will extinguish. indicating your coffee maker is power off.

Note: During brewing process. the buttons of "**PROGRAM**" and **DELAY BREW**", "**HOOR**" and "**MINUTE**" are invalid.

7. The brewing process can be interrupted by pressing the **ON/OFF** button at any time. the indicator will extinguish. The appliance will continue brewing once the **ON/OFF** button button is pressed again.

Note: You can take out the carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds or dripping may recommence.

8. Remove the carafe to serve when the brewing is finished (about one minute later after the coffee stops dripping out.)

Note:The coffee you get will be less than the water you have added, as some water is absorbed by ground coffee.

9. When the process is finished, if you do not want to serve immediately, keep the coffee maker switched on and the coffee will be kept warm in the warming plate. The appliance will shut off automatically after 2 hours from the **ON/OFF** button being activated if it has not been manually disconnected at the completion of brewing. For an optimum coffee taste, serve it just after brewing.

10. Always turn the coffee maker off and disconnect the power supply when not use.

NOTE: Take care when pouring as the temperature of coffee when just finished is high.

DELAY FUNCTION

If you do not want the coffee maker to start operation immediately. for example now it is 8:10, you hope that the coffee maker will automatically start working at 13:00, first follow steps 1 to 5 of above section, and then you can set the automatic start function as follows:

1. Set the current time by pressing **HOUR** and **MINUTE** button repetitively. that is 8:10.

Note: The time cycle is 24 hours.

2. Press **PROGRAM** button one time. the indicator of **ON/OFF** button will illuminates in green and flash.{{means the coffee make enter the presetting time state.

3. Set the delayed starting time by pressing **HOUR** and **MINUTE** button repetitively that is 13:00.

4. Press the **DELAY BREW** button. the indicator of **ON/OFF** button is illuminated in green. After a while. the LCD will display the current clock. You may see the automatic start time by pressing PROGRAM.

Note: You may cancel the automatic start function by pressing **ON/OFF**. If you want to change the automatic start time. only following the above 2-4 steps again.

5. When the time is due. the indicator of ON/OFF button will illuminate in red and the appliance starts brewing.

6. When the process is finished, if you do not want to serve immediately, keep the coffee maker switched on and the coffee will be kept warm in the warming plate. The appliance will shut off automatically after 2 hours from the ON/OFF button being activated if it has not been manually disconnected at the completion of brewing. For an optimum coffee taste, serve it just after brewing.

Note: During brewing process, the buttons of "PROGRAM", "DELAY BREW' JOUR" and "MINUTE" are invalid.

CLEANING & MAINTENANCE

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

1. Clean all detachable parts after each use in hot soapy water.
2. Wipe the exterior surface of unit with a soft, damp cloth to remove stains.
3. Water droplets may build up in the above area of the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, periodically you should clean away the mineral deposits left by the water according to the water quality in your area and the frequency of use. We recommend removing mineral deposits as follows:

1. Fill the tank with water and descaler to the max level as indicated on water gauge [the mix of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use "household descaler", you may also use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid)].
2. Place the serving cup under the brew basket.
3. Ensure the funnel is assembled in place.
4. Switch on the appliance and allow it to "brew" the de-scaling solution.
5. After "brew" one-cup solution, switch off the appliance.
6. Leave the solution for 15 minutes and repeat step 3-5.
7. Switch on the appliance and run off the solution until the water tank is completely empty.

8. Rinse by operating the appliance with water at least 3 times.

HINTS FOR GREAT TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CLEANING AND MAINTENANCE" section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing. The Haden coffee grinder is available for this operation.
4. Do not reuse coffee powder since this will greatly reduce the coffee's flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.