


Operating Instructions for Trimmer

SPECIAL FEATURES

Your trimmer has been designed with several advanced features to help you get perfect results every time you trim. Your trimmer may be used to neatly trim goatees, beards, mustaches, neckline, sideburns around the ears and eyebrows, or anywhere you may need grooming. It also makes a great all-around family trimmer for light haircuts and touch ups between trips to the barber or to clean up the shape of the neck.

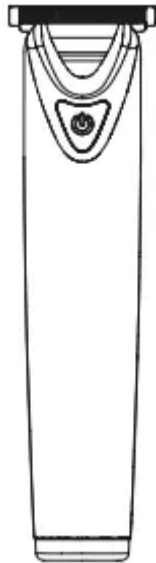

- A Detachable Blade System enables you to quickly change from a standard-width blade for full grooming to a narrow-width blade for detail trimming around a mustache, goatee, or anywhere to define the hair line and clip any stray whiskers.




To remove attachment, simply pull top edge of blade away from body unit. To attach, align back tab of attachment head to cavity on the inner edge of trimmer unit and push down on top of blade.

Should blades become damaged or dull or if you want additional attachment heads for your trimmer, you may purchase them from Wahl. See the ACCESSORY SHEET in this kit for ordering information

- Self-Sharpening Blades are made to maintain their shape and sharpness for extended periods.

TRIMMING WITH ATTACHMENT COMBS

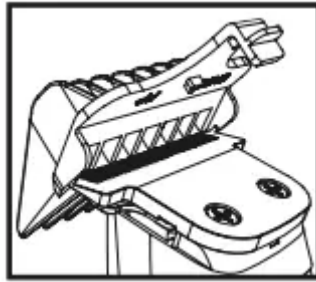

These attachments are ideal for blending, tapering and defining beards, as well as for achieving a “close trim” stubble look around the face. To use the attachments, go with the hair direction. To achieve closer looks, go against the hair direction.

To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the trimmer blade.

TRIMMING AND EDGING YOUR BEARD

The following are suggested trimming steps and trimmer positions. You may find different procedures work better for you.

1. Comb your beard in the direction that it grows to help reveal stray hairs that may be longer than the others.
2. Attach a guide to trim and taper your beard. Begin with a guide of a long trimming length. Trim toward your chin in smooth, overlapping strokes, following the lay of your beard. If you trim against the way your beard naturally lays, the trimmer will cut the hair much shorter. Change the trimming guides to progressively shorter lengths until you reach the desired length of beard. You may wish to trim closer near the ear and down under the chin, changing to a longer guide toward the front of the face and point of your chin.
3. To cut the outline of your beard, remove the trimming guide comb. Starting under your chin and working back toward your jawbone and ears, cut the outer perimeter of your beard underneath the jawbone. Continue the line all the way up to the ears and hairline.
4. Accentuate your beard line by using the trimmer in a downward motion. Start at the line you've created and, working from the chin back toward the ears, trim the area right under your beard line.
5. Define the upper part of your beard using the same technique.
6. For a neater finished look, attach the detail blade. Use this blade for fine, detail trimming anywhere it is needed, such as at the sideburns near the ears, goatees, etc.



DETAILING NECKLINES, SIDEBURNS, MUSTACHES & BEARDS

Slowly move trimmer downward on desired areas to neatly trim and shape.

TRIMMING ARM & LEG HAIR

Simply glide the trimmer over your arm or leg until desired hair length is achieved. The first time you trim the hair, start by using a longer guide comb on the trimmer, then use progressively shorter settings if a shorter length is preferred.

TRIMMING CHEST & STOMACH

Glide the trimmer over your torso region, in an upward motion until desired hair length is achieved. For tight, scratch-free trimming, use the #1/4 guide comb.

TRIMMING NOSE HAIR

Make sure the nasal passages are clean. Slowly move the ear/nose trimmer in and out of each nostril, no more than 1/4-inch deep.

TRIMMING EAR HAIR

Make sure the outer areas of the ears do not contain any wax. Hold the ear flat with one hand and carefully insert ear/nose trimmer no more than 1/4-inch into the outer ear.

CAUTION: Do not insert the detailer or any other foreign object into the inner ear. For hair growing on the outside of the ear, simply move the detailer slowly along the edges of the ear.

TRIMMING EYEBROWS

Slowly move detailer to neatly trim stray hairs. For precise, even trimming, slowly move the detailer closer or farther away from eyebrows to achieve desired length. Do not press against brow as it may remove too much hair.

FADE CUT

1. Start at the temple and cut all the way around the head to establish the ultimate location of the fade line. Always cut against the grain for the shortest cut. Don't force the blade through the hair. Let the trimmer do the work.
2. Next, cut around the head again and up the nape of the neck to the fade line, brushing away the cut hair as you go. Pull the scalp taut with the thumb for the closest cut. Turn the trimmer upside down when necessary to keep cutting against the grain. Make sure both sides of the head are even.
3. For the top of the head, cut with the grain using the individual guide comb attachments. The smaller the number of the comb, the shorter the cut. Comb or brush the hair as you cut for an even end result.
4. To complete the fade, blend the hair at the fade line by trimming up and out across the line and against the grain all the way around the head. Then, repeat all around, turning the trimmer upside down and cutting downward. The final objective is to blend the hair so there is no real line, just a perfect fade from bald to very short hair. You can achieve this by using the #1 guide comb attachment. Continue combing and cutting until you achieve the desired effect.

5. To create a part, pick a spot off-center. Pull the scalp tight and with the end of the blade perpendicular to the head, move the trimmer back and forth to cut a line. Comb through it and cut again to make sure the cut is precise.

CUTTING HAIR

The first time you cut the hair, cut only a small amount until you become accustomed to how long each guide comb leaves the hair. Always start by placing the largest guide comb on the trimmer, then use shorter combs if a shorter length is desired.

Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that neat, well-groomed look.

For uniform cutting, allow the trimmer to cut its way through the hair. Do not force it through at a faster rate.

1. Start by combing the hair so it falls into its natural direction.
2. Place the largest guide comb onto your trimmer and start by trimming the sides from the bottom upwards. Hold the trimmer lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the trimmer up and outward through the hair, cutting only a small amount at a time.

Repeat around sides and back of head.

If you desire shorter hair, either change to a shorter guide comb or apply more pressure and less lift away from head with the present attachment.

This entire procedure requires practice, and it is always better to leave too much hair the first few haircuts.

RECHARGING & SMART LED

1. This trimmer is conveniently designed for household use. It should be allowed to charge completely before its first use.
2. Remove the trimmer, recharging transformer and accessories from the packing material.
3. Connect the transformer to the trimmer. **BE SURE TRIMMER IS IN THE "OFF - 0" POSITION WHEN CHARGING.**
4. Plug the recharging transformer into any convenient electrical outlet at the correct voltage.
5. When charging the trimmer, the LED will pulse.
6. When charging is completed, the LED will stay ON.

7. When the trimmer is about to run out of energy, the LED will flash to indicate that you have less than 15% battery capacity remaining. Once flashing starts, there should be enough charge remaining to finish trimming before re-charging the trimmer.
8. Once the LED begins flashing to indicate that it needs to be re-charged, it will remain flashing until the trimmer is completely re-charged or until the trimmer runs out of power. Completely recharged means that enough charge time has elapsed and the LED stays ON.
9. When trimmer is low in power, it should be connected to the transformer and plugged into an outlet to assure maximum power is available when it is next used. This transformer is designed to completely charge the battery without overcharging. Do not use the trimmer while it is charging.
10. The battery will take approximately 60 minutes to charge. The lithium ion trimmer also has quick charge capability. Quick charge means for every minute you charge the trimmer, you can get approximately 5 minutes of usage. For example, if you are in a hurry, charging for 3 minutes will give you 15 minutes of run time.
11. Insert only recharging transformer plug supplied by the manufacturer into charger receptacle.



TROUBLESHOOTING

- If the LED did not flash before the trimmer stopped running try resetting the trimmer by charging the trimmer completely until the LED stays ON.
- Trimming is disabled when charging.
- If the trimmer unexpectedly stopped operating try resetting the device by plugging the trimmer into the charger.
- If your trimmer does not seem to take a charge, check the following before returning it for repair:
 1. Check outlet to make sure it is working by plugging in another appliance.
 2. Make sure the outlet simply is not connected to a light switch which turns the power at the outlet off when lights are turned off.
 3. Be sure the trimmer is properly connected to the recharging transformer, all connections are secure and the trimmer is turned off.

4. If your electricity is connected to a master power switch, we suggest the trimmer be disconnected from the charger anytime the master switch is off. Leaving the unit plugged into a dead outlet or an unplugged charger will drain the battery.
5. If trimmer does not run and it is completely charged, turn the unit “ON - I” and pinch or push the blades manually. (Oil may have dried out between the blades, so they may be temporarily stuck together.)

LITHIUM-ION BATTERY REPLACEMENT, CLIPPER DISPOSAL AND RECYCLING

- For battery replacement send the entire, intact clipper unit to: Wahl Annex 3001 North Locust, P.O. Box 578, Sterling, IL 61081
- Do not attempt to remove the battery. Lithium-Ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged, or exposed to water or high temperatures.
- If you choose not to replace the battery, the entire, intact clipper unit must be disposed. Do not attempt to remove the battery for disposal. Lithium-Ion batteries may be subject to local disposal regulations. Many locations prohibit disposal in standard waste receptacles. Check your local laws and regulations.
- For recycling contact a government recycling agency, waste disposal service, retailer, or visit online recycling sources, such as [batteryrecycling](#) or [rbrc](#)

TRAVEL LOCK

This Wahl trimmer comes with an electronic travel lock to avoid accidental activation while transporting.

Hold power button down for 5 seconds to engage travel lock.


Hold power button down for 5 seconds to disengage travel lock.

NOTE: Plugging in power cord while locked will deactivate the travel lock.

CARING FOR YOUR TRIMMER

For best results, use Wahl Clipper Oil on the blades only when necessary, or approximately once a month. Motor bearings are permanently lubricated—do not attempt to oil. When oiling your trimmer, turn the trimmer “ON - I,” hold the unit with the blades facing DOWN and squeeze three drops across the front of the blade and one drop on each side on the heel of the blade. Wipe off excess oil with soft cloth.

NOTICE—DO NOT OVER OIL! Excessive oiling or application of liquids will cause damage if allowed to seep back into motor.

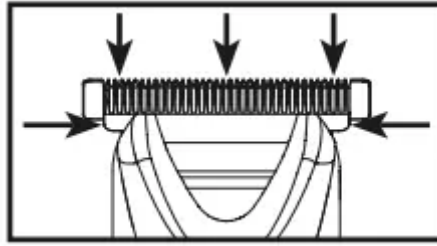

BLADE CARE

Trimmer blades have precision-hardened, ground and lapped cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty or abrasive material. Clean with the included brush.

Heads should be removed from the trimmer prior to rinsing in water. After rinsing, allow the heads to air dry completely before reattaching to the trimmer body. The trimmer body should always be kept away from water to maximize the life of the motor, battery, and control components.

CLEANING/STORAGE

Before storing your trimmer, use the cleaning brush to whisk any loose hairs from the unit and the blades. Store unit in such a manner so that blades are protected from damage. When the trimmer is not in use, the trimmer blade guard attachment should be in place to protect the blades. This appliance should be stored in a manner where it is not subjected to crushing, heating above 100°C (212°F), or incineration.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.