


## QUICK SETUP GUIDE Portable Bluetooth Speaker

### PACKAGE CONTENTS

- Bluetooth speaker
- USB cable
- *Quick Setup Guide*

### FEATURES

- Wirelessly stream from any Bluetooth device
- Rechargeable battery lasts up to 12 hours
- Speakerphone for hands-free calling
- Rubber feet support a horizontal or vertical orientation

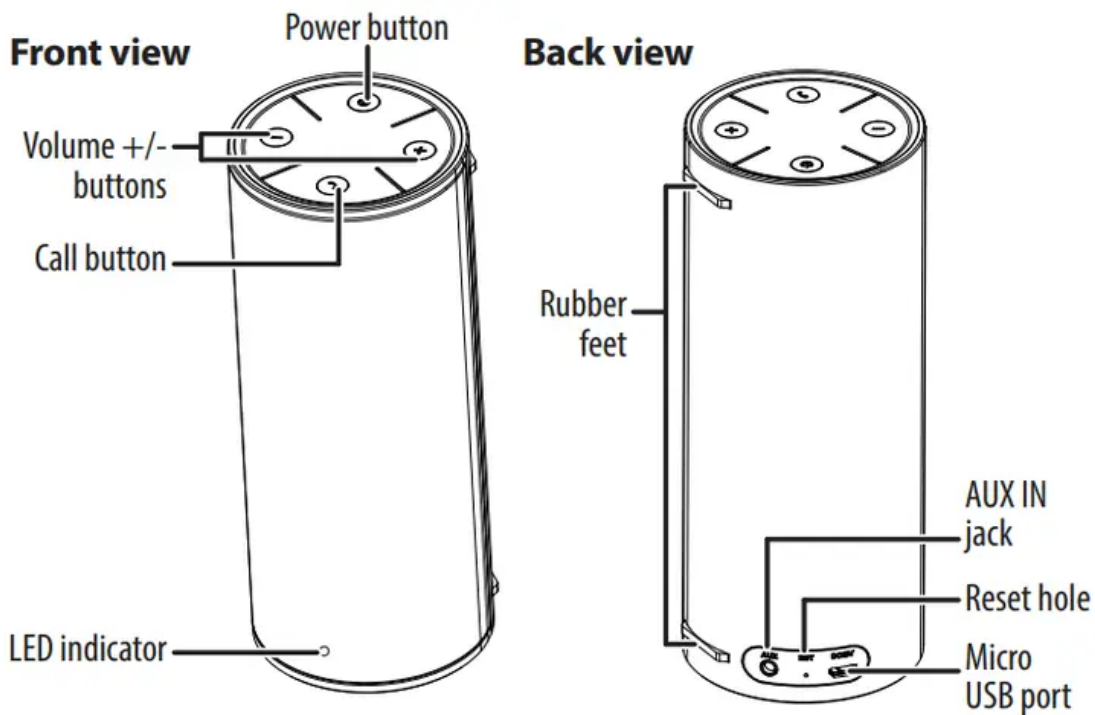


Before using your new product, please read these instructions to prevent any damage.

### CHARGING YOUR SPEAKER


- 1 Connect the small end of the charging cable to the micro USB port on the back of your speaker.
- 2 Connect the other end to a USB port on your computer or wall adapter (not included). The LED indicator is red while charging, then turns off when the speaker is fully charged.


**Note:** The speaker beeps continually when the battery is low. About five minutes later, the speaker turns off automatically.

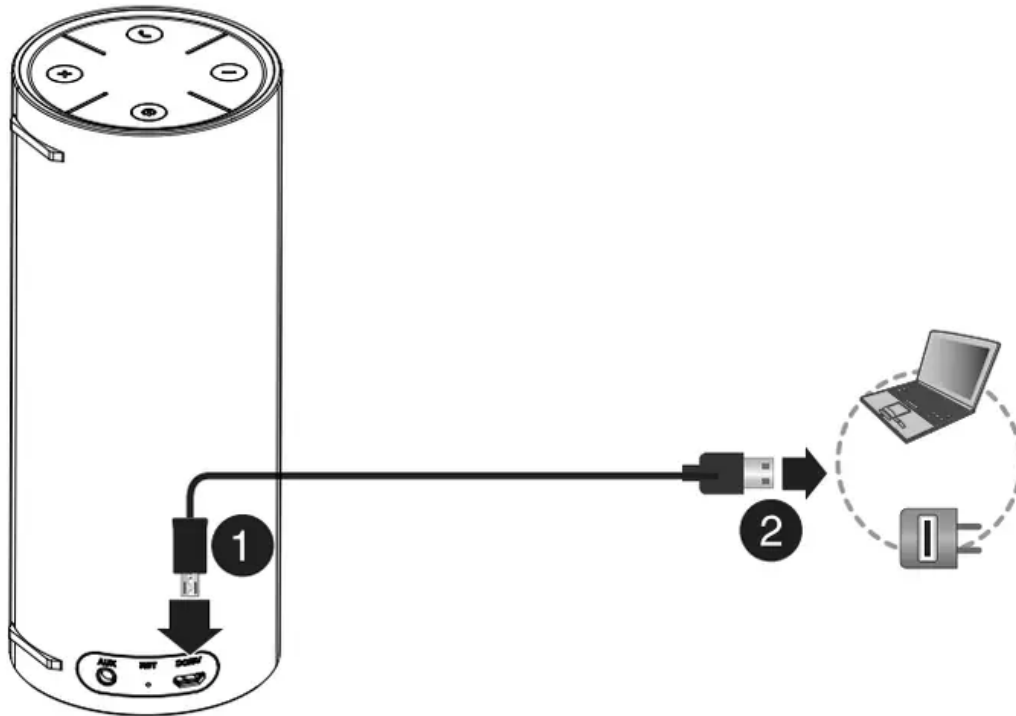

## CONNECTING AN AUDIO DEVICE

### Bluetooth

- 1 Press and hold  (power) to turn on your speaker. The LED indicator blinks blue quickly and your speaker automatically enters pairing mode.
- 2 Make sure that your Bluetooth device is within 33 ft. (10 m) of your speaker.
- 3 Turn on your Bluetooth device, turn on Bluetooth, then enter pairing mode. For more information, see the documentation that came with your Bluetooth device.
- 4 On your Bluetooth device, select **NS-SPBTWAVE2**. Your speaker pairs with your Bluetooth device and the LED indicator lights solid blue.
- 5 To disconnect, un-pair your Bluetooth device from your speaker. OR

Press and hold  (call) for three seconds on your speaker. Your Bluetooth devices loses connection automatically.

### Audio cable

- Connect a 3.5 mm audio cable (not included) from your speaker's AUX jack to your audio device's headphone/audio out jack.

The LED indicator blinks blue slowly while connected to an audio cable.

## RECONNECTING TO A PAIRED DEVICE

When your speaker is not paired to a device, the LED blinks blue.

<b>Your speaker loses the Bluetooth connection if you...</b>	<b>-To reconnect...</b>
Turn off your speaker.	Turn on your speaker. Your speaker searches for the last connected Bluetooth device and reconnects.
Move the Bluetooth device out of range.	Make sure that your Bluetooth device is within 33 feet of your speaker.
Turn off your Bluetooth device.	Turn on your Bluetooth device, then make sure that Bluetooth is on.
Turn off Bluetooth on your Bluetooth device.	Turn on Bluetooth on your Bluetooth device.
Connect your Bluetooth device to another Bluetooth device.	Disconnect your Bluetooth device from the other Bluetooth device, then set your device to pairing mode. Select NS-SPBTWAVE2 on your Bluetooth device.

**Note:** The Bluetooth range (33 ft./10 m) may be reduced if the wireless signal has to pass through walls or other obstructions.



## USING YOUR SPEAKER

### Listening to audio

- 1 Connect to your speaker with Bluetooth or an audio cable.
- 2 Play audio on your connected device.
- 3 Press + or - to adjust your speaker's volume.






**Note:** Make sure that your connected device's volume is set to at least 50%.

- 4 Use the controls on your connected device to control playback.

## TAKING A PHONE CALL

### Using your speaker

The following functions are available when paired to a phone with Bluetooth:

- **Reject an incoming call:** Press and hold  (call).
- **Answer an incoming call:** Press  (call).
- **Switch audio between your speaker and phone:** Press and hold  (call).
- **End current call:** Press  (call).
- **Redial the last dialed number:** Press  (call) twice.

### LED indicator

<b>LED</b>	<b>FUNCTION</b>
<b>Blinks blue quickly</b>	Bluetooth pairing mode
<b>Lights solid blue</b>	Paired to a Bluetooth device
<b>Blinks blue slowly</b>	Connected to an AUX device
<b>Lights red</b>	Speaker is charging (charging complete when LED turns off)



# TROUBLESHOOTING



PROBLEM	SOLUTION
<p><b>No power</b></p>	<ul style="list-style-type: none"> <li>• Make sure that your speaker's battery is charged.</li> <li>• Make sure that your speaker is turned on.</li> </ul>
<p><b>No sound or low volume</b></p>	<ul style="list-style-type: none"> <li>• Make sure that your Bluetooth device is turned on, Bluetooth is turned on, and <b>NS-SPBTWAVE2</b> is selected.</li> <li>• Turn up the volume on your speaker and Bluetooth device. Make sure that your Bluetooth device is not muted.</li> <li>• Make sure that your speaker is not paired to another Bluetooth device.</li> <li>• Make sure that your Bluetooth device is not paired to another Bluetooth device.</li> <li>• Shorten the distance between your speaker and your Bluetooth device.</li> </ul>



**Cannot establish Bluetooth connection**

- Make sure that your speaker is in pairing mode. Press and hold the



(call) button to reenter pairing mode.

- Shorten the distance between your speaker and your Bluetooth device.
- Turn your devices off, then on. Re-pair your speaker and your Bluetooth device.
- Make sure that your speaker is not paired to another Bluetooth device.
- Make sure that your speaker and Bluetooth device are both in pairing mode.
- Make sure that your Bluetooth device supports Bluetooth v4.0 and below.
- Make sure that your Bluetooth device is not connected to any other device.
- Make sure that you have selected **NS-SPBTWAVE2** on your Bluetooth device.
- Disconnect any audio cables connected to your speaker's AUX jack.

<p><b>My Bluetooth device keeps unpairing</b></p>	<ul style="list-style-type: none"> <li>• Shorten the distance between your speaker and your Bluetooth device.</li> <li>• If the battery on your Bluetooth device is low, recharge the battery.</li> <li>• If the battery on your speaker is low, recharge the battery.</li> </ul>
<p><b>"NS-SPBTWAVE2" does not appear on my Bluetooth device</b></p>	<ul style="list-style-type: none"> <li>• Shorten the distance between your speaker and your Bluetooth device.</li> <li>• Put your speaker into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device.</li> </ul>
<p><b>Poor sound quality</b></p>	<ul style="list-style-type: none"> <li>• Move your speaker and Bluetooth device close together.</li> <li>• Try a different music source.</li> <li>• Pair your speaker to a different mobile device.</li> <li>• Try changing the volume on your music source.</li> </ul>

## SPECIFICATIONS

- **Dimensions (H x W x D):** 6.77 x 2.75 x 2.75 in. (17.2 x 7 x 7 cm)

- **Battery size:** 2,000 mAh
- **Wattage:** 3W
- **USB cable length:** 11.8 in. (30 cm)
- **Range:** 33 ft. (10 m)
- **Run time:** 12 hours
- **Charge time:** 4.5 hours
- **Weight:** 1.01 lbs. (0.46 kg)

## IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this speaker near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this speaker during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the speaker has been damaged in any way, such as if the speaker is dropped, exposed to liquids, or does not operate normally.
- Never expose the product to fire as this could result in personal injury.
- Do not store the product in an extremely cold or warm environment.
- Never dismantle the product.
- Never let children play with the product.
- Do not expose the product to dampness or moisture.
- The product should not be exposed to dripping or splashing.

**Note:** The battery in this speaker cannot be replaced by the user.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](#)

