 


INSTALLATION

PRIOR TO CONNECTING

Position the microwave oven at a distance from other heating sources. For sufficient ventilation, there must be a space of at least 30 cm above the microwave oven. The microwave oven should not be placed in a cabinet. This microwave oven is not intended to be placed or used on a working surface lower than 850 mm above the floor.

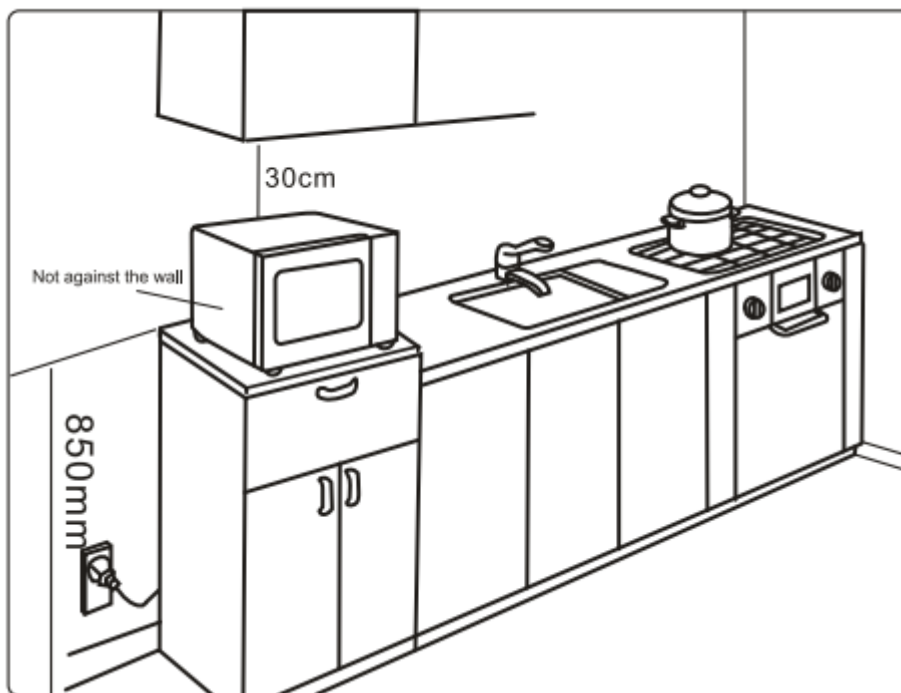

- Check that the voltage on the rating plate corresponds to the voltage in your home.
- Place the microwave oven on a stable and even surface that is strong enough to hold the microwave oven and the food utensils you put in it. Use carefully when handling.
- Ensure that the space underneath, above and around the microwave oven is empty to allow for proper airflow.
- Ensure that the appliance is not damaged. Check that the microwave oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the microwave oven and clean the interior with a soft, damp cloth.
- Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

- Do not use an extension cord: If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.
- **WARNING:**
- **Improper use of the grounding plug can result in a risk of electric shock.**
- **Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if you have doubts as to whether the microwave oven is properly grounded.**

NOTE:

AFTER CONNECTING

Prior to using the microwave for the first time, it is recommended to remove the protective film from the control panel and the cable tie from the power cord.

- The microwave oven can be operated only if the microwave oven door is firmly closed.
- Poor television reception and radio interference may result if the microwave oven is located close to a TV, radio or aerial.
- The grounding of this appliance is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.
- The manufacturers are not liable for any problems caused by the user's failure to observe these instructions.

SAFETY

IMPORTANT SAFETY INSTRUCTIONS

Read Carefully And Keep For Future Reference

- If material inside / outside the micro-wave oven is ignited or smoke is emitted, keep microwave oven door closed and turn the microwave oven off. Disconnect the power or shut off power at the fuse or circuit breaker panel.
- Do not leave the microwave oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

WARNING:

- If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING:

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which provides protection against exposure to microwave energy.

WARNING:

- Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING:

- When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

WARNING:

- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements inside the microwave oven.
- Children less than 8 years of age shall be kept away unless continuously supervised.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children less than 8 years.
- Do not use your microwave oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.

NOTE:

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

- Do not leave the microwave oven unattended if you are using a lot of fat or oil since they can overheat and cause a fire!
- Do not heat, or use flammable materials in or near the microwave oven. Fumes can create a fire hazard or explosion.
- Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers or other combustible materials. Fire could result.

- Do not use corrosive chemicals or vapors in this appliance. This type of microwave oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
- Do not hang or place heavy items on the door as this can damage the microwave oven opening and hinges. The door handle should not be used for hanging things on.

TROUBLE SHOOTING GUIDE

NOTE:

If the microwave oven does not work, do not make a service call until you have made the following checks:

- The Plug is properly inserted in the wall socket.
- The Door is properly closed.
- Check your Fuses and ensure that there is power available.
- Check that the microwave oven has ample ventilation.
- Wait for 10 minutes, then try to operate the microwave oven once more.
- Open and then close the door before you try again.

This is to avoid unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the microwave oven (see Service label). Consult your warranty booklet for further advice.

If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organization. The mains cord must only be replaced by a trained service technician.

WARNING:

- **Service only to be carried out by a trained service technician.**
- **Do not remove any cover.**

PRECAUTIONS

GENERAL

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential environments;
- Bed and breakfast type environments. No other use is permitted (e.g. heating rooms).

NOTE:

- The appliance should not be operated without food in the microwave oven when using microwaves. Operation in this manner is likely to damage the appliance.
- The ventilation openings on the micro-wave oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the microwave oven and poor cooking results.
- If you practice operating the microwave oven, put a glass of water inside. The water will absorb the microwave energy and the microwave oven will not be damaged.
- Do not store or use this appliance outdoors.
- Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar area.
- Do not use the cavity for any storage purposes.
- Remove wire twist-ties from paper or plastic bags before placing bag in the microwave oven.
- Do not use your microwave oven for deep-frying, because the oil temperature cannot be controlled.
- Use hot pads or microwave oven mitts to prevent burns, when touching containers, microwave oven parts, and pans after cooking.

LIQUIDS

e.g. beverages or water. Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.

To prevent this possibility, the following steps should be taken:

- Avoid using straight-sided containers with narrow necks.
- Stir the liquid before placing the container in the microwave oven.
- After heating, allow standing for a short time, stirring again before removing the container from the microwave oven carefully.

CAREFUL

After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.

ACCESSORIES AND MAINTENANCE

ACCESSORIES

 
- There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.
- Ensure that the utensils you use are microwave oven proof and allow micro-waves to pass through them before cooking.
- When you put food and accessories in the microwave oven, ensure that they do not come in contact with the interior of the microwave oven.
- This is especially important with accessories made of metal or metal parts.
- If accessories containing metal come into contact with the microwave oven interior, while the microwave oven is in operation, sparking can occur and the microwave oven could be damaged.
- Metallic containers for food and beverage are not allowed during microwave cooking. (This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking)
- Metallic containers for food and beverage are not allowed during microwave cooking.
- For better cooking performance, it is suggested that you need to put the accessories in the middle of the inner full flat cavity.

WIRE RACK




Use the Wire rack with Grill function.

CRISP PLATE

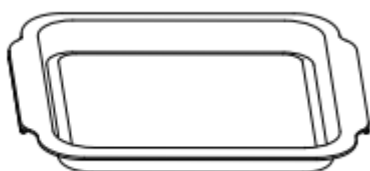

Place the food directly on the Crisp Plate. The Crisp Plate may be preheated before using (max. 3min.). Do not place any utensils on the Crisp Plate since it will quickly become very hot and is likely to cause damage to the utensil.

 CRISP HANDLE

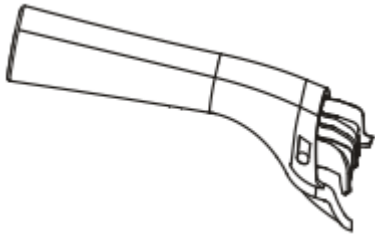

Use the Crisp Handle to remove the hot Crisp Plate from the microwave oven.


MAINTENANCE & CLEANING

- Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Do not use metal scouring pads, abrasive cleansers, steel-wool pads, gritty washcloths, etc. which can damage the control panel, and the interior and exterior microwave oven surfaces. Use a cloth with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.
- Use a soft and damp cloth with mild detergent to clean the interior surfaces, front and rear of the door and the door opening.
- Do not use steam cleaning appliances when cleaning your microwave oven.
- The microwave oven should be cleaned regularly and any food deposits removed.
- Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected.
- Do not spray directly on the microwave oven.
- This microwave oven is designed to operate cooking cycles with a proper container in full flat cavity directly.
- Do not allow grease or food particles to build up around the door.
- This product offers an AUTO CLEAN function, which allows for easy cleaning of the microwave cavity. For more details, please refer to the AUTO CLEAN section on page 35.

CONTROL PANEL

CONTROL PANEL DESCRIPTION

 MWHF 206

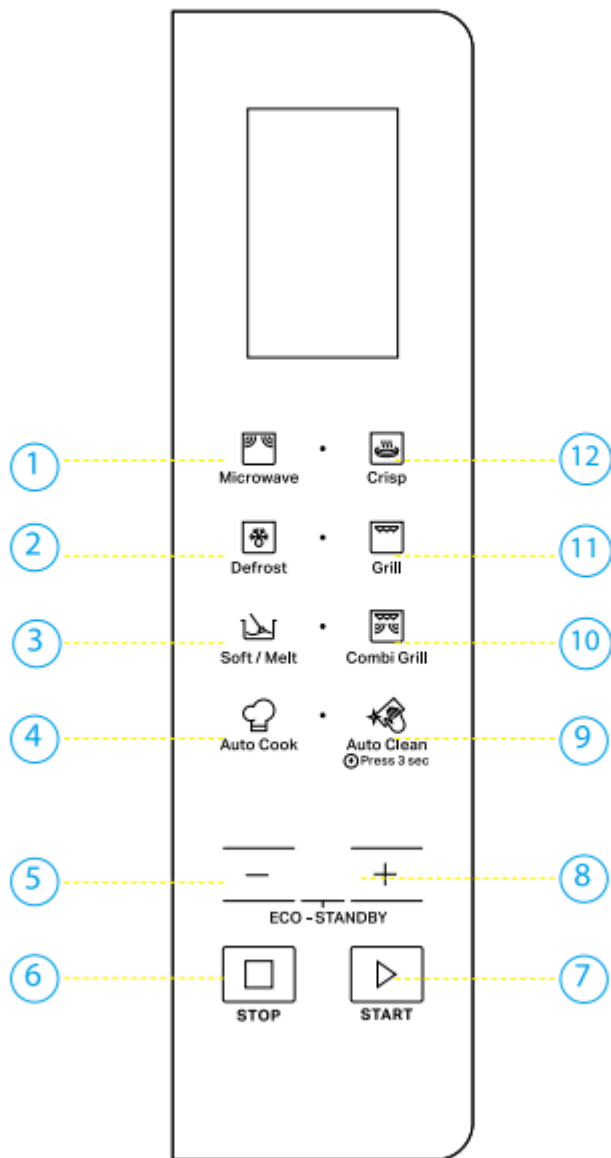

1. **Microwave button**
2. **Defrost button**
3. **Soft/Melt button**
4. **Auto Cook button**
5. **-/+ button**
6. **Stop button**
7. **Jet Start button**
8. **Eco Standby function**
(Press -/+ button simultaneously)
9. **Auto Clean button**
Clock setting: press for 3 seconds.
10. **Combi Grill button**

- 11. Grill button
- 12. Crisp button

DISPLAY DESCRIPTION



- 1. Runner icon*
- 2. Start Protection / Child Lock icon
- 3. Microwave Power (Watt)
- 4. Food class selection
- 5. Time selection
- 6. Weight (grams)
- 7. Microwave icon
- 8. Grill icon
- 9. Defrost icon
- 10. Soft/Melt icon
- 11. Crisp icon*

12. **Keep Warm icon**
13. **Yogurt icon**
14. **Auto Cook icon**
15. **Dough Rising icon**
16. **Crisp Plate on runner icon***
17. **Auto Clean icon**
18. **Grill Rack icon**

*This icon is not available in some models. Please check the control panel of your microwave on the previous page.



STAND-BY MODE

- 1 minutes after the microwave oven is plugged in to a power outlet, if there are no operations carried out, it will automatically enter Stand-by mode.
- In daily use, the microwave oven will automatically enter Stand-by Mode when the door is closed and the product is not in use after 5 minutes.
- To exit Stand-by mode, simply open the door.



ECO STANDBY MODE

- Eco Mode reduces standby power usage.
- Press the +/- button simultaneously to activate the Eco Standby Mode, display will show Eco and minimize power usage.
- Press the +/- button simultaneously again to come out of this mode.



START PROTECTION / CHILD LOCK

- This automatic safety function is activated 6 minutes after the last interaction with the microwave oven, when the product is not in use. (Please note the automatic safety function is activated 3 minutes after the cooking cycle is finished).
- When the Start Protection / Child Lock is active, the dedicated icon is shown on the display and it is not possible to use the Control Panel. Open and close the door to unlock the Control Panel.



PAUSE OR STOP COOKING

To pause cooking:

The cooking can be paused to check, add or turn or stir the food by opening the door. The setting will be maintained for 5 minutes.

To continue cooking:

Close the door and press the Jet Start button. The cooking is resumed from where it was paused.

If you don't want to continue cooking you can:

Press the Stop button, remove the food, close the door.

When the cooking is finished:

The display will show the text "End". An acoustic beep will signal once a minute for 2 minutes. This is normal behavior intended for cooling the product. Then if there's no interaction with oven in one minute, the Start Protection / Child Lock will be activated.

After the cooking cycle, before opening the door, the cooling fan and the internal lamp will continue to operate for 2 minutes. If desired, simply press the STOP button or open the door to cancel the signal and stop the cooling time.

Please note that reducing or stopping this programmed cooling cycle will not have a negative impact on the functioning of the product.



ADD/STIR/TURN FOOD *

Depending on the selected function, it could be needed to add / stir / turn food during cooking. In these cases the oven will pause cooking and it will ask you to perform the needed action.

When required, you should:

 
- Open the door.
- Add or Stir or Turn the food (depending on the required action).
- Close the door and restart by pressing Jet Start button.

Notes:

- If the door is not opened within 2 minutes from the request to Stir or Turn the food, the microwave oven will continue the cooking process (in this case the final result may not be the optimal one).
- If the door is not opened within 2 minutes from the request to Add the food, the microwave oven will go to the Stand-by mode.



CLOCK

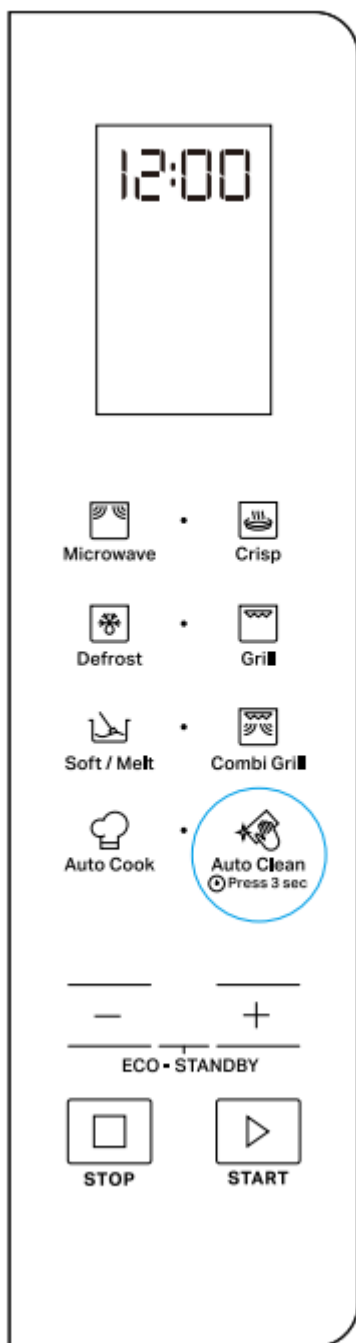

To set the Clock of your appliance:

1. Press and hold Auto Clean button for 3 seconds, enter the Clock Setting mode.
2. Press -/+ button to set the hour, the setting could be from 00:00 to 23:59.
3. Press the Jet Start button to confirm the choice. The minutes will start blinking.
4. Press 7+ button to set the minutes.
5. Press the Jet Start button. The clock is set.

NOTE:

 
The first time the appliance is plugged in (or after a power failure), the product will automatically enter the Clock Setting mode. Please follow the above procedure starting from step No.2.

Tips and suggestions:

- If the clock has not been set after plug in, the display will show"12:00".
- During the setting of the clock, if you press the Stop button or if the setting is not completed after a long time, the microwave oven will exit from setting mode and the setting will be invalid, display will show"12:00".



JET START

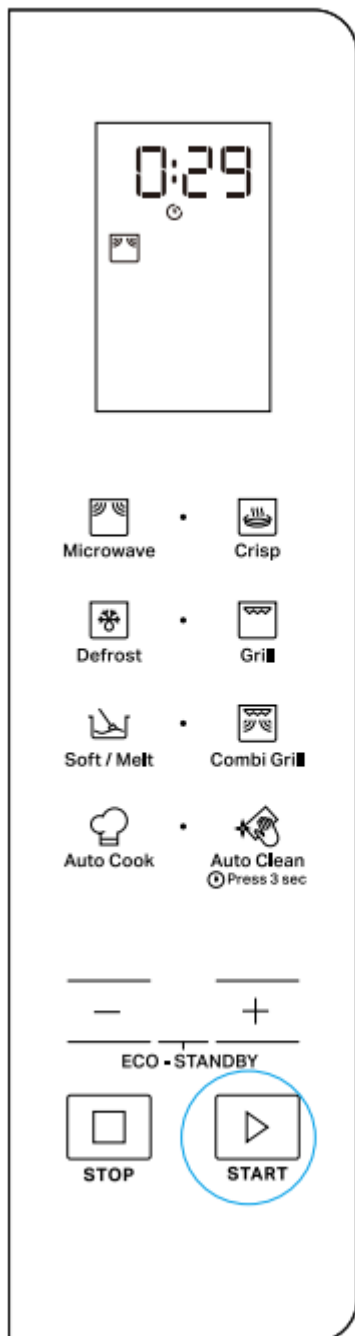

This function allows to start the oven quickly. It is suggested for quick reheating of liquid foods.

1. Press the Jet Start Button.

NOTE:

 
Pressing the Jet Start button, the Microwave function will start at maximum microwave power (800W) for 30 seconds.

Tips and suggestions:

- It is possible to change the power level and the duration time even after the cooking process has been already started. To adjust the power level, press the Microwave button to adjust the power. To change the duration time, please press +/- button, or press the Jet Start button to increase the duration time by 30 seconds.



MICROWAVE

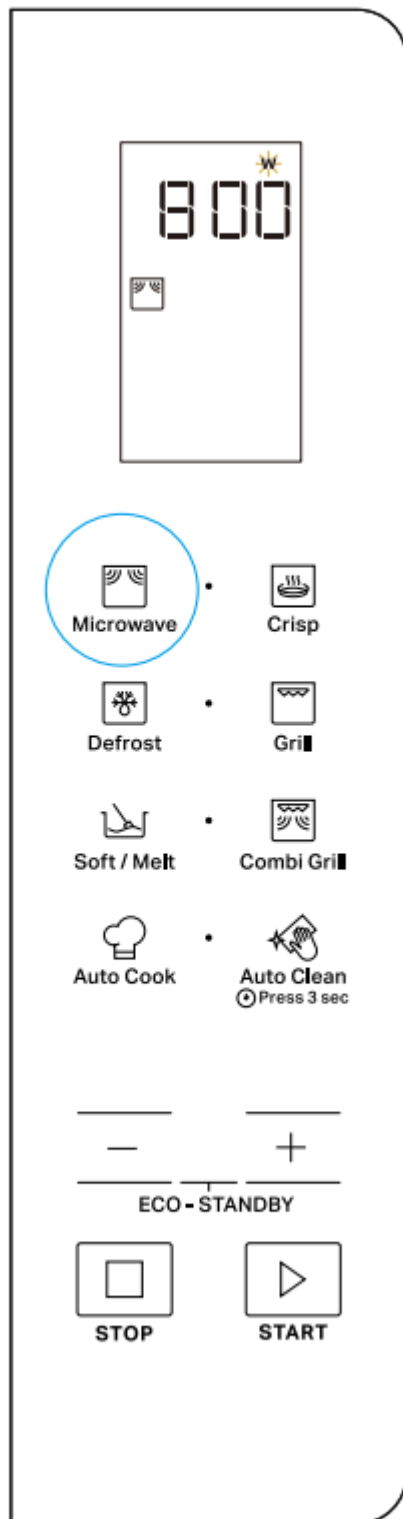

The Microwave function quickly allows to cook or reheat foods and beverages. The longest cooking time is 90min.

1. Press the Microwave button. The default power level (800W) will be shown on the display and the watt icon starts blinking.
2. Press +/- button to adjust the power level, then press Jet Start button to confirm.

3. The display will show the default cooking time (30 seconds). Press +/- button to adjust the cooking time.
4. Press Jet Start button to start the cooking cycle.

Microwave - Power selection


NOTE:

If you need to change the power, press the Microwave button again, the desired power level can be selected as below table.

Microwave Power	Suggested use:
90 W	Softening ice cream, butter, cheese and keep warming.
160W	Defrosting.
350 W	Simmering stews and melting butter.
500 W	More careful cooking of high protein sauces, cheese and egg dishes and finish cooking casseroles.
650 W	Cooking offish, meat, vegetables and plated meals.
800 W	Reheating of beverages, water, clear soups, coffee, tea or other foods with a high water content. If the food contains eggs or cream choose a lower power.



 GRILL

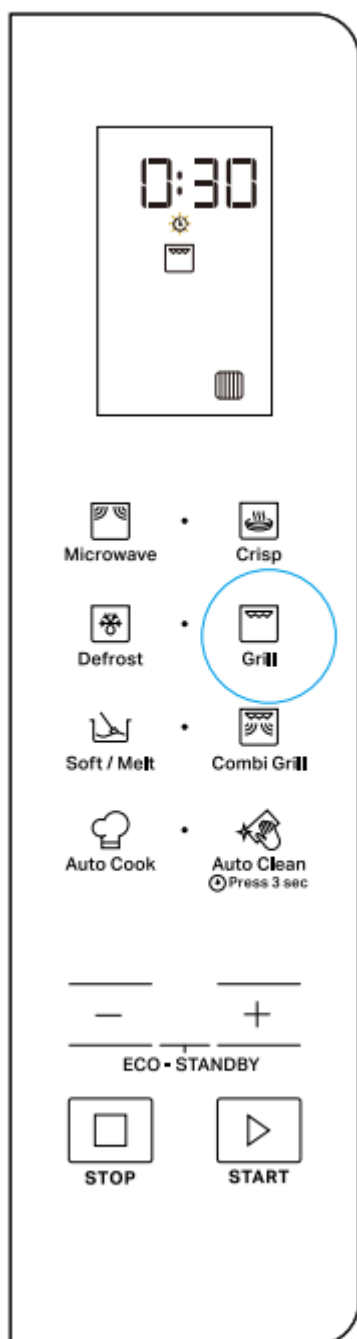

This function uses a powerful grill to brown foods, creating grill or gratin effect.

The Grill function allows browning foods like toast, hot sandwiches, potato croquettes, sausages, and vegetables.

**Dedicated
Accessory:**



Wire Rack

 
1. Press the Grill button.
2. Press -/+ button to set the cooking time.
3. Press Jet Start button to start cooking.

Tips and suggestions:

- For food like, toast, steaks and sausages, place food on the Wire Rack.
- Ensure that the utensils used are heat resistant when you use this function.
- Do not use plastic utensils when grilling. They will be melted. Items of wood or paper are not suitable either.
- Be careful, do not touch the ceiling beneath the grill element.
- It is possible to change the duration time even after the cooking process has been already started. To change the duration time, please press +/- button, or press the Jet Start button to increase the duration time by 30 seconds.



COMBI MICROWAVE + GRILL

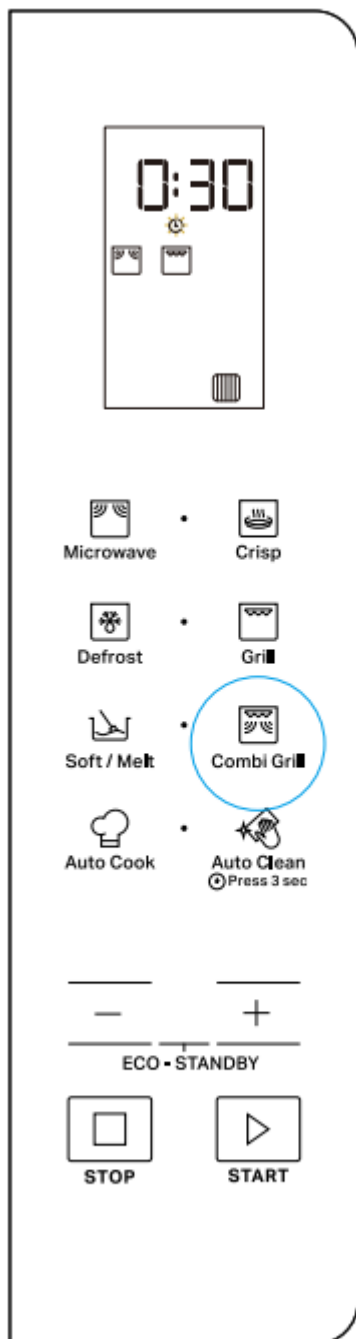

This function combines Microwave and Grill heating, allowing you to cook gratin in less time.

1. Press the Combi button.
2. Press -/+ button to adjust the cooking time.
3. Press the Jet Start button to start.

NOTE:

 
- Once the cooking process has been started, press -/+ button or press Jet Start button repeatedly to increase the cooking time.
- Please do not use wire rack with Combi (Microwave + Grill) function.

Tips and suggestions:

- Ensure that the utensils used are micro-wave safe and heat resistant when you use this function.
- Do not use plastic utensils when grilling. They will melt. Items of wood or paper are not suitable either.
- Be careful, do not touch the ceiling beneath the grill element.
- It is possible to change the duration time even after the cooking process has been already started.



MANUAL DEFROST

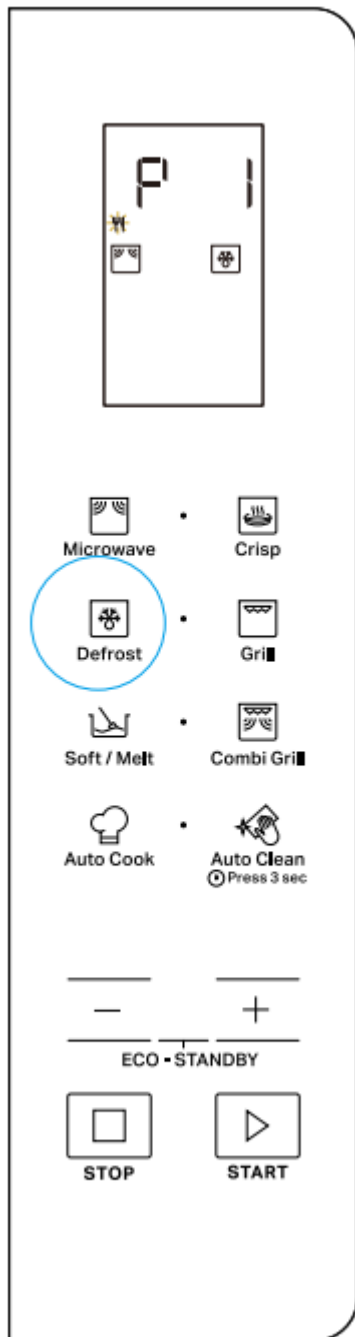


This function allows you to defrost food quickly according to your requirements.

1. Press the Defrost button.
2. "P1" shows on display screen, press Jet Start button to confirm.
3. Press -/+ button to set the cooking time.
4. Press Jet Start button to start cooking.



 DEFROST MENU

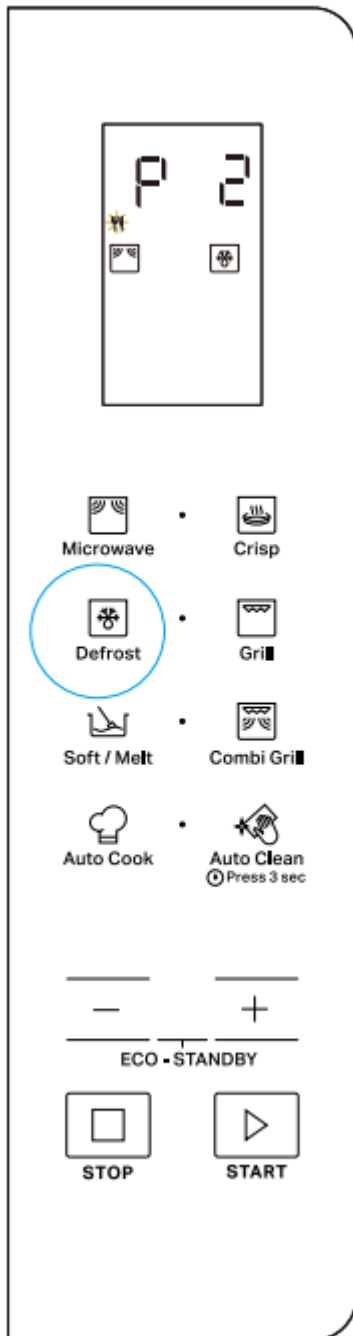

This function allows defrosting food automatically, such as meat, poultry, fish, vegetables and bread.

1. Press the Defrost button.
2. Press 7+ button to set the food category (P2-P6 for Model MWHF 203, P2-P7 for Model MWHF 206), then press the Jet Start button to confirm.
3. The display will show the default weight value. Press 7+ button to adjust the weight value.
4. Press the Jet Start button. The function will start.

NOTE:






 
 
 







When choosing P7-Crisp bread defrost, please always use Crisp Plate and Crisp Handle as cooking accessories. Please refer to page 5 to see the details on usage for above-mentioned accessories.

Tips and suggestions:

- If the food is warmer than deep-freeze temperature (-18°C), choose a lower weight than the food.
- If the food is colder than deep-freeze temperature (-18°C), choose a higher weight than the food.
- Separate pieces as they begin to defrost. Individual slices defrost more easily.
- Standing time after defrosting always improves the result since the temperature will then be evenly distributed throughout the food.


Defrost Function Guide:

Food Type		Weight	Hints
MWHF 203	MWHF 206		
P1  Manual defrost	P1  Manual defrost	Set duration	Choose manual defrost to select your own defrost time.
P2  Meat	P2  Meat	100-1500g /50g	Minced meat, cutlets, steak or roast. After cooking, it is recommended to allow meat to rest for at least 5 minutes for better results.
P3  Poultry	P3  Poultry	100-1500g /50g	Whole chicken, pieces, or fillets. After cooking, it is recommended to allow food to rest for 5-10 minutes.
P4  Fish	P4  Fish	100-1500g /50g	Whole fish, steaks or fillets. After cooking, it is recommended to allow food to rest for at least 5 minutes for better results.
P5  Vegetable	P5  Vegetable	100-1200g /50g	Larger, medium and small cut vegetables. Before serving, allow food to rest for 3-5 minutes for better results.
P6  Bread	P6  Bread	50-500g /50g	Frozen rolls, baguettes & croissants. Allow food to rest for 5 minutes for better results.
/	P7  Crisp bread defrost	50-300g /50g	Defrost and reheat frozen bread, rolls, croissants, loaves, baguettes and pastries to produce a crisp and golden result.



 CRISP(ONLY AVAILABLE ON MODEL MWHF 206)



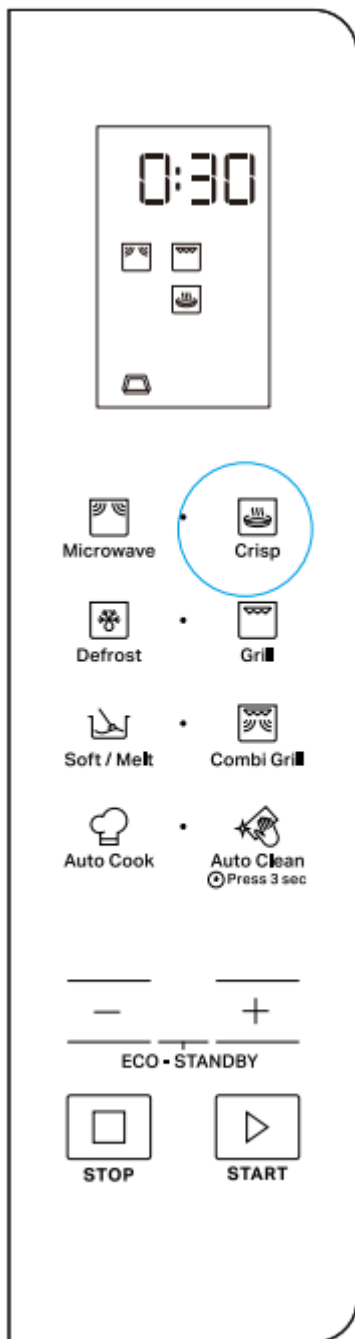

This exclusive Whirlpool function allows for perfect golden brown results both on the top and bottom surfaces of the food. Using both Micro-wave and Grill cooking, the Crisp Plate will rapidly reach the right temperature giving each food its peculiar browning and crispness.



Dedicated
Accessory:



 
1. Put food on the Crisp plate, then place Crisp plate on the runner.
2. Press the Crisp button.
3. Press +/- button to set the cooking time.
4. Press Jet Start button to start cooking.

Tips and suggestions:


Use this function to reheat and cook pizzas, quiches and cake. It is also good for frying bacon and eggs, sausages, potatoes, french fries, hamburgers, chicken nuggets, chicken wings, shrimps and nuts, etc. with or without a small amount of oil.

CRISP PLATE USE: IMPORTANT INFORMATION


ALWAYS PUT THE CRISP PLATE ON THE LATERAL RUNNER.

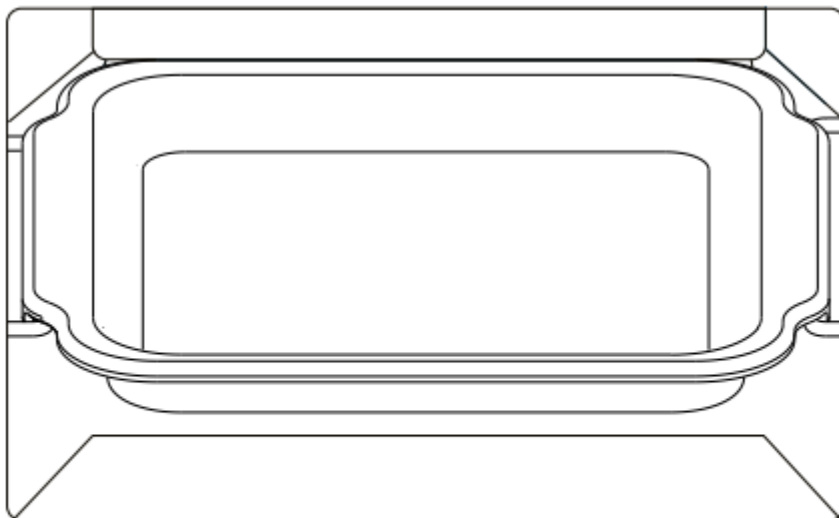

 
DON'T PUT THE CRISP PLATE DIRECTLY ONTO THE CAVITY FLOOR.

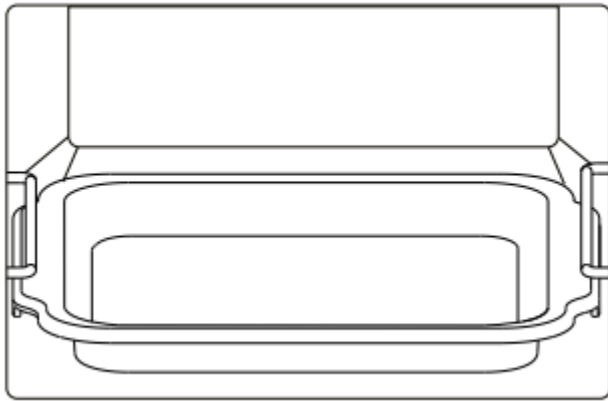

 DON'T PUT THE CRISP PLATE ON THE WIRE RACK.

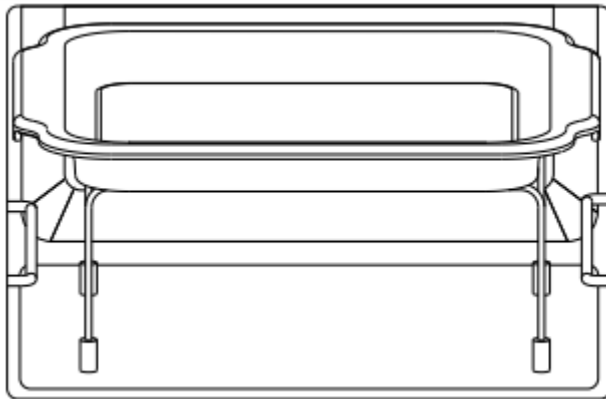

AUTO COOK MENU

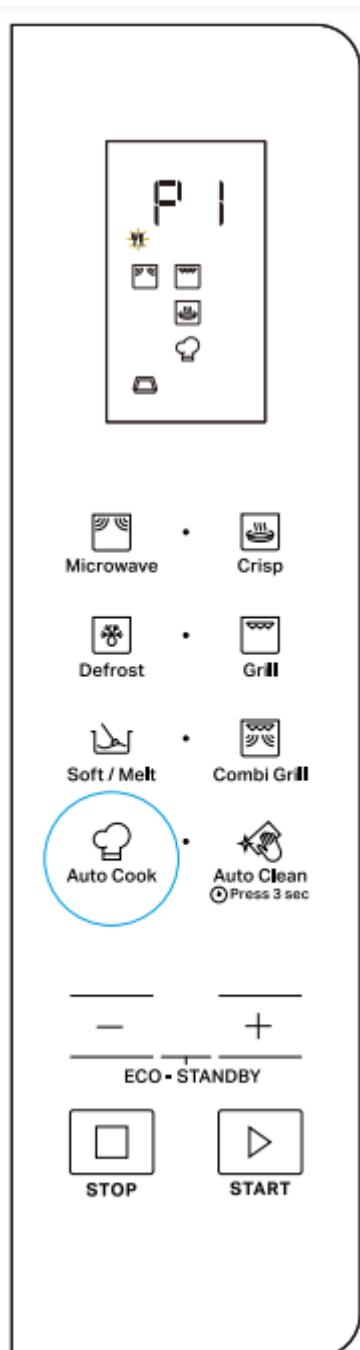 

A selection of automatic recipes with preset values to offer optimal cooking results.

1. Press the Auto Cook button.
2. Press -/+ button to select the desired recipe (see the table below).
3. Press the Jet Start button to confirm the recipe and press the -/+ button to select the weight when the recipe allows it.
4. Press the Jet Start button. The function will start.

NOTE:

According to the selected recipe, after a certain time, the display could ask you to add or turn or stir the food. See "Add/Stir/Turn food" chapter on page 9.



NOTE:

 
PRE-HEAT procedure can start after the Crisp Plate being put into the cavity.

NOTE:

The display will show "PRE- HEAT"(last for 2mins30s) and the oven will preheat the Crisp Plate. When the required temperature is reached, a message ("Add Food") will inform you that you can add your food. Preheat procedure is only used in some recipes.





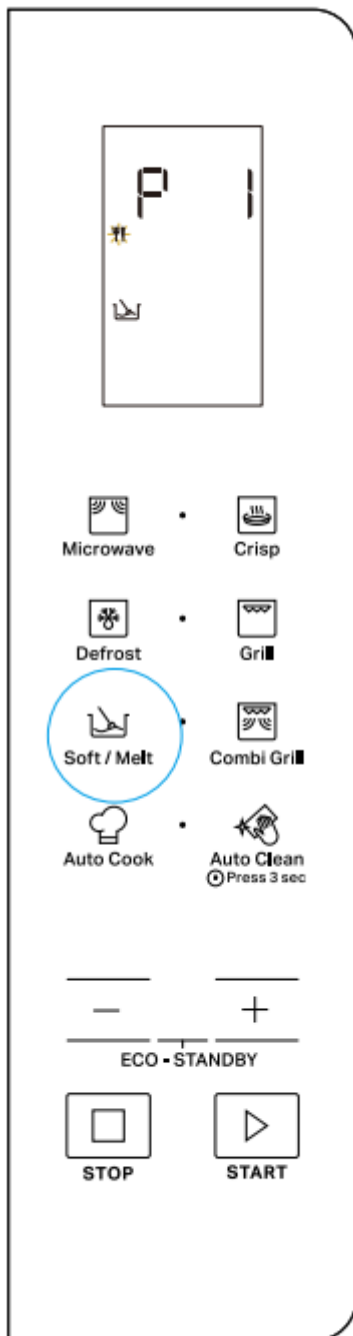




SOFT AND MELT



This function allows to melt and soften butter, ice cream, frozen Juice, etc. quickly.


1. Press the Soft & Melt button.
2. Press +/- button to select food category, and press Jet Start button to confirm.
3. Press +/- button to set the weight value, and press Jet Start button to start the cycle.

Soft / Melt Recipe Guide:

	Food Type		Initial State	Weight	Hints
P1 	Soften	Butter	Refrigerator	50g-500g/50g	Place in microwave safe dish.
P2 	Soften	Ice cream	Frozen	100-1000/50g	Place ice cream container on the middle of cavity.
P3 	Soften	Cream Cheese	Refrigerator	50g-500g/50g	Place in microwave safe dish.
P4 	Melting	Butter	Refrigerator	50g-500g/50g	Place in microwave safe dish.
P5 	Melting	Chocolate	Room temperature	100-500/50g	Place in microwave safe dish.
P6 	Melting	Cheese	Refrigerator	50g-500g/50g	Place in microwave safe dish.
P7 	Melting	Marshmallow	Room temperature	100-250g/50g	Place in microwave safe dish. The dish should contain at least twice the volume of the marshmallows since they expand during cooking.



 AUTO CLEAN

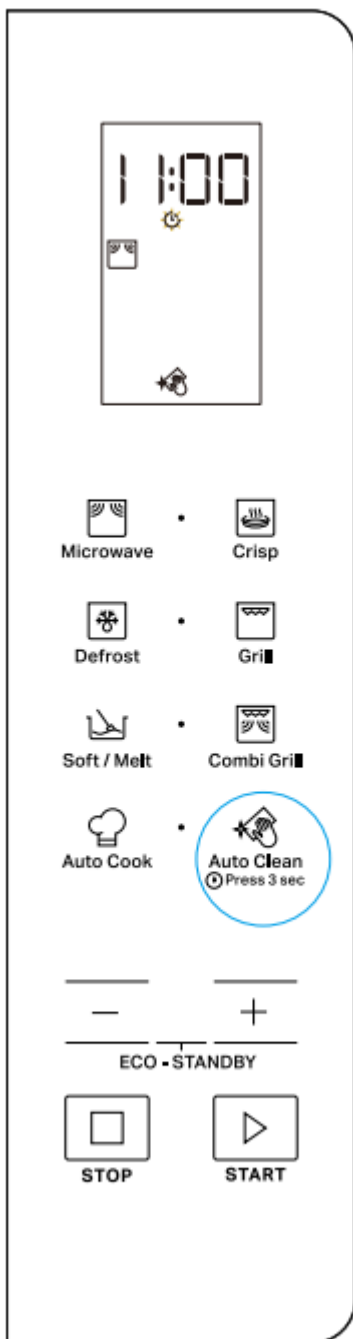

This automatic cleaning cycle will help you to clean the microwave oven cavity and to remove unpleasant odors.

Before starting the cycle:

1. Put 250ml water into a container (see our recommendations in the below section "Tips and suggestions").
2. Place the container directly on the middle of the cavity.

To Start The Cycle:

1. Press the Auto Clean button, the cleaning cycle duration will be visible on the display.
2. Press the Jet Start button to start the function.



When The Cycle Is Finished:

1. Press the Stop button.
2. Remove the container.
3. Use a soft cloth or a paper towel with mild detergent to clean the interior surfaces.

Tips and suggestions:

- For a better cleaning result, it is recommended to use a container with a diameter of 17-20cm and a height that is lower than 6.5cm.
- It is recommended to use a light plastic container, suitable for the microwave.
- As the container will be hot after the cleaning cycle is completed, it is recommended to use a heat resistant glove when removing the container from the microwave.
- For a better cleaning effect and removal of unpleasant odors, add some lemon juice to the water.
- The Grill element does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with a soft and damp cloth with mild detergent.
- If the Grill is not used regularly, it should be run for 10 minutes a month to burn off any splashes, in order to reduce the risk of fire.

In accordance with IEC 60705:2010-04 and IEC 60350-1:2011-12

The International Electrotechnical Commission has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this microwave oven:

Test	Amount	Power level	Approx, time
Egg custard (12.3.1)	750g	800W	10-11 mins
Sponge cake (12.3.2)	475 g	800W	7-8 mins
Meat loaf (12.3.3)	900 g	800W	12-13 mins
Minced meat defrost (13.3)	500 g	160W	12-15 mins
Potato gratin (12.3.4)	1100 g	Grill Combi	30-35 mins

Test	Preheat	Function	Approx, time
Toast (9.1)	-	Grill	8-9 mins
Hamburger (9.2)	-	Grill	80-90 mins

Technical Speciation

Data Description	MWHF206
Supply Voltage	220-230V-50 Hz
Rated Input Power	2100 W
Microwave Power	1350W
Oven Fuse	10A
UK Plug Fuse	10A
Grill	850 W
Outer dimensions (HxWxD)	303x473x384
Inner dimensions (HxWxD)	212x291 x 321

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

