


## QUICK USER MANUAL for SOUNDBAR

### CONNECTIONS

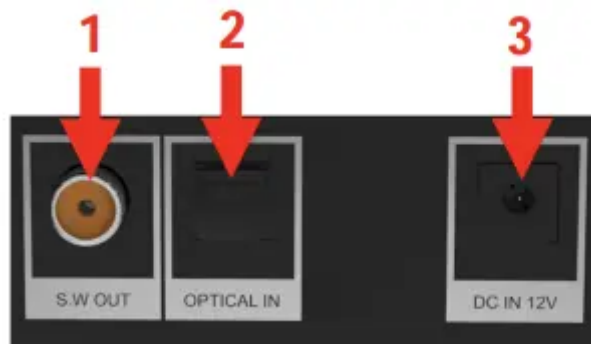

1 Output to subwoofer (not supplied)

2 Optical input (Audio)

3 DC In 12v (Power for speaker bar)

### THE REMOTE CONTROL



**1 ON / OFF** Turn Sound Bar On or Off

**2 MUTE** Mute or Unmute audio

**3 BASS-** Surround sound (sound effects equaliser)

- 4 BASS+** Music sound (sound effects equaliser)
- 5 TREBLE-** Movie sound (sound effects equaliser)
- 6 TREBLE+** News (sound effects equaliser)
- 7 VOL +** Increase Volume (of sound bar)
- 8 CH -** Previous music file / Radio station
- 9 PLAY/PAUSE** Pause or Play Audio while playing
- 10 CH +** Next music file / Radio station
- 11 VOL -** Decrease Volume (of sound bar)
- 12 FM** Select Audio Input via FM Radio
- 13 BLUETOOTH** Select Audio Input via BLUETOOTH
- 14 LINE IN** Select Audio Input via LINE IN
- 15 USB** Select Audio Input via USB
- 16 OPTICAL** Select Audio Input via OPTICAL INPUT

## ON DEVICE CONTROLS / HARDWARE INPUTS



- 1 POWER** Turn Sound Bar On or Off
- 2 SOURCE** Toggle between audio input sources
- 3 VOL+ /NEXT** Increase volume of sound bar OR select next song (or radio station)
- 4 VOL-/PREV** Decrease volume of sound bar OR select previous song (or radio station)
- 5 LINE IN** Connect any audio device via a 3.5mm headphone audio socket
- 6 USB IN** Connect your thumb drive via the USB socket

## ON DEVICE DISPLAY




- 1 **LINE** Select LINE IN Audio Input
- 2 **FM** Select FM RADIO Audio input
- 3 **USB** Select USB Audio input
- 4 **BLUE** Select BLUETOOTH Audio input
- 5 **OPT** Select Optical Audio input

## REPLACING THE BATTERIES

1. Open the battery compartment by sliding the cover back.
2. Insert the new battery as pictured making you have observed the correct polarity
3. Close the battery compartment.

**Note:** the remote control has a usable angle of 30 degrees from the speaker IR receiver.

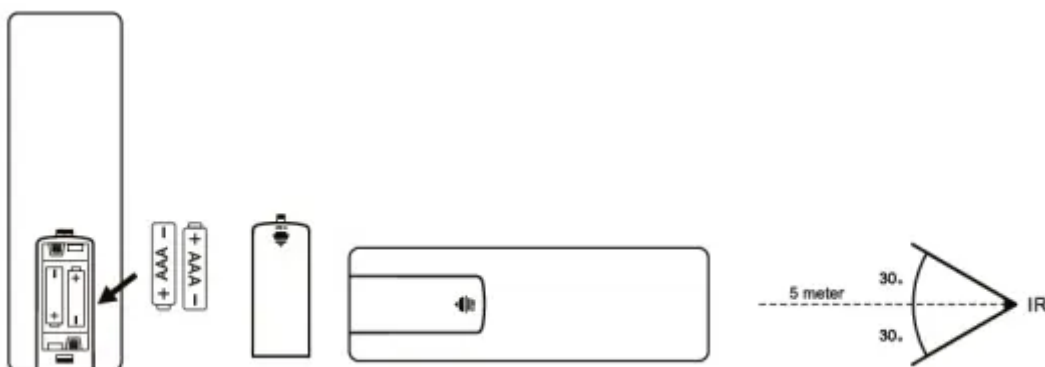

# CONNECTING YOUR SPEAKER TO YOUR TV

## GOOD



You can connect your sound bar to your TV if you have a headphone / Aux 3.5mm jack.



If your TV has an Optical port, you can connect the sound bar to your TV this way for digital sound. This method is similar in operation to the 3.5mm jack option

## ALL CONNECTION TYPES



## CONNECTING VIA



<b>Connection type</b>	<b>Connection Method</b>	<b>Via on-board buttons</b>	<b>Via Remote Control</b>
<b>LINE IN</b>	Via 3.5mm Audio Cable	Connect your audio device to the sound-bar using the 3.5mm cable and press the SOURCE button until the word LINE is shown on front display	Connect your audio device to the sound-bar using the 3.5mm cable and press the LINE button until the word LINE is displayed.
<b>USB (Storage)</b>	Music playback Via USB Storage	Connect your storage device (such as a thumb drive) to the sound-bar and press the SOURCE button until the word USB is shown on the front display	Connect your storage device (such as a thumb drive) to the sound-bar and press the USB button. The word USB will be shown on the front display
<b>BLUE</b>	Via Bluetooth (Wireless)	Press the SOURCE button until the word BLUE is shown on the front display. Turn on your portable Bluetooth device and follow the pairing instructions above.	Press the BLUE button until the word BLUE is shown on the front display. Turn on your portable Bluetooth device and follow the pairing instructions above.
<b>OPT</b>	Via Optical fibre Cable	Connect your Media device (such as BluRay or DVD player) to the sound-bar using an Optical Fibre Cable and press the SOURCE button until the word OPT is shown on the front display.	Connect your Media device (such as BluRay or DVD player) to the sound-bar using an Optical Fibre Cable and press the OPT button. The word will be shown on the front display.
<b>FM (Radio)</b>	Listen to FM Radio	Press the SOURCE button until the word FN (meaning FM) is shown on the front display.	Press the FM button. The word FN (meaning FM) will be shown on the front display.

## USING BLUETOOTH

- 1) Press the INPUT button to toggle to the BT function. "BLUE" will begin to flash on screen, which means the Bluetooth "pairing mode" has been activated.
- 2) Turn the Bluetooth function on, on your device (smart phone or tablet etc).
- 3) Scan for new devices, and look for SPK-SB120 to pop up on screen.

4) Once found and selected, you may be prompted for a password to complete the pairing process. The password is 0000 (4 zeros).

5) Once connected and paired, "BLUE" will stop flashing to indicate pairing has been completed.

6) You are now ready to listen to music wireless via your sound bar. Open your music files, select a song and press play.

## SPECIFICATIONS

Output Power	2 x 10 Watt
Speaker size	2 inch
Number of speakers	2
Vibrating Diaphragm	1
Cabinet material	ABS Plastic (Crack resistant)
Sound bar dimensions	75 x 5.8 x 6cm

## IMPORTANT SAFETY INSTRUCTIONS AND PRECAUTIONS

- Read all instructions carefully before use.
- Retain manuals for future reference.
- Use this product only in the manner described.
- Only use a water-dampened soft-cloth to clean the surface of this product.
- The following will damage this product: any liquid such as water or moisture, extreme heat; cold; humidity, dusty or sandy environments.
- Only place this device on stable surfaces and ensure that any attached cables are secure and will not cause the device to fall.
- There are no user serviceable parts in this product.
- Un-authorized attempts to dismantle or repair this product will void product warranty
- Using this device near other electronic devices may cause interference.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](#)

