

READ ALL INSTRUCTIONS BEFORE USING.

WARNING

1. Close supervision is necessary when this trimmer is used by, on or near children or invalids.
2. Use this trimmer only for its intended use, as described in this manual.
3. Do not use this trimmer with a damaged or broken blade, as injury may occur.
4. When discarding an old battery, do not throw it into fire where heat could cause it to rupture or explode. Also, do not attempt to recharge alkaline, heavy-duty or regular batteries in a nickel-cadmium battery charger.

Installation of Trimming Heads

1. Make sure trimmer is turned "OFF".
2. Turn trimmer head counterclockwise 1/4 turn and lift off.
3. Place trimmer head on trimmer and turn trimmer head clockwise 1/4 turn to lock on.

Before Trimming:

Remove the protective cap and turn the trimmer "ON" by pushing the switch up.

Trimming Eyebrows:

Move the Rotary, Reciprocating, or Detail Head slowly to trim stray eyebrow hairs. For precise, even trimming of the entire eyebrow, move the trimmer closer or farther away to achieve the desired length. If your kit includes an eyebrow guide comb, it can be used to effectively trim the eyebrow.

Trimming Hair From Nose:

Make sure the nasal passages are clean. Slowly move the trimmer in and out of each nostril, no more than 1/4". Keep the side of the cutting head firmly against the skin to reduce tickling sensation.

Trimming Hair From Ears:

Make sure the outer areas of the ears do not contain any wax. Hold the ear flat with one hand and carefully insert Rotary Head no more than 1/4-inch into the outer ear.

CAUTION: Do not insert the Rotary Head or any other foreign object into the inner ear. For hair growing on the outside of the ear, simply move the Rotary Head slowly along the edges of the ear (either cutting head may be used to trim hair from ears).

Sideburns and Mustache:

For trimming sideburns slowly move Reciprocating Head across desired area.

Cleaning Your Trimmer:

Periodically after use, turn the trimmer "OFF" and rinse both cutting heads under warm, running water. For more thorough cleaning, remove the attached cutting head by turning it slightly counterclockwise. Then rinse the entire head under running water. After cleaning, replace desired cutting head by turning slightly clockwise and wipe the entire trimmer dry with a soft cloth. Always replace the protective cap before storing.

CLEANING AND MAINTENANCE

OILING BLADES

For best results, put one or two drops of Wahl Clipper Oil on the blades. Oil the blades before and after every use.

When oiling the trimmer, turn the trimmer ON, hold the unit facing down and squeeze one or two drops of oil onto the blades. Wipe off excess oil with a cloth.

NOTE: Do not over oil! Excessive oiling or application of liquids will cause damage if allowed to seep back into the motor.

WARNING: NEVER IMMERSER TRIMMER IN WATER OR ANY OTHER LIQUIDS

Battery Trimmer

BLADE CARE

Trimmer blades have precision-hardened, ground and lapped cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty abrasive material.

Should blades become dull or damaged, you may purchase a new blade assembly from Wahl.

CLEANING/STORAGE

Before storing your trimmer, use the cleaning brush to remove any loose hairs from the unit and the blades. Store unit in such a manner so that blades are protected from damage. When the trimmer is not in use, the trimmer guide/blade guard attachment should be in place to protect the blades.

TROUBLESHOOTING

If your product fails to operate when switched 'ON' check your batteries to see if they are properly installed. Positive end should be located as shown in battery housing. Make sure switch is in the 'ON' position and check to be sure blades are free to move. If blades become clogged, manually pushing the blades back and fourth few times while unit is turned 'OFF' may help free the blades and allow the trimmer to operate. If it still does not operate, your batteries have probably exceeded their useful life.

SAVE THESE INSTRUCTIONS • BATTERY INSTALLATION/ REPLACEMENT

1. Holding the trimmer with the cutting head facing you, place your thumb on the arrow molded into the battery compartment cover. Press lightly and slide the cover downward to remove it.
2. Insert one AA battery, positive end first (toward the cutting head).
3. Replace the battery compartment cover.
4. To maximize battery life, turn the trimmer "OFF" immediately after each use.
5. Replace the battery as soon as you notice the trimmer running slower than normal, to avoid pulling of hairs.

WARRANTY

If your Wahl product fails to operate satisfactorily within two (2) years from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace it and return it to you **FREE OF CHARGE**. **Do not return this product to store where purchased**. Products needing repair under this warranty should be returned with postage prepaid to Wahl Clipper Corp., Attn: Repair Department, 3001 Locust Street, Sterling, Illinois 61081. Include a note describing the defect and the date of original purchase or receipt as a gift (if in warranty). Products out of warranty will be repaired at our standard repair charges. This warranty is void and no repair or replacement will be made under this warranty or otherwise if: (1) The product is modified in any manner or repaired by anyone other than Wahl Clipper Corporation or Wahl authorized service center. (2) The product has been used commercially or subjected to unreasonable use. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. No other written express warranty is given. Any implied warranty, including any warranty of merchantability which may arise from purchase or use, is limited to the year period provided in this express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for incidental or consequential damages of any type, or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so

the limitation or exclusion may not apply to you. Outside U.S.A., check with store for Wahl authorized distributor's warranty.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

