



## Installation

### 1. Turn Off Power to Heating/Cooling System

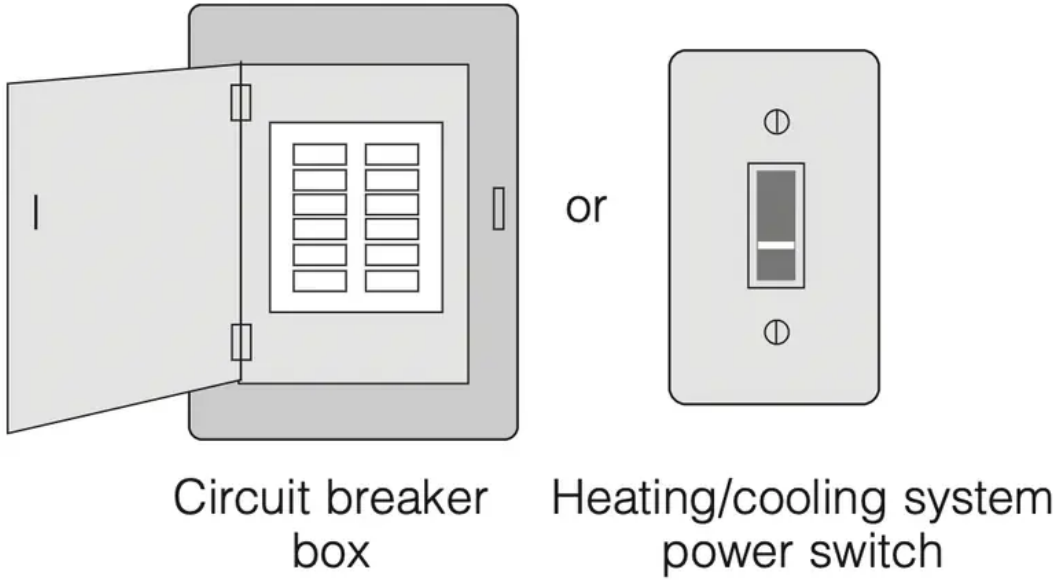

### 2. Remove Old Thermostat

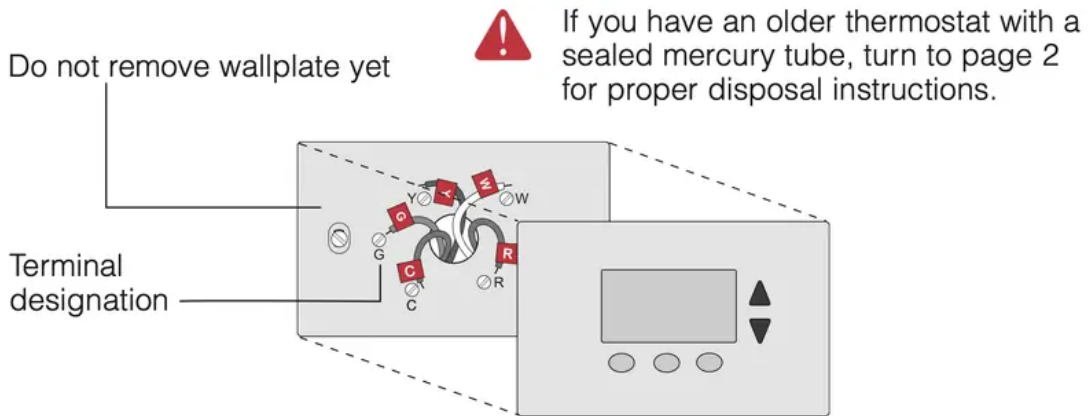

### 3. Label Wires with Tags


Label the wires using the supplied wire labels as you disconnect them.

Wiring Labels		Étiquettes de fils		Rótulos para los cables					
Apply these wiring labels to each wire with the appropriate terminal designation as you remove it from the existing thermostat.		Lorsque vous retirez les fils des bornes du thermostat existant, collez ces étiquettes sur chaque fil correspondant à la lettre de la borne.		Coloque estos rótulos, con la designación de las terminales, en cada cable al remover los cables del termostato actual.					
B	B	Y2	Y2	C	C	E	E	F	F
G	G	H	H	L	L	O	O	P	P
R	R	RC	RC	RH	RH	T	T	U	U
V/VR	V/VR	W	W	W1	W1	W2	W2	W3	W3
X	X	X1	X1	X2	X2	Y	Y	Y1	Y1

69-0823EFS • 5-03 • Printed in U.S.A. [www.honeywell.com/yourhome](http://www.honeywell.com/yourhome)

M28100


### Wire Labels

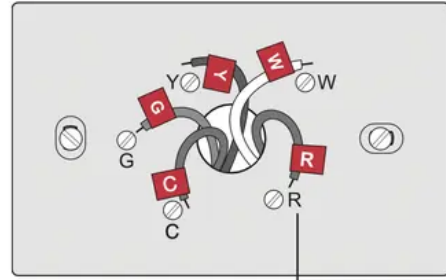

Terminal designation

### 4. Separate Wallplate from New Thermostat

Remove wallplate from the new thermostat and mount onto wall.

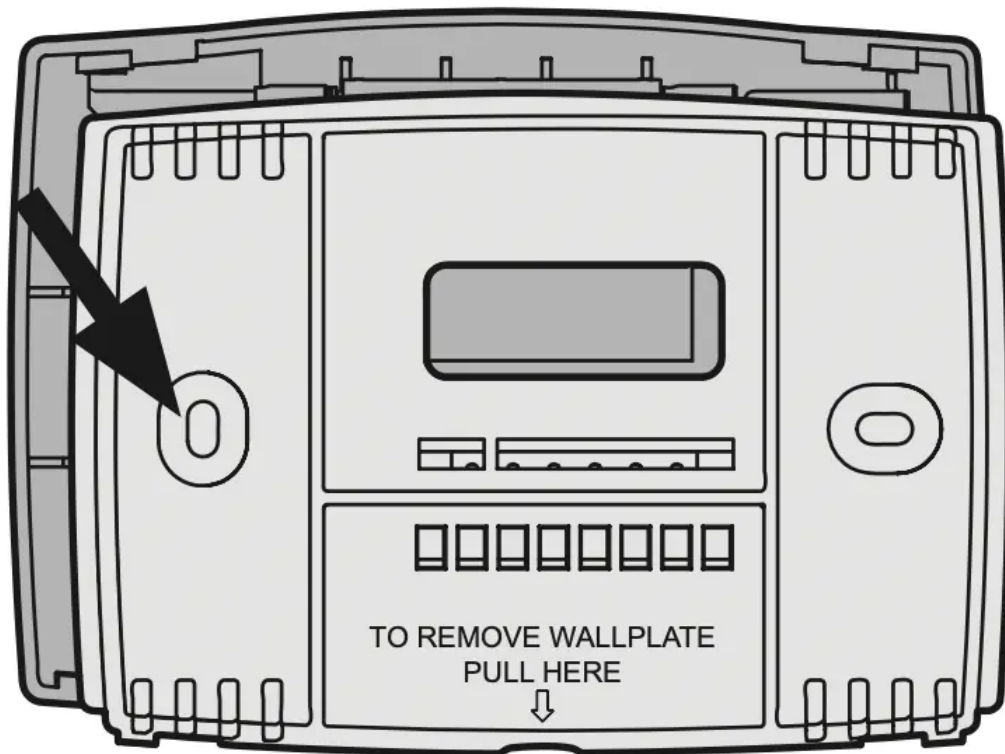


M32731

### Wallplate

### 5. Mount Wallplate

Mount the new wallplate using the included screws and anchors.

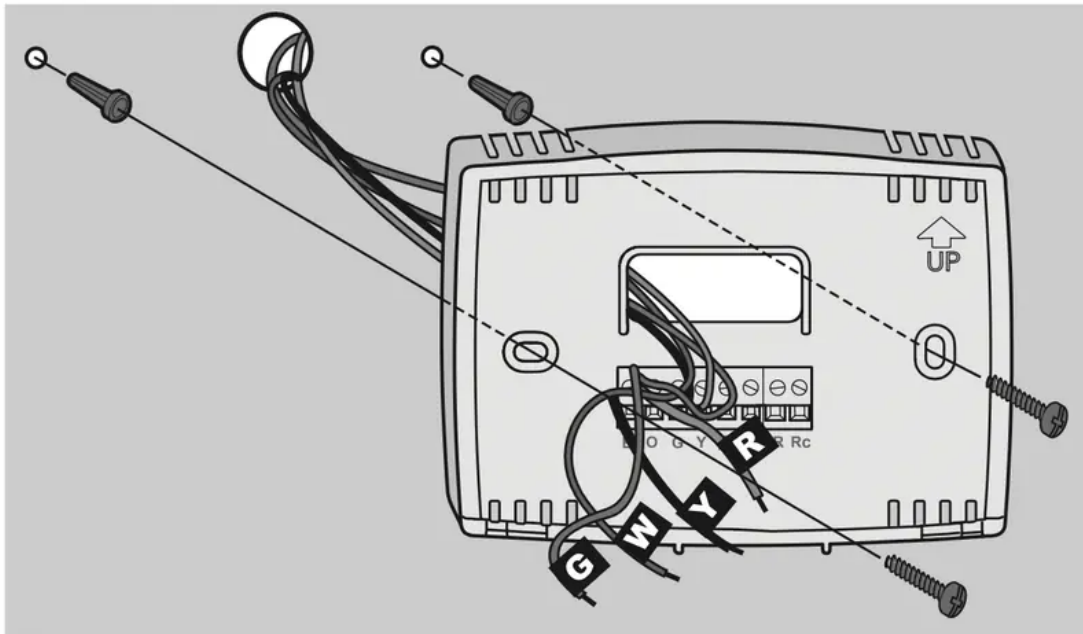


M32714

Drill 3/16-in. holes for drywall  
 Drill 3/32-in. holes for plaster

**6. Connect Wires**

Simply match wire labels.

If labels do not match letters on the thermostat, check “Alternate Wiring” on page 6 and connect to terminal as shown (see notes, below).

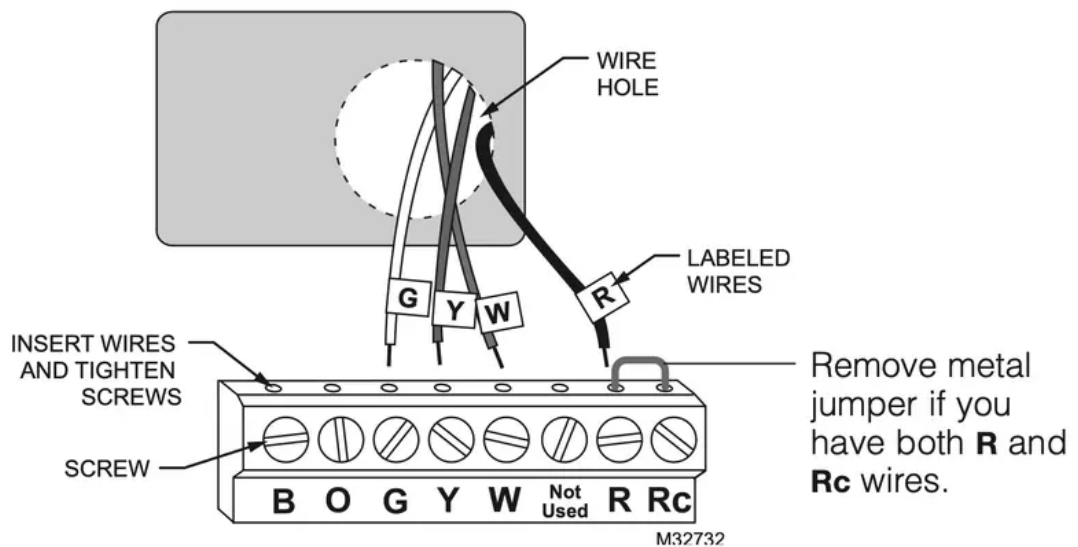


M32732

Thermostat does not work on Heat Pumps with auxiliary/backup heat.  
 We are here to help. Call 1-800-468-1502 for wiring assistance.

**Alternate Wiring**



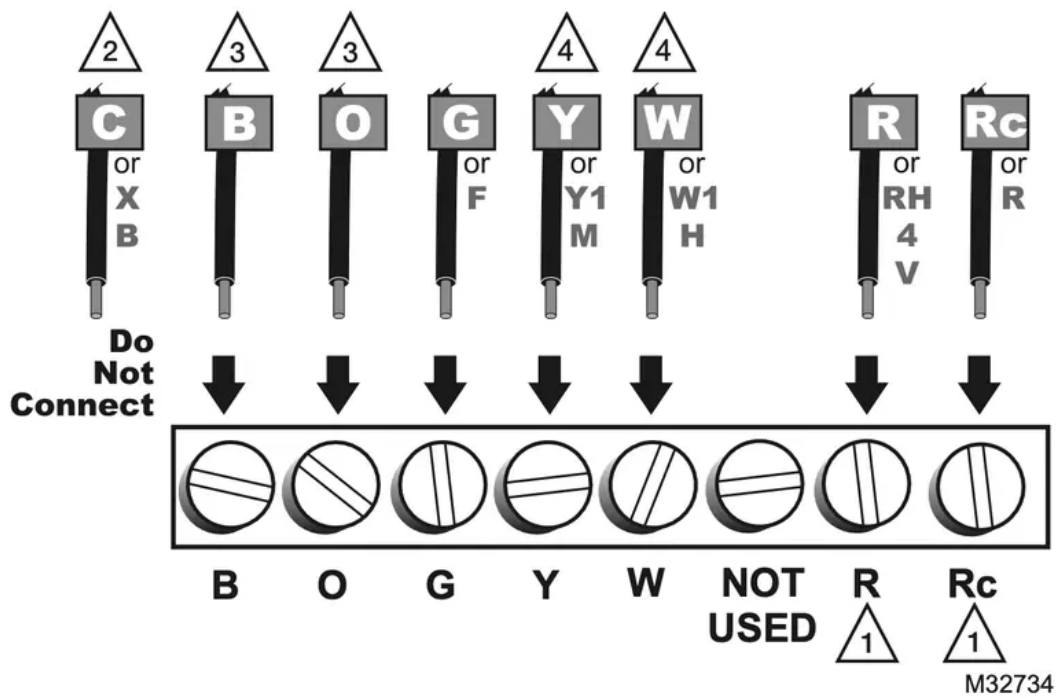

If wires will be connected to both R and Rc terminals, remove metal jumper.



Do not use C or X. Wrap bare end of wire with electrical tape.




If you have a heat pump without auxiliary/backup heat connect O or B, not both. If you do not have a heat pump, do not connect B. Wrap bare end of wire with electrical tape.



Place a jumper (piece of wire) between Y and W if you are using a heat pump without auxiliary/backup heat.

## 7. Install Batteries

Install two AAA alkaline batteries.

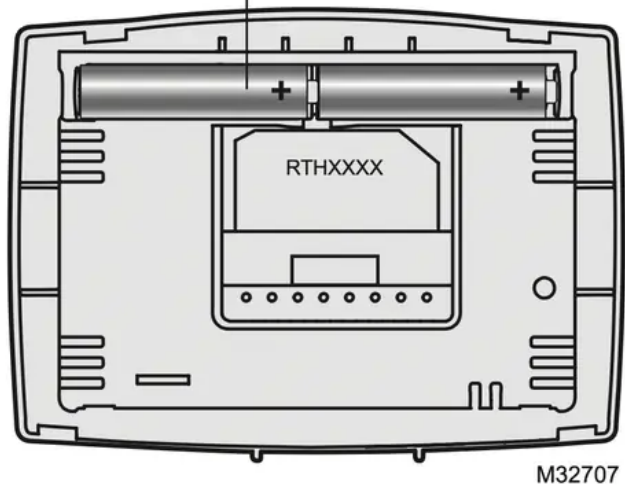

Back of thermostat


## 8. Set fan operation switch

Move the switch to the proper setting:

**Gas or Oil:** For gas or oil heating systems, leave the fan operation switch in this factory-set position (for systems that control the fan in a call for heat).

**Electric or Heat Pump:** Change the switch to this setting for heat pump or electric heat systems. (This setting is for systems that allow the thermostat to control the fan in a call

for heat, if a fan wire is connected to the G terminal.)

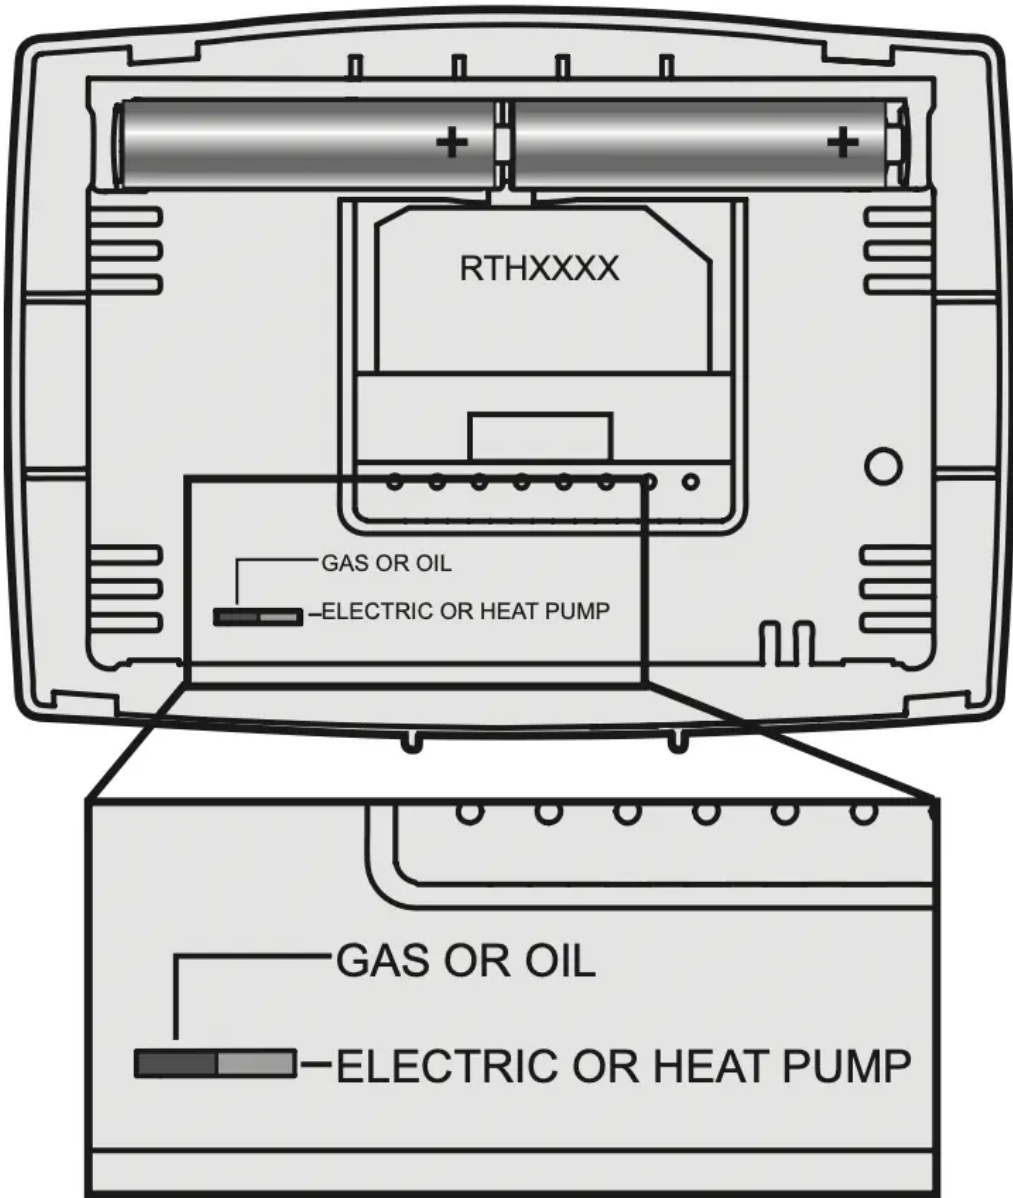


M32716




### 9. Install Thermostat onto Wallplate

Install thermostat onto the wallplate on the wall.

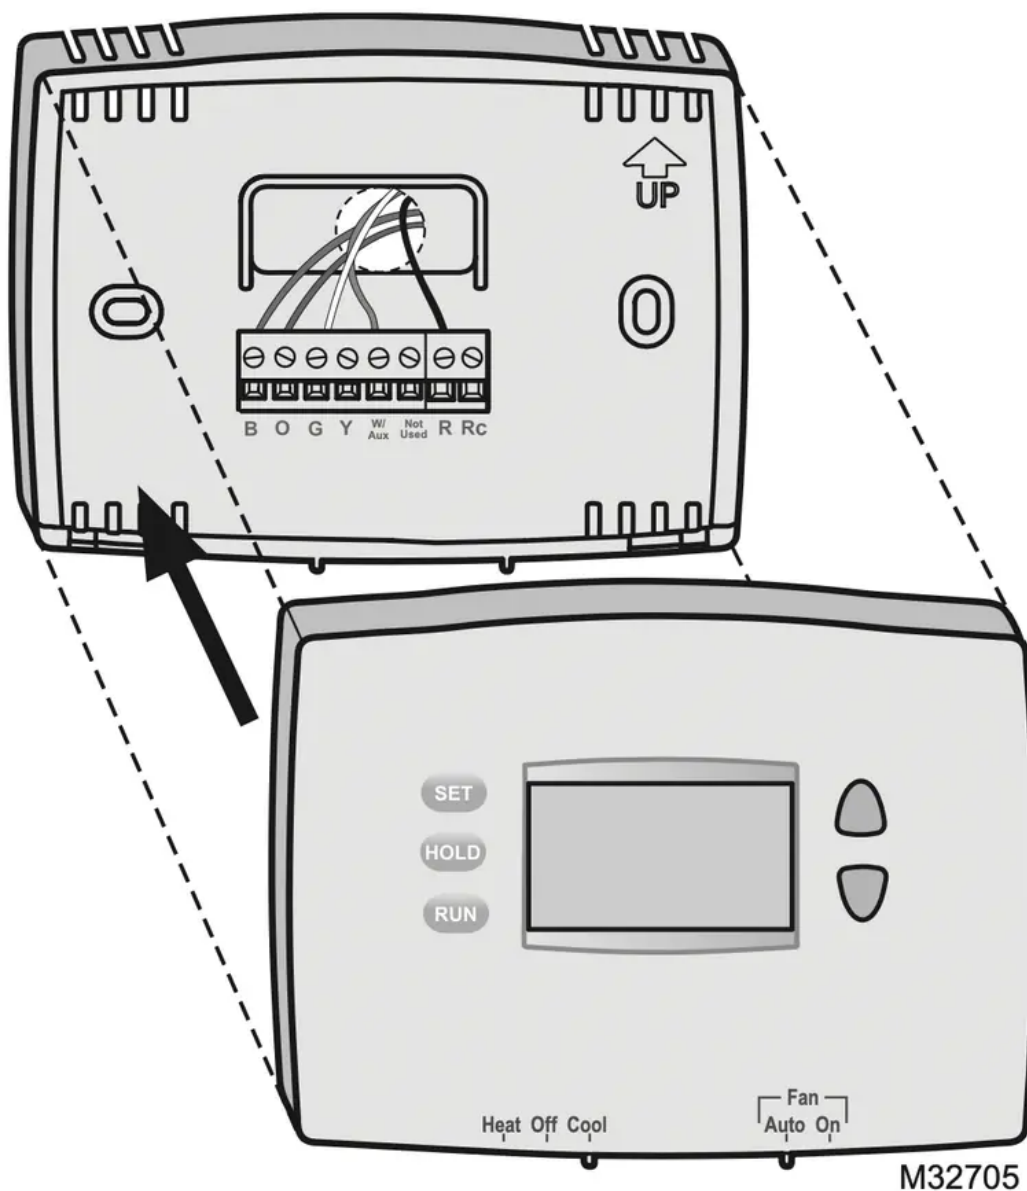


## 10. Turn Power Back On

Turn the power back on to the heating/cooling system.

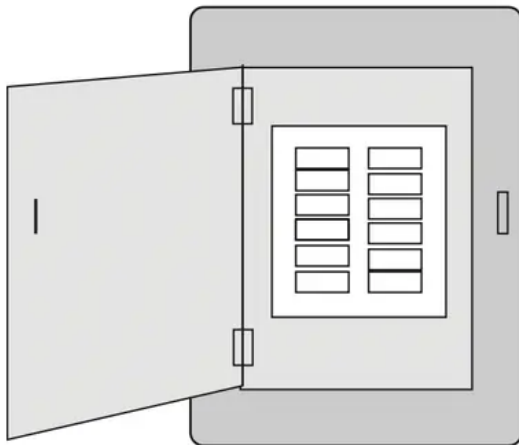

Circuit breaker box

or

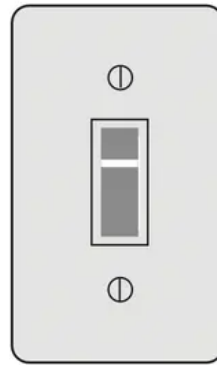

Heating/cooling system  
power switch

## 11. If your system type is...

If your system type is:

Single Stage Heat and Cool

Heat Only or Cool Only

**Congratulations, you're done!**

If your system type is:

Heat pump

High efficiency furnace

Hot water

Electric furnace



Gas/oil steam


Gravity system

Continue with Advanced Installation to match your thermostat to your system type.





## Advanced Installation

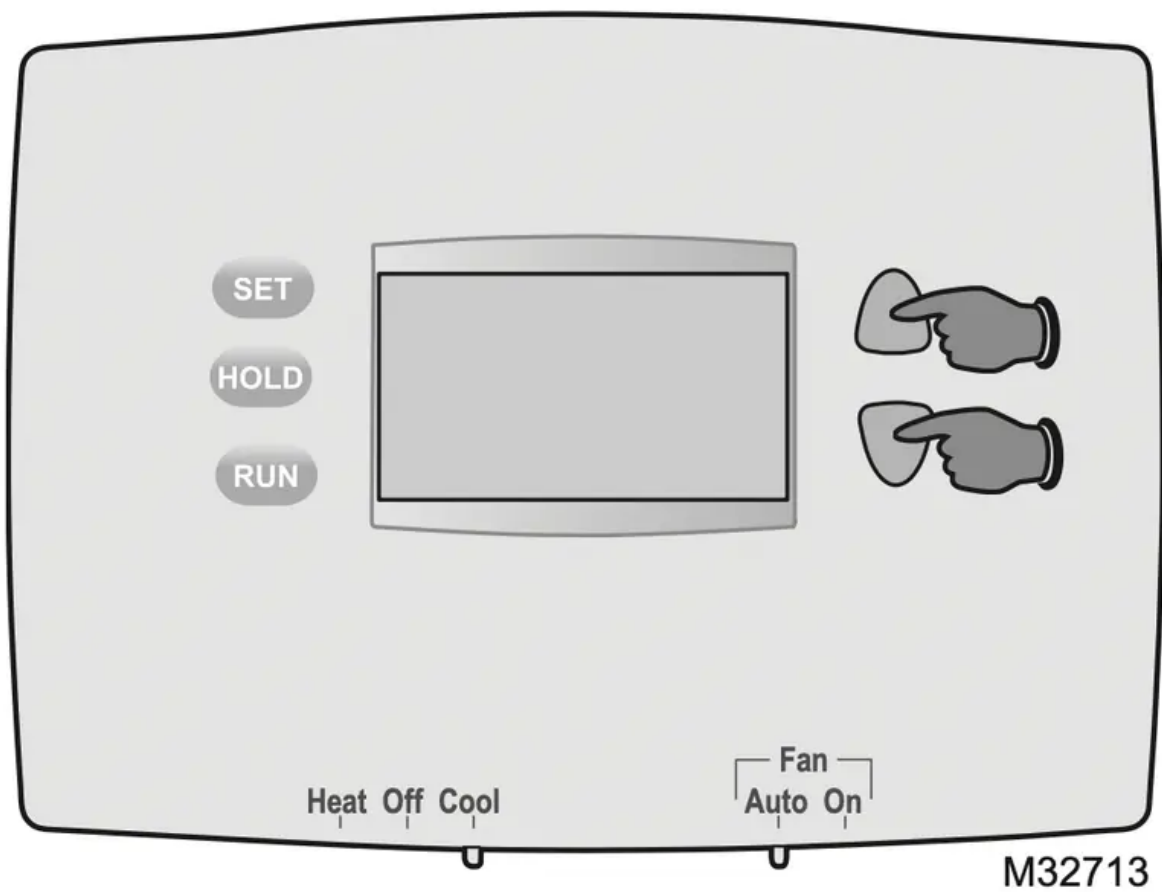
### Enter System Setup

To enter system setup, press and hold both the  and  buttons until the display changes (approximately 5 seconds).



### Changing Settings

1. Press the  or  button to change the setting.
2. Press the  and  buttons simultaneously for one second to advance to the next function.
3. Press the RUN button to exit and save settings.

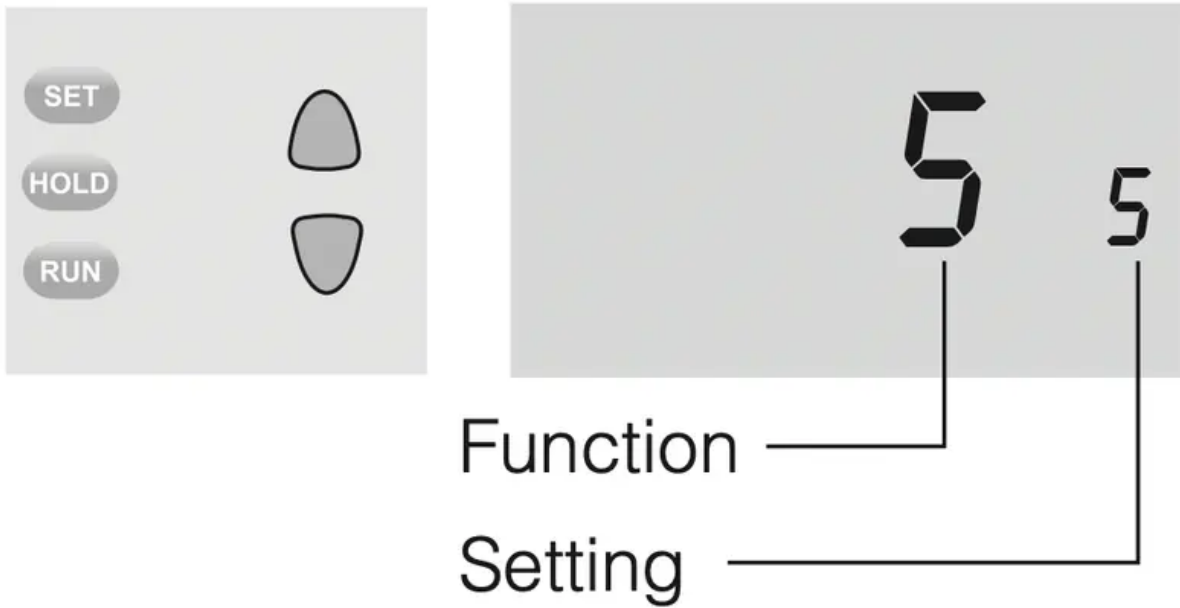

**NOTE:** If you do not press any button for 60 seconds while you are in the setup menu, the thermostat automatically saves any changes made and exits the menu.

Function	Description Press the ▲ or ▼ button to	Setting
5	select your heating system and optimize its operation	<b>5 Gas or oil furnace:</b> Use this setting if you have a standard gas or oil furnace that is less than 90% efficient. <b>6 Electric furnace:</b> Use this setting if you have any type of electric heating system. <b>3 Heat pump, hot water or high-efficiency furnace:</b> Use this setting if you have a hot water system or a gas furnace of greater than 90% efficiency. <b>2 Gas/oil steam or gravity system:</b> Use this setting if you have a steam or gravity heat system.
14	select Fahrenheit or Celsius temperature display	<b>0 Fahrenheit</b> temperature display (°F) <b>1 Celsius</b> temperature display (°C)
15*	select Compressor Protection settings	<b>1 On</b> <b>0 Off</b>
20	select clock display	<b>0</b> 12-hour display <b>1</b> 24-hour display
40 (RTHL2310 only)	restore program schedule to default settings	<b>0 Off</b> <b>1 On:</b> Program schedule default settings are listed on page 11.

\* Compressor Protection: This feature forces the compressor to wait approximately 5 minutes before restarting, to prevent equipment damage. During the wait time, the message “Cool On” or “Heat On” is displayed on screen.

## About your new thermostat

Your new Honeywell thermostat has been designed to give you many years of reliable service and easy-to-use, push-button climate control.


- Backlit display on RTHL2310
- Displays ambient (measured) temperature at all times
- One-touch access to setpoint temperature
- Preset program settings
- Temporary and permanent override of schedule
- Built-in compressor protection

### Thermostat controls

**Set:** Press to set time/day/schedule.

**Hold:** Press to override programmed temperature control.

**Run:** Press to resume program schedule.

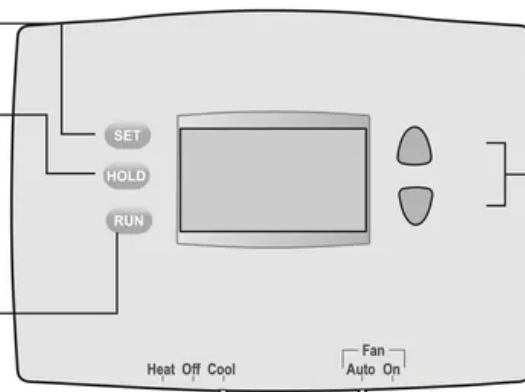

### Temperature adjustment

Press the up or down buttons until you reach the desired temperature.

**NOTE:** Make sure the **SYSTEM** switch is set to the system you want to control (Heat or Cool).

**System Switch** is used to control your heating or cooling system.

- **Heat:** Heating system control.
- **Off:** All systems off.
- **Cool:** Cooling system control.

**Fan Switch** is used to control your fan.

In "Auto" mode, the fan runs only when the heating or cooling system is on.

If set to "On," the fan runs continuously.


## Display screen

### Setpoint indicator

Appears when the setpoint temperature is displayed.

### Low battery warning (see page 14)

### Current day/time (see page 11)

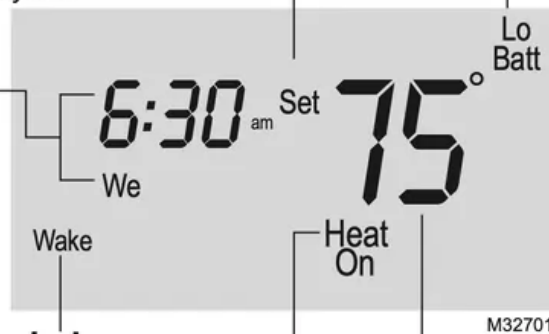

### Current program period

Wake/Leave/Return/Sleep  
(see pages 11–13)

### System status

**Cool on:** Cooling system is on.



**Heat on:** Heating system is on.





When Cool On is flashing, compressor protection is engaged (see page 14).

### Temperature

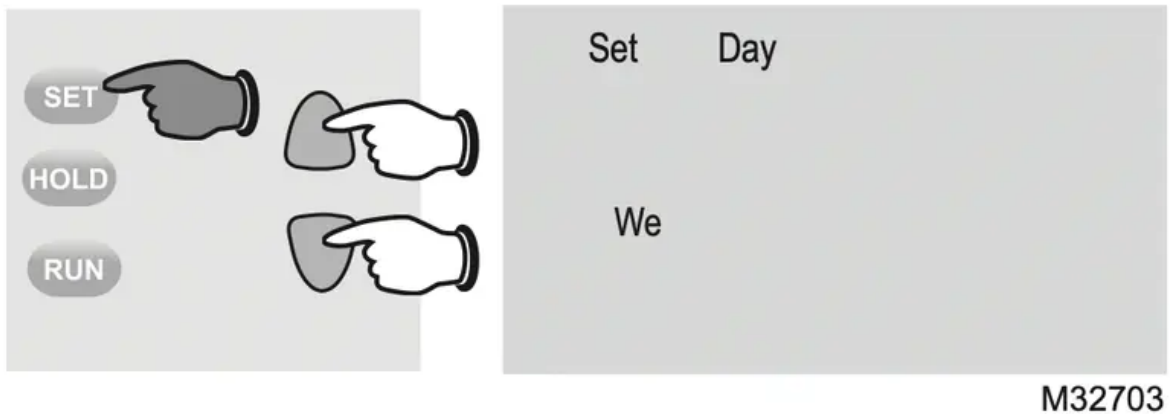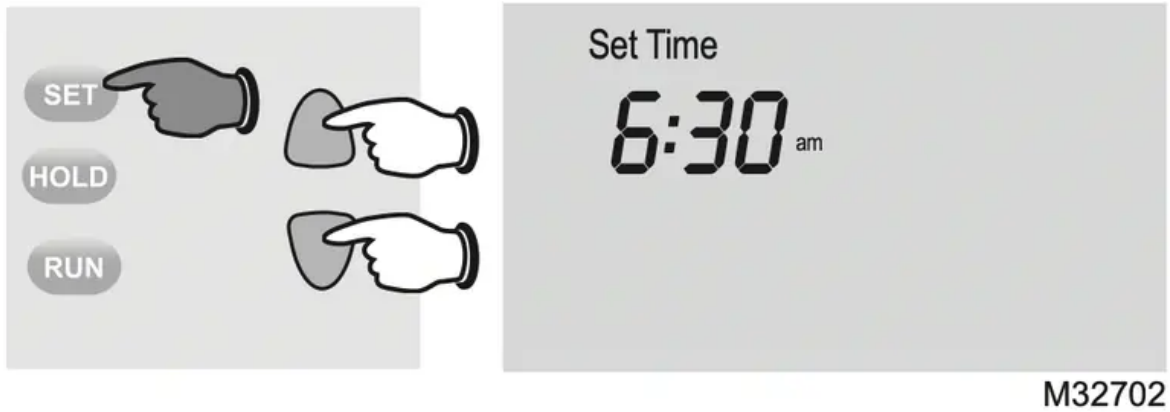The ambient (measured) temperature is normally displayed. To view the setpoint temperature, press the Up or Down button once. The setpoint temperature will appear for five seconds.

## Set the time and day



1. Press the SET button, then press  or  to set the clock time.
2. Press the SET button, then press  or  to select the day of the week.
3. Press RUN to save & exit.

**NOTE:** If the clock flashes, the thermostat will follow your settings for the Monday “Wake” time period until you reset the time and day.

## Program Schedule

You can program four time periods each day, with different settings for weekdays and weekends. We recommend the pre-set settings (shown in the table below), since they can reduce your heating/cooling expenses.

**Wake** - Set to the time you awaken and the temperature you want during the morning, until you leave for the day.

**Leave** - Set to the time you leave home and the temperature you want while you are away (usually an energy-saving level).





**Return** - Set to the time you return home and the temperature you want during the evening, until bedtime.

**Sleep** - Set to the time you go to bed and the temperature you want overnight (usually an energy-saving level).

**NOTE:** Leave and Return periods can be canceled on weekends.

**To adjust program schedules (RTHL221)**

	Heat	Cool
<b>Wake</b> (6:00 am)	70°	78°
<b>Leave</b> (8:00 am)	62°	85°
<b>Return</b> (6:00 pm)	70°	78°
<b>Sleep</b> (10:00 pm)	62°	82°

1. Press SET until Set Schedule is displayed.
2. Press  or  to set your Wake time (Mo-Su), then press SET.
3. Press  or  to set the temperature for this time period, then press SET.
4. Set time and temperature for the next time period (Leave). Repeat steps 2 and 3 for each time period.
5. Press RUN to save & exit.

**NOTE:** Make sure the thermostat is set to the system you want to program (Heat or Cool).

**Program schedule override (temporary)**




Press ▲ or ▼ to immediately adjust the temperature. This will temporarily override the temperature setting for the current time period.

“Temporary” will appear on the display and the current program period will flash.



The new temperature will be maintained only until the next programmed time period begins (see page 11).


To cancel the temporary setting at any time, press RUN.

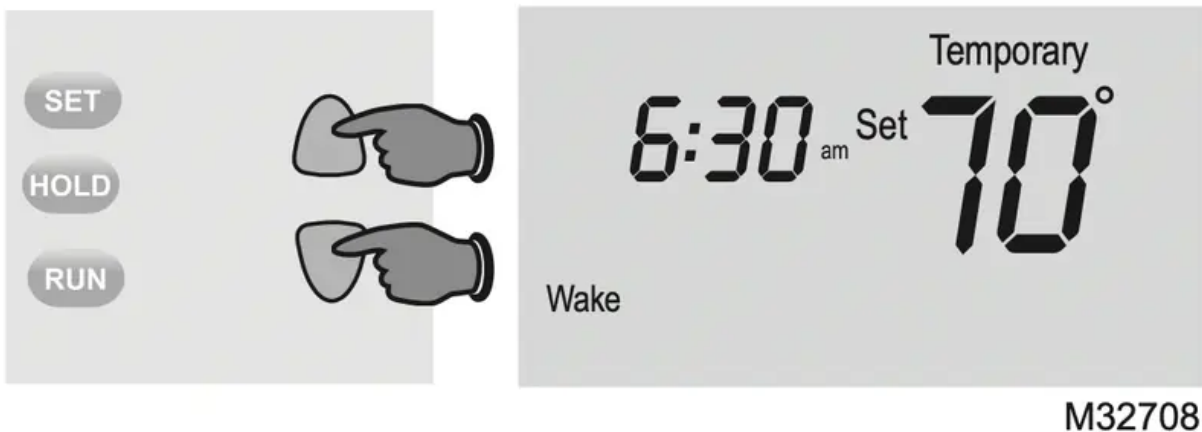

**NOTE:** Make sure the thermostat is set to the system you want to control (heat or cool).

#### **Program schedule override (permanent)**


Press HOLD to permanently adjust the temperature. This will override the temperature settings for all time periods.

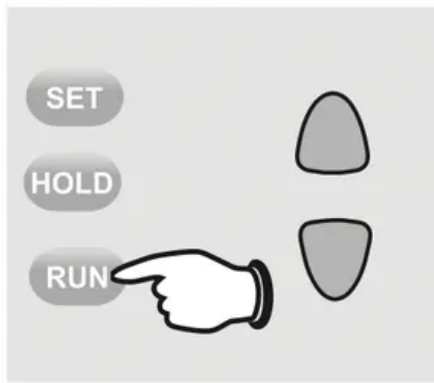

M32709

The “Hold” feature turns off the program schedule and allows you to adjust the thermostat manually, as needed.

Whatever temperature you set will be maintained 24 hours a day, until you manually change it, or press RUN to cancel “Hold” and resume the program schedule.

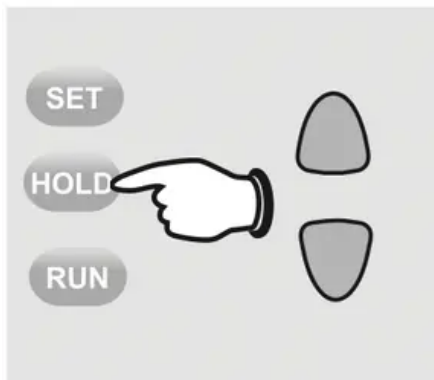


M32710

**NOTE:** Make sure the thermostat is set to the system you want to control (heat or cool).

### **Built-in compressor protection**

This feature helps prevent damage to the compressor in your air conditioning or heat pump system.

Damage can occur if the compressor is restarted too soon after shutdown. This feature forces the compressor to wait 5 minutes before restarting.

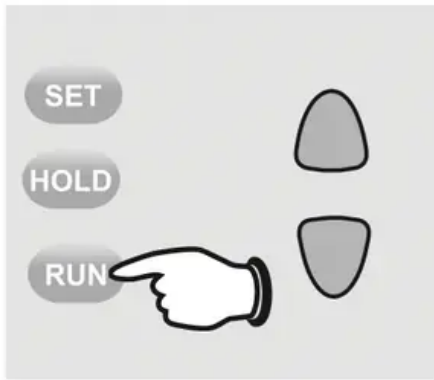

M32709

## Battery replacement

Install two fresh AAA batteries when Lo Batt flashes on the screen. Lo Batt appears for 60 days before the batteries are depleted.

Replace batteries once a year, or when you will be away for more than a month.

Most settings are stored in non-volatile (permanent) memory. Only the clock and the day must be set after you replace the batteries.




M32711

During the wait time, the display will flash the message Cool On (or Heat On if you have a heat pump). When the safe wait time has elapsed, the message stops flashing and the compressor turns on.

**WARNING:** Set the System switch to Off before removing the batteries. Otherwise, the heating/cooling system could remain activated even when batteries are removed.

Pull at bottom to remove thermostat from wallplate.

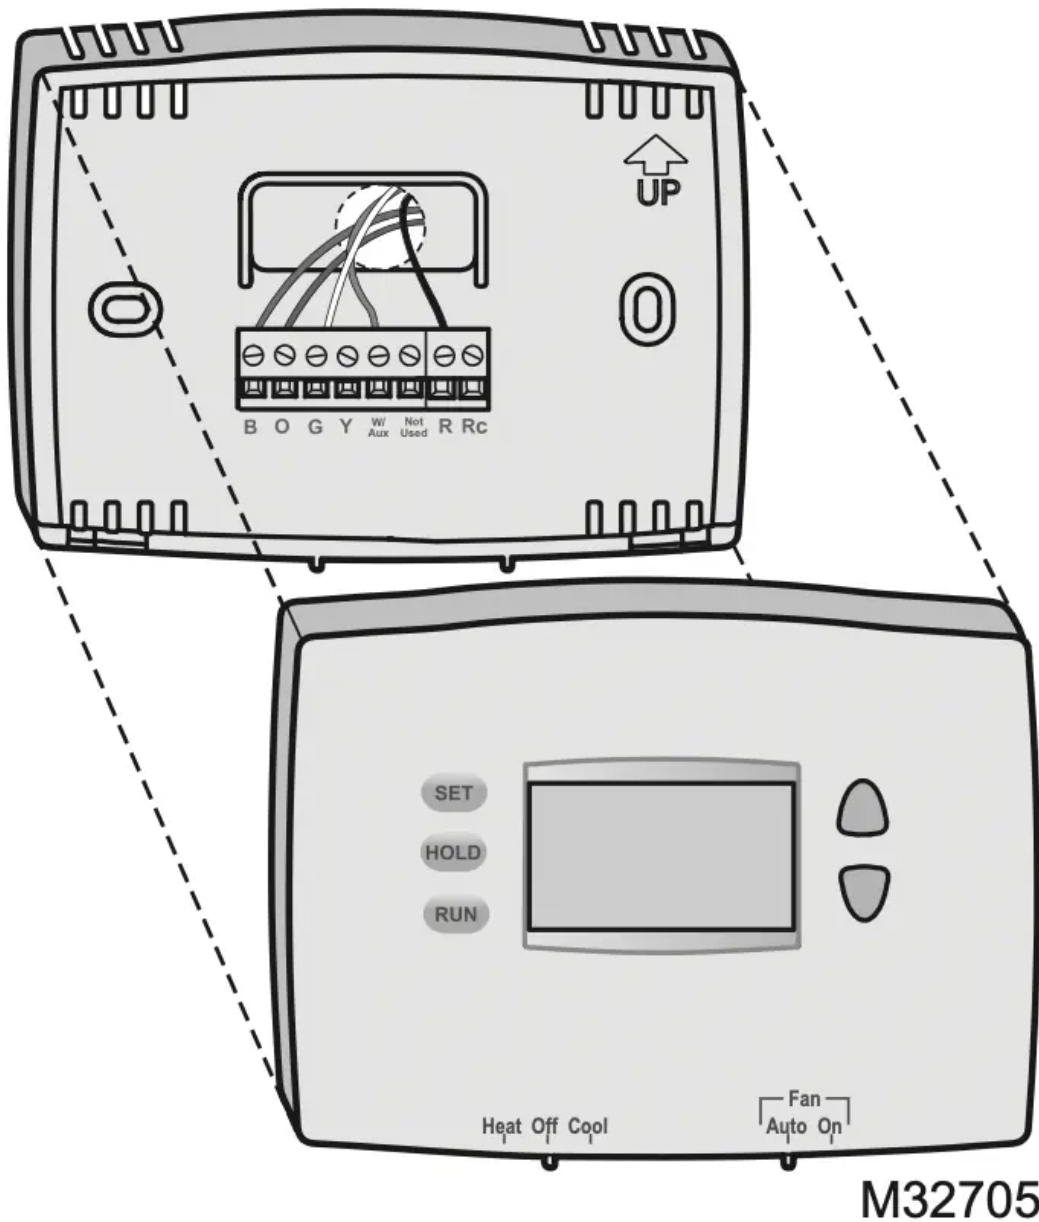

## Troubleshooting

If you have difficulty with your thermostat, please try the following suggestions. Most problems can be corrected quickly and easily.

<p><b>Display is blank</b></p>	<ul style="list-style-type: none"> <li>• Check circuit breaker and reset if necessary.</li> <li>• Make sure power switch at heating &amp; cooling system is on.</li> <li>• Make sure furnace door is closed securely.</li> <li>• Make sure fresh AAA alkaline batteries are correctly installed.</li> </ul>
<p><b>Heating or cooling system does not respond</b></p>	<ul style="list-style-type: none"> <li>• Set system switch to Heat. Make sure the temperature is set higher than the Inside temperature.</li> <li>• Set system switch to Cool. Make sure the temperature is set lower than the Inside temperature.</li> <li>• Wait 5 minutes for the system to respond.</li> </ul>
<p><b>Temperature settings do not change</b></p>	<p>Make sure heating and cooling temperatures are set to acceptable ranges:</p> <ul style="list-style-type: none"> <li>• Heat: 40° to 90°F (4.5° to 32°C).</li> <li>• Cool: 50° to 99°F (10° to 37°C).</li> </ul>
<p><b>“Cool On” or “Heat On” is flashing</b></p>	<ul style="list-style-type: none"> <li>• Compressor protection feature is engaged. Wait 5 minutes for the system to restart safely, without damage to the compressor.</li> </ul>
<p><b>“Heat On” is not displayed</b></p>	<ul style="list-style-type: none"> <li>• Set the System switch to Heat, and set the temperature level above the current room temperature.</li> </ul>
<p><b>“Cool On” is not displayed</b></p>	<ul style="list-style-type: none"> <li>• Set the System switch to Cool, and set the temperature level below the current room temperature.</li> </ul>

**Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

