

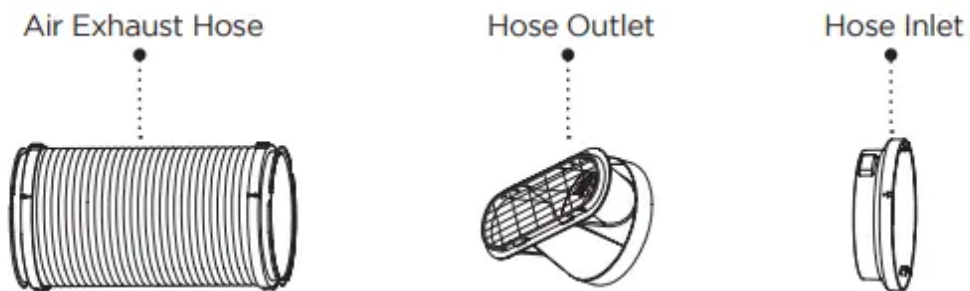


SET UP & USE

PARTS & FEATURES

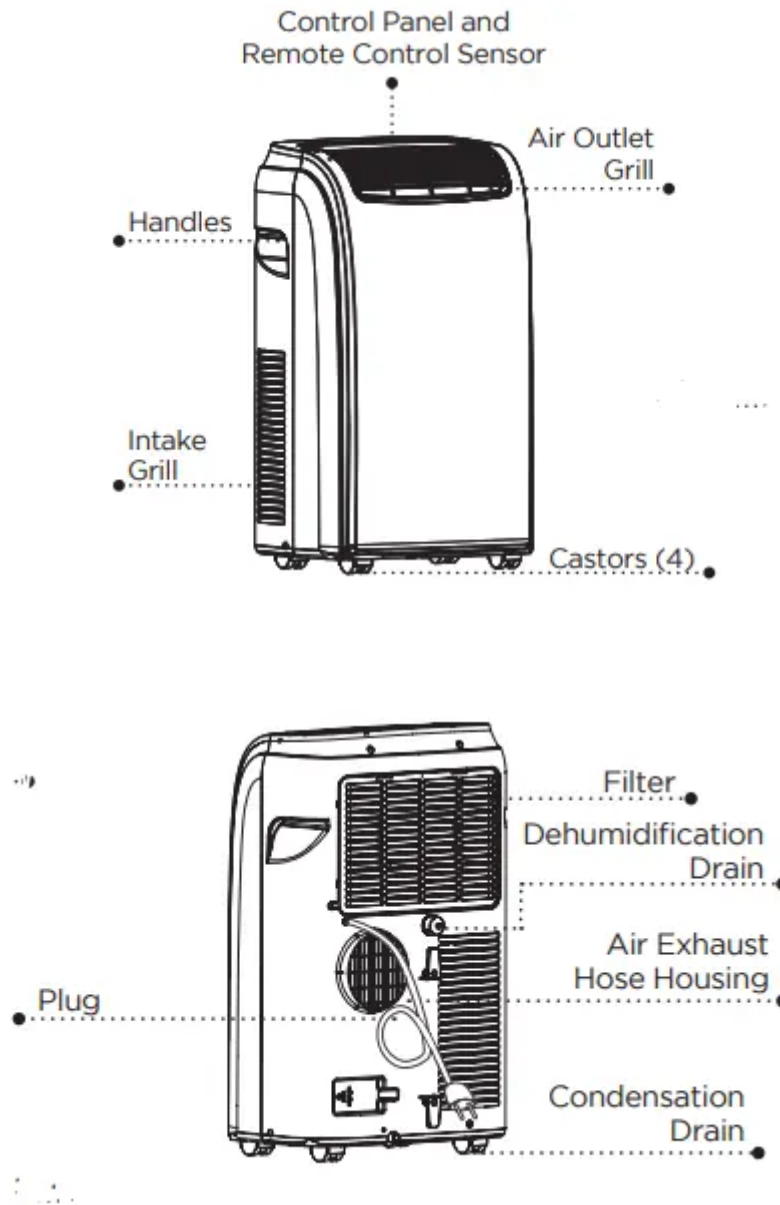

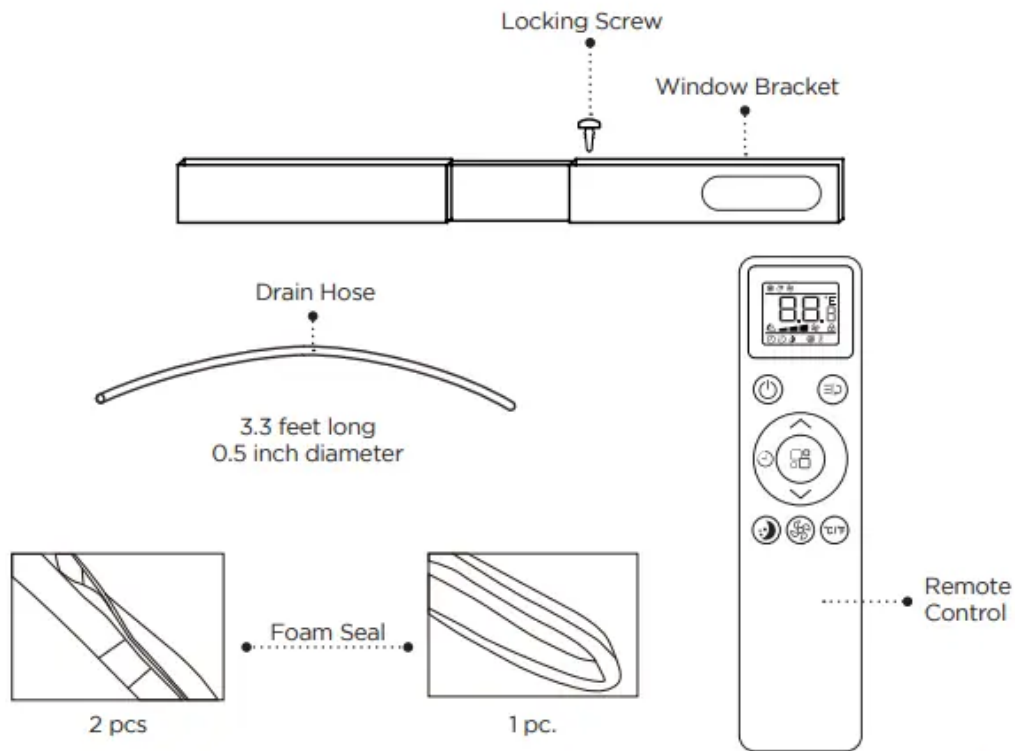

SPECIFICATIONS

BPT05WTBA

Unit dimensions (W x D x H): 16.54" x 12.2" x 27.56"

Unit weight approx.: 52.9 lbs.

BPT06WTB

Unit dimensions (W x D x H): 16.54" x 12.2" x 27.56"

Unit weight approx.: 53.9 lbs.

BPT07WTB

Unit dimensions (W x D x H): 16.54" x 12.2" x 27.56"

Unit weight approx.: 56.4 lbs.

Electric Requirements: 115V ~ 60Hz

INSTALLATION GUIDE

LOCATION

- The air conditioner should be placed on a firm floor to minimize noise and vibration. For safe and secure positioning, place the unit on a smooth, level floor strong enough to support the unit.
- The unit has casters to aid placement, but it should be rolled on smooth, flat surfaces. Use caution when rolling on carpet surfaces. Do not attempt to roll the unit over objects.

- The unit must be placed within reach of a properly rated grounded socket.
- Never place any obstacles around the air inlet or outlet of the unit.
- Allow 12 inches to 36 inches of space from the wall with window for efficient air-conditioning.

SUGGESTED TOOLS FOR WINDOW KIT INSTALLATION

- Screwdrivers (medium size Phillips)
- Tape measure or ruler
- Knife or scissors
- Saw (In the event that the window kit needs to be cutdown in size because the window is too narrow for direct installation)

WINDOW SLIDER KIT INSTALLATION

Your window slider kit has been designed to fit most standard “Vertical” and “Horizontal” window applications; however, it may be necessary for you to improvise/modify some aspect of the installation procedures for certain types of window. Minimum and maximum window openings:


MAXIMUM : 50” (127 cm)

MINIMUM : 20.5” (52 cm)


Horizontal Window




Vertical Window

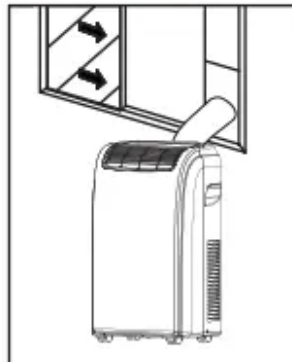


Window Slider Kit

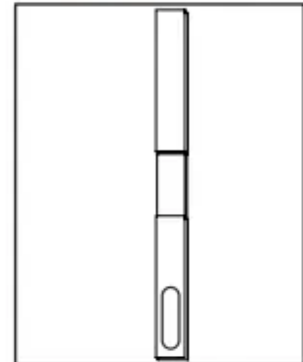

Window slider kit can be secured by inserting the locking screw

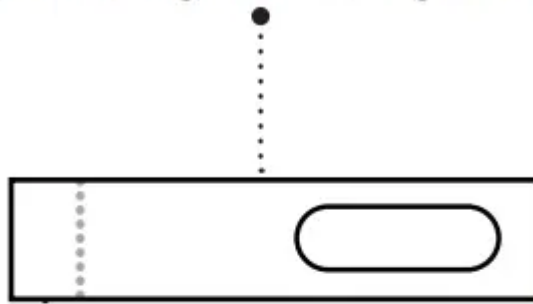


● Cut on opposite side of hole.

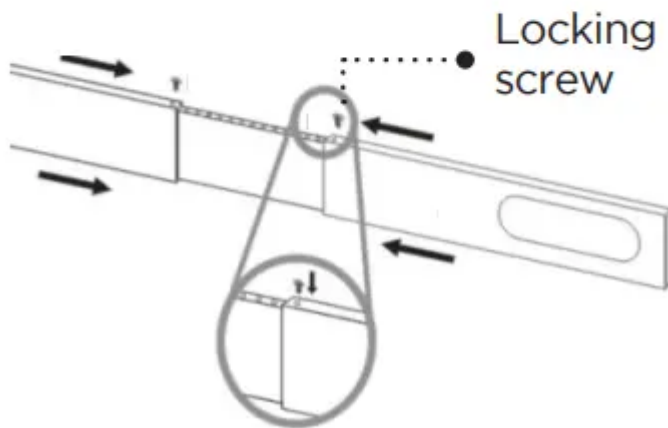

DOUBLE-HUNG SASH/SLIDING CASEMENT WINDOW INSTALLATION

1. Cut the foam seal (adhesive type) to the proper length and attach it to the window sash.
2. Attach the window slider kit to the window sash. Adjust the length of the window slider kit according to the width of window. Shorten the adjustable window kit if the width of window is less than 20.5".
3. Cut the foam seal (adhesive type) to the proper length and attach it on the top of the window.
4. Close the window securely against the window slider kit.
5. Secure the window slider kit to the window sash.
6. Cut the foam seal to an appropriate length and seal the open gap between the top window frame and outer window frame.

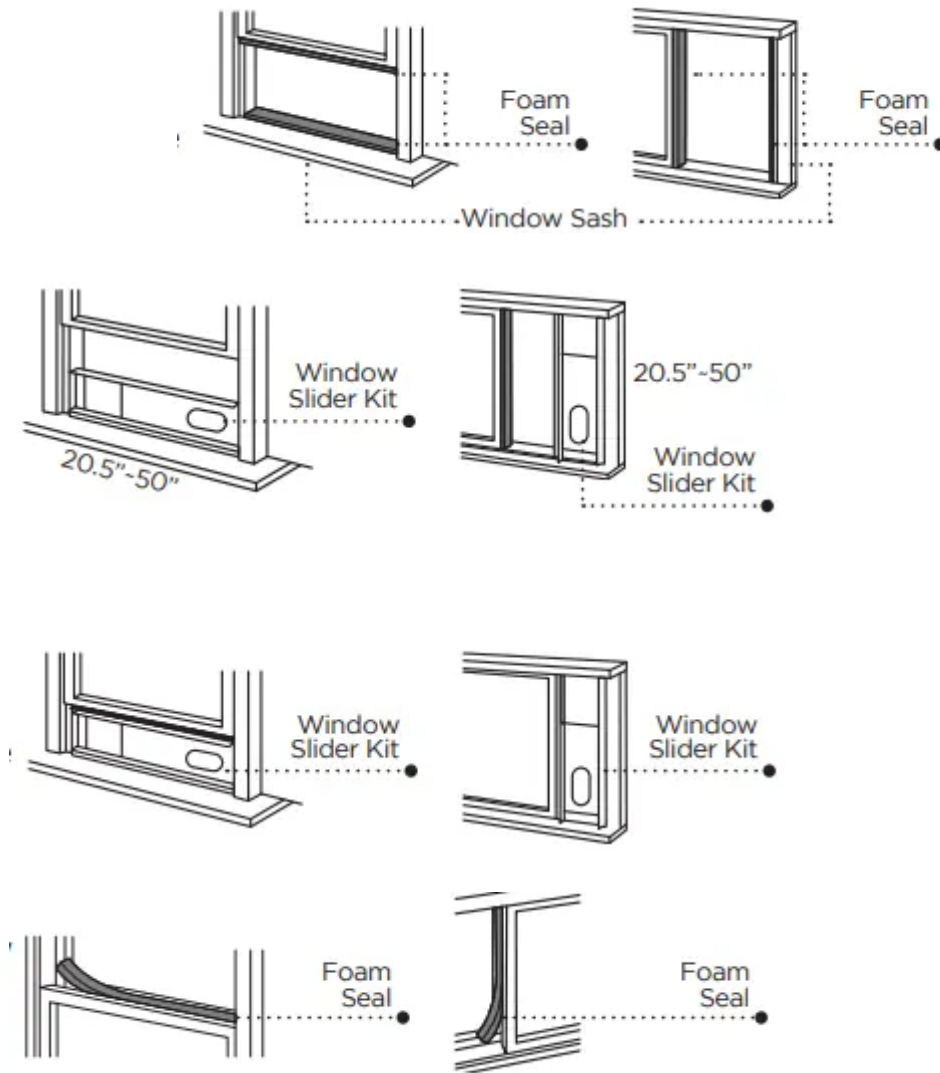


EXHAUST HOSE INSTALLATION

The air exhaust hose and hose inlet must be installed or removed from the portable air conditioner in accordance with the way it is being used:


COOL, AUTO, DEHUMIDIFY: Air exhaust hose and hose inlet should be connected to the portable air conditioner.

FAN: Air exhaust hose and hose inlet should be disconnected from the portable air conditioner.

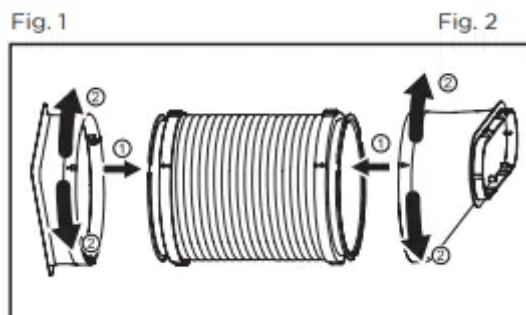

1. Align Arrow of hose inlet and hose. Turn either clockwise or counterclockwise to secure (Fig. 1).
2. Align arrow of hose outlet and hose. Turn either clockwise or counterclockwise to secure (Fig. 2).
3. Attach the hose inlet onto the back of the unit (Fig. 3).

Fig. 3

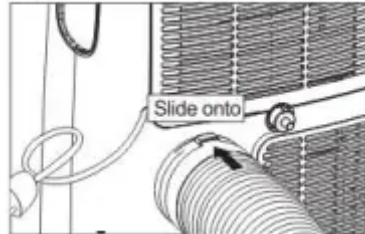

4. Affix the hose outlet into the window slider kit and seal (Fig. 4 & 5)

Fig. 4



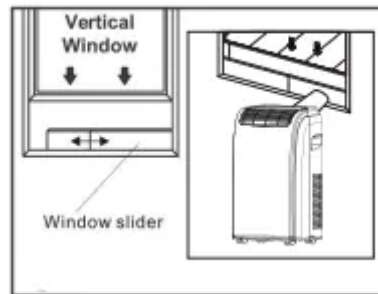



Fig. 5

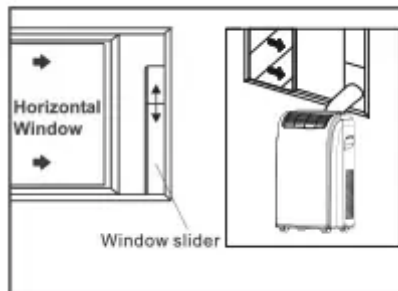

NOTE: The exhaust hose can be compressed or extended moderately, but it is desirable to keep the length to a minimum. Also make sure that the hose does not have any sharp bends.

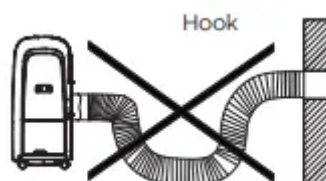

CONTROL PANEL

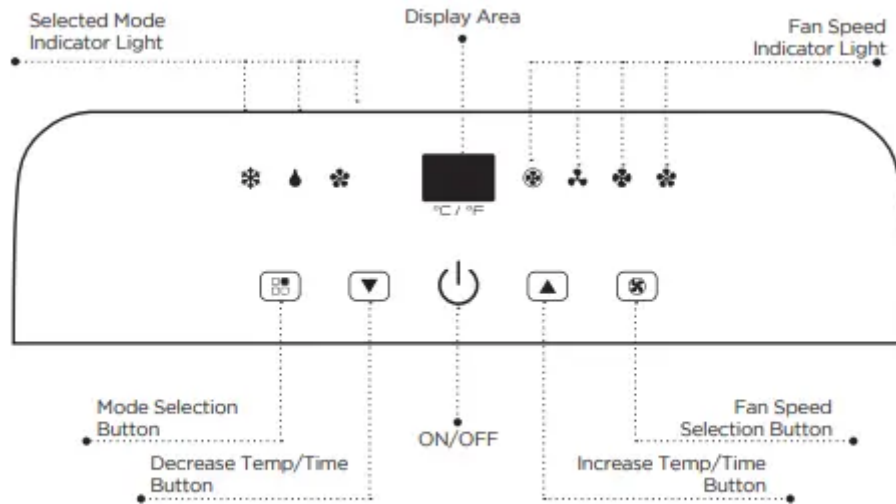



Pictures are for illustration purpose only. Your model may or may not have all the features.

OPERATING FROM THE CONTROL PANEL

The Control Panel enables you to manage all the main functions of the appliance, but to fully exploit its potential, you must use the remote control.

TURNING THE APPLIANCE ON

- Plug into the dedicated electrical outlet. Two lines appear on the display indicating that the appliance is in standby. (Fig. 6)
- Press the  button until the appliance comes on. The last function active when it was turned off will appear.

* Never turn the air conditioner off by unplugging from the outlet. Always press the  button, then wait for a few minutes before unplugging. This allows the appliance to perform a cycle of checks to verify operation.

Note: Before pressing Power On button make sure the condensate drain plug in the rear of the unit is securely in place to avoid any leaking.

- Press the MODE button until the light corresponding to the required Mode lights up



COOL MODE





Ideal for hot weather when you need to cool the room. To set the operation of the appliance correctly, press the  or  buttons until the desired temperature is displayed. (See Fig. 7)





Fig. 7

Then select the fan speed by pressing the Fan Speed Button until the light corresponding to the required fan speed lights up:

 HIGH: The Fan operates at maximum to reach the required temperature as rapidly as possible.

 MED: Reduces Fan noise level but still maintains cooling.

 LOW: For quiet operation.

 AUTO: The appliance automatically selects the most suitable fan speed in relation to the temperature set on the digital display.

DEHUMIDIFY MODE


Ideal for reducing humidity in spring and autumn, during rainy spells or in damp rooms, etc.

- Keep window and door closed for the best dehumidifying effect.
- Exhaust hose attachment is not required to reduce humidity, however it is recommended in very humid rooms so the warm air can be exhausted outside.



Fig. 8

DRAINING IN DEHUMIDIFICATION MODE

- It is recommended that the dehumidification drain and drain hose can be used for continuous drainage.
- WATER FULL - When the water level reaches a predetermined level,  will be indicated on the display. The unit will have to be drained.

FAN MODE

Adjust fan speed by pressing the Fan Speed button as described for the cool mode.

In this mode, AUTO fan cannot be selected.

The fan speed selected will show in the display. One row for Low, Two rows for medium and three rows for high. (See fig. 9)

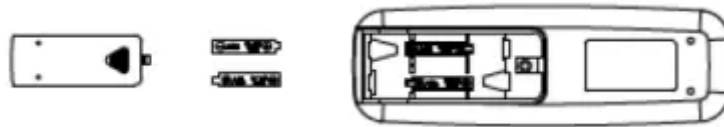


Fig. 9

OPERATING FROM THE REMOTE CONTROL


BATTERY INSTALLATION (BATTERIES NOT INCLUDED)

- (1) Slide open the battery compartment cover.
- (2) Insert 2 × “AAA” batteries as shown.
- (3) Slide back the battery cover.




Point the remote control at the receiver on the appliance. The remote control must be no more than 7 meters away from the appliance (without obstacle between the remote control and the receiver).

The remote control must be handled with extreme care. Do not drop it or expose it to direct sun light or sources of heat.

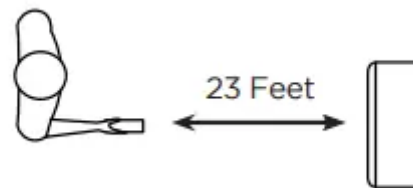

REMOTE CONTROL

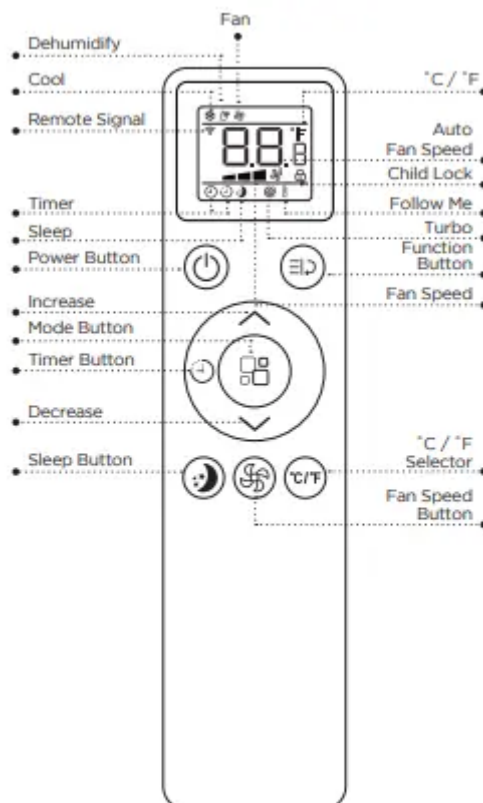

POWER BUTTON: Press to Turn ON or OFF

MODE BUTTON: Each time you press the button COOL, DEHUMIDIFY, FAN

INCREASE: Increase the temperature setting to 90°F. Also used to set time.

DECREASE: Decrease the temperature setting to 64°F. Also used to set time.





 









FAN SPEED BUTTON: Used to select the HIGH, MED, LOW or AUTO fan speed.

FUNCTION BUTTON: Access FOLLOW ME or TURBO functions.


TIMER BUTTON: Used to set a delay start or shut down time.

SLEEP BUTTON: Gradually increase the temperature in COOL mode

°C / °F SELECTOR BUTTON: Select Fahrenheit or Celsius.

LED Display Indicators			
	Cooling mode		Fan speed
	Dehumidify mode		Auto speed
	Fan mode		Child lock
			Timer on
			Timer off
	Signal		Sleep
	Display temperature or hours		Turbo
	Fahrenheit or Celsius.		Follow me



 
POWER BUTTON


- Press to Turn Air Conditioner ON or OFF.
-  Will show on the remote LED screen when buttons are pressed to show that the remote control is sending a signal to the air conditioner.

MODE BUTTON

- Press  the button to scroll through COOL , DEHUMIDIFY , FAN  .
- The corresponding symbol will illuminate on the LED display to indicate which mode is selected.

COOL

- Select the target temperature 64°F-90°F (18°C-32°C) by pressing the  or  buttons until the desired temperature is displayed on the LED screen.
- Press the Fan Speed Button  to select Low, Medium, High or Auto Speed.

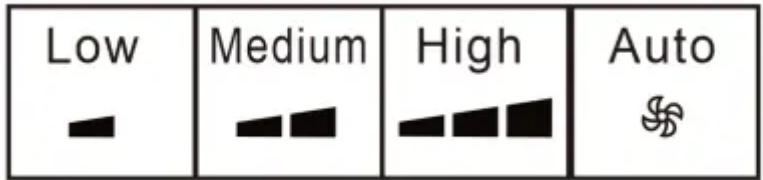

DEHUMIDIFY

Ideal for reducing humidity.


- Keep window and door closed for the best dehumidifying effect.
- Exhaust hose attachment is not required to reduce humidity, however it is recommended in very humid rooms so the warm air can be exhausted outside.

Draining in Dehumidify mode

- It is recommended that the dehumidification drain and drain hose be used for continuous drainage.
- WATER FULL - When the water level reaches a predetermined level, **Ft** will be indicated on the display. The unit will have to be drained.


FAN

- Press the Fan Speed Button to select Low, Medium or High Speed.

 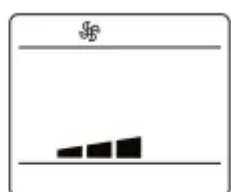

 



FUNCTION **BUTTON**

 

 

- Press the to access FOLLOW ME and TURBO functions.
- TURBO is ideal for a warm room. It will automatically set the temperature to 64°F (18°C) at HIGH Fan speed to cool the room in the shortest time.
- This function only operates in COOL mode.

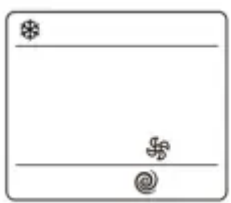

TO OPERATE TURBO











 

- Press the Function  button, TURBO  symbol flashes on screen then press the function  button again, the TURBO  symbol will stop flashing and will illuminate on the LED screen indicating that TURBO is activated.

TO CANCEL TURBO

- Press the Function  button, TURBO  symbol flashes on screen then press the function  button again, the TURBO  symbol will stop flashing and will no longer be illuminated in the LED screen indicating that TURBO function is deactivated.

FOLLOW ME

Parts of the room are cooler where there is a draft. Other parts are warmer due to direct sunlight. The FOLLOW ME Function allows the room to be cooled according to the room temperature, wherever the remote is located.





- This function can be activated from the remote control ONLY. The remote control serves as a thermostat allowing for the precise temperature control at its location.
- To activate the Follow Me function, point the remote control towards the appliance and press the FUNCTION  button.
- Press either the  OR  button until the FOLLOW ME  symbol flashes on the LED screen.
- Press the Menu  button. The FOLLOW ME  will stop flashing and illuminate on the LED screen.
- The remote will display the actual temperature at its location. The remote control will send this signal to the air conditioner at 20 minute intervals.
- If the unit does not receive the Follow Me/Temp Sensing signal during a 25 minutes interval, the follow me function will be canceled and will need to be reactivated.
- To cancel this function, press the , then press either the  or  button until the  flashes on screen, and then press the  button to confirm the cancellation. The  will stop flashing and disappear from the screen.



TIMER BUTTON

- The timer can be used to delay the appliance start-up or shutdown





PROGRAMMING START-UP




- With the appliance ON select the settings that you would like to program at start-up. Example: COOL Mode, temperature, fan speed. Turn OFF the air conditioner.

- Press the  button twice, the LED screen will display hours, the  symbol and  symbol will flash  .





- Press the  or  button to set the time when you want the appliance to switch on using the buttons (from 30 minutes to 24 hours).



- During the first ten hours you can select half hour intervals. For times longer than ten hours, one hour intervals can be selected.





- Press the  button again to activate the selected time. The  symbol and  will be displayed on the LED screen  . Remaining time will be displayed on the LED screen




- To cancel the programmed start-up, press the  button again or the  button. The  symbol will not be illuminated on the LED screen.

PROGRAMMING SHUT DOWN

- With the appliance ON Press the  button twice, the LED screen will display hours, the  symbol and  symbol will flash  .

- Press the  or  button to set the time when you want the appliance to shut down using the buttons (from 30 minutes to 24 hours).

- Press the  button again to activate the selected time. The  symbol and  will be displayed on screen  . Remaining time will be displayed on the LED screen.



- To cancel the programmed shut-down, press the  button again or the  button. The  symbol will not be illuminated on the LED screen.

SLEEP BUTTON



- The SLEEP function maintains the room at optimum temperature without excessive fluctuations with silent operation. Fan speed is always at Low, while room temperature adjusts gradually to ensure the most comfortable environment operation of the appliance.





WHEN OPERATING IN COOL MODE


- Press the  button, and the  symbol appears.
- Selected temperature will increase by 1°F (1°C) per hour in a 2 hour period. This new temperature will be maintained for the next 6 hours, then the air conditioner will turn off.
- When you select the SLEEP function, the screen will reduce the brightness, and the fan speed is low.
- The SLEEP function can be canceled at any time during operation by pressing the “Sleep”, “Mode” or “fan speed” button.
- SLEEP function cannot be set In FAN or DEHUMIDIFY mode,

°C / °F SELECTOR BUTTON

- When the appliance is powered on, press the °C / °F button, then you can select the unit of temperature from Fahrenheit or Celsius.

CHILD LOCK

- This function is used to prevent children from inadvertently changing the settings by pressing the remote control buttons.
- Press and hold the  and  buttons simultaneously for at least 3 seconds to activate the child lock function. When it is activated the lock symbol will appear on the LED screen. Settings cannot be changed by pressing random bottoms on the remote.
- To deactivate the child lock, press and hold the  and  buttons simultaneously for at least 3 seconds again. The lock symbol will not appear on the LED screen and the settings on the remote can be changed.

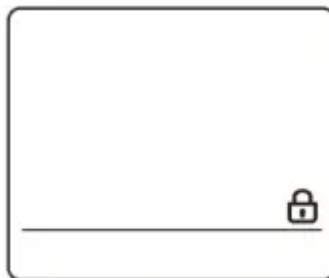


WATER DRAINAGE

Draining in Cooling Mode

This air conditioner is equipped with auto water evaporation so the water compartment would not typically fill in cooling mode unless there is high humidity. Water drainage will generally only be required at the end of the season (see START-END OF SEASON OPERATIONS in cooling mode.)


intermittent Draining in Cooling Mode.

- Unplug the unit from the power source. Carefully move the unit to a drain area over your basement floor or drip pan (not included). Remove the bottom drain cap.
- Let the water drain away and replace the drain cap. Restart the machine until the symbol disappears. If the error repeats, call for service.

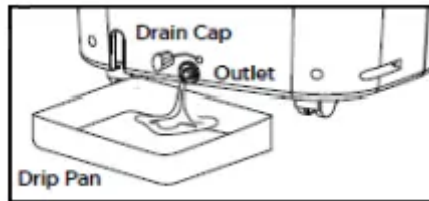

Continuous Draining for Cooling Mode

- Unplug the unit from the power source. Remove the bottom drain cap. While doing this operation some residual water may spill so have a drip pan (not supplied) to collect the water.
- Connect the drain hose (supplied) as shown in the diagram. The water can be continuously drained through the hose into a floor drain or drip tray.

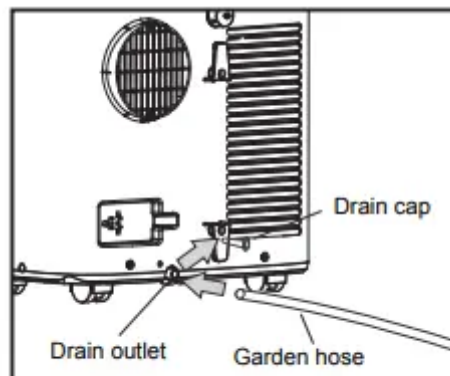


Turn on the unit.

WAIT 3 MINUTES BEFORE RESUMING OPERATION

- After the unit has stopped, it cannot be restarted for 3 minutes. Operation will automatically restart after 3 minutes.

Continuous Draining for Dehumidification Mode.

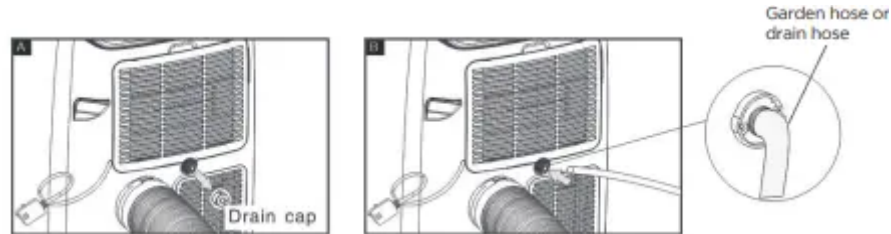

Unplug the unit from the power source. Remove the drain cap located in the back center of the unit. While doing this operation some residual water may spill so have a drip pan (not supplied) to collect the water. Connect the drain hose (supplied) as shown in the diagram. The water can be continuously drained through the hose into a floor drain or bucket. Turn on the unit.



WAIT 3 MINUTES BEFORE RESUMING OPERATION

- After the unit has stopped, it cannot be restarted for 3 minutes. Operation will automatically restart after 3 minutes.

CLEANING & CARE

Before cleaning or maintenance, turn the appliance off by pressing the  button on the control panel or  button on the remote control. Unplug from the electrical outlet.

CLEANING THE CABINET

You should clean the appliance with a slightly damp cloth then dry with a dry cloth

- Never saturate the air conditioner with water.
- Never use petrol, alcohol or solvents to clean the appliance.
- Never spray insecticide liquids or similar near the air conditioner.

CLEANING THE FILTER

To keep your air conditioner working efficiently, you should clean the evaporator filter every week of operation.

The filter is housed in the intake grill.

Use a vacuum cleaner to remove dust accumulations from the filter. If it is very dirty, immerse in warm water and rinse a number of times. The water should be luke warm. After washing, leave the filter to dry then re-insert the filter.



START - END OF SEASON OPERATIONS

START OF SEASON CHECKS

Make sure the power cable and plug are undamaged. Follow the installation instructions precisely.

END OF SEASON OPERATIONS

See the Water Drainage section to make sure the air conditioner is completely drained of water.

Clean the filter and dry it thoroughly before reinstalling it.



TROUBLESHOOTING

BEFORE YOU CALL FOR SERVICE

IF THE AIR CONDITIONER FAILS TO OPERATE:

A) Check to make sure that the air conditioner is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely. B) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.

Troubleshoot your problem by using the chart below. If the air conditioner still does not work properly, contact BLACK+DECKER customer service center or the nearest authorized service center. Customers must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Unit does not start when pressing ON/OFF button	<p>A. FT appears in the display window</p> <p>B. Room temperature is lower than set temperature (cooling mode)</p>	<p>A. Drain the water</p> <p>B. Reset the temperature</p>
Not cool enough	<p>A. The windows or doors in the room are not closed</p> <p>B. There are heat sources inside the room</p> <p>C. Exhaust air duct is not connected or blocked</p> <p>D. Temperature setting is too high</p> <p>E. Air filter is blocked by dust</p> <p>F. The unit will take approx 3 minutes of operation before cooling occurs.</p>	<p>A. Make sure all the windows and doors are closed</p> <p>B. Remove the heat sources if possible</p> <p>C. Connect the duct and make sure it can function properly</p> <p>D. Decrease the set temperature</p> <p>E. Clean the air filter</p> <p>F. A microprocessor control delays the compressor from operating until 3 mins have passed.</p>
Noisy or vibration	<p>A. The surface is not level or not flat enough</p>	<p>A. Place the unit on a flat, level surface if possible</p>
Gurgling sound	<p>A. The sound comes from the flowing of the refrigerant inside the air-conditioner</p>	<p>A. It is normal</p>
Unit stops operating	<p>A. The unit is defrosting.</p> <p>B. PF appears in display window</p>	<p>A. Unit is in defrost mode and will restart automatically once excess frost has been removed.</p> <p>B. This could be a probe failure. Contact customer service.</p>
Remote is not working	<p>A. Nothing Appears on the LED screen.</p>	<p>A. Change batteries.</p>

	<p>B. The temperature and symbols appear on the LED screen but the selection cannot be changed.</p> <p>C. The temperature and symbols appear on the LED screen but the FOLLOW ME function becomes disabled.</p>	<p>B. Make sure the remote is being pointed at the remote control receiver on the unit within 23 feet away and that there are no obstructions.</p> <p>C. Make sure the remote is being pointed at the remote control receiver on the unit within 23 feet away and that there are no obstructions</p>
--	---	--

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

