


User Manual Thermo

Included in your box:



 
Thermostat

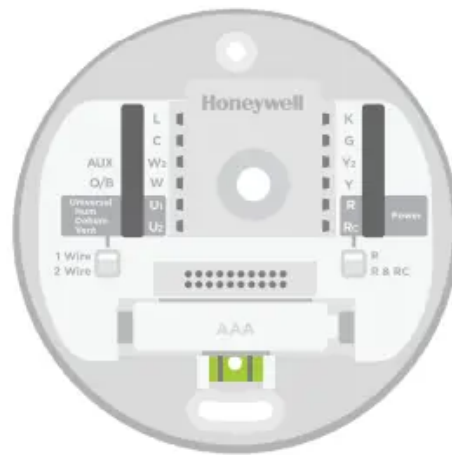

Wall plate



Optional wall cover



Screws



Anchors

Tools you will need:





Phillips screwdriver



Small flat head screwdriver



Ballpoint pen



Needle-nose pliers*



Wire stripper*



Drill and
drill bit (7/32")*

*Tools you might need




Home Wi-Fi password



Honeywell Lyric app

*To configure your system
and connect to your smartphone*

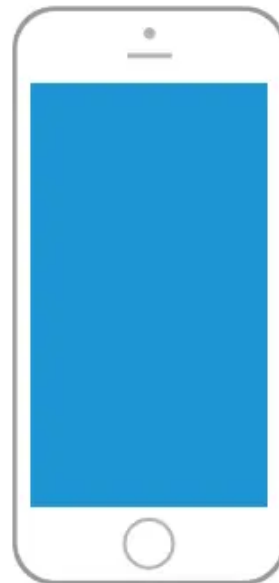


Smartphone

*To photograph your existing wiring
and access the thermostat app*


1 Turn power OFF

To protect yourself and your equipment, Turn off the power at the breaker box or switch that controls your heating/cooling system.

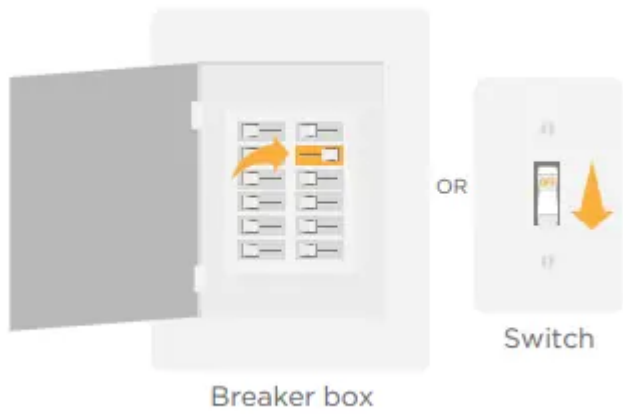

2 Check that your system is off

Change the temperature on your old thermostat. If you don't hear the system turn on within 5 minutes, the power is off.

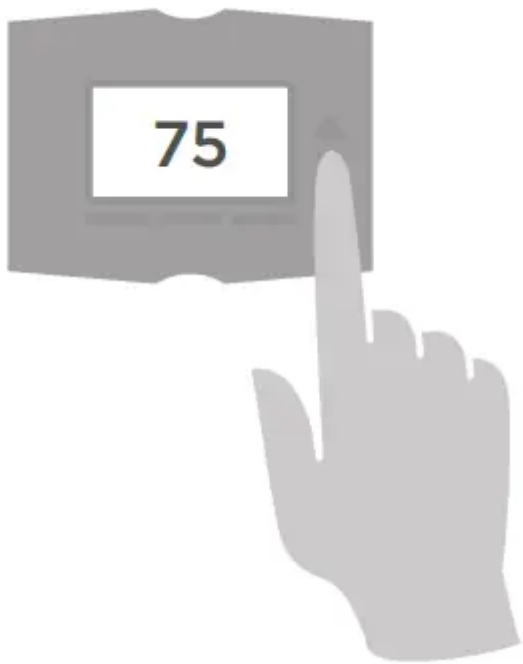

3 Remove the old thermostat's faceplate




On most thermostats, you can take off the faceplate by grasping and gently pulling or popping it off. Some thermostats may have screws, buttons, or clasps.

Do not remove any wires from your thermostat


4 Make sure there are no 120-240V wires

Do you have thick black wires with wire nuts? Is your thermostat 120V or higher? If you answered yes to either of these questions, you have a line voltage system and the Lyric thermostat will not work. If you are unsure visit

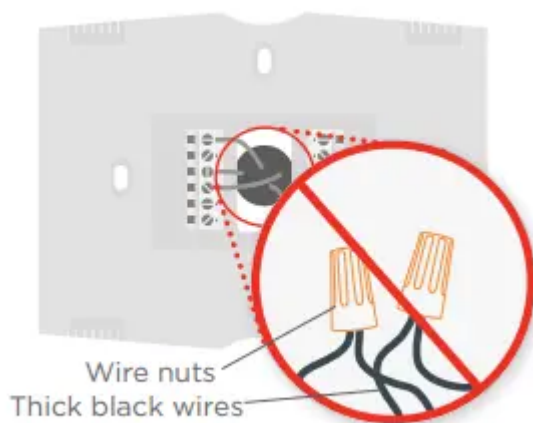


5 Take a picture of the old wiring

Be sure to include the letters next to the terminals where the wires are inserted. This will be a helpful reference when wiring your Lyric thermostat.

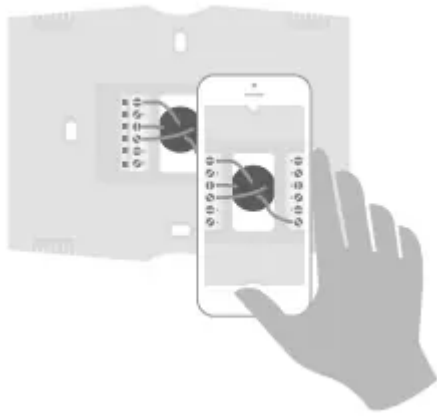

6 Remove any jumpers

A jumper connects one terminal to another terminal. It may look like a small staple or even a colored wire and must be removed before continuing. **The Lyric thermostat does not need jumpers**

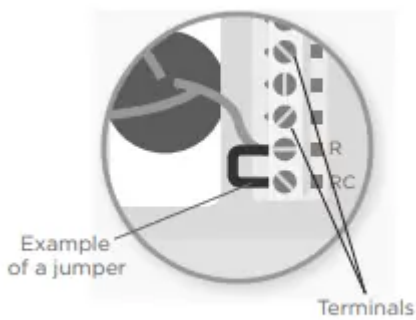

7 Record if you have wires in the following terminals

Do not include jumpers as part of your count.

Check all that apply:

Terminal	Color of wire
<input type="checkbox"/> R	_____
<input type="checkbox"/> RC	_____
<input type="checkbox"/> RH	_____

8 Record the existing wire configuration

Note the color of the wires that are plugged into your old thermostat's terminals. You will need this information to correctly wire your Lyric thermostat.

Terminal	Color of wire
<input type="checkbox"/> L	_____
<input type="checkbox"/> C	_____
<input type="checkbox"/> W2	_____
<input type="checkbox"/> W	_____
<input type="checkbox"/> U1	_____
<input type="checkbox"/> U2	_____

Terminal	Color of wire
<input type="checkbox"/> K	_____
<input type="checkbox"/> G	_____
<input type="checkbox"/> Y2	_____
<input type="checkbox"/> Y	_____

If the wires are in terminals that are not listed, you will need additional wiring support. Visit lyric.honeywell.com/support/installation to find out if the Lyric thermostat will work for you.

9 Disconnect the wires and remove old wall plate

Use a screwdriver or a ballpoint pen to release wires from terminals.


Wrap the wires around your ballpoint pen to prevent them from falling back into the wall.



10 Insert the recommended wall anchors


It is recommended that you use the provided anchors when mounting your thermostat.

You can use the wall plate to mark where you want to place the wall anchors. **Drill bit size 7/32"**

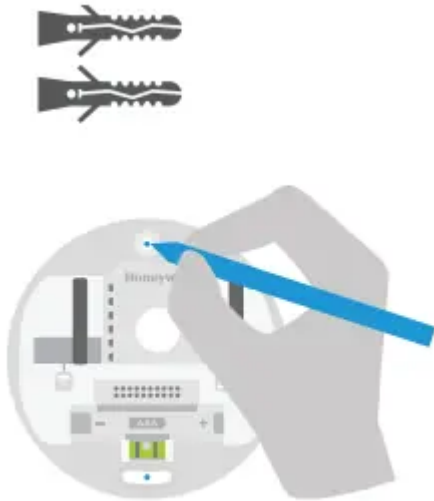

11 Check for any paint gaps or screw holes left by the old thermostat


If you choose to use the optional wall cover to hide these blemishes, **snap the wall plate to the optional wall cover before screwing to the wall.**

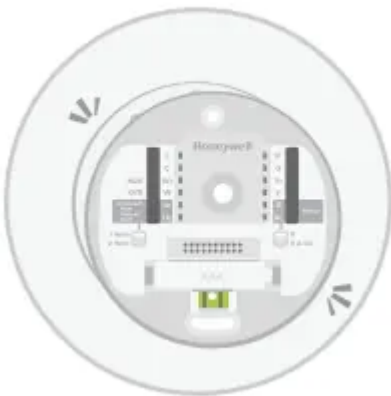

12 Bundle and insert wires through the clear rubber holder


Guide the wires through the clear rubber holder on the back of the wall plate. Make sure at least 1/4-inch of each wire is exposed for easy insertion into the wire terminals.




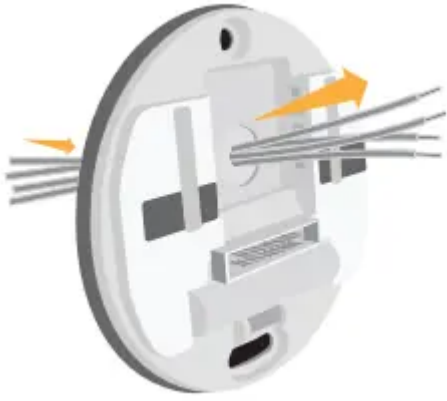

13 Review your answer from Step 7

Set the R-switch up or down based on your answer from Step 7

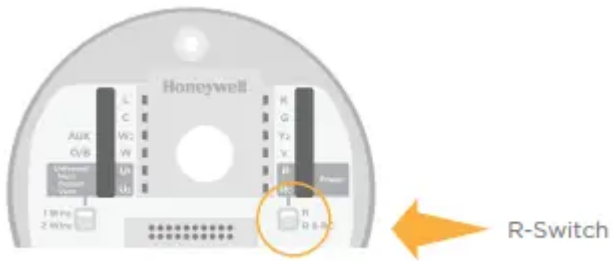

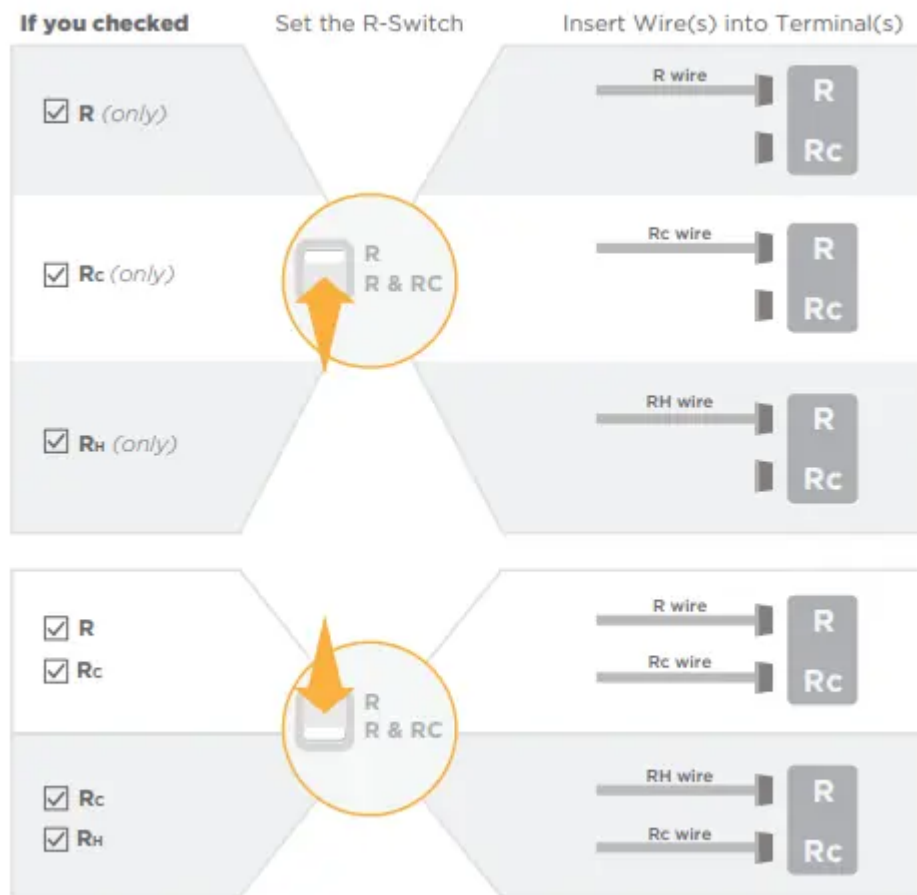



14 Firmly connect remaining wires from Step 8

Push each remaining wire into its corresponding terminal (one wire per terminal) until it is firmly in place. If you misplace a wire, use a ballpoint pen to push down on the terminals and release the wire. **Gently tug on wires to verify they are secure.**

15 Use the provided screws to mount the wall plate

 Make sure the wall plate is even by keeping the bubble in the level between the two lines



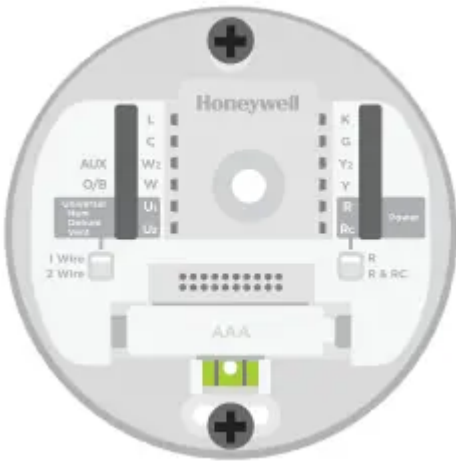


16 Firmly snap the thermostat into place

The thermostat will glow and display the Lyric screen for up to three minutes while it starts up.



17 Turn your power ON

Turn on the power at the breaker box or switch that controls your heating/ cooling system.

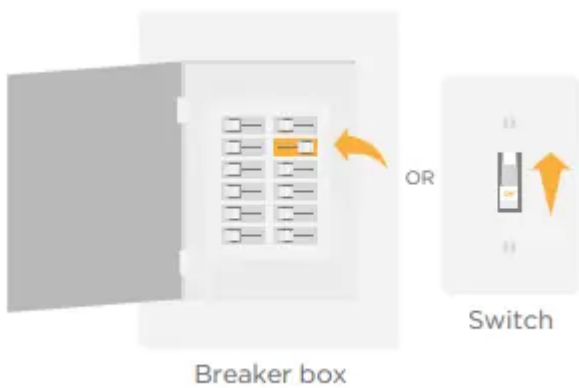

18 Log in to configure and connect

Your Lyric thermostat is not yet configured to control your heating/cooling system. To complete your setup, download and log in to the **Honeywell Lyric** app.


Android

Search Google Play for **Honeywell Lyric**. Create an account and log in to configure and connect.




iOS

Search the App Store for **Honeywell Lyric**. Create an account and log in to configure and connect.

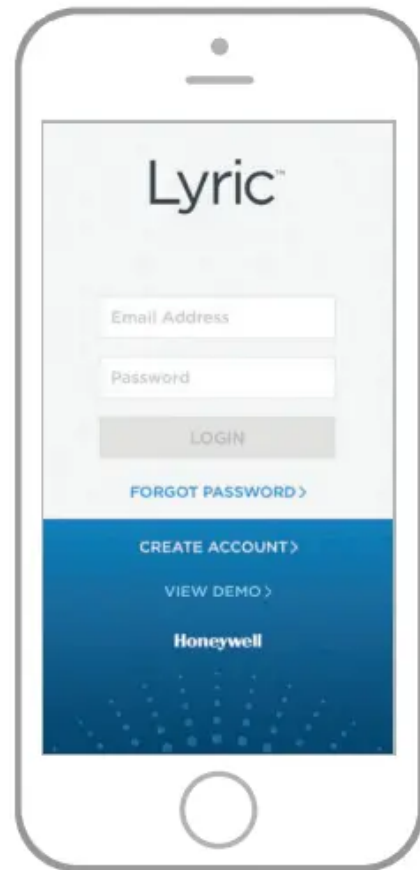


How to use your Lyric thermostat

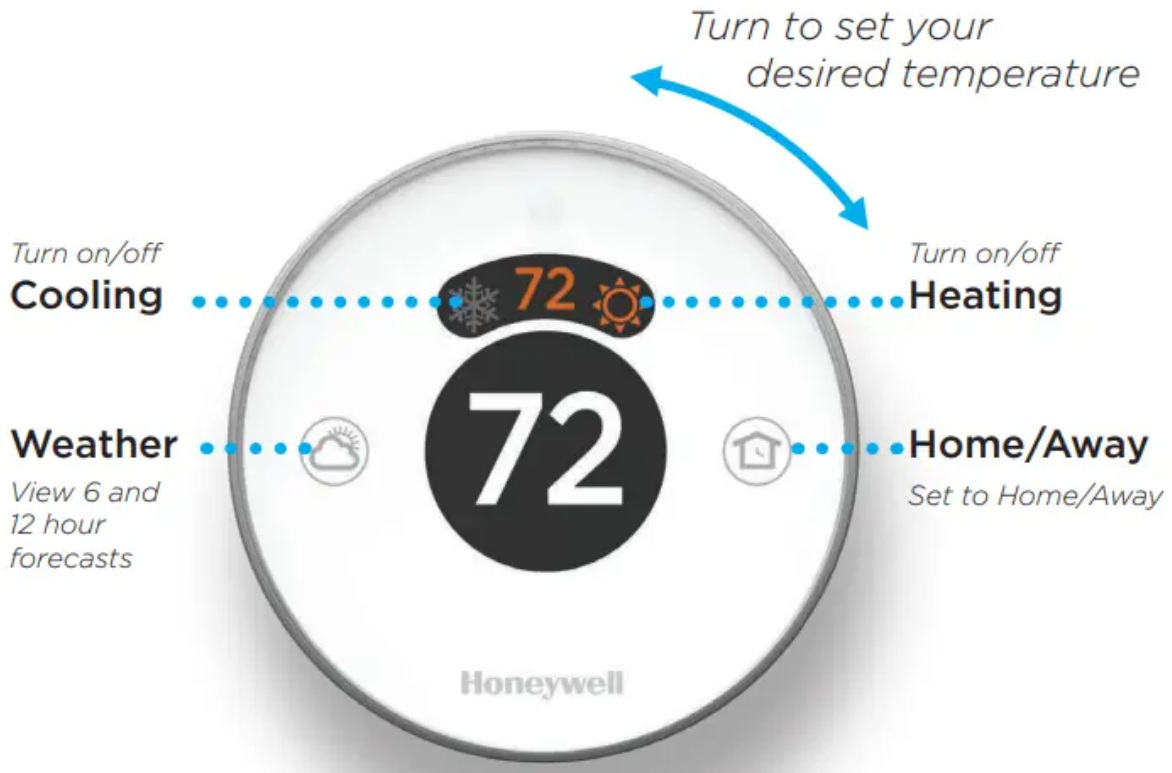

How to use your Lyric app

Once your thermostat is configured and connected to your smartphone or tablet, take advantage of the following features:

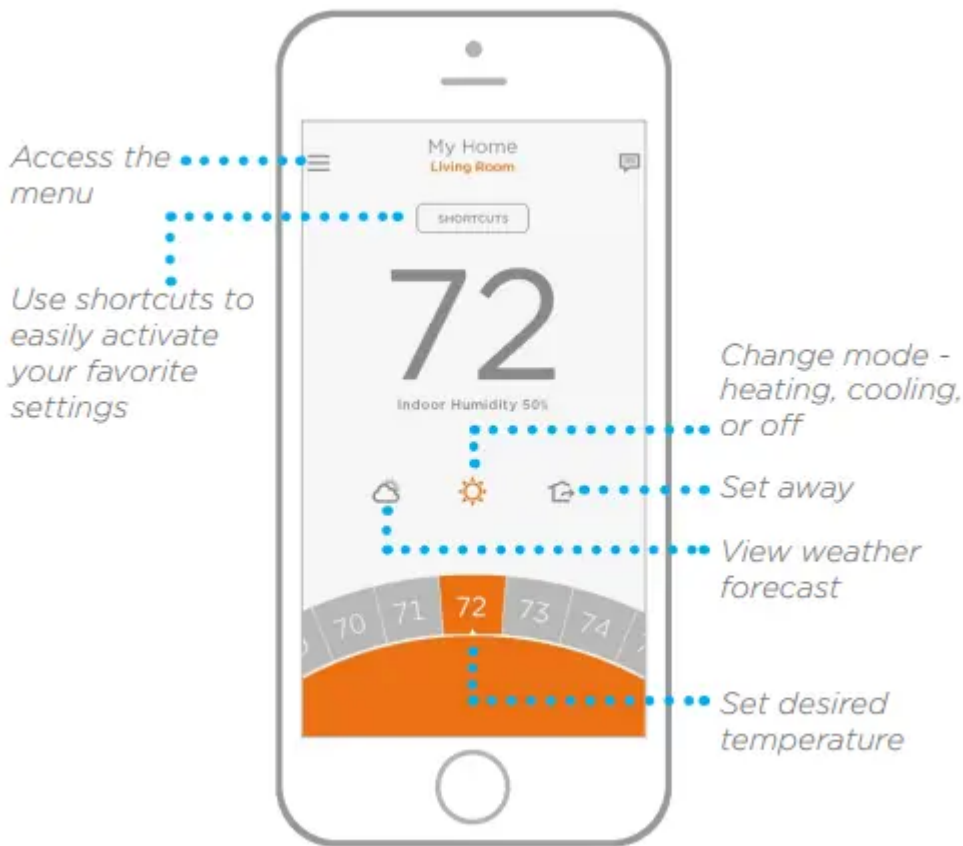

Interested in more Lyric products? Visit lyric.honeywell.com to learn about all available products connected by the Lyric app.

App is regularly enhanced and may change.

Get the most from Lyric



Location Based Temperature Control

Lyric thermostat uses your smartphone's location to know when you're away, and saves you energy. Through geofence technology, it senses your return and helps make you comfortable upon arrival. You can also manually override your current setting when you'll be out for a few hours by using the Away button on the thermostat or in the app.



Custom Shortcuts

Create custom shortcuts for unique situations or save the shortcuts you really like and they'll be available on your app any time you want. Customizable comfort has never been so simple.



Comfort

View and adjust the humidity levels in your home. Lyric also considers both humidity and temperature to maintain your comfort, so 72° always feels like 72°.



Smart Alerts

Push notifications remind you of filter changes, notify you of high and low humidity levels, and warn you of extreme indoor temperatures.

Adaptive recovery

The Lyric thermostat learns your heating and cooling cycle times to deliver just the right temperature, right when you want it.

Auto changeover

When enabled, the thermostat automatically selects heating or cooling depending on the indoor temperature.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.