


## PRODUCT DESCRIPTION

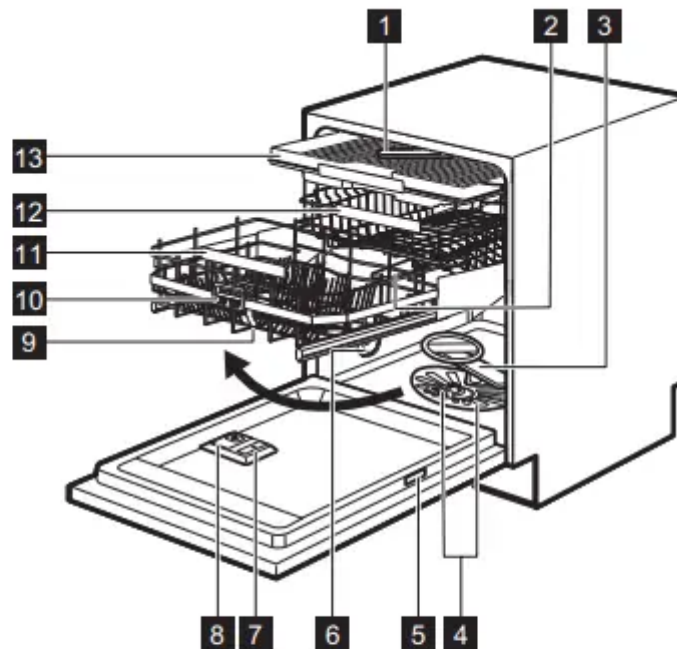

- |                              |                              |
|------------------------------|------------------------------|
| <b>1</b> Top spray arm       | <b>8</b> Detergent dispenser |
| <b>2</b> Upper spray arm     | <b>9</b> Comfort Lift basket |
| <b>3</b> Lower spray arm     | <b>10</b> Release handle     |
| <b>4</b> Filters             | <b>11</b> Upper basket       |
| <b>5</b> Rating plate        | <b>12</b> Cutlery drawer     |
| <b>6</b> Air vent            |                              |
| <b>7</b> Rinse aid dispenser |                              |

### Beam-on-Floor


The Beam-on-Floor is a light that is displayed on the floor below the appliance door.

- When the programme starts, a red light comes on and stays on for the duration of the programme.
- When the programme is completed, a green light comes on.
- When the appliance has a malfunction, the red light flashes.

The Beam-on-Floor is off when the appliance is deactivated.

When AirDry is activated during the drying phase, the projection on the floor may not be completely visible. To see if the cycle has ended, check the control panel.

## CONTROL PANEL

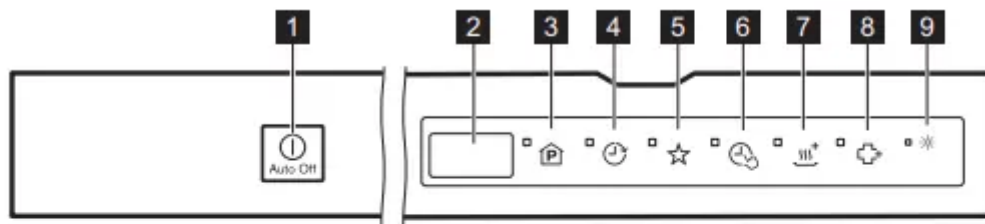

- |                               |                                |
|-------------------------------|--------------------------------|
| <b>1</b> On/off button        | <b>6</b> TimeSaver touchpad    |
| <b>2</b> Display              | <b>7</b> XtraDry touchpad      |
| <b>3</b> Program touchpad     | <b>8</b> ExtraHygiene touchpad |
| <b>4</b> Delay touchpad       | <b>9</b> Indicators            |
| <b>5</b> MyFavourite touchpad |                                |

## PROGRAMMES

Programme	Degree of soil Type of load	Programme phases	Options
P1 ECO 1)	<ul style="list-style-type: none"> <li>• Normal soil</li> <li>• Crockery and cutlery</li> </ul>	<ul style="list-style-type: none"> <li>• Prewash</li> <li>• Wash 50 °C</li> <li>• Rinse</li> <li>• Dry</li> </ul>	<ul style="list-style-type: none"> <li>• ExtraHygiene</li> <li>• TimeSaver</li> <li>• XtraDry</li> </ul>
P2 AutoFlex 2)	<ul style="list-style-type: none"> <li>• All</li> <li>• Crockery, cutlery, pots and pans</li> </ul>	<ul style="list-style-type: none"> <li>• Prewash</li> <li>• Wash from 45 °C to 70 °C</li> <li>• Rinse</li> <li>• Dry</li> </ul>	<ul style="list-style-type: none"> <li>• ExtraHygiene</li> <li>• XtraDry</li> </ul>
P3 FlexiWash 3)	<ul style="list-style-type: none"> <li>• Mixed soil</li> <li>• Crockery, cutlery, pots and pans</li> </ul>	<ul style="list-style-type: none"> <li>• Prewash</li> <li>• Wash 50 °C and 65 °C</li> <li>• Rinse</li> <li>• Dry</li> </ul>	<ul style="list-style-type: none"> <li>• TimeSaver</li> <li>• XtraDry</li> </ul>
P4 Intensive	<ul style="list-style-type: none"> <li>• Heavy soil</li> <li>• Crockery, cutlery, pots and pans</li> </ul>	<ul style="list-style-type: none"> <li>• Prewash</li> <li>• Wash 70 °C</li> <li>• Rinse</li> <li>• Dry</li> </ul>	<ul style="list-style-type: none"> <li>• ExtraHygiene</li> <li>• XtraDry</li> <li>• TimeSaver</li> </ul>
P5 Glass Care	<ul style="list-style-type: none"> <li>• Normal or light soil</li> <li>• Delicate crockery and glassware</li> </ul>	<ul style="list-style-type: none"> <li>• Wash 45 °C</li> <li>• Rinse</li> <li>• Dry</li> </ul>	<ul style="list-style-type: none"> <li>• XtraDry</li> </ul>
Px Quick Plus 4)	<ul style="list-style-type: none"> <li>• Fresh soil</li> <li>• Crockery and cutlery</li> </ul>	<ul style="list-style-type: none"> <li>• Wash 60 °C</li> <li>• Rinse</li> </ul>	<ul style="list-style-type: none"> <li>• ExtraHygiene</li> <li>• XtraDry</li> </ul>

Programme	Degree of soil Type of load	Programme phases	Options
P7 Rinse & Hold <sup>5)</sup>	• All	• Prewash	

1) With this programme, you have the most efficient use of water and energy consumption for crockery and cutlery with normal soil. This is the standard programme for test institutes.

2) The appliance senses the degree of soil and the quantity of items in the baskets . It automatically adjusts the temperature and the quantity of water, the energy consumption and the programme duration.

3) With this programme, you can wash a load with mixed soil. Very heavy soil in the lower basket, and normal soil in the upper basket. The pressure and the temperature of the water in the lower basket are higher than in the upper basket.

4) With this programme, you can wash a half-load dishwasher with fresh soil. It gives good washing results in a short time.

5) With this programme, you can quickly rinse dishes to prevent remains of food to bond on dishes and odours to form in the appliance. Do not use detergent with this programme.

## Consumption values

Programme <sup>1)</sup>	Water (l)	Energy (kWh)	Duration (min)
P1 ECO	12.5	0.78	138
P2 AutoFlex	7.0 - 14.0	0.9 - 1.6	90 - 160
P3 FlexiWash	14 - 16	1.2 - 1.5	160 - 180
P4 Intensive	12.5 - 14.5	1.4 - 1.7	170 - 190
P5 Glass Care	12 - 14	0.7 - 0.9	82 - 92
Px Quick Plus	10.5	0.7	38
P7 Rinse & Hold	4	0.01	14

1) The pressure and the temperature of the water, the variations of the mains supply, the options and the quantity of dishes can change the values.

## Information for test institutes

- For all the necessary information for test performance, send an email to: info.test@dishwasher-production.com Write down the product number (PNC) that is on the rating plate.

## SETTINGS

### Programme selection mode and user mode

- When the appliance is in programme selection mode it is possible to set a programme and to enter the user mode.
- Settings available in the user mode:
  - The activation or deactivation of the rinse aid empty notification.
  - The level of rinse aid according to the required dosage.
  - Activation or deactivation of the acoustic signal for the end of a programme.
  - The activation or the deactivation of the option AirDry.

As the appliance stores the saved settings, there is no need to configure it before every cycle.


### How to set the programme selection mode

- The appliance is in programme selection mode when the display shows the programme number P1.
- After activation, the appliance is in programme selection mode by default. If not, set the programme selection mode the following way:

- Press and hold simultaneously  and  until the appliance is in programme selection mode.

### How to enter user mode

- Make sure the appliance is in programme selection mode

- To enter user mode, press and hold simultaneously and until the indicators  ,

 ,  and  flash and the display is blank

### The rinse aid empty notification

- The rinse aid helps to dry the dishes without streaks and stains.
- The rinse aid is automatically released during the hot rinse phase.

- When rinse aid chamber is empty, the rinse aid indicator is turned on notifying to refill rinse aid. If the drying results are satisfactory while using multi-tablets only, it is possible to deactivate the notification for refilling rinse aid. However, for best drying performance, always use rinse aid.
- If standard detergent or multi-tablets without rinse aid are used, activate the notification to keep the rinse aid refill indicator active.

 
### How to deactivate the rinse aid empty notification



Make sure the appliance is in user mode.

1. Press .

◦ The indicators ,  and  go off.

◦ The indicator  still flashes.

◦ The display shows the current setting:  = the rinse aid empty notification is activated (factory setting).

2. Press  to change the setting.  = the rinse aid empty notification is deactivated.

3. Press the on/off button to confirm the setting.

### The rinse aid dispenser

- The rinse aid helps to dry the dishes without streaks and stains.
- The rinse aid is automatically released during the hot rinse phase.
- It is possible to set the released quantity of rinse aid between level 1 (minimum quantity) and level 6 (maximum quantity). Level 0 deactivates the rinse aid dispenser and no rinse aid is released.
- Factory setting: level 4.


### How to set the rinse aid level


Make sure the appliance is in user mode.

1. Press .

◦ The indicators ,  and  go off.

◦ The indicator  still flashes.

◦ The display shows the current setting: e.g.  = level 4. – The levels of rinse aid are from 0A to 6A where level 0A means rinse aid is not used.

2. Press  repeatedly to change the setting.

3. Press the on/off button to confirm the setting.

## Acoustic signals

- Acoustic signals sound when a malfunction of the appliance occurs. It is not possible to deactivate these acoustic signals.
- There is also an acoustic signal that sounds when the programme is completed. By default this acoustic signal is deactivated but it is possible to activate it.


### How to activate the acoustic signal for the end of programme



Make sure the appliance is in user mode.

1. Press .

◦ The indicators ,  and  go off.

◦ The indicator  still flashes.


◦ The display shows the current setting:  = Acoustic signal off.

2. Press  to change the setting.  = Acoustic signal on.

3. Press the on/off button to confirm the setting

## AirDry

- AirDry improves the drying results with less energy consumption.

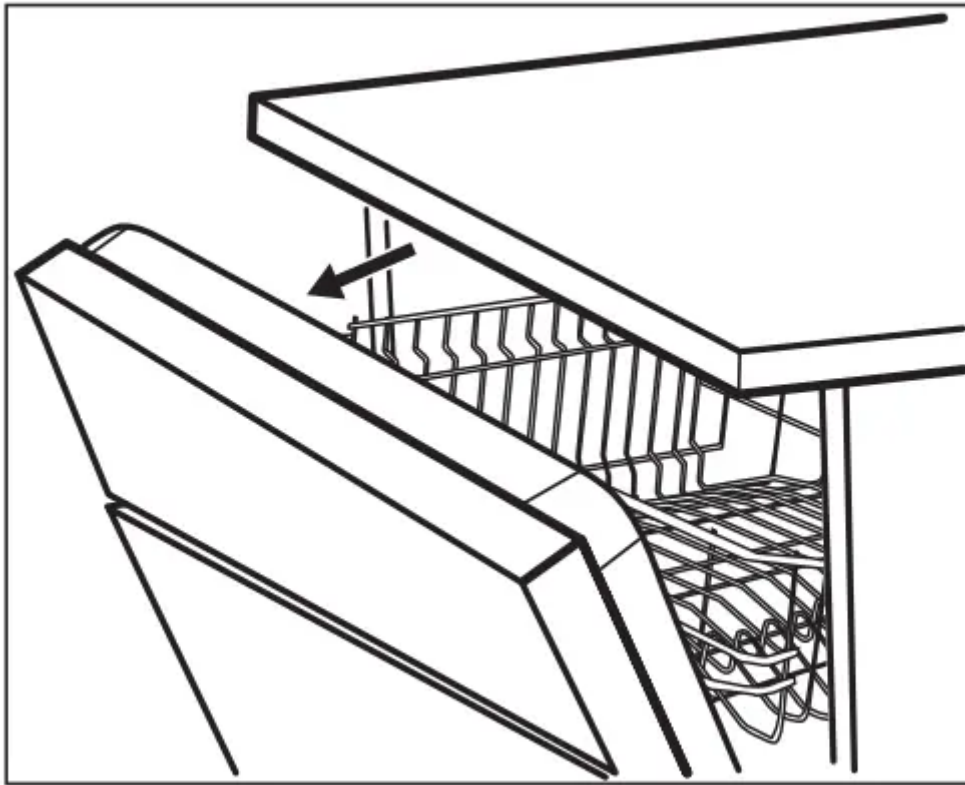

- While the drying phase operates, a device opens the appliance door. The door is then kept ajar.
- CAUTION! Do not try to close the appliance door within 2 minutes after automatic open. This can cause damage to the appliance.
- CAUTION! In case of presence of children, the AirDry system can be deactivated if you want to keep the door closed in the end of the cycle.
- AirDry is automatically activated with all programmes excluding Rinse & Hold
- To improve the drying performance refer to the XtraDry option or activate AirDry.


## How to deactivate AirDry



Make sure the appliance is in user mode

1. Press .

- The indicators ,  and  are off.

- The indicator  still flashes.

- The display shows the current setting:  = AirDry activated.

2. Press  to change the setting:  = AirDry deactivated.
3. Press on/off to confirm the setting.

## MyFavourite

- This option allows to set and save the most frequently used programme.
- It is possible to save only 1 programme. A new setting cancels the previous one.

### How to save the MyFavourite programme

1. Set the chosen programme. It is also possible to set applicable options together with the programme.
2. Press and hold until the related indicator is on.

### How to set the MyFavourite programme

Press .

- The MyFavourite indicator is on.
- The display shows the number and the duration of the programme.
- If options are saved together with the programme, the indicators related to the options are on.

## OPTIONS


- Desired options must be activated every time before you start a programme. It is not possible to activate or deactivate options while a programme is running.
- Not all options are compatible with each other. If you select non compatible options, the appliance automatically deactivates one or more of them. Only the indicators of the still active options are on.

## XtraDry

- Activate this option when you want to boost the drying performance. With use of this option, the duration of some programmes, water consumption and the last rinse temperature can be affected.
- The XtraDry option is a permanent option for all programmes other than ECO and need not to be selected at every cycle.
- Every time ECO is activated, XtraDry option is off and needs to be chosen manually. In other programmes, the setting of XtraDry is permanent and it is automatically used in next cycles. This configuration can be changed at any time.

- Activating XtraDry option deactivates TimeSaver.


### How to activate XtraDry

- Press . The related indicator comes on.
- If the option is not applicable to the programme, the related indicator does not appear or it flashes quickly for a few seconds and then goes off. The display shows the updated programme duration.

### TimeSaver

- The TimeSaver allows to reduce the duration of a selected programme by approximately 50%.
- The washing results are the same as with the normal programme duration. The drying results can decrease.
- This option increases the pressure and the temperature of the water. The washing and the drying phases are shorter.
- By default, TimeSaver is off, but it is possible to activate it manually. This option cannot be combined with XtraDry.


### How to activate TimeSaver

- Press , the related indicator comes on.
- If the option is not applicable to the programme, the related indicator does not come on or it flashes quickly for a few seconds and then goes off. The display shows the updated programme duration.

### ExtraHygiene

- This option provides better hygiene results by keeping the temperature at 70 °C for at least 10 minutes during the last rinsing phase.

### How to activate ExtraHygiene


- Press , the related indicator comes on
- If the option is not applicable to the programme, the related indicator does not come on or it flashes quickly for a few seconds and then goes out. The display shows the updated programme duration.

## BEFORE FIRST USE

1. Fill the rinse aid dispenser.

2. Open the water tap.
3. Start a program to remove any processing residuals that can still be inside the appliance.  
Do not use detergent and do not load the baskets.

## How to fill the rinse aid dispenser

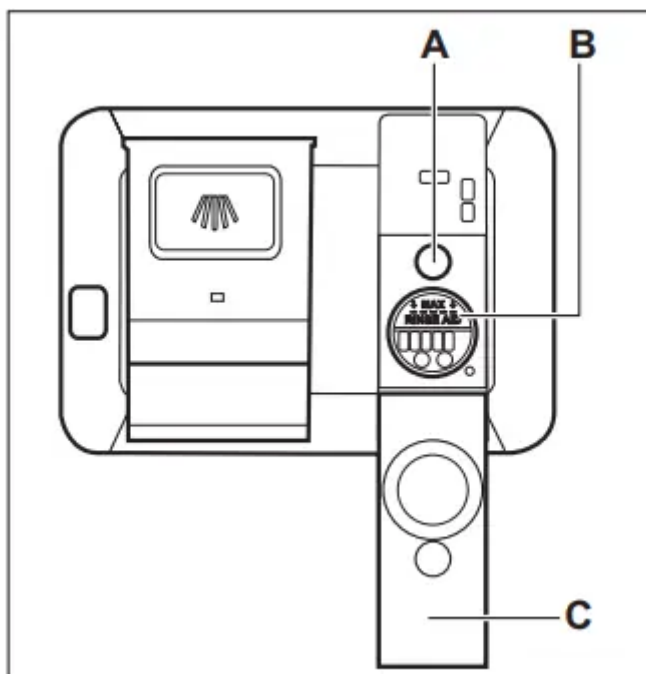

CAUTION! Only use rinse aid specifically designed for dishwashers.

1. Open the lid (C).
2. Fill the dispenser (B) until the rinse aid reaches the marking "MAX".
3. Remove the spilled rinse aid with an absorbent cloth to prevent too much foam.
4. Close the lid. Make sure that the lid locks into position. Fill the rinse aid dispenser when the indicator (A) becomes clear.

If you use multi-tablets and the drying performance is satisfactory, the rinse aid refill indication can be disabled.

We recommend to always use rinse aid for better drying performance, also in combination with multitablets containing rinsing agent.

## DAILY USE

1. Open the water tap.
2. Press the on/off button to activate the appliance.
3. Make sure that the appliance is in programme selection mode.
  - If the rinse aid empty message is shown fill the rinse aid dispenser.

4. Load the baskets.
5. Add the detergent.
6. Set and start the correct programme for the type of load and the degree of soil

## Comfort Lift

CAUTION! Do not sit on the rack. Do not put excessive pressure on the locked basket.

CAUTION! Do not exceed the max load capacity of 18 kg.


CAUTION! Use only a detergent specifically designed for dishwashers.

To ensure correct unlocking, lift the release handle completely and the basket slightly until the basket is disengaged on both sides.

The Comfort Lift mechanism allows to lift the lower rack up (to the second rack level) and put it down to load and unload dishes easily.


To move the lower basket from the lower position:

1. To lift the basket pull the rack out of the dishwasher by the rack handle. The release handle should not be used.

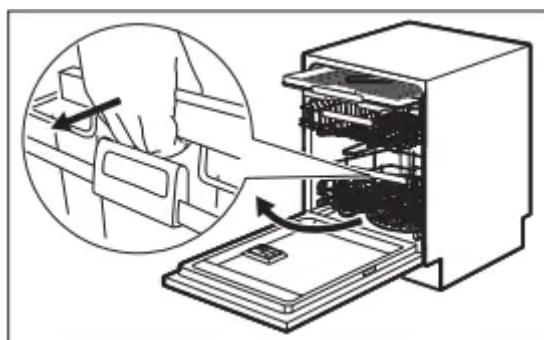

The basket is automatically locked on the upper level. Load or unload the basket carefully (refer to basket loading leaflet).


2. To lower the basket connect the release handle with the basket frame as shown below. Lift the release handle and the rack up.

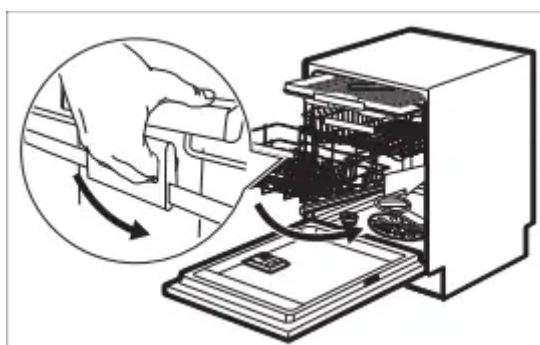

Once the release handle is lifted, push the rack down. The mechanism returns to its basic position on the lower level. There are two ways of lowering the basket depending on the loading:

- If there is a full load of plates slightly push the basket down.
- If the basket is empty or halfloaded press the basket down.

## Using the detergent

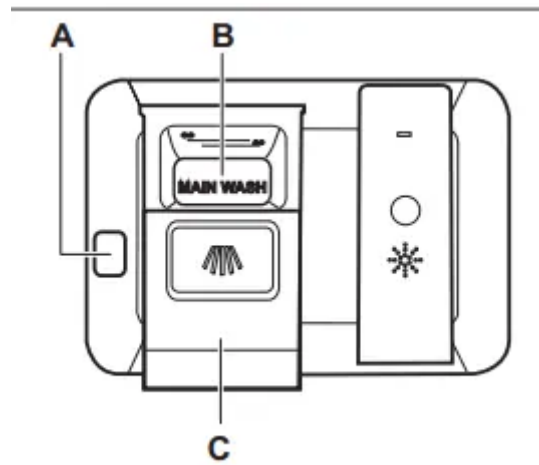

CAUTION! Only use detergent specifically designed for dishwashers.

1. Press the release button (A) to open the lid (C).
2. Put the detergent, in powder or tablets, in the compartment (B).
3. If the programme has a prewash phase, put a small quantity of detergent on the inner part of the appliance door.
4. Close the lid. Make sure that the lid locks into position.


## Setting and starting a programme


### The Auto Off function

- This function decreases energy consumption by deactivating automatically the appliance when it is not operating.
- The function comes into operation:
  - 5 minutes after the completion of the programme.
  - After 5 minutes if the programme has not started.

### Starting a programme


1. Keep the appliance door ajar.
2. Press the on/off button to activate the appliance. Make sure that the appliance is in programme selection mode.

3. Press repeatedly  until the display shows the number of the programme you want to start. The display will show the programme number for approximately 3 seconds and then show the programme duration.

- If you want to select the MyFavourite programme, press .
- The indicators of the options related to the MyFavourite programme come on.

4. Set the applicable options.
5. Close the appliance door to start the programme.



### Starting a programme with delay start

1. Set a programme
2. Press  again and again until the display shows the delay time you want to set (from 1 to 24 hours). The delay indicator comes on.
3. Close the appliance door to start the countdown. While a countdown is running it is possible to increase the delay time but not to change the selection of the programme and options. When the countdown is completed, the programme starts.

### Opening the door while the appliance operates

- If you open the door while a programme is running, the appliance stops. It may affect the energy consumption and the programme duration. When you close the door, the appliance continues from the point of interruption.
- If the door is opened for more than 30 seconds during the drying phase, the running programme will end. This will not happen if the door is opened by AirDry.
- CAUTION! Do not try to close the appliance door within 2 minutes after AirDry automatically opens it, as this may cause damage to the appliance. If, afterwards, the door is closed for another 3 minutes, the running programme ends.

### Cancelling the delay start while the countdown operates

- When you cancel the delay start you have to set the programme and options again.
- Press and hold simultaneously  and  until the appliance is in programme selection mode.

### Cancelling the programme

- Press and hold simultaneously  and  until the appliance is in programme selection mode.

- Make sure that there is detergent in the detergent dispenser before you start a new programme.

### **End of programme**

- When the programme is completed and you open the door, the appliance is automatically deactivated.
- Close the water tap

## **HINTS AND TIPS**

### **General**

The following hints will ensure optimal cleaning and drying results in daily use and also help to protect the environment.

- Remove larger residues of food from the dishes into the waste bin.
- Do not pre-rinse dishes by hand. When needed, use the prewash programme (if available) or select a programme with a prewash phase.
- Always use the whole space of the baskets.
- When loading the appliance, make sure that the dishes can be completely reached and washed by the water released from the spray arm nozzles. Make sure that items do not touch or cover each other.
- You can use dishwasher detergent and rinse aid separately or you can use the multi-tablets. Follow the instructions written on the packaging.
- Select the programme according to the type of load and degree of soil. With the ECO programme you have the most efficient use of water and energy consumption for crockery and cutlery with normal soil.

### **Using rinse aid and detergent**

- Only use rinse aid and detergent for dishwasher. Other products can cause damage to the appliance.
- Detergent tablets do not fully dissolve with short programs. To prevent detergent residues on the tableware, we recommend that you use the tablets with long programs.
- Do not use more than the correct quantity of detergent. Refer to the instructions on the detergent packaging.

### **Loading the baskets**

- Only use the appliance to wash items that are dishwasher-safe.
- Do not put in the appliance items made of wood, horn, aluminium, pewter and copper.

- Do not put in the appliance items that can absorb water (sponges, household cloths).
- Remove remaining food from the items.
- Make soft the remaining burned food on the items.
- Put hollow items (cups, glasses and pans) with the opening down.
- Make sure that cutlery and dishes do not bond together. Mix spoons with other cutlery.
- Make sure that glasses do not touch other glasses.
- Put small items in the cutlery basket.
- Put light items in the upper basket. Make sure that the items do not move.
- Make sure that the spray arm can move freely before you start a programme.

## **Before starting a programme**

Make sure that:

- The filters are clean and correctly installed.
- The spray arms are not clogged.
- There is dishwasher rinse aid (unless you use multi- tablets).
- The position of the items in the baskets is correct.
- The programme is applicable for the type of load and for the degree of soil.
- The correct quantity of detergent is used.

## **Unloading the baskets**

1. For improved drying results with the most efficient use of energy select the AirDry option, otherwise open the door by approximately 10cm at the end of the program.
2. Allow the tableware to cool for 30 - 40 minutes.
3. Hot items can be easily damaged, allow them to cool down before removing from appliance.
4. First remove items from the lower basket then the upper basket.

At the end of the program water can still remain on the sides and on the door of the appliance.


## **CARE AND CLEANING**

**WARNING!** Before maintenance, deactivate the appliance and disconnect the mains plug from the main socket.



Dirty filters and clogged spray arms decrease the washing results. Make a check regularly and, if necessary, clean them.

## Cleaning the filters


The filter system is made of 3 parts.

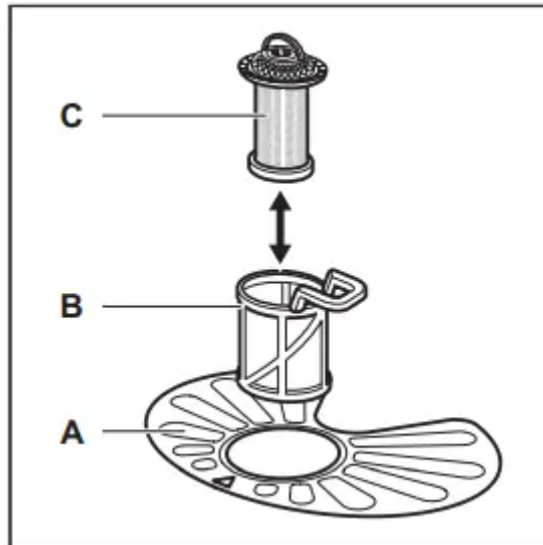


1. Turn the filter (B) counterclockwise and remove it.

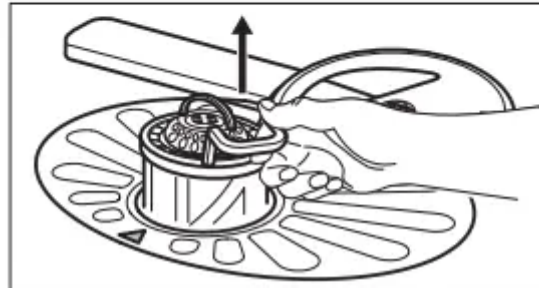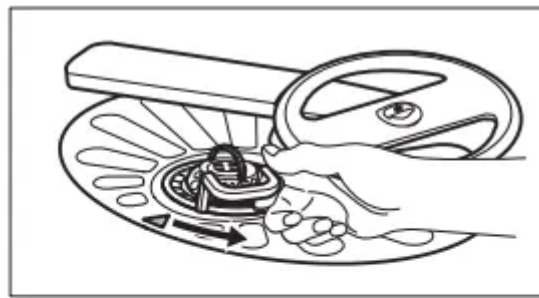


2. Remove the filter (C) out of filter (B).
3. Remove the flat filter (A)

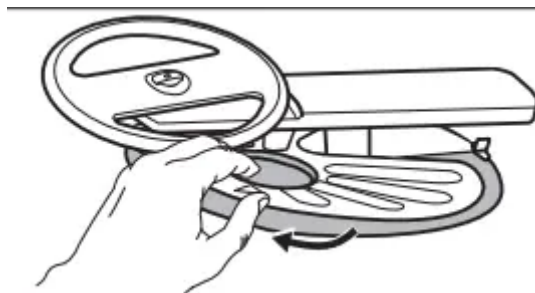


4. Wash the filters.

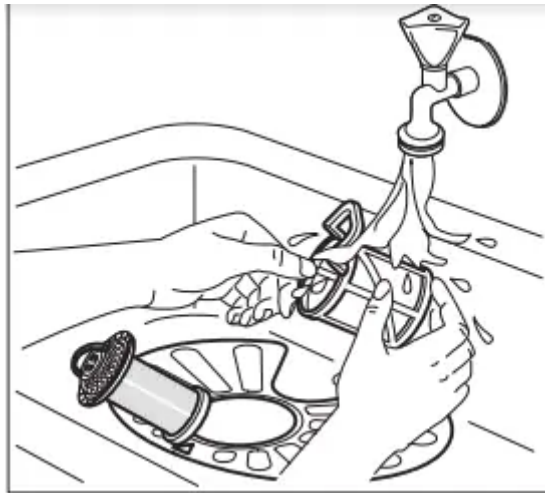

5. Make sure that there are no residues of food or soil in or around the edge of the sump.
6. Put back in place the flat filter (A). Make sure that it is correctly positioned under the 2 guides.

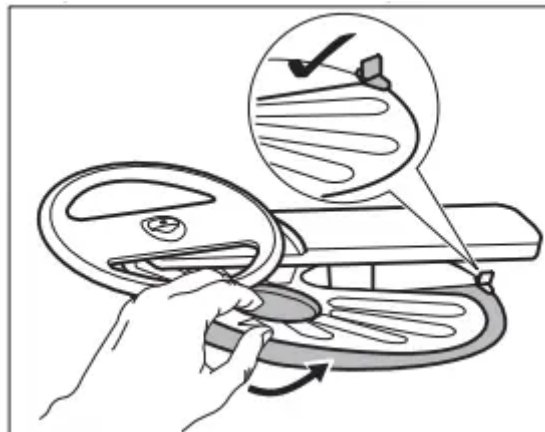

7. Reassemble the filters (B) and (C).
8. Put back the filter (B) in the flat filter (A). Turn it clockwise until it locks.

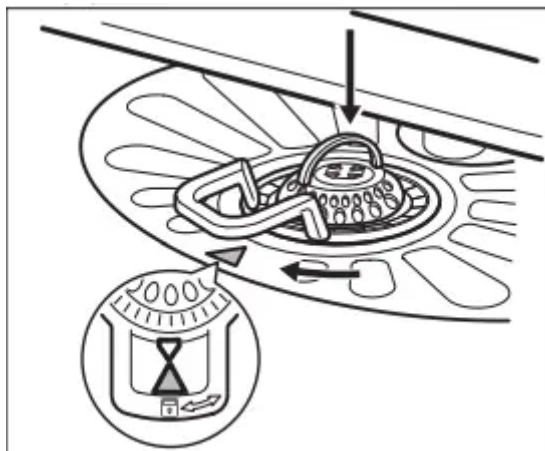


**CAUTION!** An incorrect position of the filters can cause bad washing results and damage to the appliance

## Cleaning the upper spray arm


We recommend to clean regularly the upper spray arm to avoid soil to clog the holes.

Clogged holes can cause unsatisfactory washing results.


1. Pull out the upper basket.
2. To disengage the spray arm from the basket, press the spray arm upwards in the direction indicated by the lower arrow and simultaneously turn it clockwise.

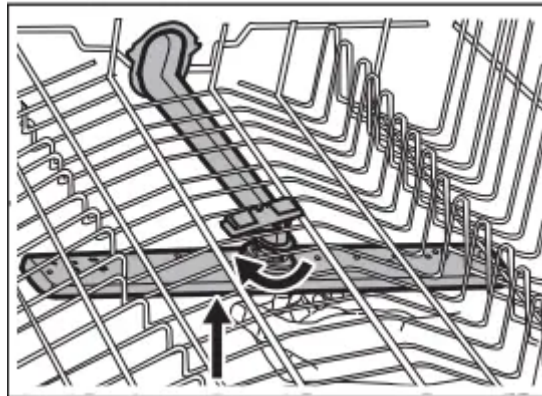

3. Wash the spray arm under running water. Use a thin pointed tool, e.g. toothpick, to remove particles of soil from the holes.

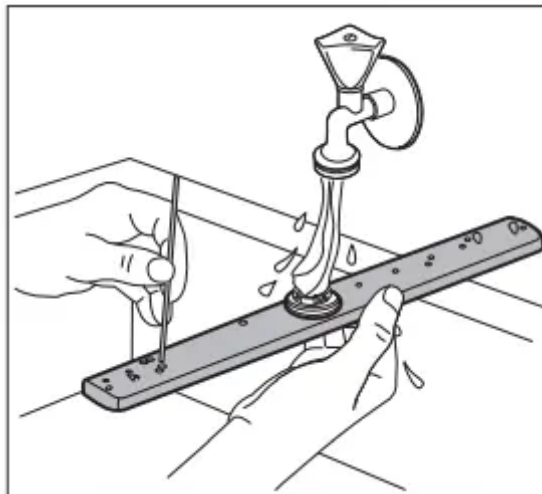

4. To engage again the spray arm to the basket, press the spray arm upwards in the direction indicated by the lower arrow and simultaneously turn it counterclockwise until it locks into place.

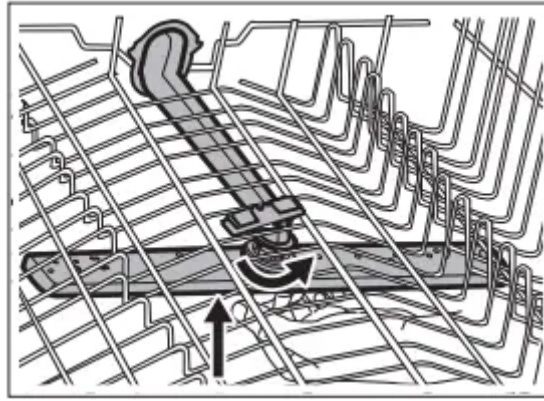

## External cleaning

- Clean the appliance with a moist soft cloth.
- Only use neutral detergents.
- Do not use abrasive products, abrasive cleaning pads or solvents.

## Internal cleaning

- Carefully clean the appliance, including the rubber gasket of the door, with a soft damp cloth.
- Do not use abrasive products, abrasive cleaning pads, sharp tools, strong chemicals, scourer or solvents.
- If you use short duration programmes regularly, these can leave deposits of grease and limescale inside the appliance. To prevent this, we recommend running long duration programmes at least twice a month.
- To maintain the performance of your appliance at its best, we recommend using a specific cleaning product for dishwashers (at least once a month). Follow carefully the instructions on the packaging of the product.




 
## TROUBLESHOOTING

If the appliance does not start or it stops during operation. Before you contact an Authorised Service Centre, check if you can solve the problem by yourself with the help of the information in the table.

**WARNING!** Repairs not properly done may result in serious risk to the safety of the user. Any repairs must be performed by qualified personnel.

With some problems, the display shows an alarm code.

The majority of problems that can occur can be solved without the need to contact an Authorised Service Centre.

Problem and alarm code	Possible solution
<p>You cannot activate the appliance.</p>	<ul style="list-style-type: none"> <li>• Make sure that the mains plug is connected to the mains socket.</li> <li>• Make sure that there is no damaged fuse in the fuse box.</li> </ul>
<p>The programme does not start.</p>	<ul style="list-style-type: none"> <li>• Make sure that the appliance door is closed.</li> <li>• If the delay start is set, cancel the setting or wait for the end of the countdown.</li> </ul>
<p>The appliance does not fill with water.</p> <p>The display shows  or .</p>	<ul style="list-style-type: none"> <li>• Make sure that the water tap is open.</li> <li>• Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority.</li> <li>• Make sure that the water tap is not clogged.</li> <li>• Make sure that the filter in the inlet hose is not clogged.</li> <li>• Make sure that the inlet hose has no kinks or bends.</li> </ul>
<p>The appliance does not drain the water.</p> <p>The display shows .</p>	<ul style="list-style-type: none"> <li>• Make sure that the sink spigot is not clogged.</li> <li>• Make sure that the drain hose has no kinks or bends.</li> </ul>
<p>The anti-flood device is on.</p> <p>The display shows .</p>	<p>Close the water tap and contact an Authorised Service Centre.</p>
<p>The appliance stops and starts more times during operation.</p>	<p>It is normal. It provides optimal cleaning results and energy savings.</p>
<p>The program lasts too long.</p>	<ul style="list-style-type: none"> <li>• Select the TimeSaver option to shorten the program time (if applicable).</li> <li>• If the delayed start option is set, cancel the delay setting or wait for the end of the countdown.</li> </ul>

The remaining time in the display increases and skips nearly to the end of program time	This is not a defect. The appliance is working correctly.
The options of the program have to be set again every time.	To save your favourite configuration use option My- Favourite.
Small leak from the appliance door.	The appliance is not levelled. Loosen or tighten the adjustable feet (if applicable). The appliance door is not centred on the tub. Adjust the rear foot (if applicable).
The appliance door is difficult to close.	<ul style="list-style-type: none"> <li>The appliance is not levelled. Loosen or tighten the adjustable feet (if applicable).</li> <li>Parts of the tableware are protruding from the baskets.</li> </ul>
Rattling/knocking sounds from inside the appliance.	<ul style="list-style-type: none"> <li>The tableware is not properly arranged in the baskets. Refer to basket loading leaflet.</li> <li>Make sure that the spray arms can rotate freely.</li> </ul>
The appliance trips the circuit-breaker.	<ul style="list-style-type: none"> <li>The amperage is insufficient to supply simultaneously all the appliances in use. Check the socket amperage and the capacity of the meter or turn off one of the appliances in use.</li> <li>Internal electrical fault of the appliance. Contact an Authorised Service Centre.</li> </ul>

Refer to "Before first use", "Daily use", or "Hints and tips" for other possible causes.

Once you have checked the appliance, deactivate and activate the appliance. If the problem occurs again, contact an Authorised Service Centre.

For alarm codes not described in the table, contact an Authorised Service Centre.

**The washing and drying results are not satisfactory**



Problem	Possible cause and solution
Poor washing results.	<ul style="list-style-type: none"> <li>• Refer to "Daily use", "Hints and tips" and basket loading leaflet.</li> <li>• Use more intensive washing programmes.</li> <li>• Clean spray arm jets and filter. Refer to "Care and Cleaning".</li> </ul>
Poor drying results.	<ul style="list-style-type: none"> <li>• Tableware has been left for too long inside a closed appliance.</li> <li>• There is no rinse aid or the dosage of rinse aid is not enough. Set the rinse aid dispenser to a higher level.</li> <li>• Plastic items may need to be towel dried.</li> <li>• For the best drying performance activate the option XtraDry and set AirDry.</li> <li>• We recommend to always use rinse aid, even in combination with multi-tablets.</li> </ul>
There are whitish streaks or bluish layers on glasses and dishes.	<ul style="list-style-type: none"> <li>• The release quantity of rinse aid is too much. Adjust the rinse aid level to a lower level.</li> <li>• The quantity of detergent is too much.</li> </ul>
There are stains and dry water drops on glasses and dishes.	<ul style="list-style-type: none"> <li>• The released quantity of rinse aid is not sufficient. Adjust the rinse aid level to a higher level.</li> <li>• The quality of the rinse aid can be the cause.</li> </ul>
The dishes are wet.	<ul style="list-style-type: none"> <li>• For the best drying performance activate the option XtraDry and set AirDry .</li> <li>• The programme does not have a drying phase or has a drying phase with low temperature.</li> <li>• The rinse aid dispenser is empty.</li> <li>• The quality of the rinse aid can be the cause.</li> <li>• The quality of the multi-tablets can be the cause. Try a different brand or activate the rinse aid dispenser and use rinse aid and multi-tablets together</li> </ul>

The interior of the appliance is wet.	This is not a defect of the appliance. it is caused by the humidity in the air that condenses on the walls
Unusual foam during wash- ing	<ul style="list-style-type: none"> <li>• Use the detergent for dishwashers only.</li> <li>• There is a leak in the rinse aid dispenser. Contact an Authorised Service Centre.</li> </ul>
Traces of rust on cutlery.	Silver and stainless steel cutlery were placed to- gether. Avoid to put silver and stainless steel items close together.
There are residues of deter- gent in the dispenser at the end of the programme.	<ul style="list-style-type: none"> <li>• The detergent tablet got stuck in the dispenser and therefore was not completely washed away by wa- ter.</li> <li>• Water cannot wash away the detergent from the dispenser. Make sure that the spray arm is not blocked or clogged.</li> <li>• Make sure that items in the baskets do not impede the lid of the detergent dispenser from opening</li> </ul>
Odours inside the appliance	Refer to "Internal cleaning".
Limescale deposits on the tub and on the inside of the door.	<ul style="list-style-type: none"> <li>• Clean the appliance with appliance cleaners which are particularly suitable for this purpose.</li> <li>• Try different detergent.</li> <li>• Contact the detergent manufacturer.</li> </ul>
Dull, discoloured or chipped tableware.	<ul style="list-style-type: none"> <li>• Make sure that only dishwasher-safe items are washed in the appliance.</li> <li>• Load and unload the basket carefully. Refer to bas- ket loading leaflet.</li> <li>• Place delicate items in the upper basket.</li> </ul>

Refer to "Before first use", "Daily use" or "Hints and tips" for other possible causes.

## TECHNICAL INFORMATION

Dimensions	Width / height / depth (mm)	596/ 818 - 878 / 570
Electrical connection <b>1)</b>	Voltage (V)	200 - 240
	Frequency (Hz)	50 / 60
	Wattage (W)	1550-2200
Water supply pressure	bar (minimum and maximum)	0.5 - 8
	kPa (minimum and maximum)	50 - 800
Water supply	Cold water or hot water <b>2)</b>	max 60 °C
Capacity	Place settings	14

**1)** Refer to the rating plate for other values.

**2)** If the hot water comes from alternative source of energy, (e.g. solar panels, aeolian energy), use the hot water supply to decrease energy consumption.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.