


PACKAGE CONTENTS

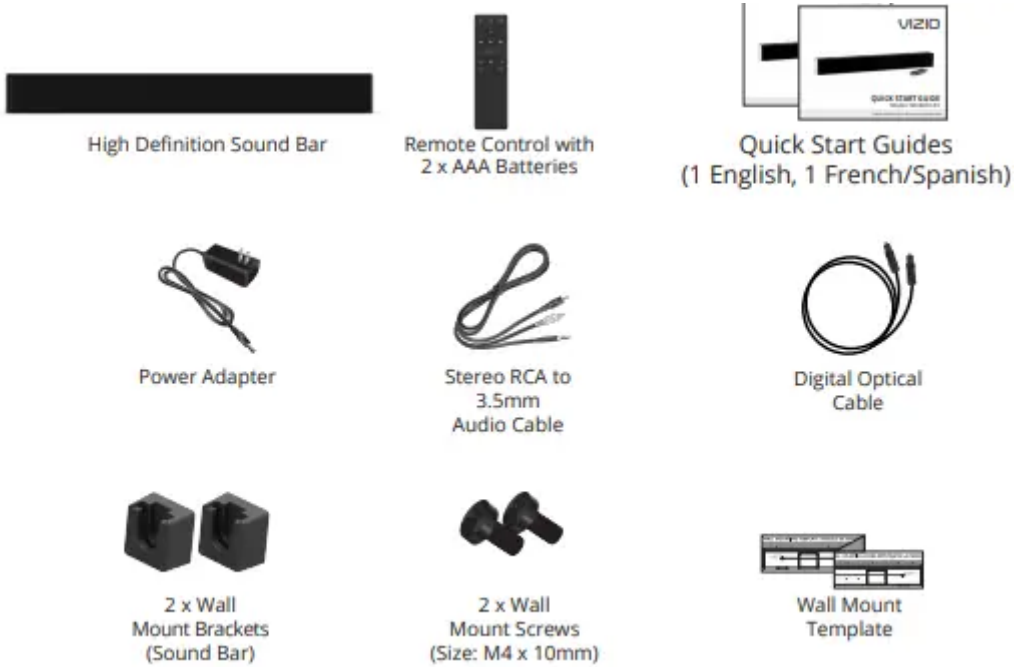

CONTROLS & CONNECTIONS

Back of Sound Bar



AUX
Analog Audio In
(Stereo 3.5mm)

OPTICAL
Digital Optical Audio In


USB*
USB In

Power Port

SUB OUT
Subwoofer Out

* Supports .WAV file format playback only.




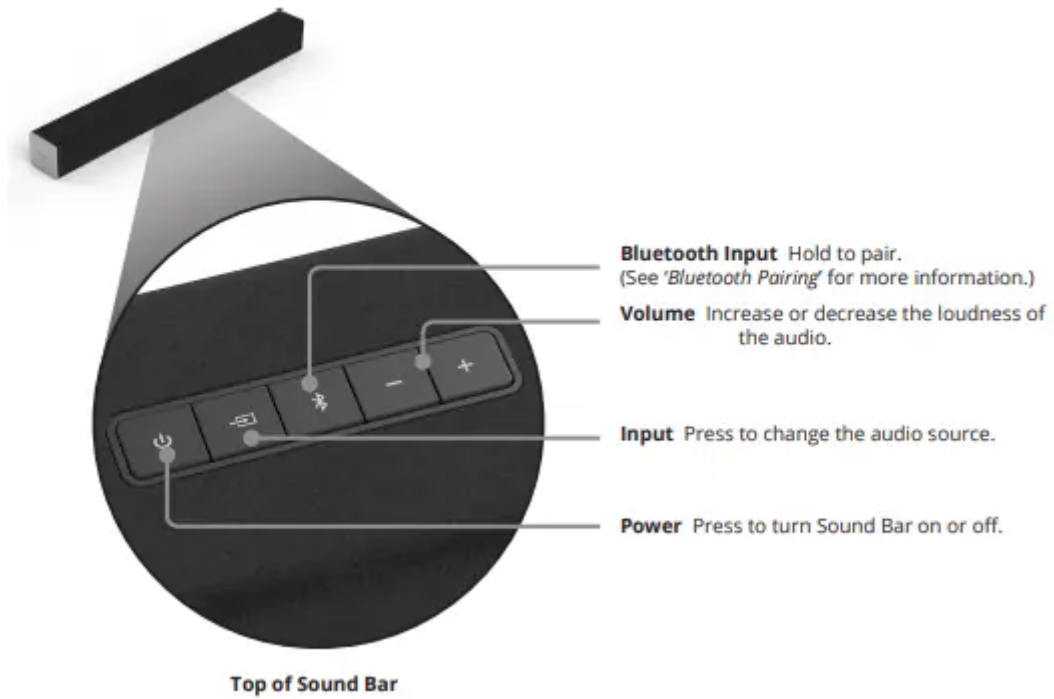


FIRST-TIME SETUP

1. Not all TVs have the audio outputs shown above. To conn try setting the TV output to PCM or (B) Connect directly to your Blu-ray/other sources, some TVs do not pass through digital audio.


When using either of the Digital Inputs, if there is no audio: (A) try setting the TV output to PCM or (B) Connect directly to your Blu-ray/other source, some TVs do not pass through digital audio.

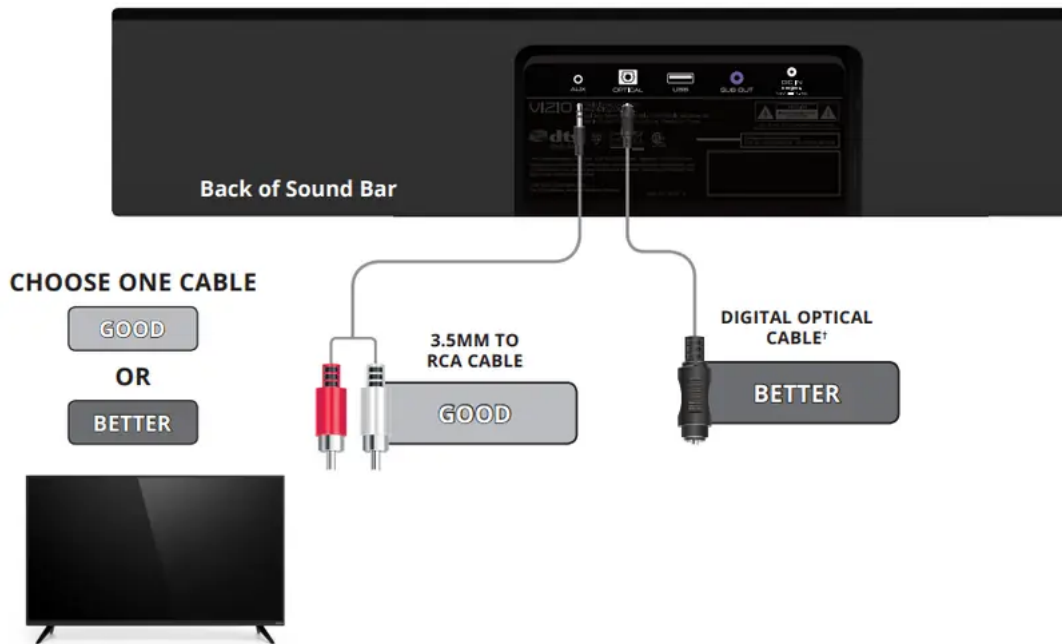


2. Connect the included power adapter to the Sound Bar DC IN as shown. Plug the power adapter into an electrical outlet.

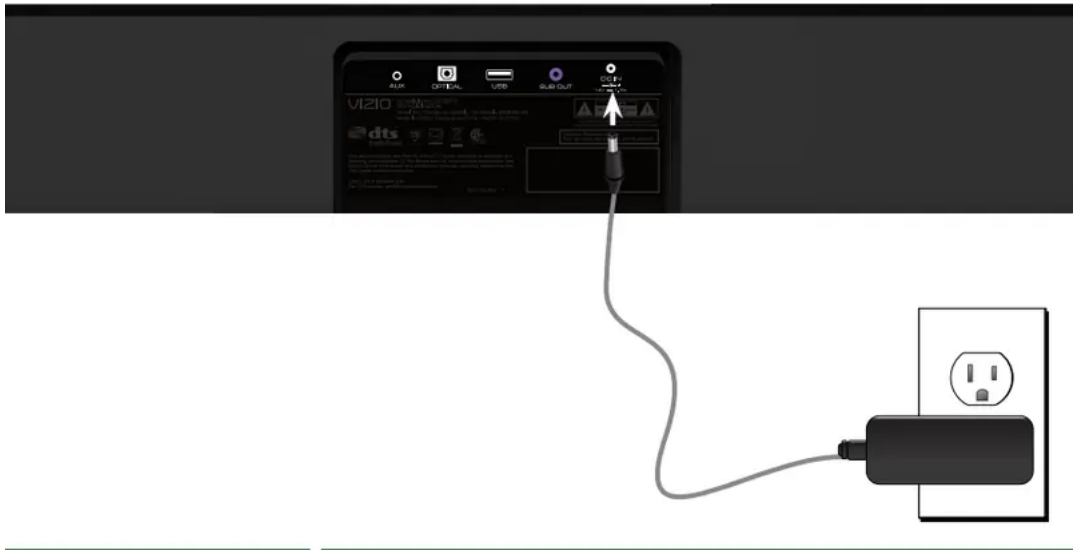

3. For the best surround sound experience, position the Sound Bar as shown. 3 The Sound Bar should be close to ear level.

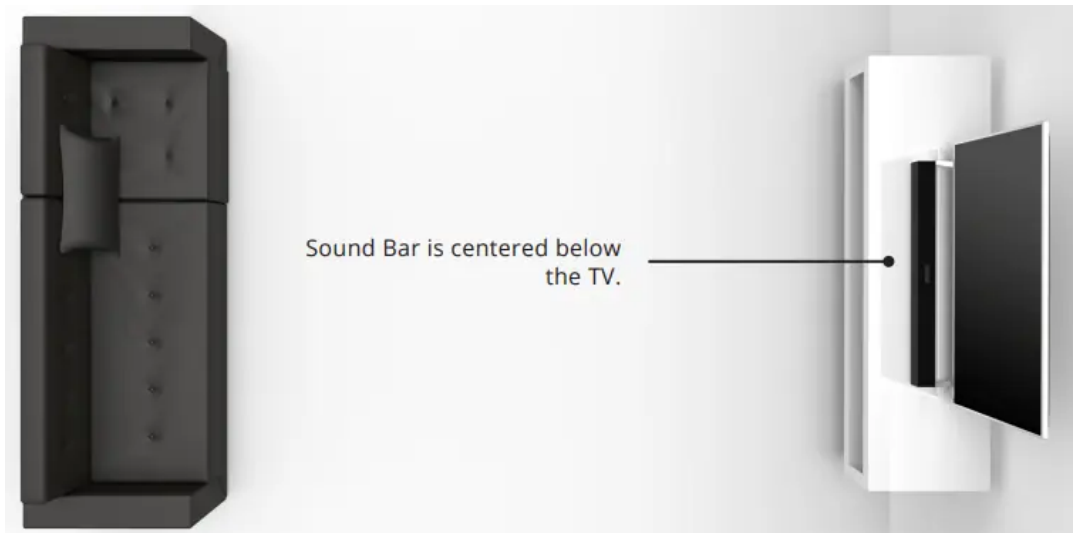

4. Remove the battery cover by gently sliding it away from the remote.

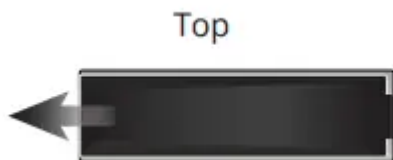

5. Insert the included batteries and gently slide the battery cover back into place.



When needed, VIZIO recommends replacing the batteries that came with this remote with two, new Duracell 'AAA' alkaline batteries.


6. Turn on your TV and sound bar. The sound bar will automatically begin searching for an active input.* The LED indicators on the front of the Sound Bar will begin cycling in pairs through inputs until an audio source is detected.*

Tip: Pressing the INPUT button will stop the auto detect function.

You can press the INPUT button to switch between audio sources. For example, if you connected your TV to AUX, set the Sound Bar to AUX.



USING THE REMOTE

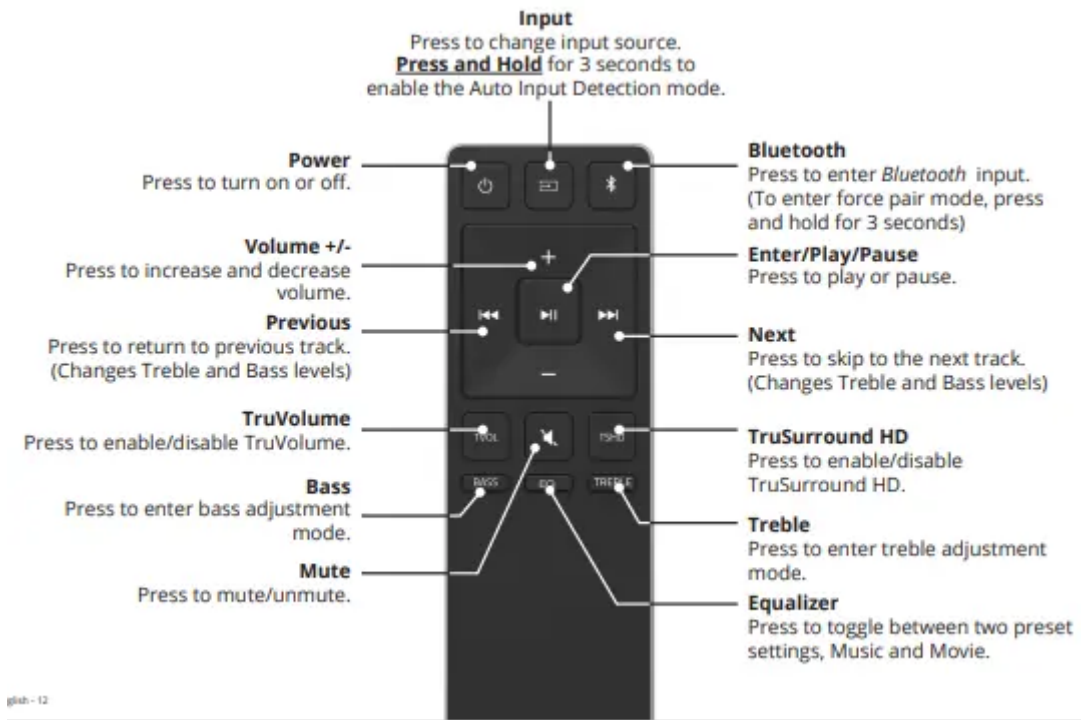

LED INDICATORS

The LED Indicators will behave differently with each button on the remote control.


Function	LED Behavior	Description
Input		Press the INPUT button on the remote to cycle through the available inputs: <ul style="list-style-type: none"> Analog Audio In - AUX Stereo 3.5mm Digital Optical Audio In - Optical <i>Bluetooth</i> USB In - USB
Bluetooth Pairing	<p>(When searching for device) Flash from the bottom to top and back continuously.</p>	Press and hold the button on the remote. The Sound Bar will be discoverable for 15 minutes. You can now search for the Sound Bar (VIZIO SB2820n) using your <i>Bluetooth</i> Device. The sound bar will power down if no device is found. Note: Set your <i>Bluetooth</i> device into pairing mode prior to the Sound Bar.
DTS TruVolume On/Off		Press the TVOL button to enable/disable TruVolume. When enabled (On), TruVolume provides a consistent and comfortable volume level for a more enjoyable listening experience.



Function	LED Behavior	Description
DTS TruSurround On/Off		Press the TSHD button to enable/disable DTS TruSurround. When enabled (On), all inputs will produce virtual surround sound. When disabled (Off), all sources will playback in stereo.
Treble Levels	<p>Two center LEDs indicate Treble level 0.</p>	Press the TREBLE button then press the Next/Previous button to increase/decrease the treble level. The LED indicators will move up with increasing levels and down with decreasing levels.
Bass Levels	<p>Two center LEDs indicate Bass level 0.</p>	Press the BASS button then press the Next/Previous button to increase/decrease the bass level. The LED indicators will move up with increasing levels and down with decreasing levels.
Equalizer Mode		Press the Next/Previous button to toggle between two preset equalizer settings, Music and Movie. Note: Movie mode is on by default.

BLUETOOTH PAIRING

To pair the sound bar with a Bluetooth device:

1. Press and hold the Bluetooth button  on the sound bar for three (3) seconds or select the BT Pair option from the remote. When the sound bar is in Bluetooth Pairing Mode, the LED Indicators on the Display Panel on the front of the Sound Bar will light sequentially from bottom to top and back again. Once the device is paired, the LED Indicators will stop flashing.
2. You can now search for the sound bar (VIZIO SB2820n) using your Bluetooth device. For more information, refer to the user documentation that came with the device.
3. Play audio from your Bluetooth device. Volume can be controlled on your source device and the soundbar.



Top of Sound Bar



USING BLUETOOTH MODE

Your sound bar supports music streaming from smartphones, tablets, and computers with Bluetooth capability. Device compatibility will vary, see your device's documentation for more information. Once you have paired your source device to the sound bar, as long as you stay within range of the sound bar, your device should remain paired. If the input is changed, the Bluetooth device will disconnect. If the source is changed back to Bluetooth, any paired Bluetooth device will reconnect automatically.



Your sound bar is not equipped with a microphone, so it cannot operate as a hands-free device for a smartphone.

Maximizing Signal

A Bluetooth signal has a range of up to 30 feet. Keep in mind that Bluetooth is a compressed audio format, so streamed music may lose some integrity when compared to a wired connection.


Try the following if your sound quality is less than optimal:

- If you hear any break-up or disconnect while streaming music from your device, move the source device closer to the soundbar.
- Be sure that there are no solid obstructions in the line of sight between the sound bar and the source device.
- Other wireless devices can affect Bluetooth range, including wireless security cameras, wireless video baby monitors, cordless phones, and microwave ovens. Turning off or moving these devices may improve Bluetooth range.




Reduce the volume levels on your device and on the sound bar before pressing Play. High volume levels can damage your hearing.

ADVANCED SETUP

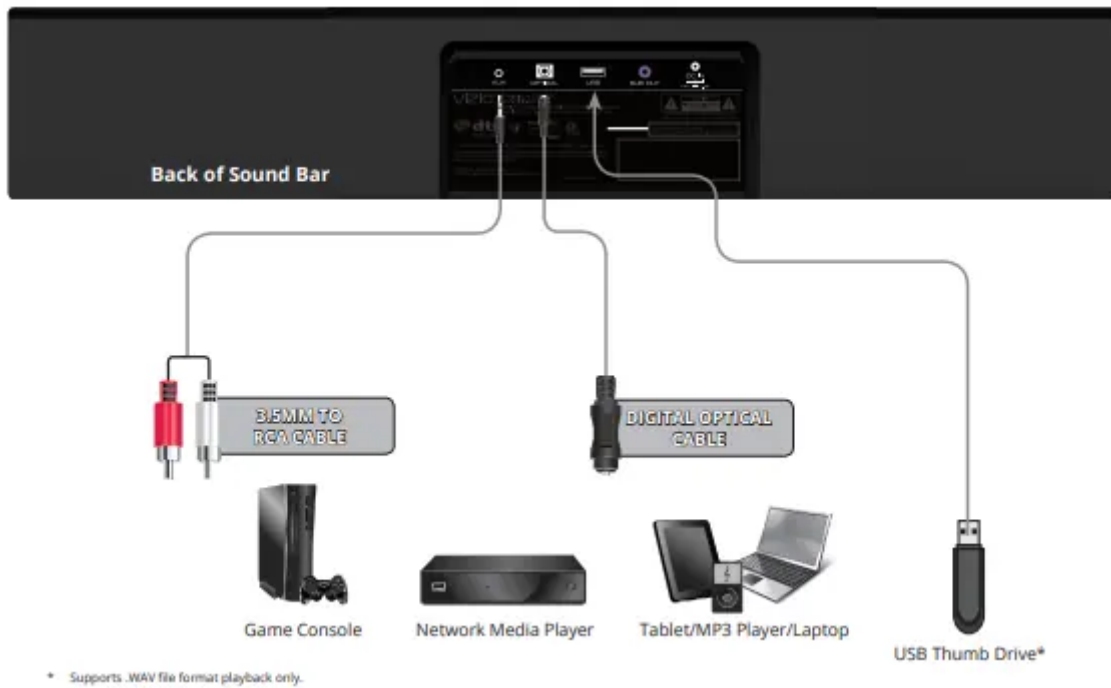

CONNECTING A SUBWOOFER

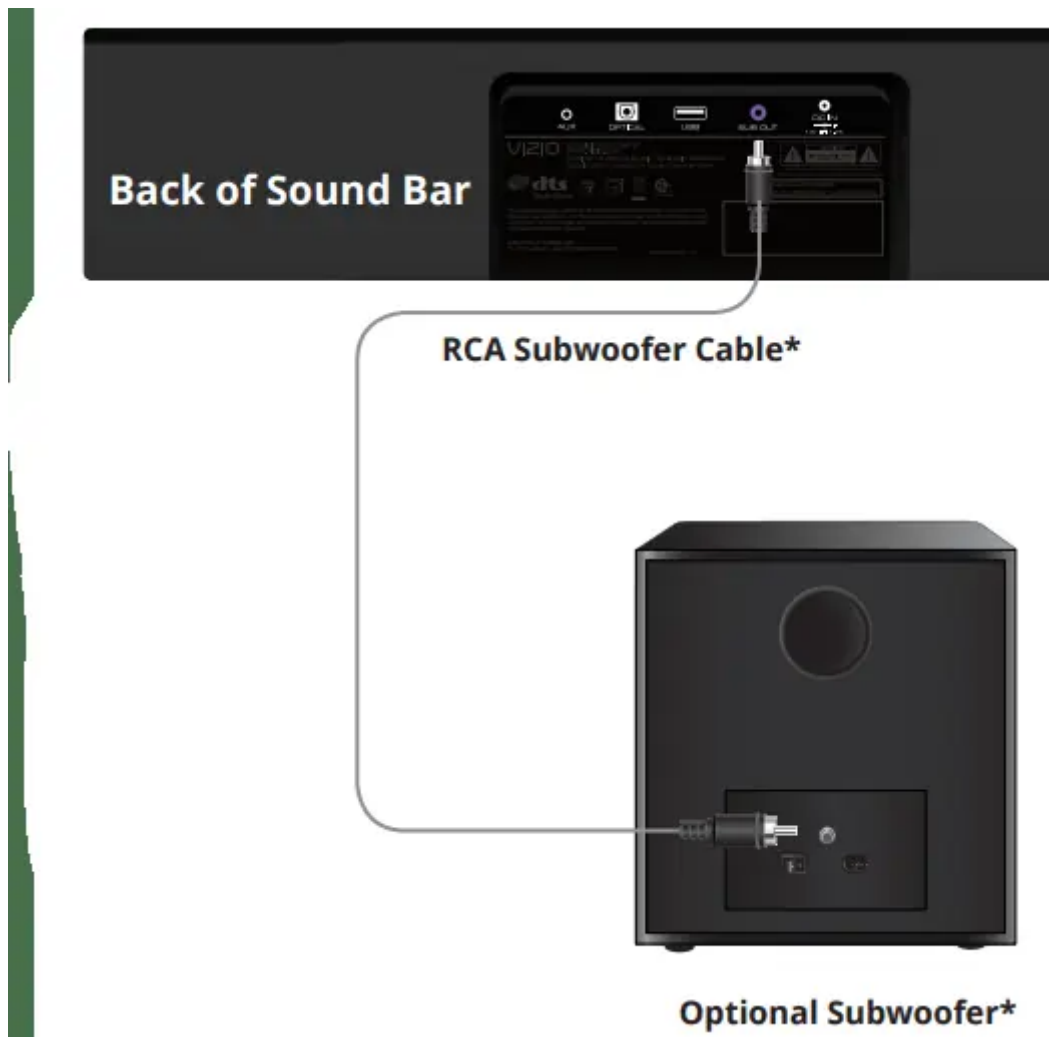

To connect a subwoofer:

1. Power Off the Sound Bar and Subwoofer. Connect an RCA cable from the Sound Bar to the Subwoofer.
2. Power On the Sound Bar and Subwoofer.
3. Press the BASS button on the remote control to enter bass adjustment mode.
4. Use the Previous/Next buttons to adjust the bass level to the center position.
5. Manually adjust the SUB gain (Volume) and phase to your preference. See your subwoofer's user manual for more information.
6. Use the BASS button on the remote control to adjust the subwoofer's output.

USING BUTTON COMBINATIONS

There are 3 functions that are triggered by 3 different button combinations on the Sound Bar.


Function	LED Behavior	Description
Factory Reset	All 12 LEDs will flash 3 times	Reset the Sound Bar to the factory default settings. To perform a Factory Reset, Press and Hold the Bluetooth () and Volume Down (—) buttons for 5 seconds.
VIZIO TV Remote Control		Enable/disable the use of a VIZIO TV remote control to power on and adjust the volume of the sound bar. To enable/disable this function, Press and Hold the Power () and Volume Up (+) buttons for 5 seconds.
Energy Star		When the Energy Star setting is enabled, the sound bar will automatically power down after a period of inactivity. When disabled, the sound bar will remain powered on until you turn it off. To enable/disable this function, Press and Hold the Power () and Volume Down (—) buttons for 5 seconds. Note: Energy Star setting is enabled by default

WALL-MOUNTING THE SOUND BAR


1. Insert the two wall-mount screws into the wall-mount screw holes, and then tighten them with a Phillips screwdriver.



2. Place the included wall mounting template against the wall under your TV. Mark the four bracket holes using a pencil.

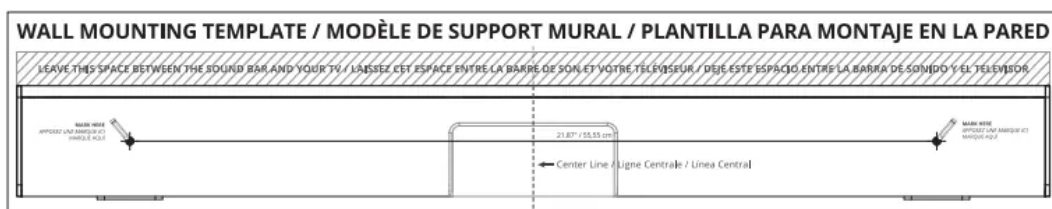

3. Be sure your screws are attached to wood studs, drywall anchors (for drywall), or concrete anchors (for brick/concrete walls). Screws for attaching the brackets to the wall are not included. Choose the screw type and length appropriate to your home's construction. If in doubt, consult a professional installer.

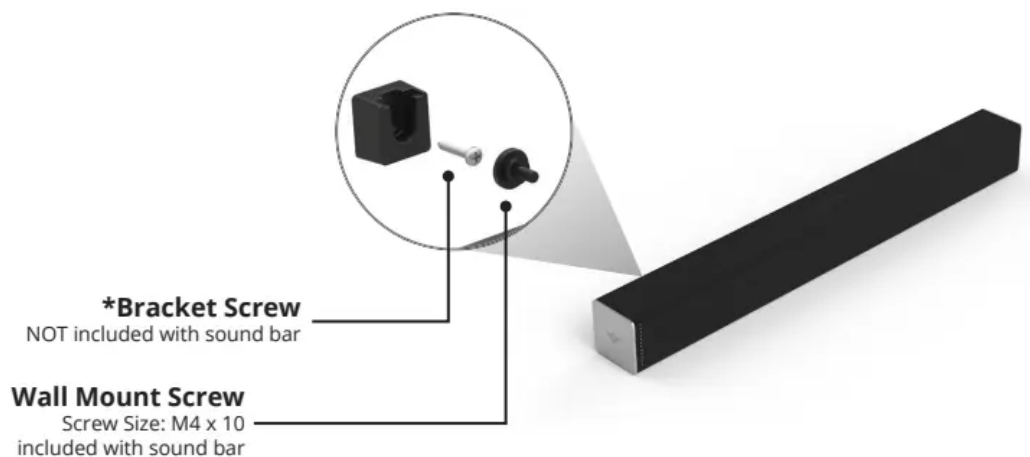

WARNING: If you are unfamiliar with power tools or the layout of electrical wiring in the walls of your home, consult a professional installer.

HELP & TROUBLESHOOTING

There is no power.

- Press the POWER button on the remote control or on the top of your Sound Bar.
- Ensure the power cord is securely connected.
- Plug a different device into the electrical outlet to verify that the outlet is working correctly.

There is no sound.

- Increase the volume. Press Volume Up on the remote control or on the top of your Sound Bar.
- Press MUTE on the remote to ensure the Sound Bar is not muted.
- Press INPUT on the remote or on the top of your Sound Bar to select a different input source.
- When using either of the Digital Inputs, if there is no audio: (A) Try setting the TV output to PCM or (B) Connect directly to your Blu-ray/another source, some TVs do not pass through digital audio.
- On digital inputs, the input LEDs will flash rapidly if an unsupported format is present. Set the source to output PCM.
- Your TV may be set to variable audio output. Confirm that the audio output setting is set to FIXED or STANDARD, not VARIABLE. Consult your TV's user manual for more detailed information.
- If using Bluetooth, ensure that the volume on your source device is turned up and that the device is not muted.

I hear buzzing or humming.

- Ensure all cables and wires are securely connected.
- Connect a different source device (TV, Blu-ray player, etc) to see if the buzzing persists. If it does not, the problem may be with the original device.
- Connect your device to a different input on the Sound Bar.

The remote isn't working.

- Replace the remote batteries with new ones.
- Point the remote directly at the center of the Sound Bar when pressing a button.
- If using a Bluetooth connection, some of the buttons on the remote may not be supported by the streaming application. (e.g., Pandora doesn't support the Back button.)

Specifications

Sound Bar: One 2.0"x2.7" Full Range Drivers for Each Channel (1 for left, 1 for right)

Inputs: One 3.5mm Stereo Audio One Optical (Toslink) USB Bluetooth (Wireless)

Sound Pressure Level (System): 95 dB

Frequency Response (System): 50 Hz - 20 KHz

Voltage: 120 VAC, 60 Hz

Compliances: CSA, C-US, FCC/IC, Energy Star

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.