

# CONTROLS & CONNECTIONS



Back of Sound Bar



USB\*  
USB In

Power Port

AUX  
Analog Audio In (Stereo 3.5mm)




DIGITAL  
Coaxial In

OPTICAL  
Digital Optical Audio In





### Top of Sound Bar

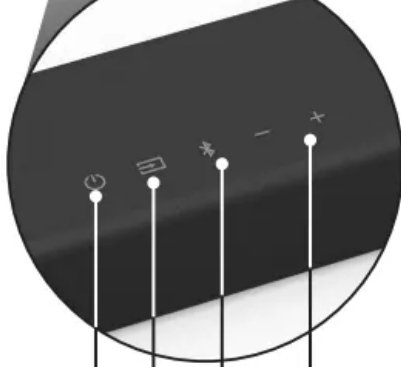


**Power** Press to turn soundbar on or off.

**Input** Press to change the audio source.

**Bluetooth Input** Hold to pair. (See 'Bluetooth Audio Pairing' for more information.)

**Volume** Increase or decrease the loudness of the audio.

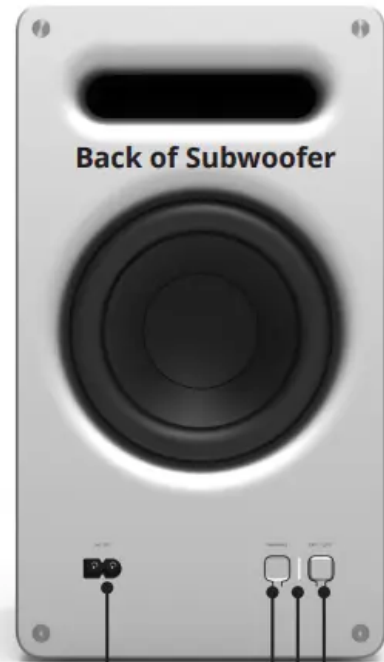

### Back of Subwoofer

**Power Port**

**Pairing Button**


**LED Indicator**

**Power Button**



## FIRST-TIME SETUP

### 1. Choose one cable and connect it to your TV

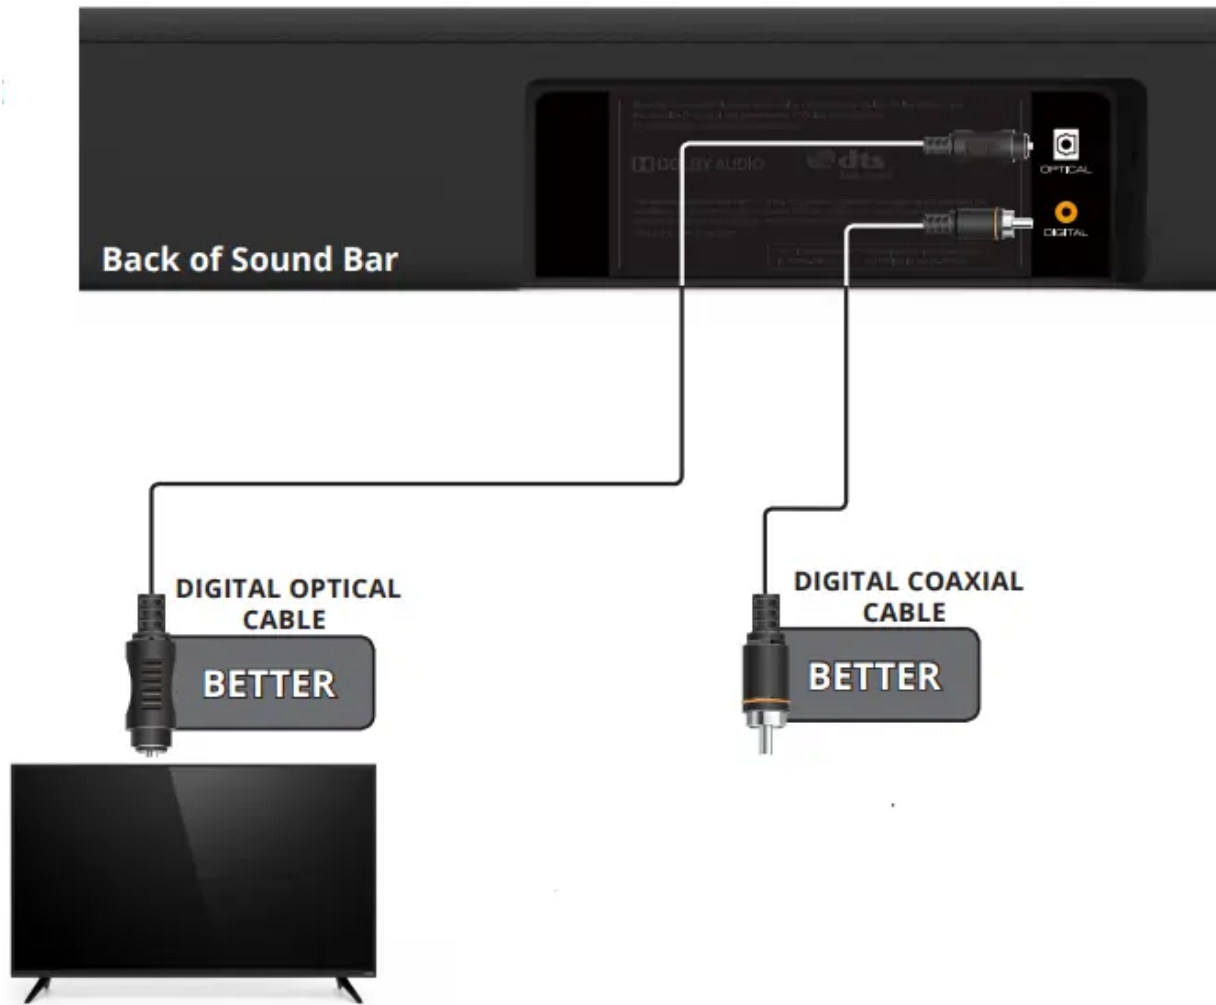

### 2. Connect the power cable to the sound bar AC IN as shown

Plug the power cable into an electrical outlet.



**3. Connect the power cable to the Subwoofer AC IN as shown.**

Plug the power cable into an electrical outlet and press the power button.

The subwoofer should automatically power on when plugged in.


Back of Subwoofer



**4. For the best surround sound experience, position the Sound Bar as shown.**

The Sound Bar should be close to ear level.

The Subwoofer should be placed in a corner of the room.

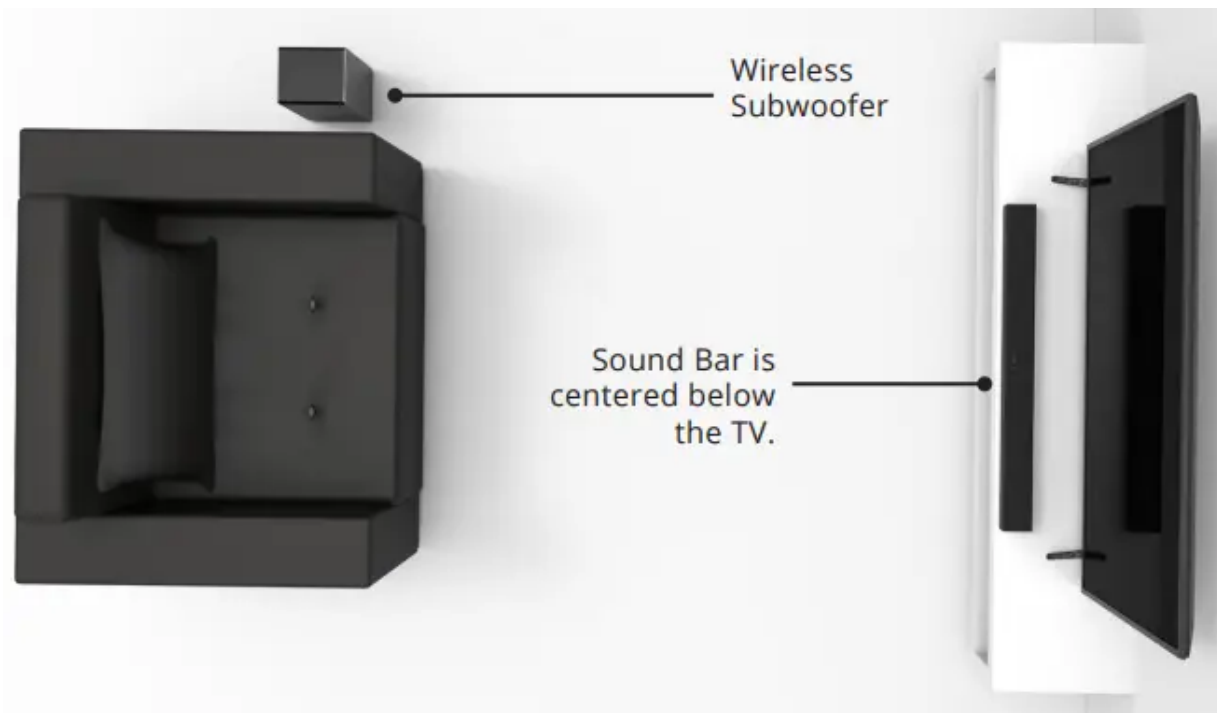

**5. Remove the battery cover by gently sliding it away from the remote.**



**6. Insert the included batteries and gently slide the battery cover back into place.**




**7 Turn your TV and sound bar. The sound bar will automatically turn on and begin searching for an active input.**


The LED indicators on the front of the sound bar will begin cycling in pairs through inputs until an audio source is detected

**Tip:** Pressing the INPUT button will stop the auto detect function.

You can press the INPUT button to switch between audio sources. For example, if you connected your TV to AUX , set the sound bar to AUX .

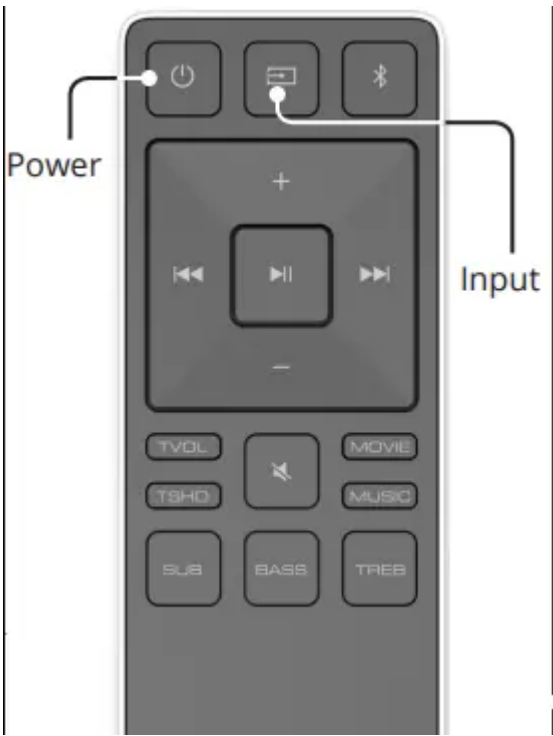

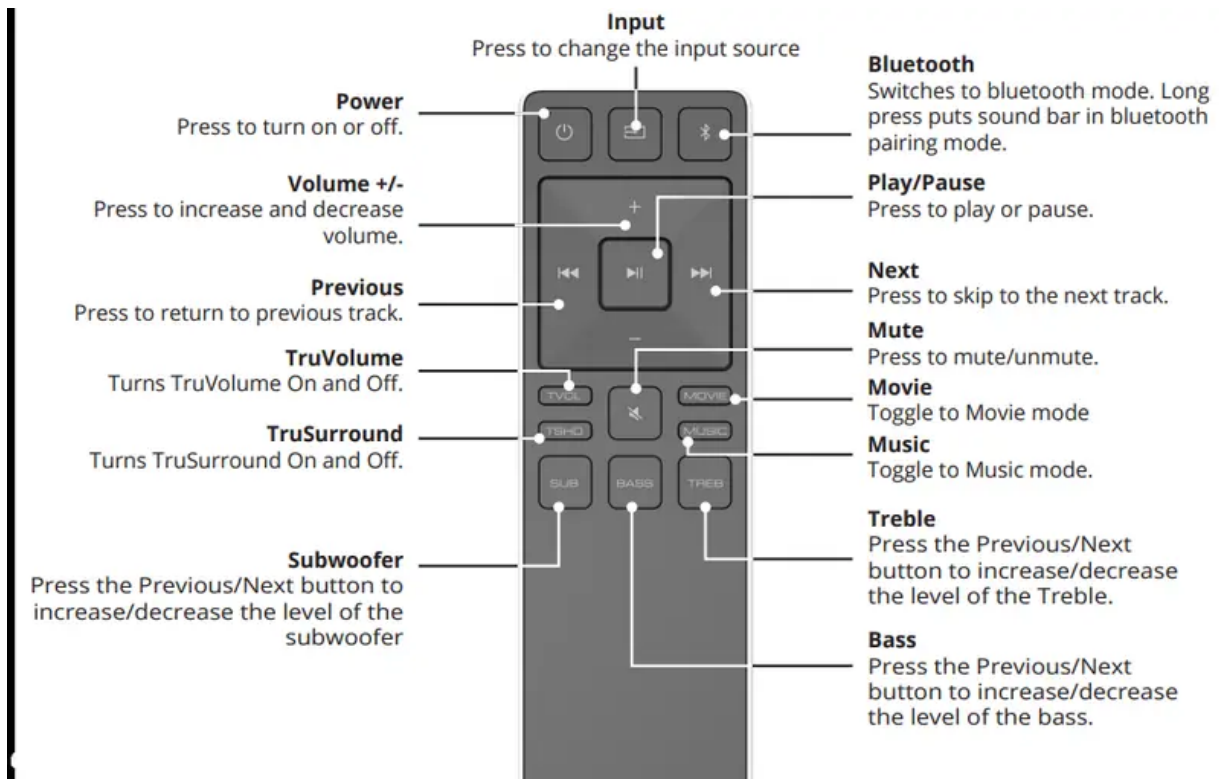





## USING THE REMOTE





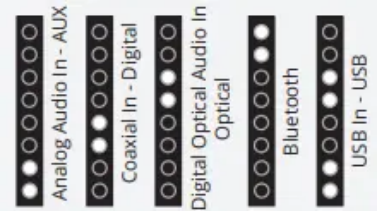

## LED INDICATORS

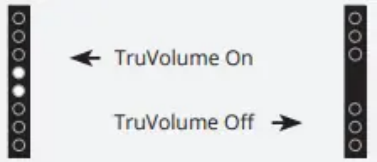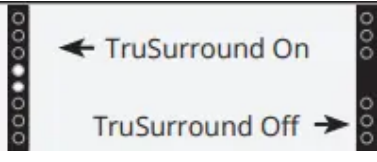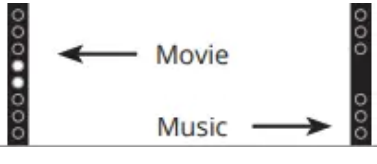


LED Indicators are located here.

Function	LED Behavior	Description
Input		<p>Press the INPUT button on the remote to cycle through the available inputs:</p> <p>Analog Audio In - AUX Stereo 3.5mm</p> <p>Coaxial In - Digital</p> <p>Digital Optical Audio In - Optical</p> <p>Bluetooth</p> <p>USB In - USB</p> <p>Press and hold the INPUT button on the remote control for 3 seconds to enable the auto input detect function.</p>
Bluetooth Pairing	 <p>(When searching for device) Flash from the bottom to the top and back continuously.</p>	<p>Press and hold the  button on the remote. The Sound Bar will be discoverable for 15 minutes. You can now search for the Sound Bar (VIZIO SB3621n) using your Bluetooth Device. The sound bar will power down if no device is found.</p> <p><b>Note:</b> Set your Bluetooth device into pairing mode prior to the Sound Bar.</p>
DTS TruVolume On/Of		<p>Press the TVOL button to enable/disable TruVolume.</p> <p>When enabled (On), TruVolume provides a consistent and comfortable volume level for a more enjoyable listening experience.</p>
DTS TruSurround On/Of		<p>Press the TSHD button to enable/disable DTS TruSurround. When enabled (On), all inputs will produce virtual surround sound. When disabled (Off), all sources will playback in stereo.</p>
Equalizer Mode		<p>Press the EQ button to toggle between two preset equalizer settings, Music and Movie.</p> <p><b>Note:</b> Movie mode is on by default.</p>

<p>Treble Levels</p>	 <p>Two center LEDs indicate Treble level 0.</p>	<p>Press the TREBLE button then press the Next/ Previous button to increase/decrease the treble level. The LED indicators will move to the top with increasing levels and to the bottom with decreasing levels.</p>
<p>Bass Levels</p>	 <p>Two center LEDs indicate Bass level 0.</p>	<p>Press the BASS button then press the Next/ Previous button to increase/decrease the bass level. The LED indicators will move to the top with increasing levels and to the bottom with decreasing levels.</p>
<p>Subwoofer Levels</p>	 <p>Two center LEDs indicate sub level 0.</p>	<p>Press the SUB button then press the Next/ Previous button to increase/ decrease the level of the subwoofer. The LED indicators will move to the top with increasing levels and to the bottom with decreasing levels.</p> <p><b>Note:</b> Decreasing the level to the minimum turns off the subwoofer.</p>
<p>When a Dolby Digital signal is detected.</p>	 <p>Dolby Digital Indicator LED</p>	<p>Dolby Digital is only available on either the Coaxial In or Digital Optical Audio In inputs. When a Dolby Digital signal is detected, the Dolby Digital indicator LED will light up for 3 seconds before fading away.</p>

## BLUETOOTH AUDIO PAIRING

To pair the sound bar with a Bluetooth device:

1. Press and hold the Bluetooth button  on the sound bar or on the remote for five (5) seconds. When the sound bar is in Bluetooth Pairing Mode, the LED Indicators on the Display Panel on the front of the Sound Bar will light sequentially from bottom to top and back again.

Once the device is paired, the LED Indicators will stop flashing.

2. You can now search for the sound bar (VIZIO SB3621n) using your Bluetooth device. For more information, refer to the user documentation that came with the device.

3. Play audio from your Bluetooth device. Volume can be controlled on your source device and the sound bar.



**Top of Sound Bar**

**Bluetooth Device**

## **USING BLUETOOTH MODE**

Your sound bar supports music streaming from smartphones, tablets, and computers with Bluetooth capability. Device compatibility will vary, see your device's documentation for more information. Once you have paired your source device to the sound bar, as long as you stay within range of the sound bar, your device should remain paired. If the input is changed, the Bluetooth device will disconnect. If the source is changed back to Bluetooth, the last paired bluetooth device will reconnect automatically.

**Tips:** Your sound bar is not equipped with a microphone, so it cannot operate as a hands-free device for a smartphone.

### **Maximizing Signal**

A Bluetooth signal has a range of up to 30 feet. Keep in mind that Bluetooth is a compressed audio format, so streamed music may lose some integrity when compared to a wired connection.


Try the following if your sound quality is less than optimal:

- If you hear any break-up or disconnect while streaming music from your device, move the source device closer to the sound bar.
- Be sure that there are no solid obstructions in the line-of-sight between the sound bar and the source device.
- Other wireless devices can affect Bluetooth range, including wireless security cameras, wireless video baby monitors, cordless phones, and microwave ovens. Turning off or moving these devices may improve Bluetooth range.

**WARNING:** Reduce the volume levels on your device and on the sound bar before pressing Play. High volume levels can damage your hearing.

## ADVANCED SETUP

### Back of Sound Bar

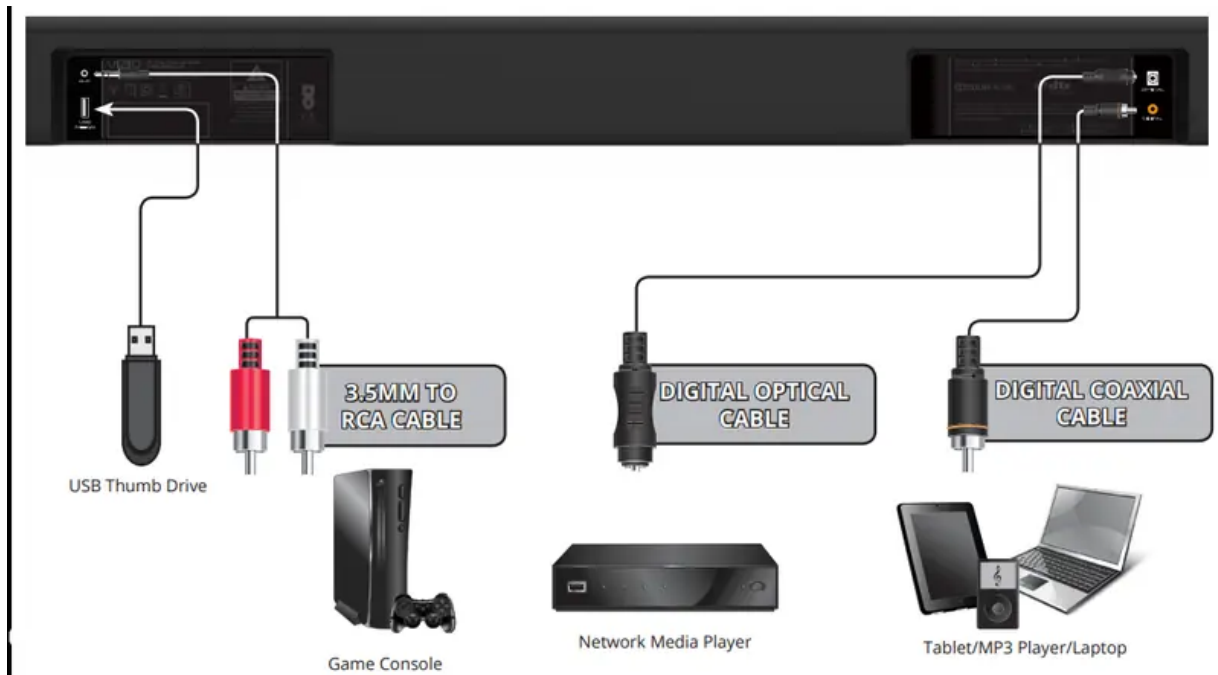


## CONNECTING A SUBWOOFER

The Subwoofer has already been paired with the Sound Bar by VIZIO. However, the Subwoofer may need to be re-linked to the Sound Bar if there is no sound coming from the Subwoofer.



**NOTE:** What does pairing mean? Pairing means to wirelessly connect.

1. First confirm that the power LED is illuminated. Press and hold the Pairing button on the back of the Subwoofer for 5 seconds. The LED on the back of the Subwoofer will begin to blink.

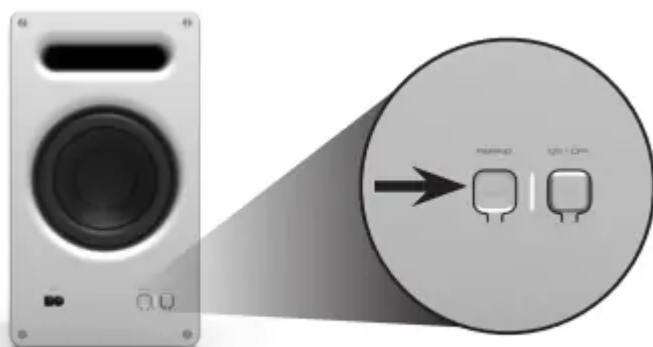


### Back of Subwoofer

2. Press and hold the Power button on the top of the Sound Bar for 5 Seconds. The LED indicators on the front will flash 3 times. The Subwoofer is now linked with the Sound Bar.



**Buttons are located on top of the Sound Bar**

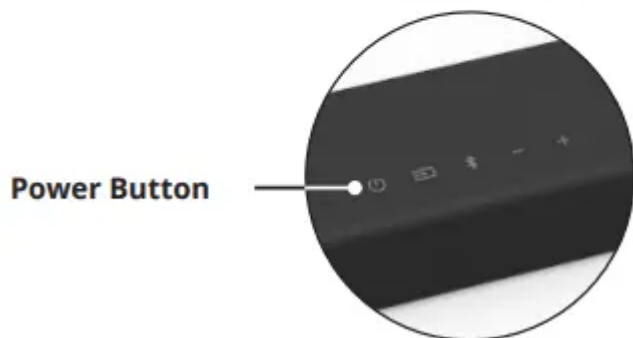




 





## USING BUTTON COMBINATIONS

Buttons are located here.

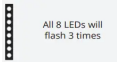

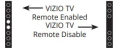There are 3 functions that are triggered by 3 different button combinations on the Sound Bar.

Function	LED Behavior	Description
Factory Reset		Reset the Sound Bar to the factory default settings. To perform a Factory Reset, Press and Hold the Bluetooth (  ) and Volume Down (  ) buttons for 5 seconds.  Note: This will erase all settings and preferences that you have set.
VIZIO TV Remote Control		Enable/disable the use of a VIZIO TV remote control to power on and adjust the volume of the sound bar. To enable/disable this function, Press and Hold the Power (  ) and Volume Up (  ) buttons for 5 seconds.  Note: This function is enabled by default.
Energy Star		When the Energy Star setting is enabled, the sound bar will automatically power down after a period of inactivity. When disabled, the sound bar will remain powered on until you turn it off. To enable/disable this function, Press and Hold the Power (  ) and Volume Down (  ) buttons for 5 seconds.  Note: Energy Star setting is enabled by default.


## WALL-MOUNTING THE SOUND BAR

1. Insert the two wall-mount screws into the wall-mount screw holes, and then tighten them with a Phillips screwdriver.




2. Place the included wall mounting template against the wall under your TV. Mark the two bracket holes using a pencil.

Be sure your screws are attached to wood studs, drywall anchors (for drywall), or concrete anchors (for brick/concrete walls).

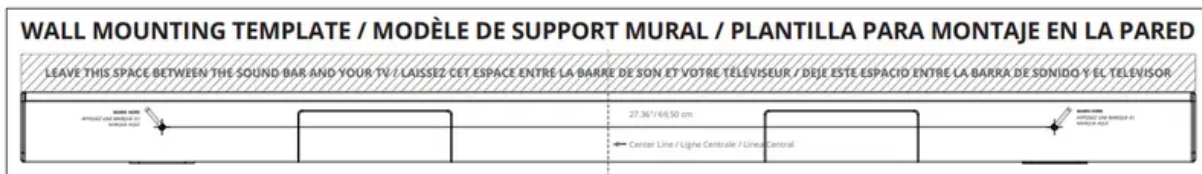

3. Screws for attaching the brackets to the wall are not included. Choose the screw type and length appropriate to your home's construction. If in doubt, consult a professional installer.

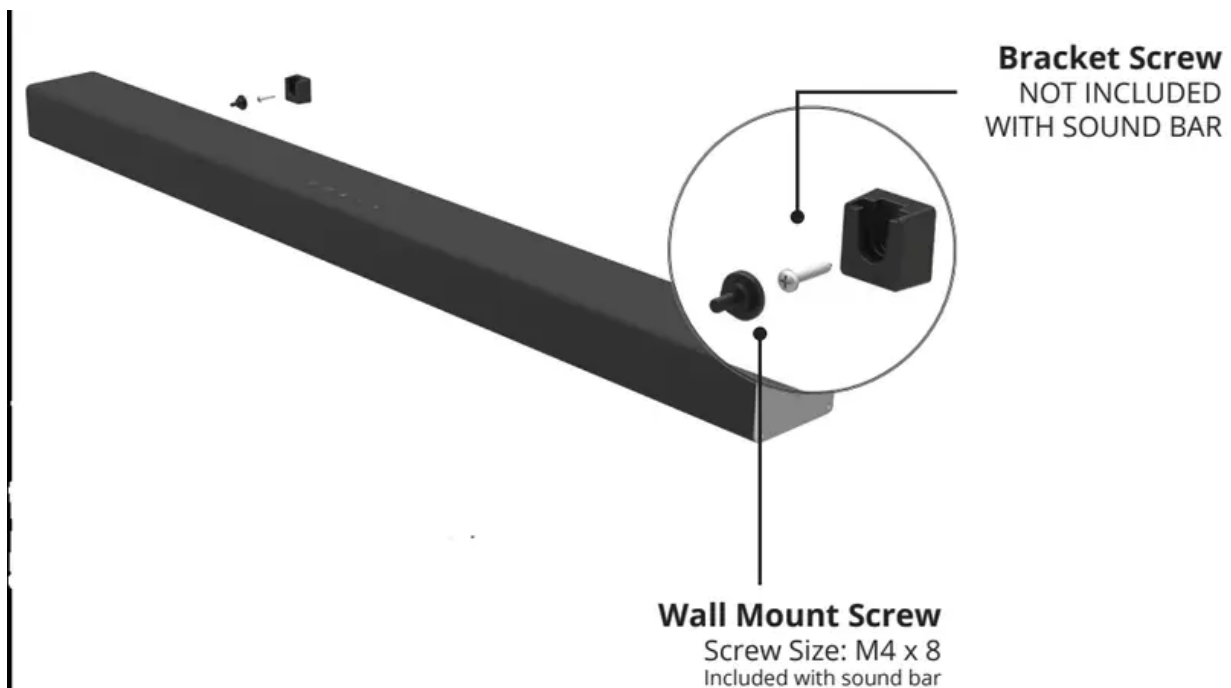

**WARNING:** If you are unfamiliar with power tools or the layout of electrical wiring in the walls of your home, consult a professional installer.

## HELP & TROUBLESHOOTING



<p>There is no power.</p>	<p>Press the POWER button on the remote control or on the top of your Sound Bar.</p> <p>Ensure the power cord is securely connected.</p> <p>Plug a different device into the electrical outlet to verify that the outlet is working correctly.</p>
<p>There is no sound.</p>	<p>Increase the volume. Press Volume Up on the remote control or on the top of your Sound Bar.</p> <p>Press MUTE on the remote to ensure the Sound Bar is not muted.</p> <p>Press INPUT on the remote or on the top of your Sound Bar to select a different input source.</p> <p>When using either of the Digital Inputs, if there is no audio: (A) Try setting the TV output to PCM or (B) Connect directly to your Blu-ray/other source, some TVs do not pass through digital audio.</p> <p>On digital inputs, the input LEDs will flash rapidly if an unsupported format is present. Set the source to output PCM.</p> <p>Your TV may be set to variable audio output. Confirm that the audio output setting is set to FIXED or STANDARD, not VARIABLE. Consult your TV's user manual for more detailed information.</p> <p>If using Bluetooth, ensure that the volume on your source device is turned up and that the device is not muted.</p>
<p>I hear buzzing or humming.</p>	<p>Ensure all cables and wires are securely connected.</p> <p>Connect a different source device (TV, Blu-ray player, etc) to see if the buzzing persists. If it does not, the problem may be with the original device.</p> <p>Connect your device to a different input on the Sound Bar.</p>
<p>The remote isn't working.</p>	<p>Replace the remote batteries with new ones.</p> <p>Point the remote directly at the center of the Sound Bar when pressing a button.</p> <p>If using a Bluetooth connection, some of the buttons on the remote may not be supported by the streaming application. (e.g., Pandora doesn't support the Back button.)</p>



**Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](#)

