 


DIAGRAM OF PARTS

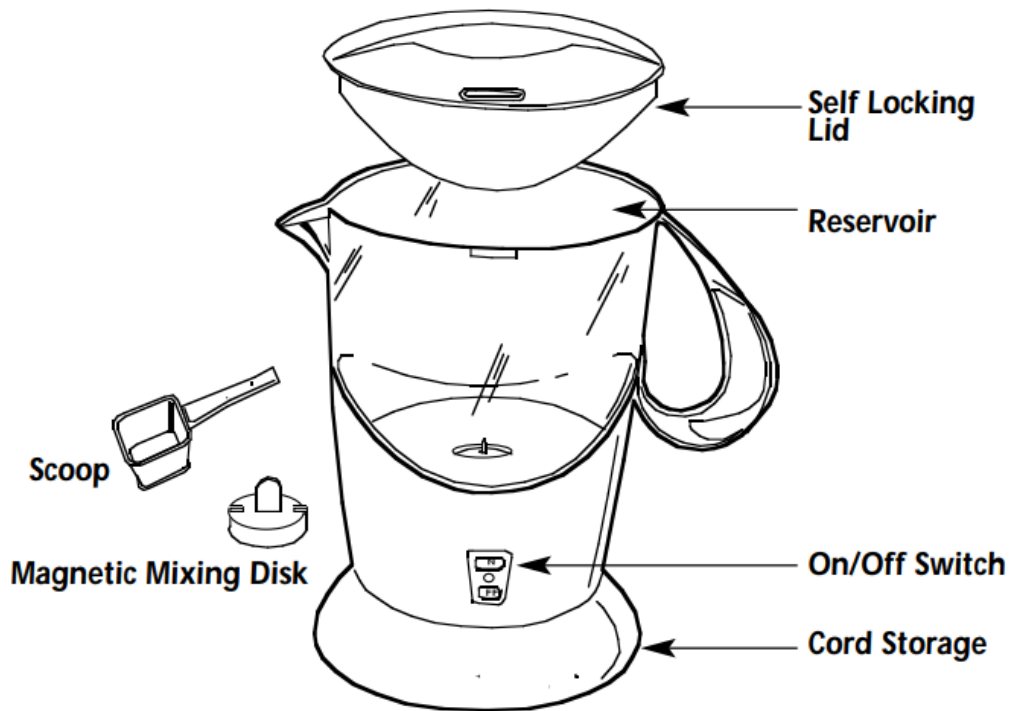

OPERATION AND USE

Before First Use

Before using your Cocomotion™ Hot Chocolate Maker, wash reservoir and lid using a mild, non-abrasive detergent and water with a soft cloth.

Important! Do not immerse your appliance in water. This may permanently damage the product and void the warranty.

Making Hot Chocolate

Cocomotion™ is designed to make delicious hot chocolate with your favorite combination of ingredients. You may use milk or water, syrup or cocoa powder mix.


Note: Do not plug your machine in until all ingredients have been added and the lid is in place in the closed position.

Follow These Easy Steps:

The ingredients used below produce four 8-ounce servings. Refer to the Ingredient Chart to determine usage for other serving sizes.

1. Remove the reservoir lid.

2. Put the magnetic mixing disk in place.

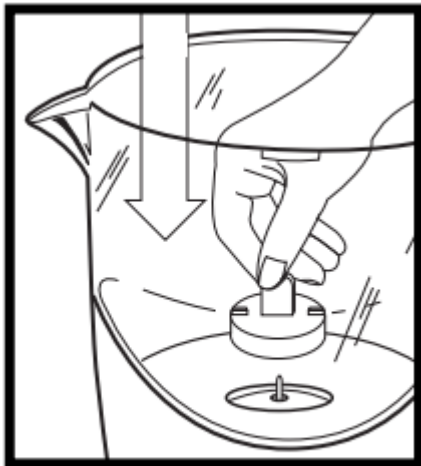


Step 2 -
Put mixing disk in place.

3. Pour 32 ounces of milk/water into the reservoir.



Step 3 -
Add milk or water.

4. Add 4 scoops (8 Tbsp.) of chocolate syrup or cocoa powder mix into the reservoir. (Use 7 scoops or 14 Tbsp. of cocoa powder mix if you are using water instead of milk.)

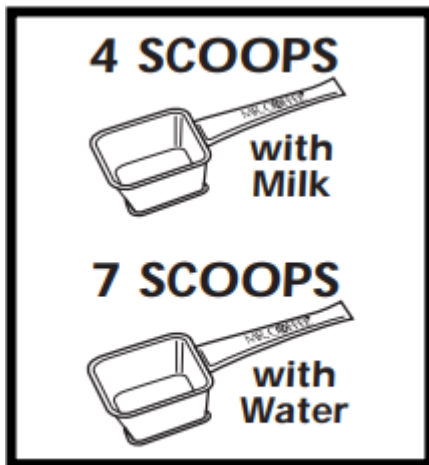

Step 4 -
Add syrup or powder.


5. Place the lid onto the reservoir. Turn lid to cover the spout.



Step 5 -
Rotate lid & plug in.


6. Plug in the Hot Chocolate Maker.

7. Push the "ON" button. Your machine will begin to mix and heat the hot chocolate. When the hot chocolate reaches the perfect temperature, the unit will automatically shut off (a full batch will take approximately 10 minutes). You may push the "OFF" button at anytime to turn the unit off.

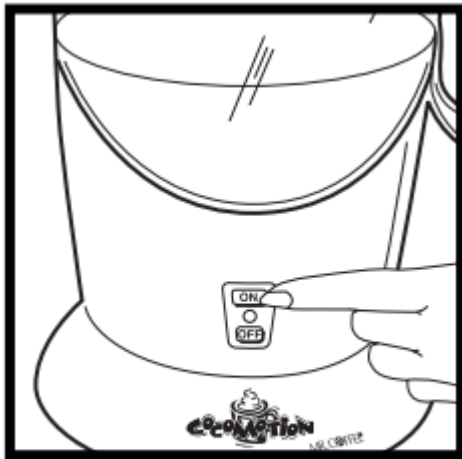

Step 7 -
Turn on. (10 minute cycle)

8. Unplug the machine after it shuts off.

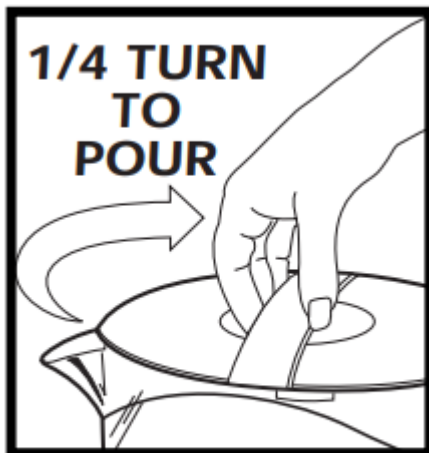


Step 8 -
Rotate lid to pour.

9. Push down & rotate reservoir lid so that the spout is open before pouring. This will lock the lid for ease of pouring. To remove the lid, simply rotate 1/4 turn so that the spout opening is covered & lift up

INGREDIENTS CHART

CUPS	1	2	3	4
LIQUID MILK/WATER	8 oz.	16oz.	24 oz.	32 oz.
SYRUP WITH MILK	2 TBSP.	4 TBSP.	6 TBSP.	8 TBSP.
POWDER MIX WITH MILK	2 TBSP.	4 TBSP.	6 TBSP.	8 TBSP.
POWDER MIX WITH WATER	4 TBSP.	7 TBSP.	11 TBSP.	14 TBSP.

Note: Low-Fat Diet mixes may vary from quantities shown on this chart.

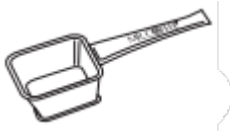

Scoop provided equals 2 Tbsp.

Automatic Shut-Off




Cocomotion™ is designed to automatically shut off when the hot chocolate is ready to be served. A full batch (32 oz.) takes approximately 10 minutes.

You may turn the unit off at any time by simply pushing the “OFF” button. To restart the unit, push the “ON” button, and the machine will continue making hot chocolate.

Cleaning

Cocomotion™ should be cleaned after every use.

1. Pour out any remaining hot chocolate from the reservoir.
2. Remove the magnetic mixing disk.
3. Wash the interior by pouring a combination of a mild detergent and water into the reservoir and wipe clean with a soft damp cloth. Do not use any abrasive detergents or scouring pads, as this will scratch the plastic which can lead to breakage. Rinse.
4. Wash the lid and mixing disk with a mild detergent and water.
5. Wipe the exterior of the machine with a damp cloth.
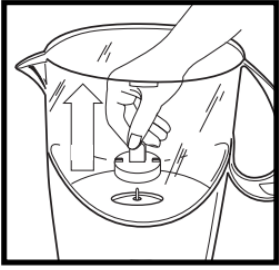
<p>Caution: Do not immerse your appliance in water. This may permanently damage the product and void the warranty</p>	
<p>Step 1 - To clean, discard any unused liquid.</p>	
<p>Step 2- Remove the magnetic disk.</p>	

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions before using the machine.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plugs, or machine in water or other liquid.
4. Close adult supervision is necessary when this appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning the appliance.

6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return this appliance to the nearest authorized service center for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Mr. Coffee may cause hazards or injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place this appliance on or near a hot gas or electric burner or in a heated oven.
11. To disconnect, remove plug from wall outlet
12. Do not use this appliance for other than intended use.
13. Use on a hard, flat surface only to avoid interruption of air flow underneath the appliance

SPECIAL CORD SET INSTRUCTIONS

1. A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
2. An extension cord may be purchased and used if care is exercised in its use.
3. If an extension cord is used, the marked electrical rating of the extension cord must be at least 10 amps and 120 volts. The resulting extended cord must be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.

* This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.