

SPECIFICATION

MODEL	VOLTAGE	FREQUENCY	POWER
TQH08A/ I	120V~	60Hz	1500W

ASSEMBLY

Assemble the body frame and the base plate together as the following sequences. Remove the mounting screw from the lower part of the body frame.

Insert the power cord through the slot placed in the middle part of the basement and then assemble the body frame to the base plate.

Secure the body frame to the base plate by means of the two mounting screw previously removed. Insert the power cord through the suitable slots and then fix it by the clamp


OPERATION

Plug in the appliance. Check that the outlet has at least a 10-AMPERE current carrying capacity.

Adjustable temperature control: it will automatically jump when it reaches a certain temperature, and can be rotated to the maximum position.

POWER : 250W/1500W

1. "I" heating setting
2. "II" heating setting
3. "I" heating setting with oscillation
4. "II" heating setting with oscillation

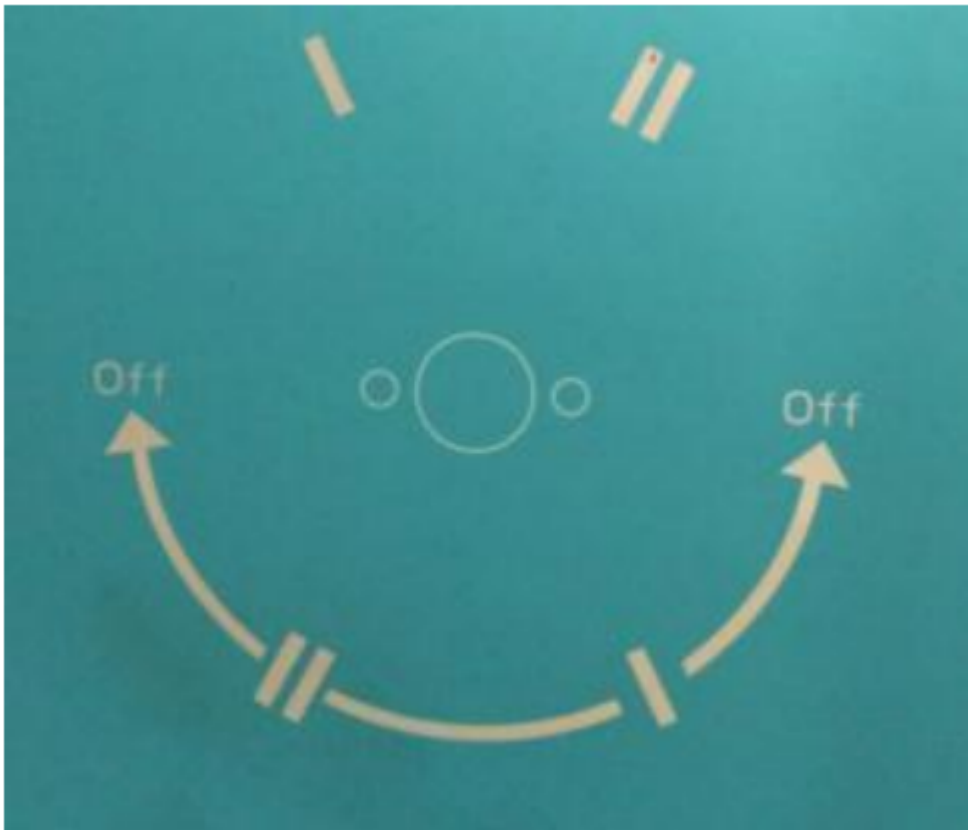

SAFETY DEVICE

This appliance is provided with one safety device, the safety device disconnects the appliance when the heater is tilted or when is tipped by means of a switch situated in the lower part of the heater.

MAINTENANCE

The appliance needs only an external regular cleaning.

After use and before cleaning always unplug the appliance and wait till the item is cool

Clean the grilles from dust.

Do not clean the painted parts with emery flour or solvents and use only a moistened cloth.

WARNING

1. Heater may not be placed directly below the socket.
2. Heater may not use program, controller, timers or other devices to automatically connect heater.
3. If soft power line damage, in order to its maintenance department to replace a similar sector professionals.

4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

CAUTION

Remove the packing and make sure that the appliance is intact. In case of doubt do not use the appliance and contact our after-sales service. Do not leave packaging materials like bags and staples within reach of children.

Before switching on appliance check if the electrical voltage and frequency of the circuit correspond to those indicated on the appliance.

The appliance has to be connected to a circuit according to the rules in force concerning the civil plant. The plant has to be related to the nominal power of the appliance and has to be provided with an earth-wire.

Use the appliance only for the mentioned purpose, namely as a heater for domestic use

Do not use it for any other application, as it could get dangerous.

The manufacturer is not responsible for any eventual damages caused by improper or faulty use.

The use of every electrical appliance calls for the awareness of some basic rules such as

Never touch the appliance with wet or damp hands or feet.

Never expose the appliance to atmospheric conditions(rain, sun, etc).

The appliance must be always placed on a flat and stable surface.

Switch the appliance off and unplug it before cleaning.

When the appliance is not in use switch it off and unplug it. Make harmless the parts of the appliance, which could be handles hazardously by children for playing.

Do not use this heater in the immediate surroundings of both, a shower or a swimming pool.

Do not put the cable on the appliance when it is still warm.

A correct operation of the appliance is obtained when the heater is installed vertically. Do not switch on the heater near, pieces of furniture, curtains, and shelves.etc.

Do not use the appliance near liquids or inflammable matters.

Do not locate the heater below a socket outlet.

Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if heater is covered or displaced.

Do not cover the appliance when it is running to avoid overheating risks

In case the power cord is damaged send it to the nearest after-sales service recommended by the manufacturer for the replacement.

Children, old people and disabled people are not often aware of the dangers.

Which can derive from improper use of the appliance. The appliance should never be used without an adult supervision.

Do not connect the appliance to extension cords or multiple outlets

Do not damage and do not kink the power cord. Before cleaning the appliance or carrying out any maintenance switch off the whole system

If the appliance is out of work switch it off without tampering it. If any repair is required please contact only the after-sale centers approved by the manufacturer and ask for original spare parts. Otherwise safety of the appliance can be compromised.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

