




## The Basics

### Phone Overview

#### Open view



1. **Home screen** : Displays messages, indicator icons and active functions.
2. **Left soft key** : Allows you to select the command at the lower left area of the display screen (in the illustration above it would open the Contacts app).
3. **Speakerphone key**: Allows you to enable or disable the speakerphone mode. (Speakerphone available only while on call).
4. **Send key** : Allows you to make and answer calls. Press from standby mode to access your call history (All calls, Missed calls, Dialed calls and Received calls).
5. **Clear key** :Deletes single spaces or characters with a quick press, or press and hold to delete entire words in text entry screens. Press to back out of menus, one level at a time.

6. **Earpiece** Lets you hear the caller and automated prompts.
7. **OK key / Navigation key:** Use the OK key  to select options and menus. Use the Navigation key  to scroll through menu items and highlight a specific field or object, then press the OK key  to select it.
8. **Right soft key** :Allows you to select the command at the lower right area of the display screen (in the illustration on the previous page, it would open the Message+ app).
9. **Voice commands key** :Press for quick access to Voice Commands from standby mode (the Home screen).
10. **End/Power key** :Allows you to turn the power on/off and to end a call. Also exits menus and returns to standby mode (the Home screen).
11. **Vibrate mode key:** Allows you to set Vibrate mode from standby mode the Home screen), press and hold for about 3 seconds.
12. **Microphone** :Allows you to transmit your voice to a caller or for voice- activated functions (e.g., Voice commands).

#### Side views



1. **Volume key** Allows you to adjust the volume.
2. **USB/Charger port** Connects the phone to the USB charger, or other compatible accessories.
3. **Headset jack** Allows you to plug in an optional 3.5mm headset for convenient, hands-free conversations, or other compatible listening devices.
4. **Camera key** Allows you to access camera mode. Press once the Camera key to take a picture and press and hold for recording a video.

## Front and rear views



1. **LED** Indicates incoming calls, new notifications, charging status, etc.

Use this table to learn what the light patterns on your phone mean.

Status	Description	LED Notification
Charging (the flip is closed)	When the phone is connected with a USB charger and the charger is plugged into an outlet	Turns on (LED turns off when battery is full).
Incoming call	During incoming call	Turns on until you receive a call.
Missed calls	Calls you did not answer	Blinks every 15 seconds until you check for missed calls or Notifications view.
New messages	When receiving a new message	Blinks every 2 seconds until you check for new messages or Notifications view.
Alarm	When the alarm is ringing or vibrating	Turns on until you select Snooze or Dismiss.
Calendar reminder	When the calendar reminder has started	Blinks once.
Email	When receiving a new mail	Blinks once.
Voice recording	While recording your voice with the flip closed	Blinks twice every second.
Bluetooth connected/ disconnected	When the phone is connected to or disconnected from a Bluetooth device	Blinks once.

2. **Microphone** Allows you to transmit your voice to a caller or for voice- activated functions (e.g., Voice commands).



3. **Camera** Allows you to take pictures. Keep it clean for optimal performance.
4. **Speaker** Allows you to hear sounds emitted from your phone as well as media content (e.g., music files).



### Interior view





1. **SIM card slot** Allows you to insert your SIM card.
2. **microSD card slot** Allows you to insert an optional microSD card for external memory storage.
3. **Back cover** Protects the internal components of your phone.
4. **Battery** Provides energy to power your phone.
5. **Antenna** Allows your phone to communicate with the network to send and receive data via RF cell signal.

### Navigating your phone

 
You can navigate within your phone's software by pressing the key that corresponds with the action you want to take or using the Navigation key  to scroll and the OK key  to select a highlighted item. For example:

- Press the Left soft key  to select the item displayed at the bottom left of the screen.
- Press the Right soft key  to select the item displayed at the bottom right of the screen.
- Press the keypad key that corresponds to the item you want in a displayed list.

- Press the top, bottom or sides of the Navigation key  to move the cursor, then press the center of the Navigation key (the OK key ) to select the item displayed at the bottom center of the screen.

## Navigation keys

- Navigate through your phone's software using your phone's 4-way directional Navigation key to scroll and select items. Its outer ring can be pressed up, down, left or right to move within the current screen to browse through menus and lists, then its center can be pressed to select the highlighted item.

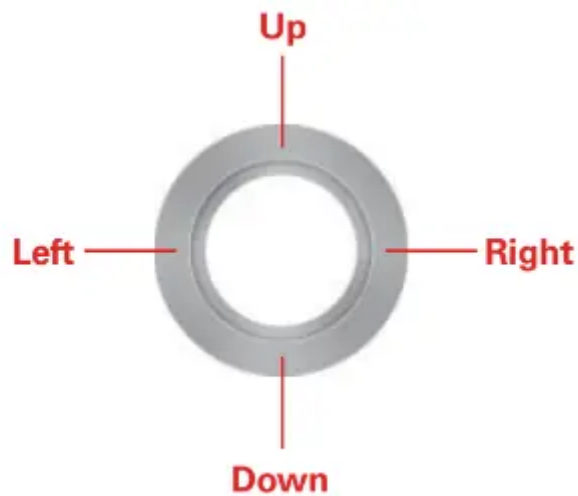

- From the Home screen, pressing the Navigation key up, down, left or right launches corresponding application. Shortcut menu presents a secondary list of shortcuts that you can customize to include your favorite features. You can customize all of these shortcuts. For more information, see Key shortcuts on page 68.



## Installing the battery

 
### Step 1. Remove the back cover

With the phone facing down, insert your fingernail into the cutout located on the bottom of the back cover and gently lift the cover.



### Step 2. Insert the battery

Insert the battery, making sure the gold contacts line up. Press down gently to secure.

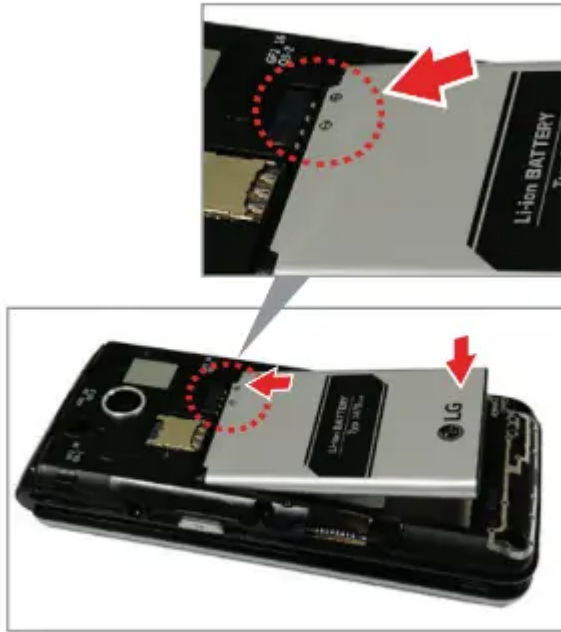

### Step 3. Replace the back cover

Place the back cover over the back of the phone and then press down along the edges to secure.



### Step 4. Charge the phone

Before turning on your phone, charge it fully.

Insert the small end of the USB cable into the phone. Insert the larger end into the charger and plug the charger into an outlet.



## Removing the Battery and SIM Card

### Removing the battery

1. With the phone facing down, insert your fingernail into the cutout located on the bottom of the back cover and gently lift the cover.



 
2. Use the fingertip cutout at the bottom of the battery compartment to lift the battery out.



### Removing the SIM card

The SIM card is pre-installed in your phone. If you need to replace your SIM card, refer to the following instructions.

1. Turn the phone off, then remove the back cover and the battery (as demonstrated in the previous instructions).
2. Locate the slot for the SIM card and gently slide the SIM card out to remove it.

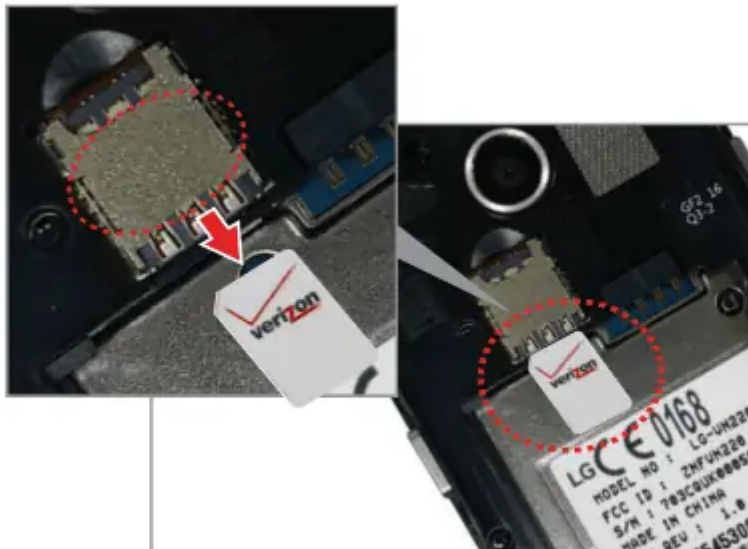

### Inserting and Removing a Memory Card







#### Inserting a microSD card

1. Remove the back cover (as demonstrated in the previous instructions).

2. Position the microSD card (sold separately) with the label side facing up and the gold contacts toward the slot (at the lower-left side of the phone), then carefully slide it into the slot until it's secured in place.



### To remove the microSD card

1. From the Home screen, press the OK key  Menu.
2. Press the Hashtag key  Settings .
3. Press the 6 key  Phone settings.
4. Press the 3 key  Storage > press the Right soft key  Options.
5. Select Eject SD card.
6. Remove the back cover and locate the microSD card slot (as demonstrated in the previous instructions).
7. Carefully pull the microSD card out to remove it.

 


## Charging Your Phone

Your phone comes with a USB cable and a charger adapter. You can connect them together and charge from a power outlet, or you can use the USB cable alone to charge from your computer. Correctly orient the plugs before insertion to avoid damaging your cable, adapter, and/or ports.

NOTE Please use only an approved charging accessory to charge your LG phone. Improper handling of the USB/Charger port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

1. Correctly orient the USB cable with the charger adapter and connect them. Refer to the image below to correctly connect the USB cable and the adapter.

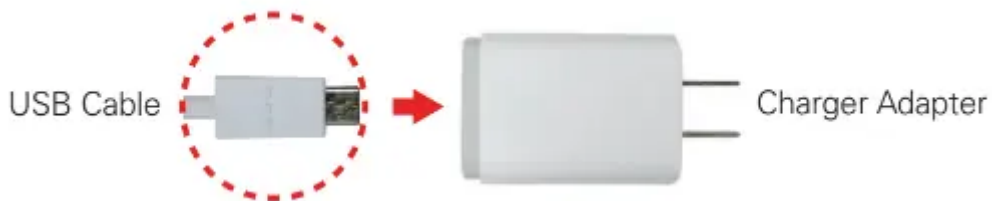

2. The USB/Charger port is located at the bottom of the phone. Correctly orient the cable's plug with the port before plugging it in.
3. Plug the charger adapter into a power outlet to begin charging.

## Turning your phone on and off

 
To turn your phone on or off, press and hold the End/Power key.

## Home Screen

The Home screen is your starting point to access all of the features on your phone using simple key presses.

## Status Bar


Shows phone status information, including the time, signal strength, battery status, and notification icons.

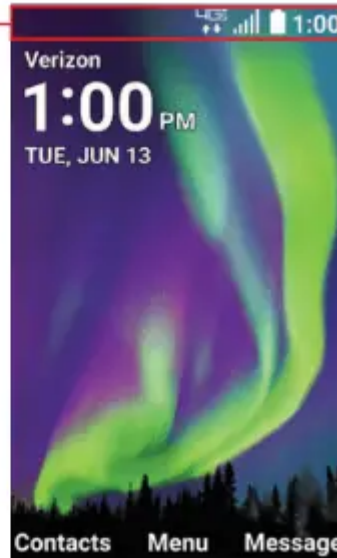



## Customizing the Home screen

You can customize your Home screen wallpaper and clock format using the Settings app.

From the Home screen, press the OK key  Menu, press the Hashtag key 






Settings, then press the 5 key  Display.

- Wallpaper: Press the 3 key  Wallpaper to select a background image from pre-loaded images or your own pictures.
- Clock Format: Press the 8 key  Clock to set the clock format.

## Phone's status icons





The Status Bar appears at the top of every screen. It displays icons indicating that you've received notifications (on the left) and icons indicating the phone's status (on the right), along with the current time.

Your phone's software includes an icon glossary for easy reference.

1. From the Home screen, press the OK key  Menu.
2. Press the Hashtag key  Settings.
3. Press the 8 key  About phone and then press the 5 key  Help.
4. Press the 1 key  Icon glossary.
5. Select an icon category.

The following icons may appear in the Status Bar.












 





## Call icons

	In call		Missed call
	Microphone muted		Advanced Calling

 








## Sound icons

	Silent mode		Vibrate mode
	Music playing		

## Network icons

	4G LTE connected		4G LTE in use
	Wi-Fi connected		Signal strength
	No signal		Roaming
	Network extender		No SIM card
	Unknown SIM card		SIM card activating
	SIM card activated		Airplane mode
	GPS on		Downloading
	Uploading		Download successful
	Emergency Alert		

## Connectivity icons

	Mobile Hotspot on		USB connected
	Bluetooth connected		Bluetooth on
	Bluetooth headset battery full		Bluetooth headset battery low
	Headset connected		Headset with microphone connected
	Internal storage full		






## Email and Messaging icons

 New email	 New Verizon message
 New voicemail	 Email not sent

## Alarm and Calendar icons

 Alarm set	 Upcoming events
---	---





## Battery icons

 Full battery	 Charging battery
 Low battery	 Empty battery
 Not Charging	

## Other icons

 More notifications	 Screenshot saved
--	--

## Call logs icons


 Incoming call	 Outgoing call
 Missed call	 Rejected call

## Notifications

Notification icons report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you're on a call.



When you receive a notification, the notification icon will be displayed in the Status Bar. You can open the Notifications view to view a list of all of your recent notifications. Depending on your settings, you may hear a notification sound, see a notification light, and/or the phone may vibrate.


### To open the Notifications view

From the Home screen, press the Up Navigation key  to open the Notification view. The Notifications view displays a list of your current notifications, organized into ongoing and event-based notifications.

### To respond to a notification

Open the Notifications view. Your current notifications are listed in the view, each with a brief description.



- Press the OK key  Open to view the details of a highlighted notification.
- Press the Left soft key  Dismiss to delete a highlighted notification.

- Press the Right soft key  Options to clear all notifications or access options for a highlighted notification.

## Convenient Features




### Vibrate mode

Sets the phone to vibrate instead of ringing.




From the Home screen, press and hold the Vibrate mode key . To return to Normal mode, press and hold the Vibrate mode key  again.

### Sounds off



Quickly deactivate your phone's sounds when you're in a place where phone sounds would be disruptive.


 
From the Home screen, press and hold the Volume down key  to set vibrate mode, then press the Volume down key  once more. To return to normal sounds mode, press and hold the Volume up key  until the desired volume level is reached.

### Quick volume adjustment



Quickly adjust ringer and earpiece volumes by pressing the Volume key  on the left side of the phone. Press the Volume up key  to increase and the Volume down key  to decrease the volume.


### Capturing a Screenshot

Press and hold the Volume down key  and the End/Power  key at the same time for 2 seconds to capture a screenshot of the current screen.



To view the captured image, press the OK key  Menu, then press the 4 key  Gallery.

### Recent apps

 
 
Quickly reopen apps using the Recent apps screen. From the Home screen, press the Down Navigation key  to open the Recent apps screen which lists all of the apps you've opened. From this screen, use the Navigation key  to highlight an app.

Press the OK key  Open to reopen the app.

Press the Left soft key Remove  to remove the app from the list.





Press the Right soft key  Options, then press the 1 key  Clear all to remove all apps from the list.

### Call waiting

During a call, one beep indicates another incoming call. Press the Send key  to answer it and put the first call on hold. Press the Send key  again to return to the first call.

### Conference call


You can talk with up to six people at the same time in a conference call on your wireless phone. Airtime and other charges, which may include toll or long distance charges, will apply for all simultaneous calls until you end one call.

1. While on the first call, press the Right Soft Key  Options, select New call and then Dialer and dial the 10-digit number of the second person.
2. Press the Send key . The first person is automatically put on hold while the call is made.
3. When the second person answers, press the Right soft key  Options, then press the 2 key  Merge calls to create a conference call.
4. To end both conversations completely, press the End/Power  key .

### Caller ID

Caller ID displays the number and/or name and picture (if applicable) of the person calling when your phone rings.

### Voice commands

Voice Commands allow you to do things by verbal command (e.g., make calls, check Voice mail, etc.). From the Home screen, press the Voice commands key  on the keypad.





- Call Say "Call" and then call someone simply by saying the name or phone number.
- Send Message Say "Send message" followed by the recipient's name or phone number and your phone will begin a new message.
- Redial Say "Redial" and the phone will redial the last phone number.

- Open App Say “Open” and then the name of the app you want to launch.
- Play Music Say "Play music" to listen to music on your phone.
- Check This allows you to check out a wide range of items such as Status, Voicemail, Messages, Missed Calls, Time, Signal Strength, Network, Battery, Volume, and My Phone Number.

## Settings

### My Verizon

The My Verizon menu allows you to check your subscription information ranging from your payment plan to your software upgrade or other available services.

 



1. From the Home screen, press the OK  key Menu.
2. Press the Hashtag key  Settings .
3. Press the 1 key  My Verizon.
4. Sign in to your account.

### Wireless & networks


The Wireless & networks menu allows you to configure and manage your device's wireless radio communications.
















1. From the Home screen, press the OK key  Menu.
2. Press the Hashtag key  Settings .
3. Press the 2 key  Wireless & networks.

### Airplane mode

 
1. From the Wireless & networks menu screen, press the 1 key  Airplane mode.
2. Use the Navigation key  to highlight On or Off, then press the OK key  OK.
3. Press the Clear key  to exit.








### Wi-Fi

1. From the Wireless & networks menu screen, press the 2 key  Wi-Fi.










2. Use the Navigation key  to highlight a Wi-Fi network, then press the OK  key Connect to connect to it.
3. Press the Right soft key Options  to access the following Options to manage your Wi-Fi connections.
  - Press the 1 key  Search Searches for nearby Wi-Fi networks.
  - Press the 2 key  Add Wi-Fi Allows you to manually add a Wi-Fi network by entering its name (SSID), security, and password.
  - Press the 3 key  Saved Wi-Fi Displays your saved Wi-Fi networks allowing you to manage them. This menu will be shown when a Wi-Fi network is added via using 2 key  Add Wi-Fi menu.
  - Press the 4 key  Advanced Wi-Fi Provides additional specific Wi-Fi connection settings:
    - Press the 1 key  Wi-Fi notification Enable this option to be notified if Wi-Fi networks are available nearby.
    - Press the 2 key  Show Wi-Fi pop-up Enable this option to display a Wi-Fi pop-up message when opening apps.
    - Press the 3 key  Keep Wi-Fi on during sleep Allows you to set the Wi-Fi status when the screen is off.
    - Press the 4 key  Avoid bad Wi-Fi connections Enable this option to use the mobile network when the connected Wi-Fi network doesn't have a signal.
    - Press the 5 key  Connect by WPS button Provides information to connect to a secured Wi-Fi network with a WPS button.
    - Press the 6 key  Connect by WPS PIN Provides the WPS PIN to connect to a secured Wi-Fi network.
    - Press the 7 key  Install certificates Allows you to install certificates from storage.

## Bluetooth






1. From the Wireless & networks menu screen, press the 3 key  Bluetooth

2. Press the Left soft key  Turn on to pair and connect with other Bluetooth devices. All Bluetooth devices that are within your phone's range will be listed. Use the Navigation key  to highlight a device to pair and connect.
3. Press the Right soft key  Options to access the following options:
  - Press the 1 key  Search Searches for nearby Bluetooth devices.
  - Press the 2 key  Rename phone Allows you to change your phone name for easy identification when pairing and connecting.
  - Press the 3 key  Received files Displays a list of the files received via a Bluetooth device.
  - Press the 4 key  Help Displays Bluetooth help information.




 
 



### Tethering & Mobile HotSpot

1. From the Wireless & networks menu screen, press the 4 key  Tethering & Mobile HotSpot.
2. Select the tethering method you want to use.
  - Press the 1 key  USB tethering Enable this option to allow you to connect via USB. This option is gray when not connected via USB.
  - Press the 2 key  Bluetooth tethering Enable this option to share the phone's Internet connection with other Bluetooth devices.
  - Press the 3 key  Mobile Hotspot Allows you to use your device as a mobile hotspot for other devices to use your mobile network connection. From the Mobile Hotspot screen:
    - Press the Left soft key  Turn on to activate your Mobile Hotspot.
    - Press the Right soft key  Options to manage its settings.
    - Press the 1 key  Set up Mobile Hotspot Allows you to enter the SSID and security information for your mobile hotspot.
    - Press the 2 key  Timeout Allows you to set when to turn off your hotspot.
    - Press the 3 key  Help Displays information about using mobile hotspot.

 
## VPN

1. From the Wireless & networks menu screen, press the 5 key  VPN to set up a Virtual Private Network.
2. Press the Left soft key  Add to create a new VPN.
  - Press the Right soft key  Options to access Edit, Delete, Always-on VPN or Help.
3. Press the OK key  to connect.
  - Enter the ID and password, then press the OK key  to save.

## Cellular networks

1. From the Wireless & networks menu screen, press the 6 key  Cellular networks to set various network settings.
2. Select an available network setting and set it to your preferences.
  - Press the 1 key  Mobile data Enable this option to allow data access over the mobile network.
  - Press the 2 key  Data usage Allows you to manage your mobile data usage (e.g., disconnect from the mobile network to stop using mobile data and exclusively use a Wi-Fi network connection for data instead). Its options include Data usage (viewed on a graph), Limit data usage, Data usage alert and Monthly usage cycle.
  - Press the 3 key  Data roaming access Enable this option to allow data roaming.
  - Press the 4 key  Network operators Allows you to search for networks as well as set automatic network selection.
  - Press the 5 key  Network type and strength Displays the current network type and the signal strength.
  - Press the 6 key  Access Point Names Allows you to set up APNs for data service.
  - Press the 7 key  Roaming state Displays your current roaming state.





## Emergency alerts

1. From the Wireless & networks menu screen, press the 7 key  Emergency alerts to view emergency alerts and customize your emergency alerts settings.




 


2. Press the Right soft key  Settings to view and change its settings.

## Accessibility



The Accessibility menu provides settings to make your phone easier for you to use based on your personal capabilities and/or limitations.

1. From the Home screen, press the OK key  Menu.
2. Press the Hashtag key  Settings .
3. Press the 3 key  Accessibility.




## Readout

1. From the Accessibility menu screen, press the 1 key  Readout.
2. Select a Readout setting and set it to your preference(s) using the Navigation key  to highlight your choice, then press the OK key  OK.
  - Press the 1 key  Readout.
  - Press the 2 key  Readout shortcut.
  - Press the 3 key  Readout settings.


## Larger text



1. From the Accessibility menu screen, press the 2 key Larger text.
2. Use the Navigation key  to select On or Off, then press the OK key  OK.

## Color inversion





 
1. From the Accessibility menu screen, press the 3 key  Color inversion to allow you to invert the screen colors for higher contrast.
2. Use the Navigation key  to select On or Off, then press the OK key  OK.

## Color correction




1. From the Accessibility menu screen, press the 4 key  Color correction to allow you to adjust the screen's hue and contrast.

2. Use the Navigation key  to select from Off, Protanomaly (red-green), Deuteranomaly (red-green), or Tritanomaly (blue-yellow), then press the OK key  OK to apply the setting to your phone.

## Captions




1. setting and set it to your preferences. Use the Navigation key  to highlight your choice, then press the OK key  OK to apply it to your phone.
  - Press the 1 key  Language.
  - Press the 2 key  Text size.
  - Press the 3 key  Caption style.

## Mono audio

1. From the Accessibility menu screen, press the 6 key  Mono audio to allow you to set the phone to play the same sounds through both earpieces of a connected device so you can hear everything with just one ear.
2. Use the Navigation key  to select On or Off, then press the OK key  OK.

## TTY mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.




1. From the Accessibility menu screen, press the 7  key TTY mode.
2. Use the Navigation key  to highlight a TTY mode, then press the OK key  OK to select it:
  - TTY Off: Users send and receive without TTY equipment.
  - TTY Full: Users who cannot talk or hear send and receive a text message through TTY equipment.
  - TTY HCO: Users who can hear but cannot talk send a text message and receive voice through TTY equipment.
  - TTY VCO: Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

Mode	User	Capability	Transmission/ Receiving Mode	When making communications with a non-TTY terminal
TTY Off				
TTY Full	For hearing/ verbally impaired		Text message transmission, text message receiving	Operator required
TTY + HCO	For verbally impaired	Audible	Text message transmission, voice receiving	Operator required
TTY + VCO	For hearing impaired	Able to talk	Voice transmission, text message receiving	Operator required





### Connecting TTY Equipment and a Terminal

1. Connect a TTY cable to the TTY connection on the phone (TTY connection location is the same as a headset jack).
2. Access the phone's Settings menu and set the desired TTY mode.
3. After setting a TTY mode, check the screen of the phone for the TTY icon.
4. Connect the TTY equipment to the power source and turn it on.
5. Make a phone connection to the desired number.
6. When connection is made, use the TTY equipment to type in and send a text message or send voice.
7. The voice or text message from the receiver end will appear on the TTY equipment display.

 


 

### Hearing aid

1. From the Accessibility menu screen, press the 8 key  Hearing aid.
2. Use the Navigation key  to select On or Off, then press the OK key  OK.

 


 
### Sound & notifications

1. From the Home screen, press the OK key  Menu.
2. Press the Hashtag key  Settings .
3. Press the 4 key  Sound & notifications.






 
## Volume

1. From the Sound & notifications menu screen, press the 1 key  Volume.
2. Select a Volume setting and set the level to your preference using the Navigation key , then press the OK key  OK.
  - Press the 1 key  Alert sounds.
  - Press the 2 key  Media.





## Sound with vibration


1. From the Sound & notifications menu screen, press the 2 key  Sound with vibration.
2. Use the Navigation key  to select On or Off, then press the OK key  OK to select it.
3. Press the Clear key to  exit.


## Ringtones

1. From the Sound & notifications menu screen, press the 3 key  Ringtone to set the ringtone for calls.
2. Use the Navigation key  to highlight a desired ringtone, then press the OK key  OK to select it.
  - Press the Left soft key  Play to listen to a highlighted ringtone.
  - Press the Right soft key  Options to add or delete ringtones.
3. Press the Clear key  to exit.





## Notification sounds

1. From the Sound & notifications menu screen, press the 4 key  Notification sounds to set the sound played for new notifications.
2. Use the Navigation key  to highlight a desired sound, then press the OK key  OK to select it.
  - Press the Left soft key  Play to listen to a highlighted sound.

- Press the Right soft key  Options to add or delete sound files.


3. Press the Clear key  to exit.

### Keypad sound

1. From the Sound & notifications menu screen, press the 5 key  Keypad sound.
2. Use the Navigation key  to select On or Off, then press the OK key  OK to select it.
3. Press the Clear key  to exit.

### Emergency tone

Allows you to view emergency alerts and customize your emergency alerts settings.




From the Sound & notifications menu screen, press the 6 key  Emergency tone.

- Alert: Allows you to set an alert tone same as the volume level on your phone.
- Vibrate: Enable this option to emit the vibration instead of providing an alert tone.
- Off: Allows you to disable the alert related with emergency dialing.

 


### Display

1. From the Home screen, press the OK key  Menu.
2. Press the Hashtag key  Settings .
3. Press the 5 key  Display.

 


 

### Menu layout

1. From the Display menu screen, press the 1 key  Menu layout to display your Menu screen in a grid or list.
2. Use the Navigation key  to select grid or list then press the OK key  OK to select it.




### Brightness

1. From the Display menu screen, press the 2 key  Brightness.
2. Use the Navigation key  to adjust it, then press the OK key  OK.




## Wallpaper

1. From the Display menu screen, press the 3 key  Wallpaper.
2. Select a Wallpaper type and highlight your preference using the Navigation key , then press the OK key  Select (crop and save the image, if necessary).
  - Press the 1 key  Wallpaper gallery.
  - Press the 2 key  Gallery.




## Display backlight

1. From the Display menu screen, press the 4 key  Display backlight to set the amount of time before the screen times out due to inactivity to conserve your battery power.
2. Use the Navigation key  to highlight your choice, then press the OK key  OK.

 


## Key backlight

1. From the Display menu screen, press the 5 key  Key backlight to set how long the keypad remains lit.
2. Use the Navigation key  to highlight your choice, then press the OK key  OK.

 
## Font type




1. From the Display menu screen, press the 6 key  Font type to set the font used for the phone software.
2. Use the Navigation key  to highlight your choice, then press the OK key  OK.

## Font size

1. From the Display menu screen, press the 7 key  Font size to set the size of the font used for the phone software.
2. Use the Navigation key  to highlight your choice, then press the OK key  OK.




## Clock

1. From the Display menu screen, press the 8 key  Clock to set the kind of clock displayed on the Home screen.




2. Use the Navigation key  to highlight your choice, then press the OK key  OK.
- Press the Left Soft Key  Preview to see it first.

## Phone Settings


The Phone settings menu allows you to designate specific settings to customize how you use your phone.

1. From the Home screen, press the OK key  Menu.
2. Press the Hashtag key  Settings .
3. Press the 6 key  Phone settings.







## Language

1. From the Phone settings menu screen, press the 1 key Language to set the language for your phone's software.
2. Use the Navigation key  to select your choice, then press the OK key  OK to select it.
3. Press the Clear key  to exit.










## Key Shortcuts

Shortcuts are available from the Home screen. Simply press the Navigation key  up, down, right or left to open one. You can change the shortcut for each key and also change the shortcuts provided from the Shortcut menu the Right Navigation key by default).




### Setting Navigation key shortcuts

1. From the Phone settings menu screen, press the 2 key  Key shortcuts.
2. Use the Navigation key  to highlight a shortcut key you want to set.
3. Press the Left soft key  Set to display the available shortcuts. Use the Navigation key  to highlight one, then press the OK key  OK.
4. Press the OK key  Save.

## Setting the Shortcut menu shortcuts

1. From the Phone settings menu screen, press the 2 key  Key shortcuts.
2. Use the Navigation key  to highlight the key field set as Shortcut menu, then press the Left soft key  Set.
3. Use the Navigation key  to highlight Shortcut 1, Shortcut 2, Shortcut or Shortcut 4 then press the Left soft key  Set.
4. Use the Navigation key  to highlight an item, then press the OK key  OK to set the shortcut.
5. Press the OK key  Save to save the settings you changed.
6. To reset shortcuts to their default settings, press the Right soft key  Reset.


## Storage




1. From the Phone settings menu screen, press the 3 key  Storage to view your phone's storage memory information (in text and on a bar graph).
2. Press the 1 key  Phone to view statistics for used memory, total memory, available memory and the amount of memory used by specific apps. When a microSD card is inserted in the phone, the Storage menu displays additional options.
  - SD card Allows you to view data saved in your external memory. From the Storage menu screen, press the Right soft key  :
  - Eject SD card Allows you to unmount your microSD card for safe removal from your phone.
  - Mount SD card Allows you to mount an inserted microSD card.

## USB connection




You can connect your phone to your PC to charge it and transfer items to the PC from the phone (and vice versa).

## Transferring music, photos, and videos

1. From the Phone settings menu screen, press the 4 key  USB connection.

2. Use the Navigation key  to highlight File transfer or Photo transfer, then press the OK key  OK.
3. Connect your phone to a PC using the USB cable included with your phone.
4. You can now view the mass storage content on your PC and transfer files.
5. After transferring files, return to the Phone settings menu, press the 4 key  USB connection and change the setting to Charging before disconnecting the USB cable.

### Location

1. From the Phone settings menu screen, press the 5 key  Location to set the GPS (Global Positioning System: Satellite assisted information system) mode.
2. Use the Navigation key  to highlight On or Off, then press the OK key  OK.

#### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.