

## Environmental conditions


**WARNING:** never stop a washer dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Appliance complies with European Directives: I 2006/95/EC (LVD); I 2004/108/EC (EMC); I 2009/125/EC (ErP); I 2011/65/EU (RoHS) and subsequent amendments.

## Safety instructions

**WARNING:** water may reach very high temperatures during the wash cycle.

The detergent draw is split into compartments as illustrated in figure 9:

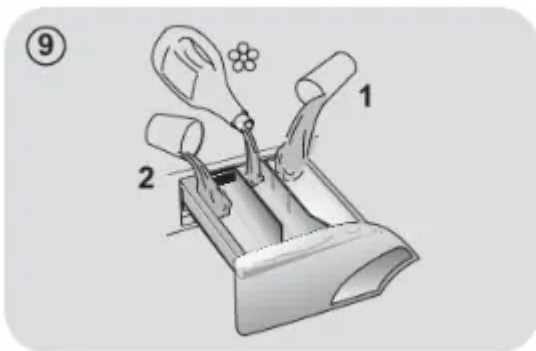

**WARNING:** contact the Customer Service Centre should the power cord need replacement.

Detergent drawer

**WARNING:** only use liquid products; the washing machine is set to automatically dose additives at each cycle during the last rinse.

**WARNING:** some detergents are hard to remove.

In this case we recommend using the specific container to be placed in the drum (example in figure 11).

## 3. PRACTICAL TIPS

**WARNING:** when sorting laundry. make sure: have eliminated metallic objects such as barrettes. pins. coins. from laundry; to have buttoned pillow cases. closed zips. tied loose belts and long robe ribbons; to have removed rollers from curtains; to have carefully read clothing washing labels; to have removed any persistent stains using specific detergents.

When washing rugs. bedcovers or other heavy clothing. we recommend you avoid centrifuging.

To wash wool. make sure the item can be machine washed and marked by the “Pure virgin wool” symbol with the “Does not mat” or “Machine washable” label.

A guide environmentally friendly and economic use of your appliance.

### Maximise The Load Size

Achieve the best use of energy, water, detergent and time by using the recommended maximum load size.

Save up to 50% energy by washing a full load instead of 2 half loads.

### **Do you need to pre-wash?**

For heavily soiled laundry only!

SAVE detergent, time, water and between 5 to 15% energy consumption by NOT selecting Prewash for slight to normally soiled laundry.

### **Is a hot wash required?**

Pretreat stains with stain remover or soak dried in stains in water before washing to

## **Load tips**

Helpful suggestions for the user

When washing heavily soiled whites, we recommend using cotton programs of 60°C or above and a normal washing powder (heavy duty) that contains bleaching agents that at medium/high temperatures provide excellent results.

For washes between 40°C and 60°C the type of detergent used needs to be appropriate for the type of fabric and level of soiling.

Normal powders are suitable for “white” or colour fast fabrics with high soiling, while liquid detergents or “colour protecting” powders are suitable for coloured fabrics with light levels of soiling.

For washing at temperatures below 40°C we recommend the use of liquid detergents or detergents specifically labeled as suitable for low temperature washing.

For washing wool or silk, only use detergents specifically formulated for these fabrics.

## **4. MAINTENANCE AND CLEANING**

To clean the washing machine exterior, use a damp cloth, avoiding abrasives, alcohol and/or solvents. The washing machine does not require any special care for ordinary cleaning: clean drawer compartments and the filter; some tips on how to move the machine or on long periods of disuse are provided below.

- Drawer cleaning
- Filter cleaning

Suggestions for moves or prolonged disuse

## 5. QUICK USER GUIDE

This washing machine automatically adapts the level of the water to the type and quantity of washing. This system gives a decrease in energy consumption and a sensible reduction in washing times.

Water pressure: min 0.5 Mpa / max 0. Mpa

Spin r.p.m.: See rating plate.

Power input / Power current fuse amp / Supply voltage: See rating plate.

## 6. CONTROLS AND PROGRAMS

- A Programme selector with OFF position
- B START/PAUSE button
- C SPIN SELECTION button
- D TEMPERATURE SELECTION button
- E DELAY START button
- F STAIN LEVEL button
- G EXTRA RINSE button
- H OPTIONS button
- I DRYING SELECTION button
- L Digital display
- M DOOR LOCKED indicator light

### Program selection

**DRYING** If you would like the drying cycle to begin automatically after washing, select the programme required using the DRYING SELECTION button.

Or you can finish the wash and then select the drying programme and load size.

Wait until the porthole locked light turns off: about 2 minutes after the program ends.

### Technical data

**ADD OR REMOVE ITEMS AFTER THE PROGRAMMES HAS STARTED (PAUSE)** | Press and hold the START/PAUSE button for about 2 seconds (some indicator light and the time remaining indicator will flash, showing that the machine has been paused). | Wait 2 minutes until the safety device unlocks the door. | After you have added or removed items, close the door and press the START/PAUSE button (the programme will start from where it left off).

CANCELLING THE PROGRAMME | To cancel the programme, set the selector to the OFF position.

**WARNING:** Don't touch the display while inserting the plug because the machine calibrates the systems during the first seconds: touching the display, the machine couldn't work properly. In this case, remove the plug and repeat the operation.

## Opening the door

A special safety device prevents the door from being opened immediately after the end of the cycle.

Wait for 2 minutes after the wash cycle has finished and the "Door Security" light has gone out before opening the door.

Programme selector with OFF position

When the programme selector is turned the display lights up to show the settings for the programme selected.

For energy saving, at the end of the cycle or with an inactivity period, the display level contrast will decrease.

N.B.: To switch the machine off, turn the programme selector to the OFF position.

The programme selector must be returned to the OFF position at the end of each cycle or when starting a subsequent wash cycle prior to the next programme being selected and started.

START/PAUSE button

Close the door BEFORE selecting the button START/PAUSE.

When the START/PAUSE button has been pressed, the appliance can take few seconds before it starts working.

The option buttons should be selected before pressing the START/PAUSE button.

If an option is selected that is not compatible with the selected programme then the option indicator first flashes and then goes off.

SPIN SELECTION button

To prevent damage to the fabrics, it is not possible to increase the speed over that which is automatically suitable during the selection of the program.

The machine is fitted with a special electronic device, which prevents the spin cycle should the load be unbalanced.

This reduces the noise and vibration in the machine and so prolongs the life of your machine.

TEMPERATURE SELECTION button

DELAY START button

STAIN LEVEL button

You can choose between three different options:

## PREWASHING

This option allows you to make a prewash and it is particularly useful for heavily soiled loads (can be used only on some programmes as shown in the table of programmes). | We recommend you use only 20% of the recommended quantities shown on the detergent pack.

## HYGIENE

With this option it is possible to hygienize the clothes. the washing programme reach a temperature of 60°C.

## NIGHT CYCLE

- This option reduces the intermediate spin speed to 400 rpm. where applicable. increase the water level during rinsing and keep the laundry immersed in water after the final rinse. in order to spread the fibre evenly. | During the phase in which the water is held in the tub. the relevant indicator light blink to show that the machine is at a standstill.
- Deselect the option to end the cycle with a spin dry (which may be reduced or cancelled using the appropriate button) and emptying phase.
- Thanks to electronic control. the water in the intermediate phases is emptied silently. making this option very useful for washing at night.
- Activated during the final cool down period. in the last 10/20 minutes of each drying phase.

## Useful tips

- The 30 minute drying programme is recommended for small loads (less than 1 kg) or only slightly damp loads.
- Your washer dryer automatically ends the cycle when it reaches the selected drying level.
- In order to ensure the correct operation of the appliance. it is advisable not to interrupt the drying phase unless it is absolutely necessary.
- The appliance calculates the time to the end of the selected programme based upon standard loading.
- During the cycle. the appliance corrects the time according to the size and composition of the load.

- Please read these notes:

## Table of programmes

PROGRAM		kg * (MAX.)					TEMP.°C		DETERGENT		
							Recommended	Max.	2		1
Perfect 20° Mix & Wash	<b>Perfect 20°C Mix &amp; Wash</b> 1) 2)	4	5,5	6	6,5	7	20°	20°	●	●	
Intensive 40°	<b>Intensive 40°</b> 1) 2)	4	5,5	6	6,5	7	40°	40°	●	●	
Hygiene 60°	<b>Hygiene 60°</b> 2)	4	5,5	6	6,5	7	60°	60°	●	●	
Perfect Rapid 59 Min	<b>Perfect Rapid 59 Min</b> 2)	2	3	3	3,5	3,5	40°	40°	●	●	
30 Min	<b>Rapid 30 Min</b> 2)	2	2,5	2,5	2,5	2,5	30°	30°	●	●	
14 Min	<b>Rapid 14 Min</b> 2)	1	1,5	1,5	1,5	1,5	30°	30°	●	●	
	<b>Drain + Spin</b> 2)	-	-	-	-	-	-	-			
	<b>Rinse</b> 2)	-	-	-	-	-	-	-	△	●	
Cottons	<b>Cottons**</b> 1) 2)	6	8	9	10	11	60°	90°	●	●	(●)
Acrylics	<b>Acrylics</b> 1) 2)	3	4	4,5	5	5,5	40°	60°	●	●	(●)
Delicates	<b>Delicates</b>	2	2,5	2,5	2,5	2,5	40°	40°	●	●	
Wool / Hand	<b>Wool / Hand</b>	2	2	2	2	2	30°	30°	●	●	
Acrylics (drying)	<b>Acrylics (drying)</b>	3	4	4,5	5	5,5	-	-			
Cottons (drying)	<b>Cottons (drying)</b>	4	5	6	7	7	-	-			
Rapid W&D 59 Min	<b>Rapid W&amp;D 59 Min</b>	1,5	1,5	1,5	1,5	1,5	30°	30°	●	●	

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.