


User Manual


What's in the Box

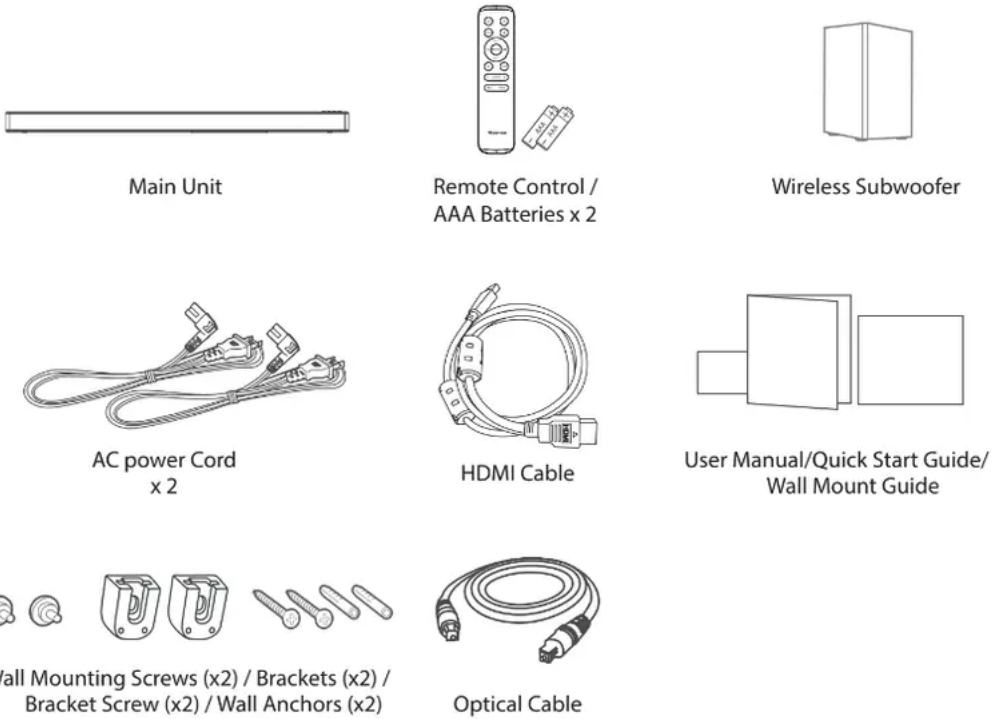

- Power cord quantity and plug type vary by regions.
- Design and specifications are subject to change without notice.

Identifying the Parts

Main Unit

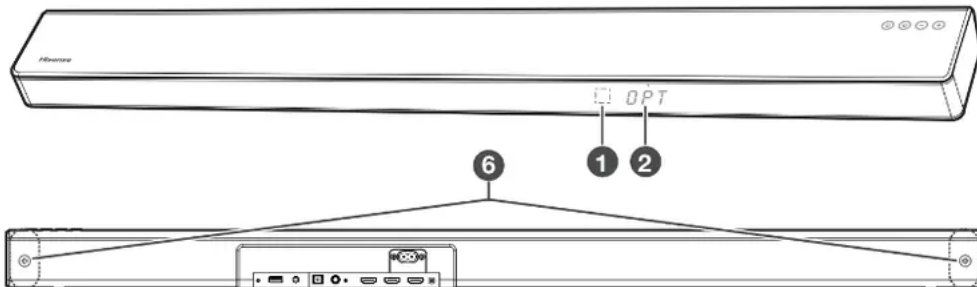

1 Remote Control Sensor

Receive signal from the remote control.

2 Display Window

Show the current status.

3  (ON/OFF) button

Switch the unit between ON and Standby mode.

4  (SOURCE) button

Select the play function.

5 VOL+/VOL- buttons

Increase/decrease the volume level.

6 Screws

Remove the screws then install the wall mounting screws into the back of the unit.

7 USB Socket

Insert the USB device to play music.

8 LINE IN Socket

Connect to an external audio device.

9 OPTICAL Socket


10 COAXIAL Socket

11 HDMI OUT (ARC) Socket Connect to a TV via HDMI cable.

12 HDMI IN 1 / HDMI IN 2 Sockets

13 AC~ Socket

Connect to the power supply.

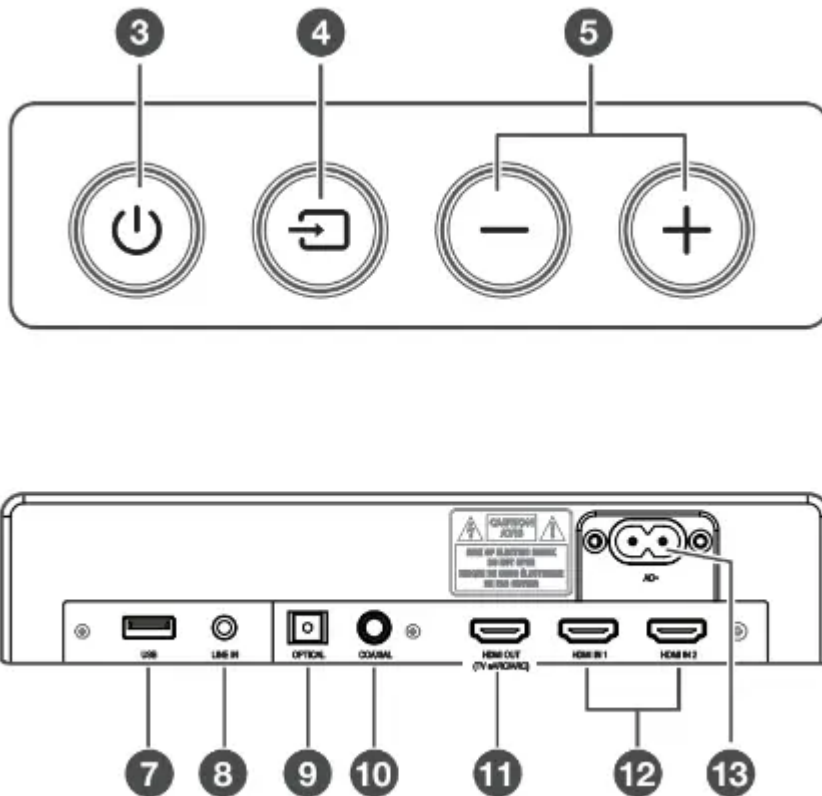

Wireless Subwoofer

1. AC~ Socket


Connect to power.

2. PAIR button






Press activate the pairing function between the main unit and the subwoofer.

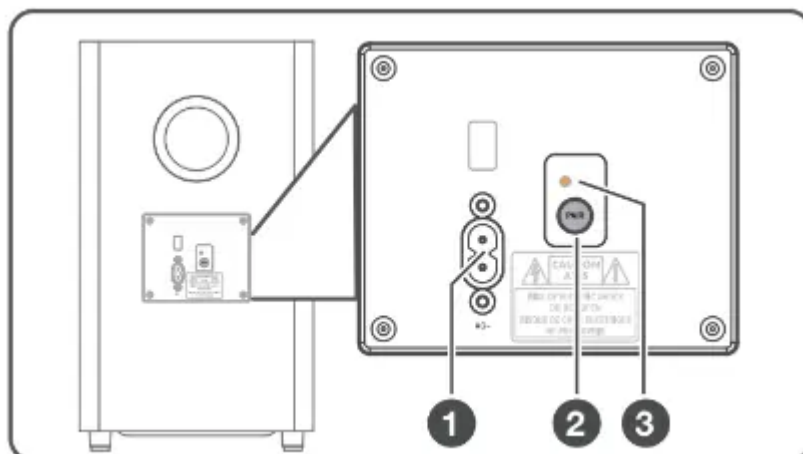
3. PAIR Indicator

Light stops blinking once the Subwoofer is paired with the Soundbar.



Remote Control

- 1  Switch the unit between ON and STANDBY mode.
- 2  (MUTE) Mute or resume the sound.
3. **SOURCE** Select the play function.
- 4  (BT) Select the Bluetooth mode.
- 5 **VOL+/VOL-** Increase/decrease the volume level.
- 6  Skip to previous/next track in BT/USB mode.
- 7  **PAIR** Play/pause/resume playback in BT/USB mode. Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.
- 8 **EQ** Select a preset sound effect.
- 9 **SURR** Adjust the surround ON/OFF.
- 10 **DIMMER +/-** Adjust display brightness.
- 11 **BASS** Press "BASS" then press VOL+/- button to increase or decrease the bass.
- 12 **TREBLE** Press "TREBLE" then press VOL+/- button to increase or decrease the treble.

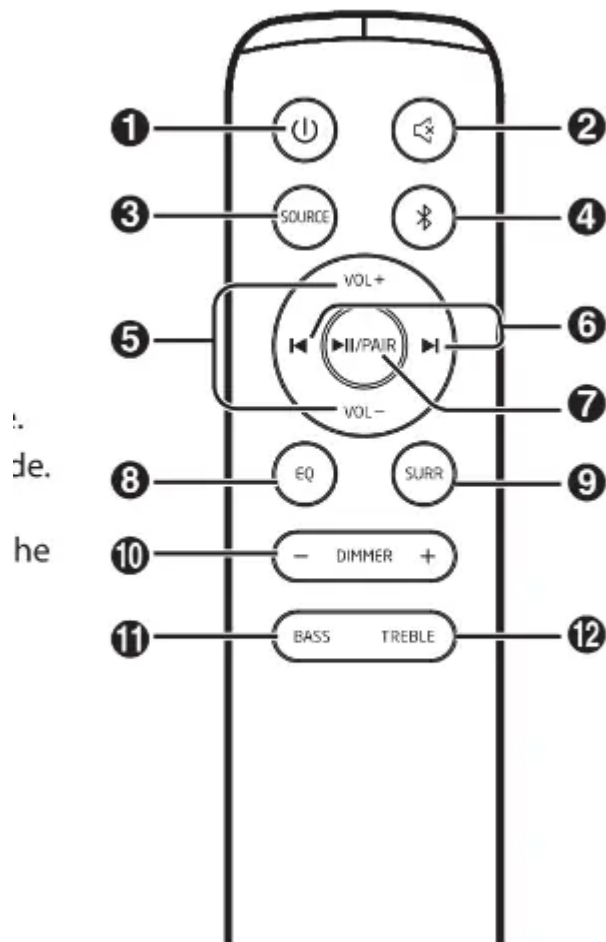


Preparations

Prepare the Remote Control

The provided Remote Control allows the unit to be operated from a distance.

- Even if the Remote Control is operated within the effective range 19.7 feet (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

Replace the Remote Control Battery

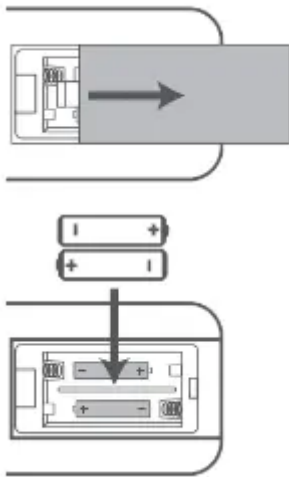

1. Press and slide the back cover to open the battery compartment of the remote control.
2. Insert two AAA size batteries (included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
3. Close the battery compartment cover.


Precautions Concerning Batteries

- Be sure to insert the batteries with correct positive “ \oplus ” and negative “ \ominus ” polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

Placement and Mounting

A If your TV is placed on a table, you can place the unit on the table directly in front of the TV stand, centered with the TV screen.


B If your TV is attached to a wall, you can mount the unit on the wall directly below the TV screen.

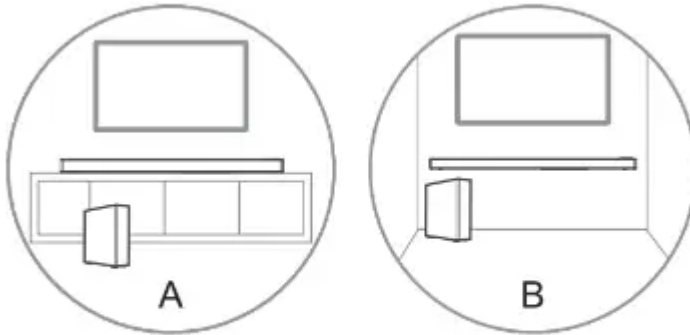

Wall Mounting (if using option-B)

Note:

- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the unit and wall brackets.
 - Additional tools (not included) are required for the installation.
 - Do not overtighten screws.
 - Keep this instruction manual for future reference.
 - Use an electronic stud finder to check the wall type before drilling and mounting.
1. Drill 2 parallel holes (Ø 5.5-6 mm each according to wall type) in the wall. The distance between the holes should be 944 mm.
 2. Firmly fix 1 dowel into each hole in the wall if necessary. Tighten the wall mount brackets on the wall with screws and screwdriver. Make sure that they are securely installed.
 3. Remove the screws at the back of the unit. Install the wall mounting screws into the back of the unit.
 4. Lift the unit onto the wall mount brackets and slot into place.

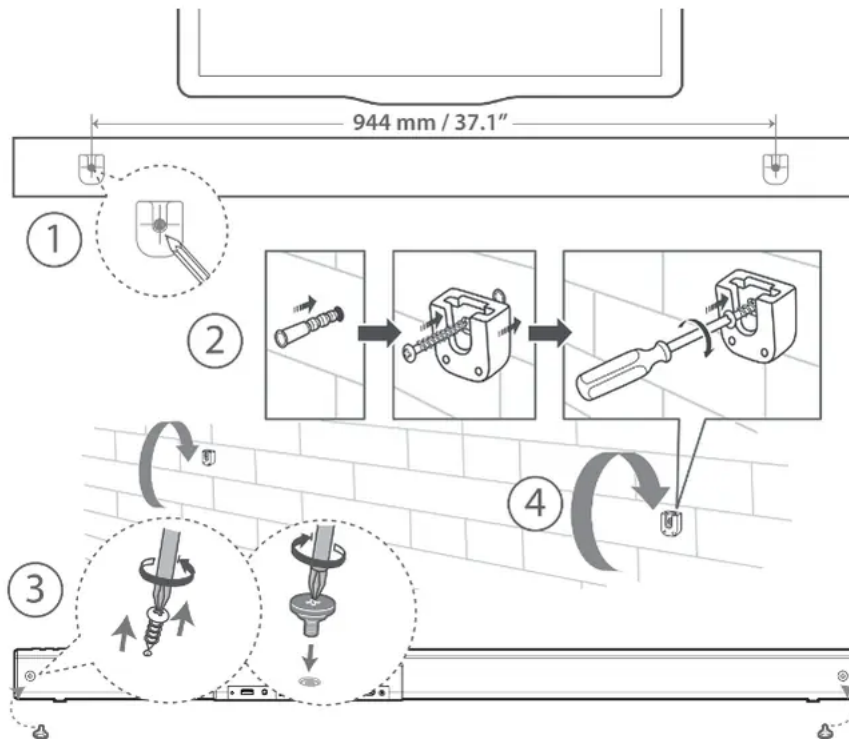

Connections

Dolby Atmos®

Dolby Atmos gives you amazing experience you have never before by overhead sound, and all the richness, clarity, and power of Dolby sound.

For using Dolby Atmos®

Dolby Atmos® is available only in HDMI mode. For the details of the connection, please refer to “HDMI Connection”.

1. To use Dolby Atmos® in HDMI 1 and HDMI 2 mode, Your TV had to support Dolby Atmos® or HDMI audio passthrough.
2. Make sure that “No Encoding” is selected for bitstream in the audio output of the connected external device (e.g. Blu-ray DVD player, TV etc.).
3. While entering Dolby Atmos / Dolby Digital / PCM format, the soundbar will show DOLBY ATMOS / DOLBY AUDIO / PCM AUDIO.
4. While the soundbar is using Dolby Atmos audio, you can only adjust the bass level of the subwoofer. All other EQ effects will not be available.

Use the HDMI Socket

Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

Using HDMI to connect the soundbar, AV equipment and TV: AV equipment

Method 1: ARC (Audio Return Channel)

The ARC (Audio Return Channel) function allows you to send audio from your ARC-compliant TV to your soundbar through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL +/- and MUTE) of the soundbar.

- Connect the HDMI cable (not included) from unit's HDMI OUT (ARC) socket to the HDMI (ARC) socket on your ARC compliant TV. Then press the remote control to select HDMI ARC.


Tips:

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to the owner's manual.

Method 2: Standard HDMI


- If your TV is not HDMI ARC-compliant, connect your soundbar to the TV through a standard HDMI connection.

1. Use an HDMI cable (not included) to connect the soundbar's HDMI OUT (ARC) socket to the TV's HDMI IN socket.
2. Use an HDMI cable (not included) to connect the soundbar's HDMI IN (1 or 2) socket to your external devices (e.g. games consoles, DVD players and blu ray).

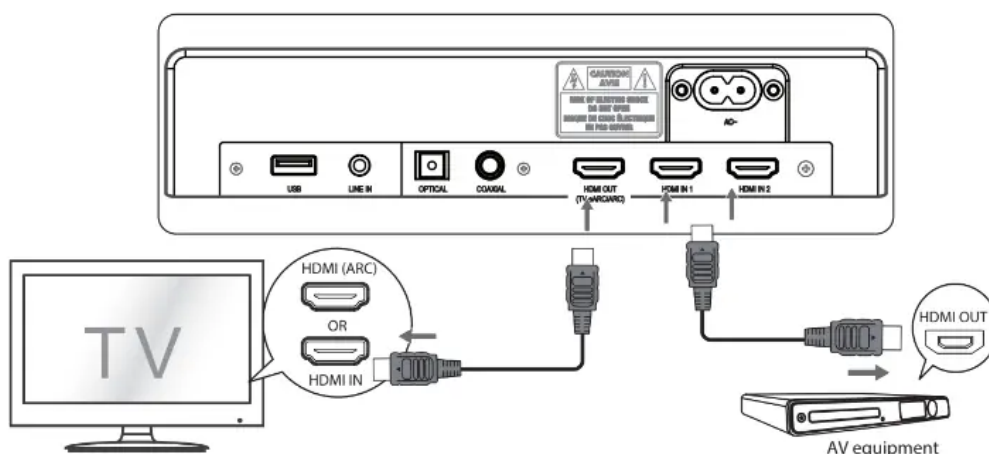


Use the OPTICAL Socket

- Remove the protective cap of the OPTICAL socket, then connect an OPTICAL cable (not included) to the TV's OPTICAL OUT socket and the OPTICAL socket on the unit.

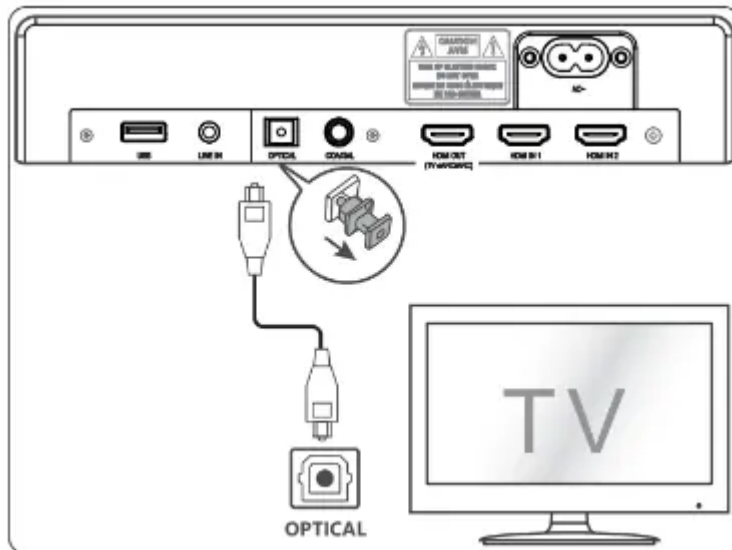

Use the COAXIAL Socket


- You also can use the COAXIAL cable (not included) to connect the TV's COAXIAL OUT socket and COAXIAL socket on the unit.

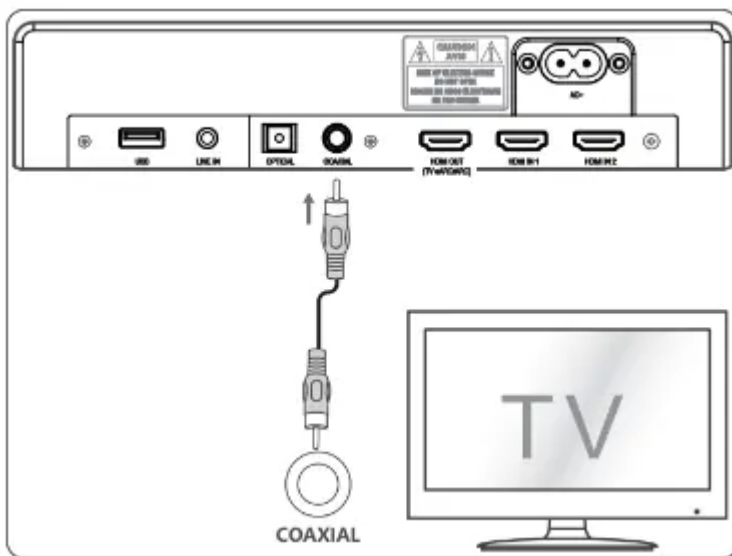

Tip: The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital (Refer to the user manual of the input source device for its audio setting details) with HDMI / OPTICAL / COAXIAL input.

Use the LINE IN Socket

A. Use a 3.5mm to 3.5mm audio cable (not included) to connect the TV's or external audio device headphone socket to the LINE IN socket on the unit.

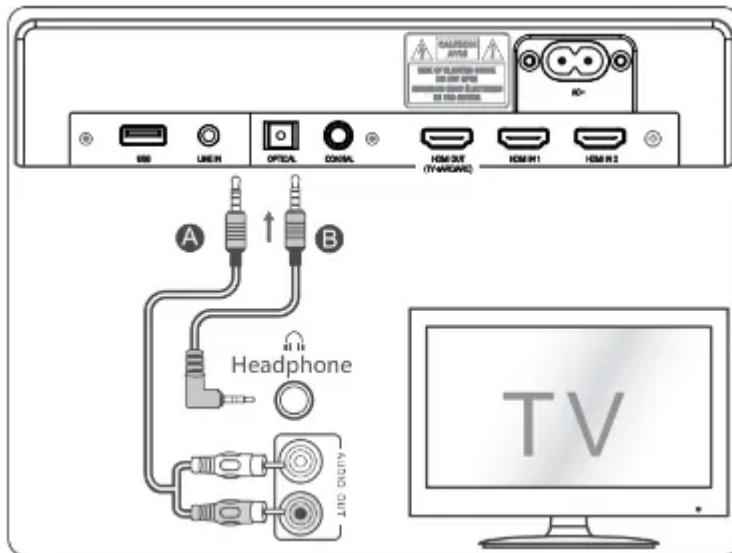

B. Use a RCA to 3.5mm audio cable (not included) to connect the TV's audio output sockets to the LINE IN socket on the unit.

Connect Power

Risk of product damage!


- Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.

Subwoofer

- Connect the mains cable to the AC~ Socket of the subwoofer and then into a mains socket.

Soundbar

- Connect the mains cable to the AC~ Socket of main unit and then into a mains socket.

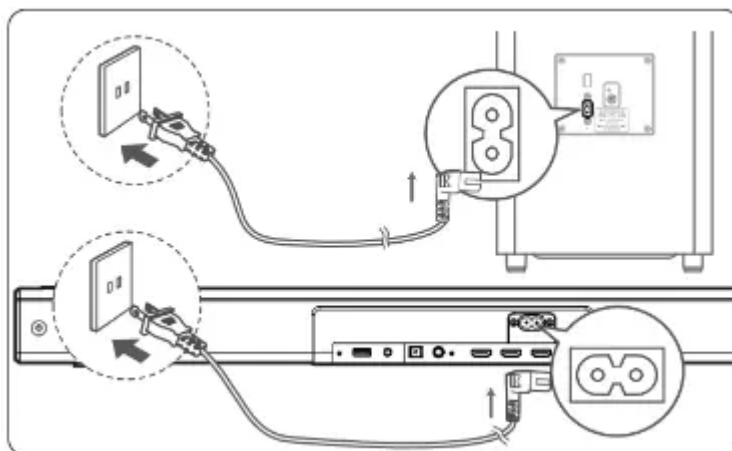

Pair up With The Subwoofer

Automatic pairing

Plug the soundbar and the subwoofer into the mains sockets and then press on the unit or remote control to switch the unit to ON mode.

The subwoofer and soundbar will automatically pair.

- When the subwoofer is pairing with the main unit, the Pair Indicator will flash fast.
- When the subwoofer is paired with the main unit, the Pair Indicator will light up.

NOTE:

- Do not press the Pair button on the subwoofer, except for manual pairing.
- If the automatic pairing fails, pair the subwoofer with the main unit manually.


Manual pairing

If no audio from the wireless subwoofer can be heard, manually pair up the subwoofer.

1. Unplug both units from the mains sockets again, then plug them in again after 3 minutes.

- Press and hold the PAIR button on the subwoofer for a few seconds.

- The Pair indicator on the subwoofer will rapidly blink.

2. Then press  on the unit or remote control to switch the unit ON.

3. The Pair indicator on the subwoofer will become solid when successful.

4. If the Pair indicator still keeps blinking, repeat step 1-3.



NOTE:

- The subwoofer should be within 6 m of the soundbar in an open area (the closer the better).
- Remove any objects between the subwoofer and the soundbar.
- If the wireless connection fails again, check if there is a conflict or strong interference e. g. interference from an electronic device) around the location. Remove these conflicts or strong interferences and repeat the above procedures.
- If the main unit is not connected with the subwoofer and it is in ON mode, the unit's POWER indicator will flash.

Basic Operation

Standby/ON

When you first connect the main unit to the mains socket, the main unit will be in Standby mode.

- Press the  button on the unit or on the remote control to switch the unit ON.
- Press the  button again to switch the unit back to STANDBY mode.
- Disconnect the mains plug from the mains socket if you want to switch the unit OFF completely.


Auto Wake

If a TV or an external device is connected, the unit will switch on automatically when the TV or the external device is switched on.

Auto Standby

- The unit automatically turns to Standby mode after about 15 minutes if the TV or the external unit is disconnected, switched off.
- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.

Select Modes

Press the  (SOURCE) button repeatedly on the unit or the SOURCE button on the remote control to select the LINE IN, OPTICAL, COAXIAL, HDMI ARC, HDMI 1, HDMI 2, BT (Bluetooth) and USB mode. The selected mode will show on the display.



Adjust the Bass/Treble Level

- Press TREBLE then press VOL+/- button to increase or decrease the treble. (treble+8 / treble-8)
- Press BASS then press VOL+/- button to increase or decrease the bass. (bass+8 / bass-8)
- After about 5 seconds, the unit will exit from bass/treble setting. The display will show the current selected mode. You may now press the VOL+ / - buttons to adjust volume.

Turn the Surround Sound ON/OFF

- Press the SURR button on the remote control to turn on the surround sound. Press this button again to turn off the surround sound.

Adjust the Volume

- Press the VOL+ / VOL- buttons on the unit or on the remote control to adjust the volume.
- If you wish to turn the sound off, press the  (MUTE) button on the remote control. Press the  (MUTE) button again or press the VOL+ / VOL- buttons to resume normal listening.

Adjust the Brightness

- Press the DIMMER +/- button on the remote control to select brightness level.

Select a Preset Sound Effect

- While playing, press the EQ button on the remote control to select desired preset equalizers:

MUSIC, MOVIE, NEWS, SPORT, NIGHT.

Set the Audio Delay

Video image processing, sometimes longer than the time required to process the audio signal. This is called “delayed.” Audio Delay feature is designed to remedy this delay. By default, the audio delay is set to 0.

- Set the audio delay, provided only for the current playback mode. (As provided in the HDMI ARC audio delay mode, the delay mode is valid only for the HDMI ARC).

1. During ON mode, press and hold the SURR button to enter the audio delay settings, the unit's display will scroll “LATENCY SET”.
2. Press the VOL+/- buttons will be a 10 ms frequency hopping to adjust the delay time. Set 200 ms maximum delay.

- The local display 0-20, corresponding to time 0 - 200ms.

3. Press the / PAIR button or exit settings 10S.

- By default this opportunity to set the audio delay memory.

Tip:

- In LINE IN / BT / USB mode, press and hold the SURR button has no effect.
- The audio delay setting is only valid for digital audio (eg HDMI 1, HDMI 2, HDMI ARC, COAXIAL, OPTICAL).

Bluetooth Operation



Pair Bluetooth-enabled Devices

The first time you connect your bluetooth device to this player, you need to pair your device to this player.

Note:

- The operational range between this player and a Bluetooth device is approximately 26 feet (8m) (without any object between the Bluetooth device and the unit).
- Before you connect a Bluetooth device to this unit, ensure you know the device's capabilities.

- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.

1. During ON mode, press the  button repeatedly on the unit or the  (BT) button on the remote control to select Bluetooth mode. "NO BT" will show on the display if the unit is not paired to any Bluetooth device.

2. Activate your Bluetooth device and select the search mode. "Hisense HS312" will appear on your Bluetooth device list.

- If you cannot find the unit, press and hold the **▶II/PAIR** button on the remote control to be searchable. The display will show "PAIR" and you will hear "Pairing" from the unit.

3. Select "Hisense HS312" in the pairing list. After successful pairing, you will hear "Paired" from the unit, and the display panel shows "BT".

4. Play music from the connected Bluetooth device.

To disconnect the Bluetooth function, you can :

- Switch to another function on the unit.
- Disable the function from your Bluetooth device. The Bluetooth device will be disconnected from the unit after the "Disconnected" voice prompt.
- Press and hold the **▶II/PAIR** button on the remote control.

Tips:

- Enter "0000" for the password if necessary.
- If no other Bluetooth device pairs with this player within two minutes, the player will recover its previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
- If the connection is lost, follow the instructions above to pair your device to the player again.


Listen to Music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.

1. Pair your device with the player.

2. Play music via your device (if it supports A2DP).
3. Use supplied remote control to control play (if it supports AVRCP).
 - To pause/resume play, press the **▶||/PAIR** button on the remote control.
 - To skip to a track, press the **◀/▶** buttons on the remote control.

USB Operation

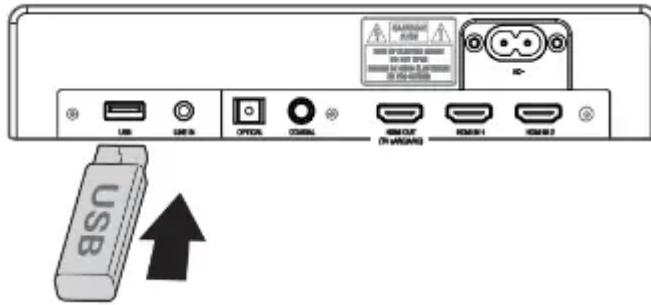

1. Insert the USB device.
2. Press **↻** the button repeatedly on the unit or press the SOURCE button on the remote control to select USB mode.
3. During playback:
 - To pause or resume play, press the **/ PAIR** button on the remote control.
 - To skip to the previous/next file, press the **◀/▶** buttons on the remote control.

Tips:

- The unit can support USB devices with up to 32 GB of memory.
- This unit can play MP3/WAV/WMA.
- Support a USB port: FAT32.

Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

No power

- Ensure that the AC cord of the apparatus is properly connected .
- Ensure that there is power at the AC outlet.
- Press standby button to turn the unit on.

Remote control does not work

- Before you press any playback control button, first select the correct source.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

No sound

- Make sure that the unit is not muted. Press MUTE or VOL+/VOL- button to resume normal listening.
- Press button on the unit or on the remote control to switch the soundbar to standby mode. Then press the button again to switch the soundbar on.
- Unplug both the soundbar and the subwoofer from the mains socket, then plug them again. Switch on the soundbar.
- Ensure the audio setting of the input source e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using digital (e.g. HDMI, OPTICAL, COAXIAL) connection.
- The subwoofer is out of range, please move the subwoofer closer to the soundbar. Make sure the subwoofer is within 5 m of the soundbar the closer the better).
- The soundbar may have lost connection with the subwoofer. Re-pair the units by following the steps on the section "Pairing the Wireless Subwoofer with the Soundbar".
- The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. device is not muted.

I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.

This is a 15 mins power off function, one of the ERPII standard requirement for saving power

- When the unit's external input signal level is too low, the unit will be turned off automatically in 15 minutes. Please increase the volume level of your external device.

The subwoofer is idle or the indicator of subwoofer do not light up.

- Please unplug power cord from the mains socket, and plug it in again after 4 minutes to reset the subwoofer.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)