


Familiarising yourself with your appliance

Controls

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

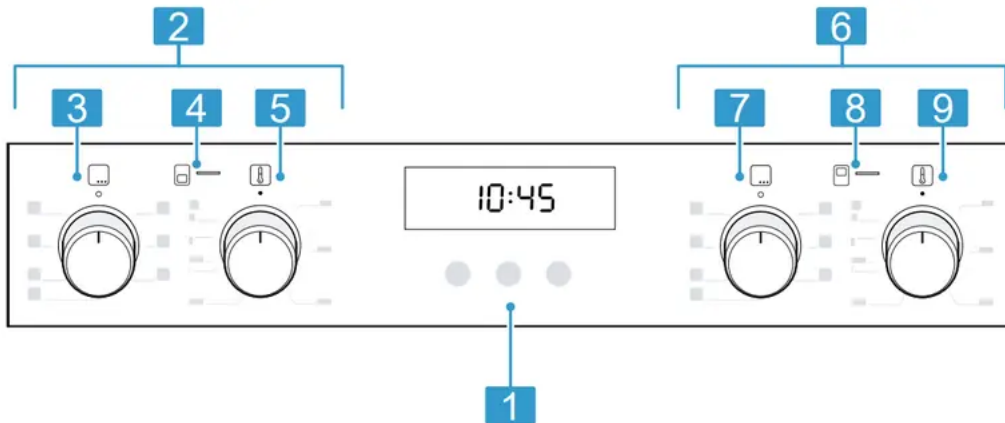

1. Buttons and display

The buttons are touch-sensitive surfaces. To select a function, simply press lightly on the relevant field.

The display shows symbols for active functions and the time-setting options.


→ "Buttons and display", Page 7


2. Main oven

Controls for the main oven

3. Function selector

Use the function selector to set the types of heating and other functions.

You can turn the function selector clockwise or anti-clockwise from the zero setting .

Depending on the appliance, the function selector can be pushed in. Press on the function selector to click it into or out of the zero setting .

→ "Types of heating and functions", Page 7


4. Heating-up control


→ "Heating-up control", Page 8

5. Temperature selector



Use the temperature selector to set the temperature for the type of heating and select settings for other functions.

You can only turn the temperature selector clockwise from the zero setting  until it offers resistance. You cannot turn it any further than this.

Depending on the appliance, the temperature selector can be pushed in. Press on the temperature selector to click it into or out of the zero setting .

→ "Temperature and setting levels", Page 8

6. Top oven





Controls for the top oven

7. Function selector



Use the function selector to set the types of heating and other functions.

You can turn the function selector clockwise or anti-clockwise from the zero setting .

Depending on the appliance, the function selector can be pushed in. Press on the function selector to click it into or out of the zero setting .

→ "Types of heating and functions", Page 7

8. Heating-up control





→ "Heating-up control", Page 8

9. Temperature selector




Use the temperature selector to set the temperature for the type of heating and select settings for other functions.




 
You can only turn the temperature selector clockwise from the zero setting  until it offers resistance. You cannot turn it any further than this.

Depending on the appliance, the temperature selector can be pushed in. Press on the temperature selector to click it into or out of the zero setting .

Buttons and display

You can use the buttons to set various functions for your appliance. The display shows the settings.

If a function is active, the corresponding symbol lights up in the display. The clock symbol  only lights up when you change the time.

Symbol	Function	Use
	Time-setting options	<p>Select the time , timer , cooking time</p> <p> and the end time .</p> <p>To select the individual time-setting options, press the button several times.</p>
	Minus Plus	<p>Decrease the setting values.</p> <p>Increase the setting values.</p>
	Childproof lock	<p>Activate or deactivate the childproof lock.</p>


Types of heating and functions

To ensure that you always use the right type of heating to cook your food, we have explained the differences and applications below.

Main oven



Symbol	Type of heating	What it's used for/how it works
	3D hot air	<p>Bake and roast on one or more levels.</p> <p>The fan distributes the heat from the ring-shaped heating element in the back wall evenly around the cooking compartment.</p>
	Gentle hot air	<p>Cook selected dishes gently on one level without preheating.</p> <p>The fan distributes the heat from the ring-shaped heating element in the back wall evenly around the cooking compartment. The food is cooked in phases using residual heat.</p> <p>Select a temperature of between 120 °C and 230 °C. Always keep the appliance door closed when cooking.</p> <p>This type of heating is used to determine the energy consumption in air recirculation mode and the energy efficiency class.</p>


Top oven 


Symbol	Type of heating	What it's used for/how it works
	Top/bottom heating	Bake on one level. The heat is emitted evenly from above and below. This type of heating is used to measure the energy consumption in the conventional mode.
	Grill, small area	Grill small quantities of steak, sausages or toast. Brown small quantities of food. The central area underneath the grill element becomes hot.
	Full-surface grill	Grill flat items such as steak, sausages, or toast. Brown food. The entire area underneath the grill element becomes hot.


Other functions

Here, you can find an overview of other functions of your appliance.

Main oven 

Symbol	Function	Use
	Oven light	Illuminate the cooking compartment without heating. → "Lighting", Page 9

Top oven 

Symbol	Function	Use
	Oven light	Illuminate the cooking compartment without heating. → "Lighting", Page 9

Temperature and setting levels

There are different settings for the types of heating and functions.

Note: For temperature settings above 250 °C, the appliance reduces the temperature to approx. 240 °C after approx. 10 minutes. If your appliance has the top/bottom heating or bottom heating types, this temperature reduction does not take place.



Symbol	Function	Use
●	Zero setting	The appliance is not heating up.
50-275	Temperature range	Set the temperature in the cooking compartment in °C.
1, 2, 3 or I, II, III	Grill settings	Set the grill settings for Full-surface grill and Grill, small area (depending on the appliance model). 1 = low 2 = medium 3 = high

Heating-up control

The heating-up indicator for the oven remains lit while the appliance is heating.

Note: Due to thermal inertia, the temperature displayed may differ slightly from the actual temperature inside the cooking compartment.

Heating-up indicator 

When the main oven  heats up, the symbol  also lights up in the display. This symbol goes out when heating is paused.

Cooking compartment

The functions in the cooking compartment make your appliance easier to use.

Rails

The rails in the cooking compartment enable you to place accessories at different heights.

→ "Accessories", Page 9

The shelf positions are numbered from bottom to top.


You can remove the rails, e. g. for cleaning.

→ "Shelf supports", Page 15

Main cooking compartment




The cooking compartment has five shelf positions.

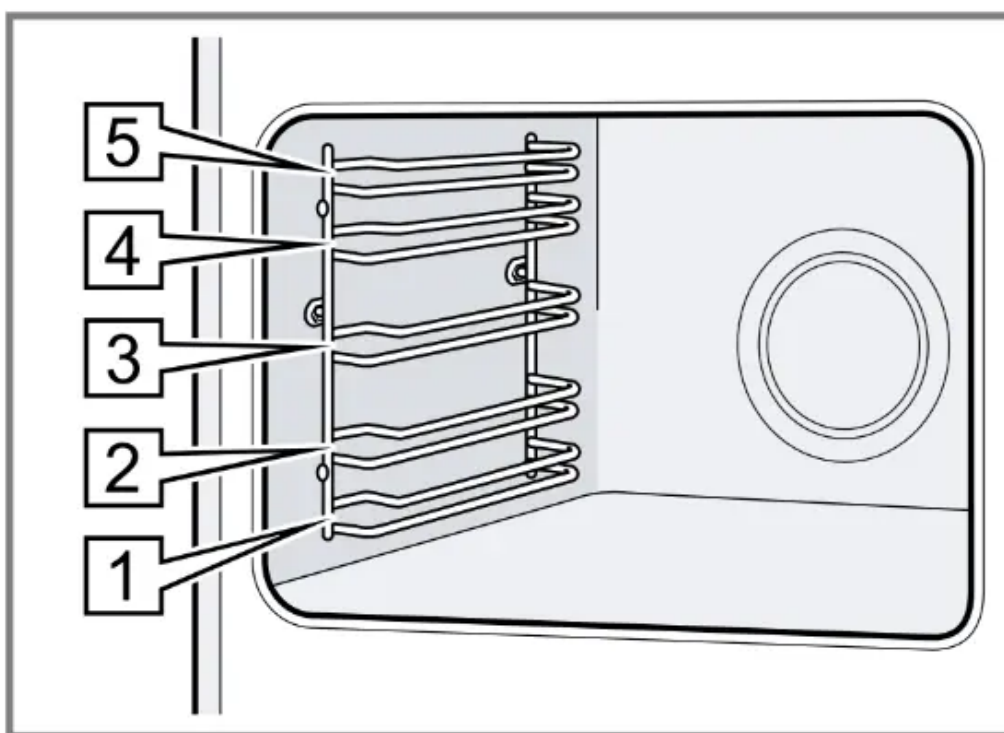

Top cooking compartment




The cooking compartment has three shelf positions.

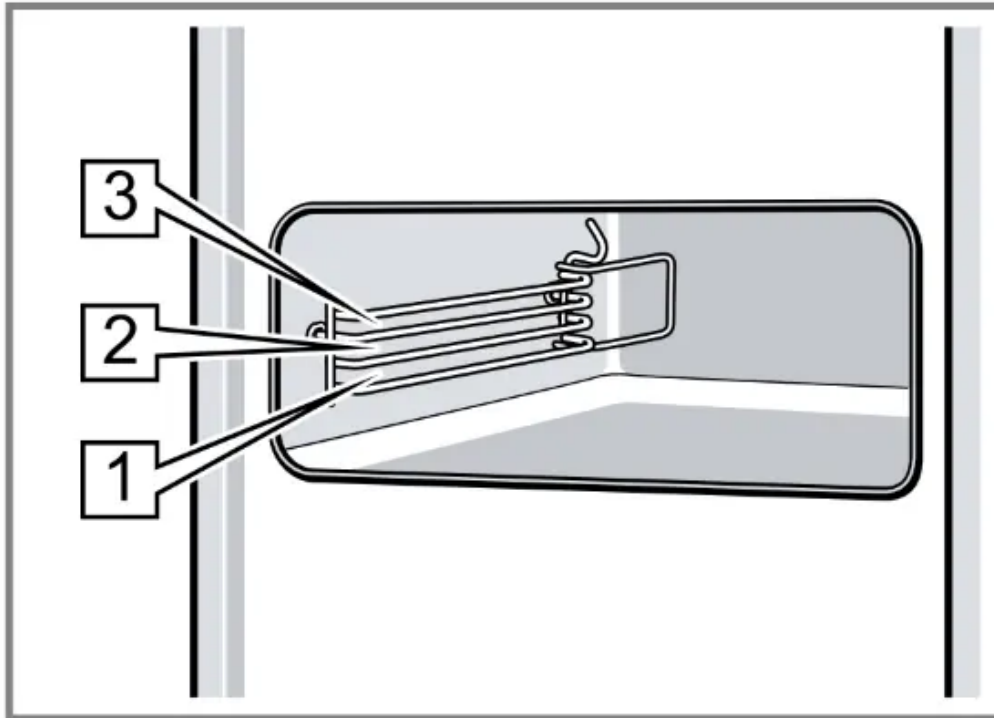

Self-cleaning surfaces

The self-cleaning surfaces in the cooking compartment are coated with a porous, matt ceramic layer and have a rough surface. When the appliance is in operation, the self-cleaning surfaces absorb splashes from roasting or grilling and break them down.

The following surfaces are self-cleaning:

Cooking compartment	Self-cleaning surfaces	Cleaning
Main cooking compartment 	Back wall	If the self-cleaning surfaces no longer clean themselves adequately during operation, heat up the cooking compartment specifically to the right temperature.

Lighting

The oven light lights up the cooking compartment.

With most types of heating and functions, the lighting lights up during operation. When the function selector is turned to bring operation to an end, the lighting goes out.

The Oven light setting on the function selector can be used to switch on the light without heating.

Cooling fan

The cooling fan switches on and off depending on the appliance's temperature. The hot air escapes above the door.

ATTENTION!

Do not cover the ventilation slot above the appliance door. The appliance overheats.

Ensure that the ventilation slots are unobstructed.

To ensure that the appliance cools down more quickly after operation, the cooling fan continues to run for a certain period afterwards.

Appliance door



If you open the appliance door during operation, the operation continues.

Accessories

Use original accessories. These have been made especially for your appliance.

Note: Accessories may become deformed if they get hot. Deformation has no effect on function. As the accessory cools down, it will regain its original shape.

The accessories supplied may differ depending on the appliance model.

Accessories		Use
Wire rack		<ul style="list-style-type: none">▪ Cake tins▪ Ovenproof dishes▪ Cookware▪ Meat, e.g. roasting joints or steak▪ Frozen meals
Universal pan		<ul style="list-style-type: none">▪ Moist cakes▪ Baked items▪ Bread▪ Large roasts▪ Frozen meals
		<ul style="list-style-type: none">▪ Catching dripping liquids, e.g. fat when grilling food on the wire rack.


Locking function

The locking function prevents the accessories from tilting when they are pulled out.


You can pull out the accessories approximately halfway without them tipping. The accessories must be inserted into the cooking compartment correctly for the tilt protection to work properly.


Sliding accessories into the cooking compartment


Always slide accessories into the cooking compartment correctly. This is the only way to ensure that accessories can be pulled out approximately halfway without tipping.


1. Turn the accessories so that the notch  is at the rear and is facing downwards.

2. Insert accessories between the two guide rods for the shelf position.

Wire rack Insert the wire rack with the open side facing the appliance door and the curved lip  facing downwards.

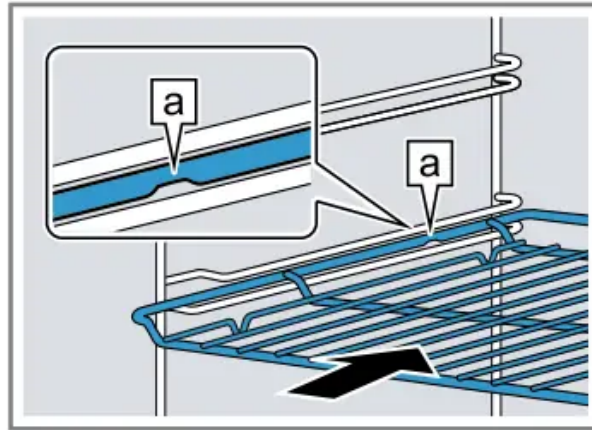

Baking tray
E.g. universal pan or baking tray Slide the tray, e.g. the universal pan, in with the sloping edge  facing the appliance door.

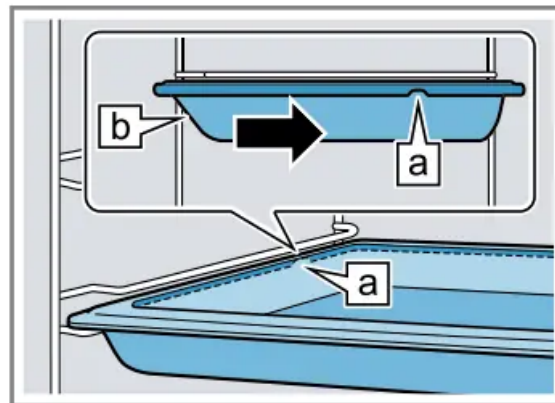


3. Push the accessory all the way in, making sure that it does not touch the appliance door.

Note: Take any accessories that you will not be using out of the cooking compartment while the appliance is in operation.


Combining accessories

 You can combine the wire rack with the universal pan to catch any liquid that drips down.

1. Place the wire rack on the universal pan so that both spacers  are on the rear edge of the universal pan.

2. Insert the universal pan between the two guide rods for a shelf position. In so doing, the wire rack is on top of the upper guide rod.

Wire rack on universal pan

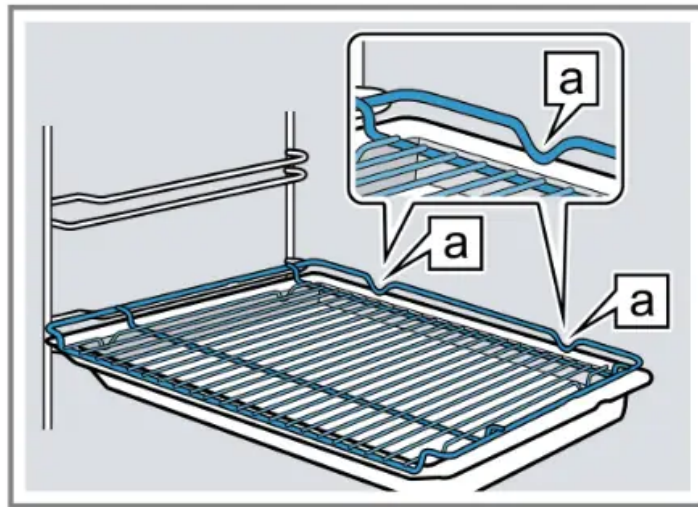

Other accessories

You can purchase other accessories from our after-sales service, specialist retailers or online.

You will find a comprehensive range of products for your appliance in our brochures and online: www.bosch-home.com

Accessories vary from one appliance to another. When purchasing accessories, always quote the exact product number (E no.) of your appliance.

You can find out which accessories are available for your appliance in our online shop or from our after-sales service.

Before using for the first time


Configure the settings for initial start-up. Clean the appliance and accessories.

Initial use

You need to make settings for initial use before you can use your appliance.

Setting the time on the clock

Once the appliance has been connected to the mains or following a power failure, the time flashes on the display. The time starts at "12:00". Set the current time.

Requirement: The function selector must be set to the "Off" position .

1. Use the - or + button to set the time.



2. Press the button .





- ✓ The time that is set appears on the display.

Cleaning the appliance before using it for the first time

Clean the cooking compartment and accessories before using the appliance to prepare food for the first time.

1. Remove any accessories and leftover packaging, such as polystyrene pellets, from the cooking compartment.
2. Before heating the appliance, wipe the smooth surfaces in the cooking compartment with a soft, damp cloth.
3. Keep the room ventilated while the appliance is heating.
4. Set the type of heating and temperature.

→ "Basic operation", Page 11

	Main oven 	Top oven 
Type of heating	3D hot air 	Top/bottom heating 
Temperature	Maximum	240 °C
Cooking time	1 hour	1 hour


5. Switch off the appliance after the specified cooking time.
6. Wait until the cooking compartment has cooled down.
7. Clean the smooth surfaces with soapy water and a dish cloth.
8. Clean the accessories using soapy water and a dish cloth or soft brush.

Basic operation

Switching on the appliance

Turn the function selector to any position other than the "Off" position . a The appliance is switched on.

Switching off the appliance

- Turn the function selector to the "Off" position .

✓ The appliance is switched off.

Setting the type of heating and temperature

1. Use the function selector to set the type of heating.
2. Use the temperature selector to set the temperature or grill setting.

✓ The appliance starts heating after a few seconds.

3. When your food is ready, switch off the appliance.

Tip: The most suitable type of heating for your food can be found in the description of the type of heating.

Changing the type of heating

You can change the type of heating at any time.

- Use the function selector to set the required type of heating.

Changing the temperature

You can change the temperature at any time.

 
- Use the temperature selector to set the required temperature.


 




Time-setting options

Your appliance has different time-setting options, with which you can control its operation.

Overview of the time-setting options





With the button , select the different time-setting options.

Time-setting option	Use
Timer 	The timer can be set independently of the appliance when it is in operation. It does not affect the appliance.
Cooking time 	Main oven  : If you set a cooking time, operation of the appliance stops automatically once this time has elapsed.
End time 	Main oven  : For the cooking time, you can set the time at which operation ends. The appliance starts up automatically so that it finishes cooking at the required time.
Time 	You can set the time.

Setting the timer

The timer runs independently of the appliance when it is in operation. The timer can be set when the appliance is switched on or off, up to 23 hours and 59 minutes. The timer has its own audible signal so that you can tell whether it is the timer or a cooking time which has elapsed.

Note: The timer and cooking time cannot count down at the same time. If a cooking time has already been set, you cannot set the timer.

Press the  button repeatedly until  is highlighted in the display.

Use the - or + button to set the timer duration.

Button	Default value
—	5 minutes
+	10 minutes

The timer duration can be set in 30-second increments up to 10 minutes. Above 10 minutes, the time increments become longer the higher the value.

- ✓ The timer starts and the timer duration begins to count down after a few seconds.

✓ An audible signal sounds and the timer duration is zero in the display when the timer duration has elapsed.

3. Once the timer duration has elapsed:

- Press any button to switch off the timer.

Changing the timer

You can change the timer duration at any time.

Requirement:  is highlighted on the display.

- Use the - or + button to change the timer duration.


✓ The appliance applies the change after a few seconds.

Cancelling the timer

You can cancel the timer duration at any time.


Requirement:  is highlighted on the display.

Use the - button to reset the timer duration to zero.

✓ After a few seconds, the appliance applies the change and  goes out.

Setting the cooking time

You can set a cooking time for operation of up to 23 hours 59 minutes.

Requirement: A type of heating and a temperature or setting are set for the main oven .

1. Press the  button repeatedly until  is highlighted in the display.

2. Use the - or + button to set the cooking time.

Button	Default value
—	10 minutes
+	30 minutes

The cooking time can be set in 1-minute increments up to 1 hour, and then in 5-minute increments.

✓ The appliance starts heating and the cooking time counts down after a few seconds.

 
- ✓ If the cooking time has elapsed, an audible signal sounds and the display shows the cooking time as zero.

3. When the cooking time has elapsed:

- Press any button to end the audible signal before it sounds.
- To set a cooking time again, press the button.
- When your food is ready, switch off the appliance.

Changing the cooking time

You can change the cooking time at any time.


Requirement:  is highlighted on the display.

- Change the cooking time using the or button.

- ✓ The appliance applies the change after a few seconds.

Cancelling the cooking time

 You can cancel the cooking time at any time.

Requirement:  is highlighted on the display.

- Reset the cooking time to zero using the button.

- ✓ After a few seconds, the appliance applies the change and continues to heat without a cooking time.


Setting the end time


 
You can delay the time at which cooking is due to finish by up to 23 hours and 59 minutes.

Notes

- The end time cannot be set for types of heating with grill function.
- In order to achieve a good cooking result, do not delay the end time once the appliance is already in operation.
- Food will spoil if you leave it in the cooking compartment too long.

Requirements

- A type of heating and a temperature or setting are set for the main oven  .
- A cooking time is set.

1. Press the  button repeatedly until  is highlighted in the display.

2. Press the - or + button.

✓ The display shows the calculated end time.

3. Use the or button to delay the end time.

✓ After a few seconds, the appliance applies the set- ting and the display shows the set end time.

✓ Once the calculated start time has been reached, the appliance starts heating up and the cooking time starts counting down.

 
✓ Once the time has elapsed, an audible signal sounds and the display shows the cooking time as zero.

4. When the cooking time has elapsed:

- Press any button to end the signal prematurely.
- To set another cooking time, press the button.
- When your food is ready, switch off the appli- ance.

Changing the end time

In order to achieve a good cooking result, you can only change the set end time before operation starts and the cooking time starts counting down.


Requirement:  is highlighted on the display.

Use the - or + button to delay the end time.

✓ The appliance applies the change after a few seconds.

Cancelling the end time

 You can delete the set end at any time.


Requirement:  is highlighted on the display.

- Reset the end time to the current time plus the set cooking time using the button.

✓ After a few seconds, the appliance applies the change and starts heating up. The cooking time counts down.

Setting the time on the clock

Once the appliance has been connected to the mains or following a power failure, the time flashes on the display. The time starts at "12:00". Set the current time.

Requirement: The function selector must be set to the "Off" position .


1. Use the - or + button to set the time.


2. Press the  button.

✓ The time that is set appears on the display.

Changing the time on the clock

You can change the time on the clock at any time.


Requirement: The function selector must be set to the "Off" position .

1. Press and hold the  button until the clock flashes on the display.

2. Use the - or + button to change the time.


✓ The appliance applies the change after a few seconds.


Childproof lock


Secure your appliance to prevent children from accidentally switching on the main oven  or changing the settings.

Note: After a power cut, the childproof lock is deactivated.

Activating and deactivating the childproof lock

Requirement: The function selector must be set to the "Off" position .

• To activate the childproof lock, press and hold the  button until **SAFE** appears in the display.

◦ To deactivate the childproof lock, press and hold  the button until **SAFE** goes out in the display.

Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

Cleaning products

In order to avoid damaging the various oven surfaces on the appliance, do not use unsuitable cleaning products.

Suitable cleaning agents

Only use cleaning agents that are suitable for the different surfaces on your appliance.

Follow the instructions on cleaning the appliance.

→ Cleaning the appliance", Page 14

Appliance front

Surface	Suitable cleaning agents	Notes
Stainless steel	<ul style="list-style-type: none">• Hot soapy water• Special stainless steel cleaning products suitable for hot surfaces	To prevent corrosion, remove any limescale, grease, starch or albumin (e.g. egg white) stains on stainless steel fronts immediately. Apply a thin layer of the stainless steel cleaning product with a soft cloth.
Plastic or painted surfaces E.g. control panel	<ul style="list-style-type: none">• Hot soapy water	Do not use glass cleaner or a glass scraper.

Appliance door

Area	Suitable cleaning agents	Notes
Door panels	<ul style="list-style-type: none"> • Hot soapy water 	<p>Do not use a glass scraper or a stainless steel wool.</p> <p>Tip: Remove the door panels in order to clean them thoroughly. → "Appliance door", Page 16</p>
Door cover	<ul style="list-style-type: none"> • Made of stainless steel: Stainless steel cleaner • Made of plastic: Hot soapy water 	<p>Do not use glass cleaner or a glass scraper.</p> <p>Tip: Remove the door cover for thorough cleaning. → "Appliance door", Page 16</p>
Door handle	<ul style="list-style-type: none"> • Hot soapy water 	<p>To avoid permanent stains, remove descaling agents from the door handle immediately.</p>
Door seal	<ul style="list-style-type: none"> • Hot soapy water 	<p>Do not remove or scrub.</p>

Cooking compartment

Area	Suitable cleaning agents	Notes
Enamel surfaces	<ul style="list-style-type: none"> • Hot soapy water • Vinegar water • Oven cleaner 	<p>Soak any heavily soiled areas and use a brush or steel wool. Leave the appliance door open to dry the cooking compartment after cleaning it.</p> <p>Notes</p> <ul style="list-style-type: none"> • Enamel burns at very high temperatures, causing minor discoloration. The functionality of your appliance is not affected by this. • The edges of thin trays cannot be completely enamelled and may be rough. This does not impair corrosion protection. • Food residues will leave a white coating on the enamel surfaces. The coating does not pose a health risk. The functionality of your appliance is not affected by this. You can remove residues with lemon juice.
Self-cleaning surfaces		<p>Follow the instructions for self-cleaning surfaces.</p> <p>→ "Cleaning self-cleaning surfaces in the main cooking compartment", Page 14</p>
Glass cover for the oven light	<ul style="list-style-type: none"> • Hot soapy water 	<p>Use oven cleaner to remove very heavy soiling.</p>
Rails	<ul style="list-style-type: none"> • Hot soapy water 	<p>Soak any heavily soiled areas and use a brush or steel wool.</p> <p>Tip: Remove the shelf supports for cleaning.</p> <p>→ "Shelf supports", Page 15</p>
Accessories	<ul style="list-style-type: none"> • Hot soapy water • Oven cleaner 	<p>Soak any heavily soiled areas and use a brush or steel wool.</p> <p>Enamelled accessories are dishwasher-safe.</p>

Cleaning the appliance

In order to avoid damaging the appliance, you must clean your appliance only as specified, and with suitable cleaning products.

Requirement: Read the information on cleaning products.

→ "Cleaning products", Page 13

1. Clean the appliance using hot soapy water and a dish cloth.
 - For some surfaces, you can use alternative cleaning agents. → "Suitable cleaning agents", Page 13
2. Dry with a soft cloth.

Cleaning self-cleaning surfaces in the main cooking compartment

The back wall in the main cooking compartment is self-cleaning. The self-cleaning surfaces are coated with a porous, matt ceramic layer and have a rough surface. When the appliance is in operation, the self-cleaning surfaces absorb splashes from baking, roasting or grilling and break them down. If the self-cleaning surfaces no longer clean themselves adequately during operation, heat up the cooking compartment specifically to the right temperature.

ATTENTION!

If you do not clean the self-cleaning surfaces regularly, they may become damaged.

- If dark stains are visible on the self-cleaning surfaces, heat up the cooking compartment.
- Do not use oven cleaner or abrasive cleaning aids. If oven cleaner accidentally comes into contact with the self-cleaning surfaces, dab it off immediately using water and a sponge cloth. Do not rub.

1. Remove accessories and cookware from the cooking compartment.
2. Detach the rails and remove them from the cooking compartment.
3. Use a detergent solution and a soft cloth to remove heavy soiling:
 - From the smooth enamel surfaces
 - From the inside of the appliance door
 - From the glass cover for the oven light

This prevents stains that cannot be removed.

4. Remove any objects from the cooking compartment.
5. The cooking compartment must be empty.
6. Use the function selector to set 3D hot air.

✓ Use the temperature selector to set the maximum temperature. a The appliance starts heating after a few seconds.

7. Switch off the appliance after one hour.

8. Once the appliance has cooled down, wipe the cooking compartment with a damp cloth.

Note: Reddish marks may appear on the self-cleaning surfaces. This is residue from food. These spots are not harmful and are not rust. These marks do not impair the cleaning ability of the self-cleaning surfaces.

9. Attach the rails.


Shelf supports

To clean the rails and the cooking compartment, or to replace the rails, you can remove these.

Detach the rails in the main cooking compartment

1. Lift the rail forwards slightly **1** and detach it **2** .

2. Pull the whole rail to the front **3** and remove it.

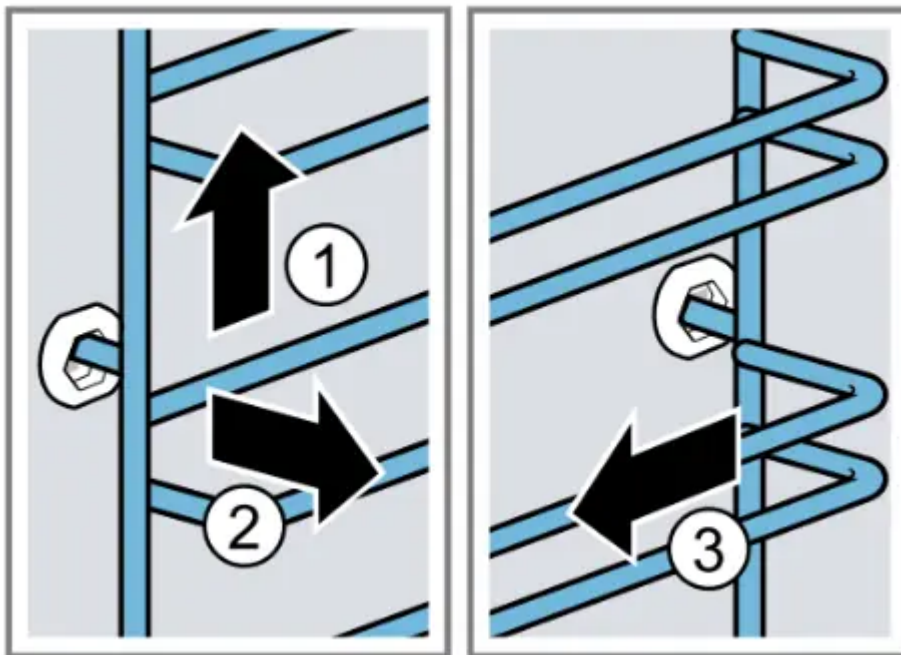


3. Clean the rail.

→ "Cleaning products", Page 13

Attaching the rails in the main cooking compartment




1. First, push the rail into the middle of the rear socket **1** until the rail rests against the cooking compartment wall, and then push this back **2** .
2. Push the rail into the front socket **3** until the rail also rests against the cooking compartment wall, and then press this downwards **4** .

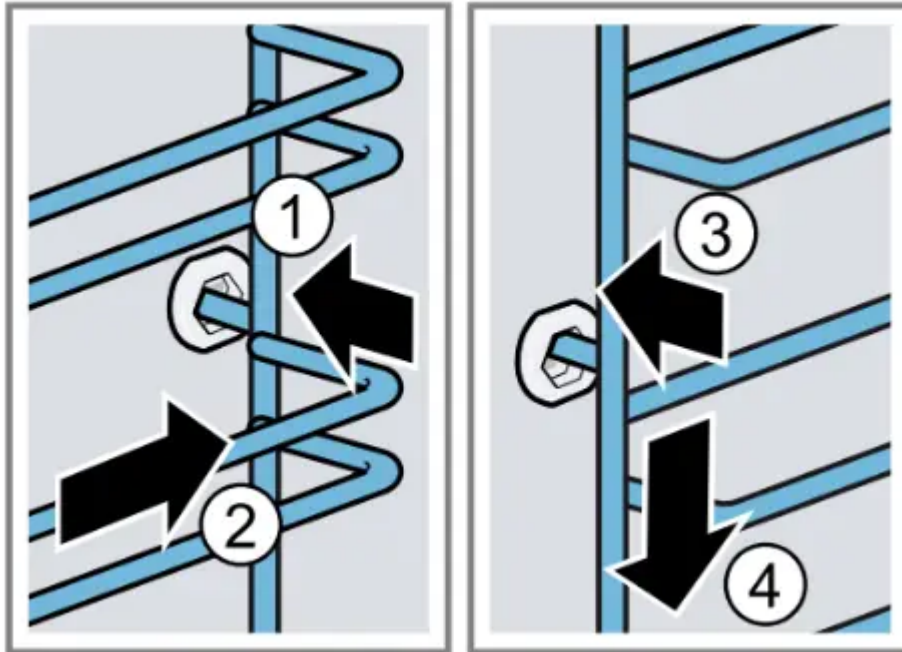

Detaching the rails in the top cooking compartment



1. Lift the rail forwards slightly **1** and detach it **2** .
2. Pull the rail to the front **3** and remove it **4**.

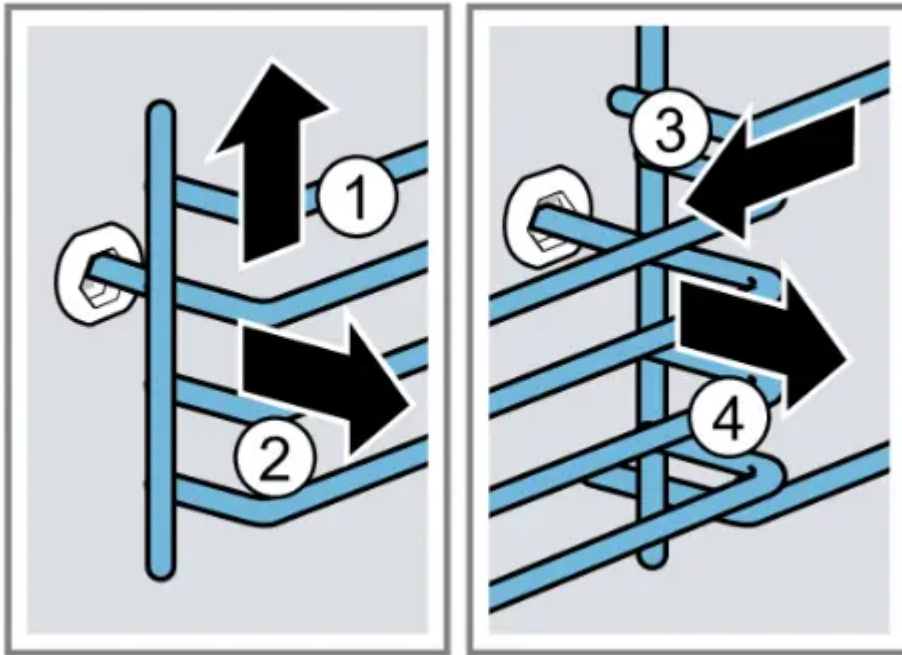

3. Clean the rail.


→ "Cleaning products", Page 13

Attaching the rails in the top cooking compartment



1. First, push the rail into the middle of the rear socket **1** until the rail rests against the cooking compartment wall, and then push this back **2**.

2. Push the rail into the front socket **3** until the rail also rests against the cooking compartment wall, and then press this downwards **4**.

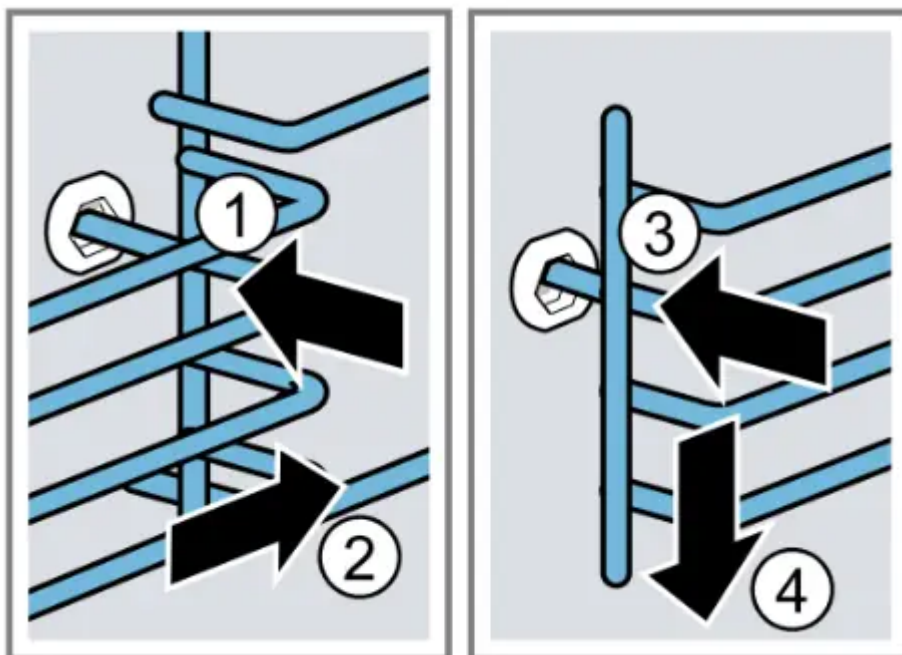


Appliance door

To ensure that your appliance retains its appearance and remains fully functioning for a long time, you can detach the appliance door and clean it.

Detaching the lower appliance door


1. Open the appliance door fully.
2. Open the locking levers on the left- and right-hand hinges.

Locking levers opened

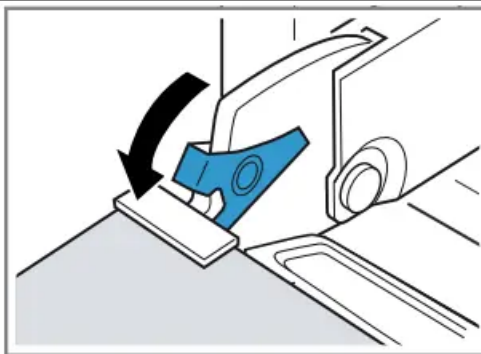

The hinge is now se-cured and cannot snap shut.


Locking levers closed

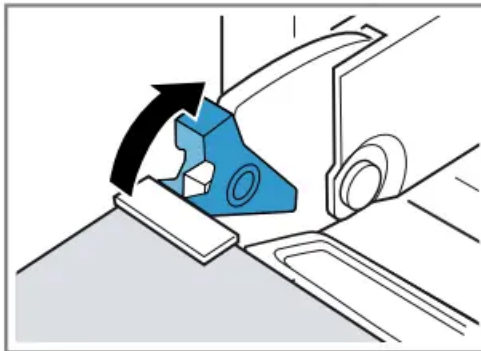

The appliance door is secured and cannot be detached.

✓ The locking levers are open. The hinges are now se-cured and cannot snap shut.


3. Close the appliance door fully **1** . Grab hold of the appliance door with both hands (on the left and right) and pull it upwards and out **2**.

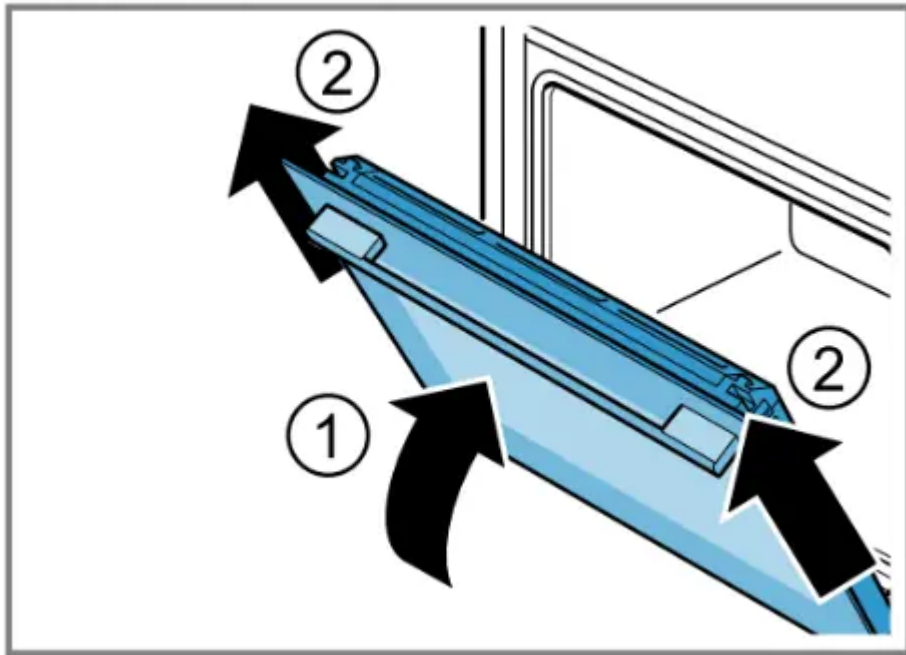

4. Carefully place the appliance door on a level sur- face.

Attaching the lower appliance door

1. Slide the appliance door straight onto the two hinges 1. Slide the appliance door on as far as it will go.
2. Open the appliance door fully.
3. Close the locking levers on the left- and right-hand hinges 2.

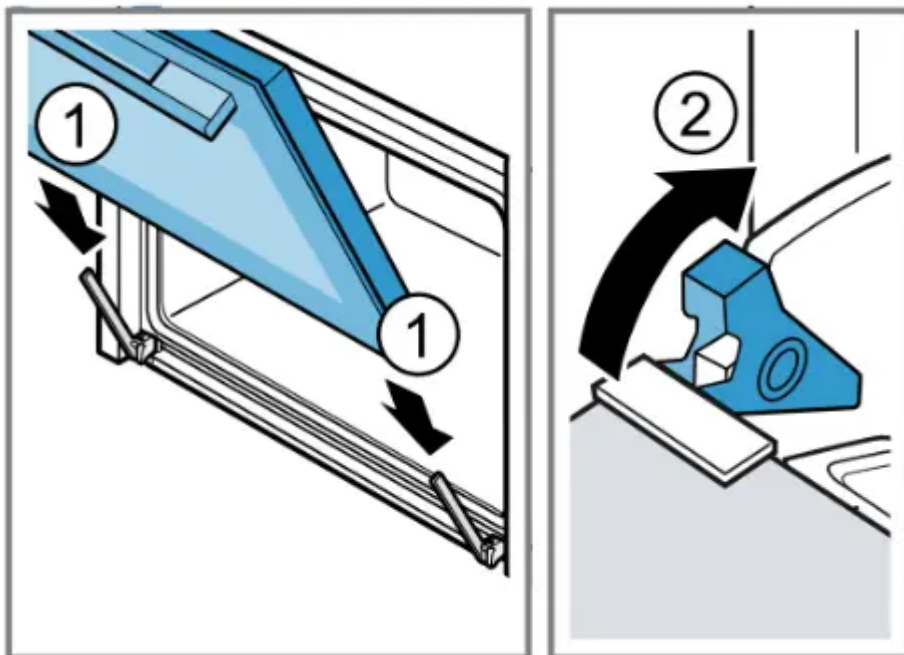

- ✓ The locking levers are closed. The appliance door is secured and cannot be detached.

4. Close the appliance door.


Removing the door panes from the lower the appliance door



1. Open the appliance door fully.
2. Open the locking levers on the left- and right-hand hinges **1**.


- ✓ The locking levers are open. The hinges are now se- cured and cannot snap shut.

3. Close the appliance door fully **2**.

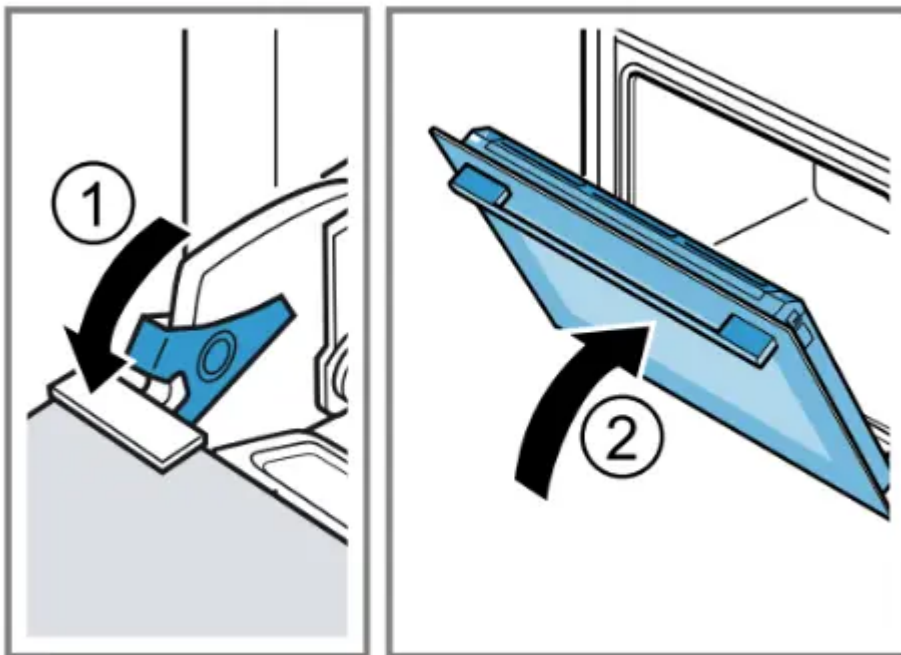


4. Push on the left- and right-hand side of the door cover from the outside **1** until it is released.

5. Remove the door cover **2**.

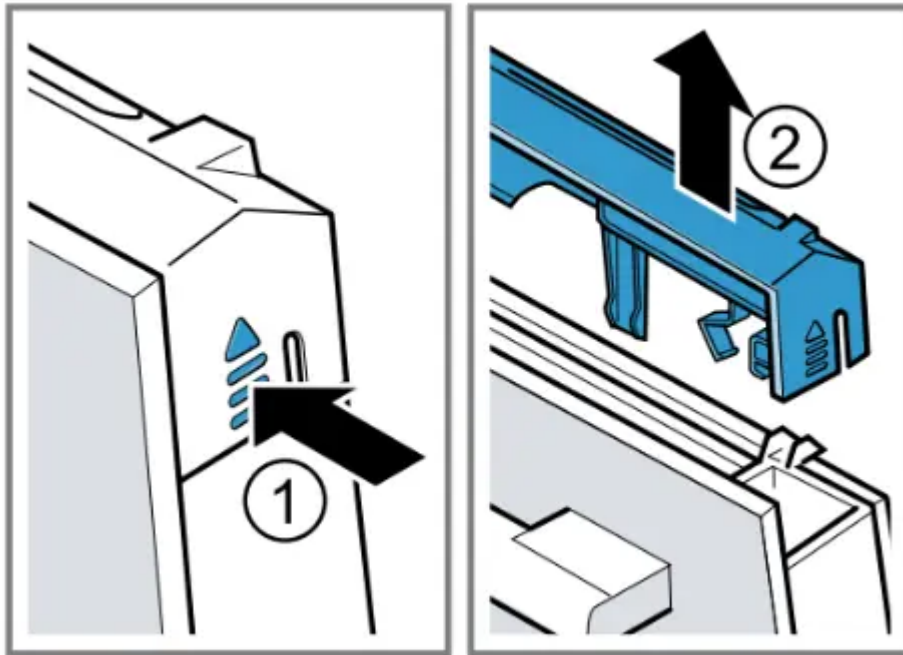



6. Lift out the inner pane and set it down carefully on a flat surface.

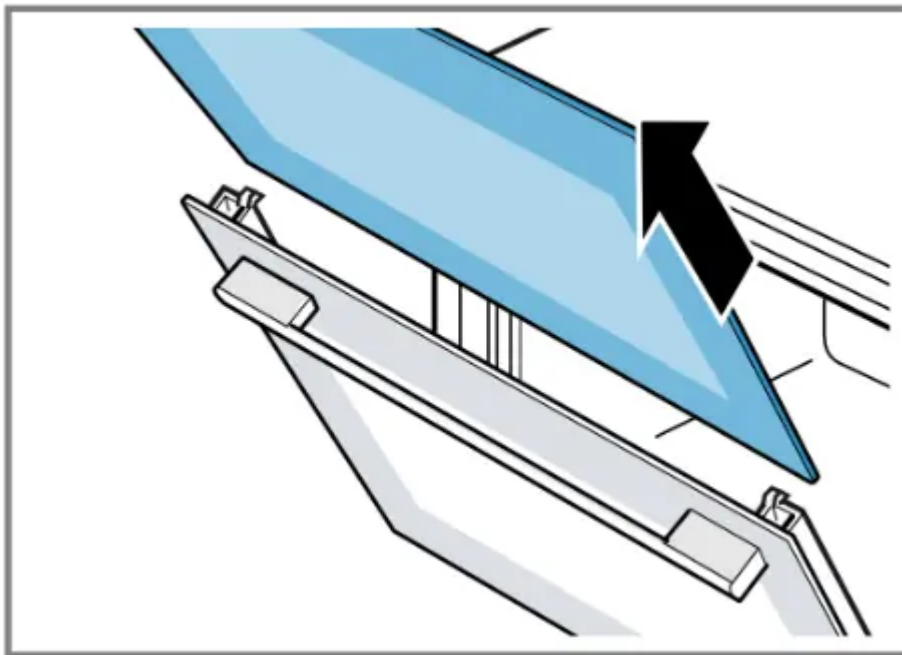


7. If necessary, you can remove the condensate trough for cleaning.


- Open the appliance door.
- Tilt the condensate trough upwards and remove it.

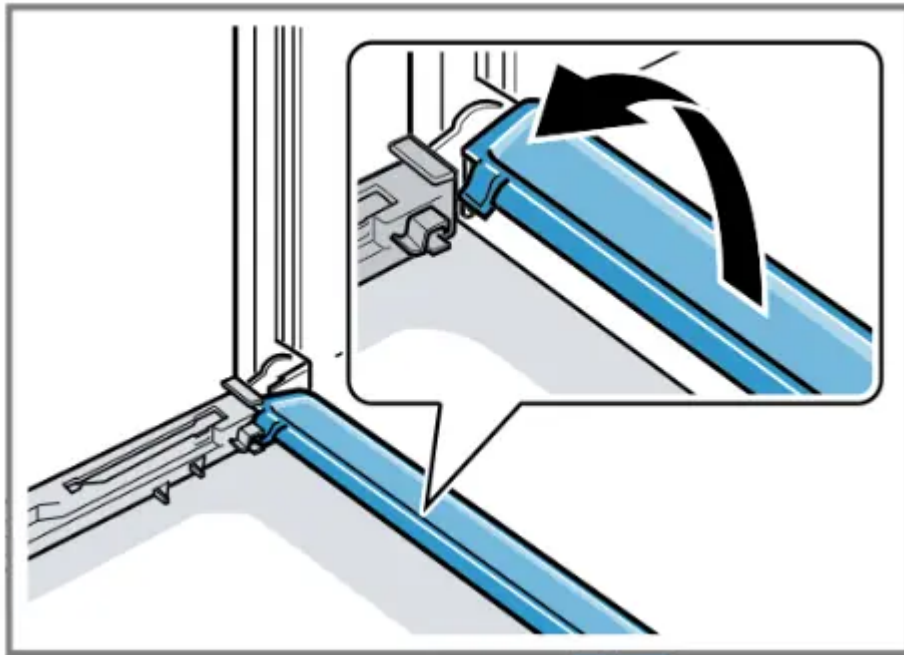


8. Clean the removed door panes on both sides with glass cleaner and a soft cloth.
9. Clean the condensate trough with a cloth and hot soapy water.
10. Clean the appliance door. → "Suitable cleaning agents", Page 13
11. Dry the door panes and refit them. → "Installing the door panes for the lower the appliance door ", Page 18

Installing the door panes for the lower the appliance door


1. Open the appliance door fully.
2. Place the condensate trough vertically in the re- tainer  and turn it downwards.

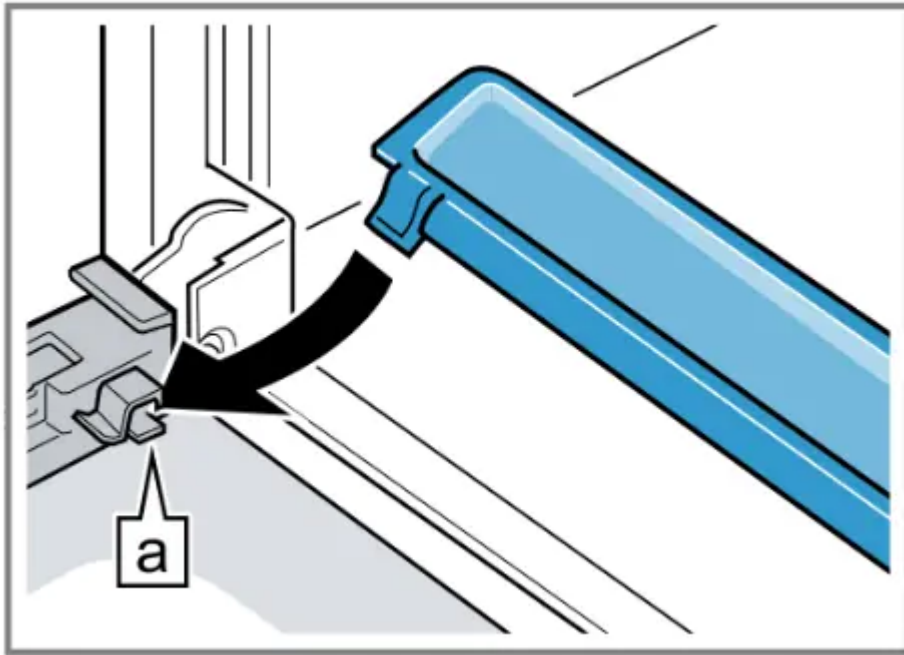


3. Slide the inner pane into the left- and right-hand retainers a.

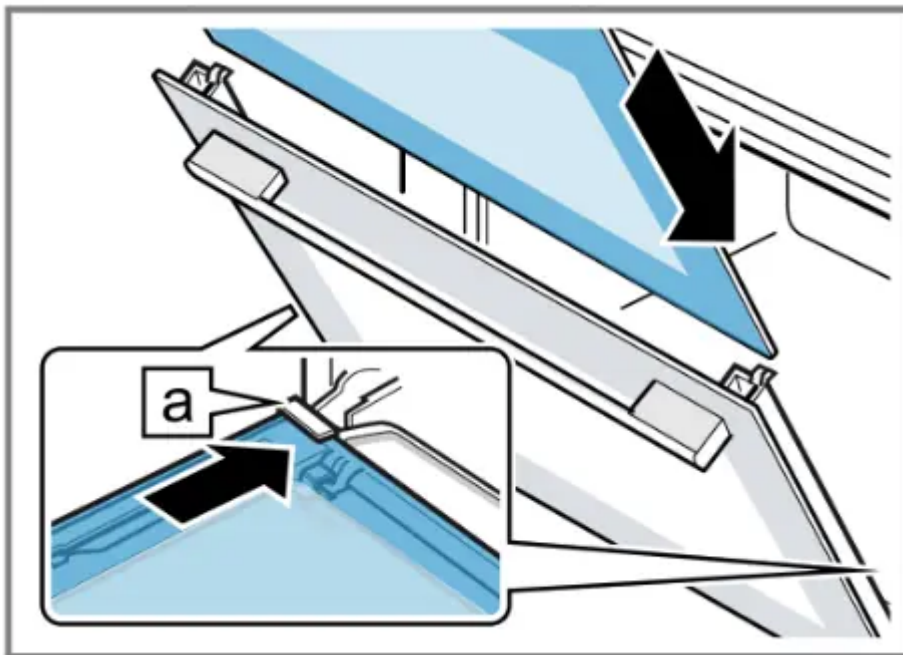

4. Push the inner pane upwards until it is in the left- and right-hand retainers a.

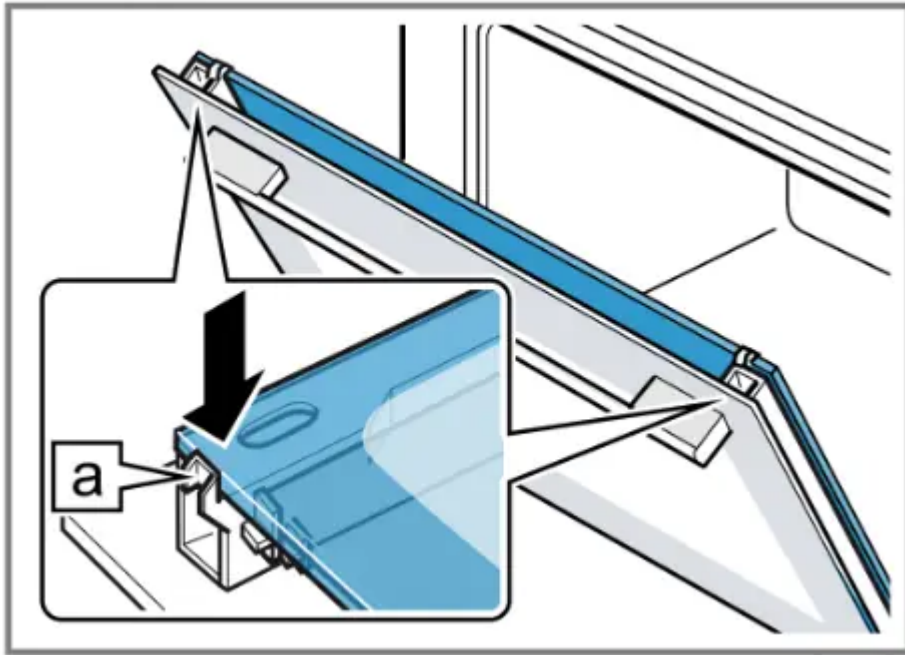

5. Put the door cover in position **1** and push down on it until you hear it click into place.
6. Open the appliance door fully.
7. Close the locking levers on the left- and right-hand hinges **2**.

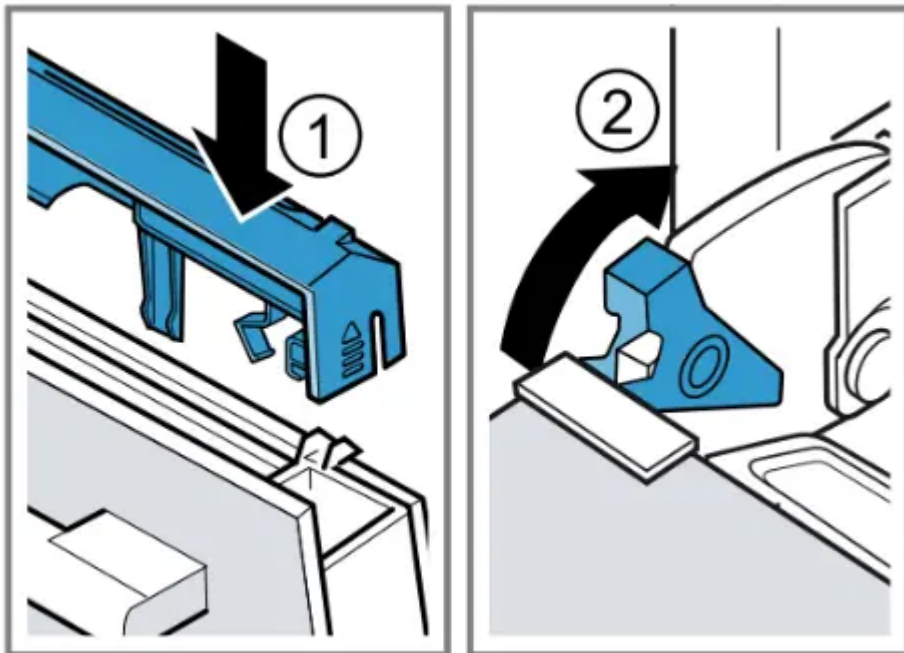

✓ The locking levers are closed. The appliance door is secured and cannot be detached.


8. Close the appliance door.

Detaching the upper appliance door




1. Open the appliance door fully.
2. Open the locking levers on the left- and right-hand hinges.

Locking levers opened

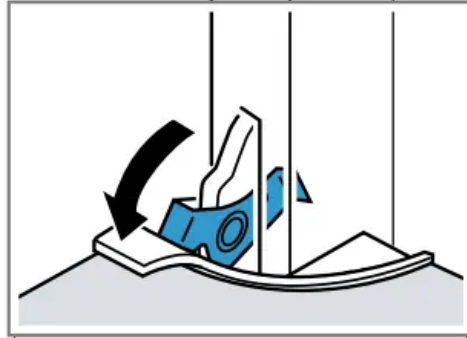

The hinge is now secured and cannot snap shut.


Locking levers closed

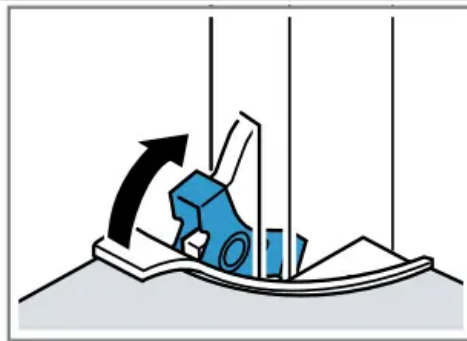

The appliance door is secured and cannot be detached.

- ✓ The locking levers are open. The hinges are now secured and cannot snap shut.


3. Close the appliance door fully **1.** Grab hold of the appliance door with both hands (on the left and right) and pull it upwards and out **2.**

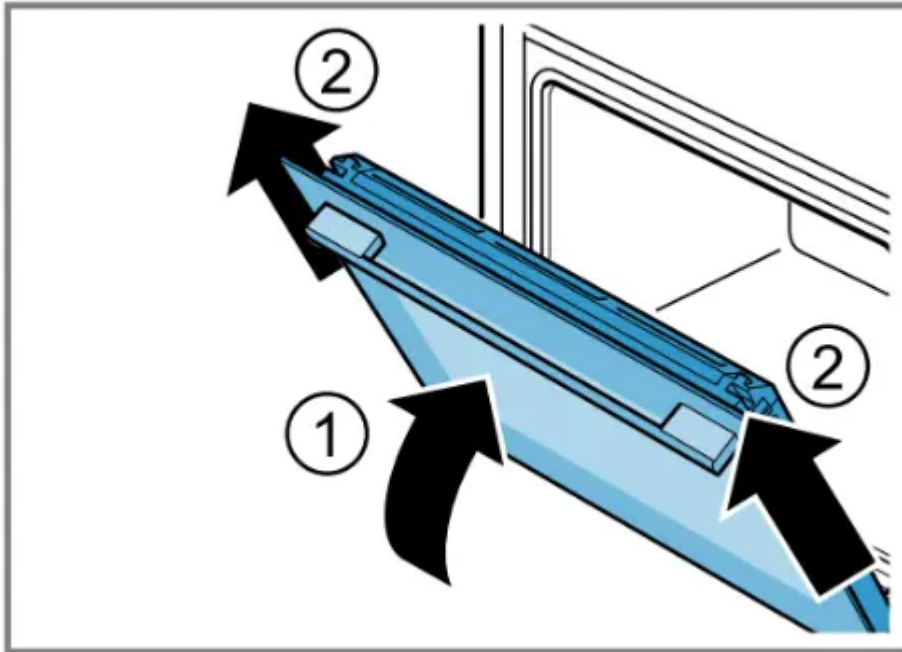

4. Carefully place the appliance door on a level sur- face.


Attaching the upper appliance door

1. Slide the appliance door straight onto the two hinges. Slide the appliance door on as far as it will go.

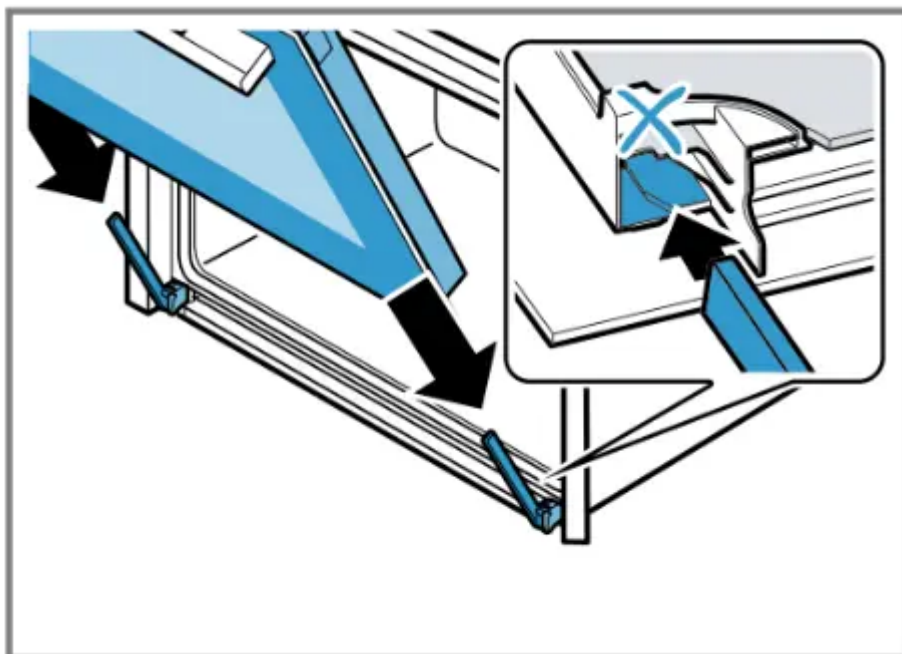

2. Open the appliance door fully.

3. Close the locking levers on the left- and right-hand hinges.

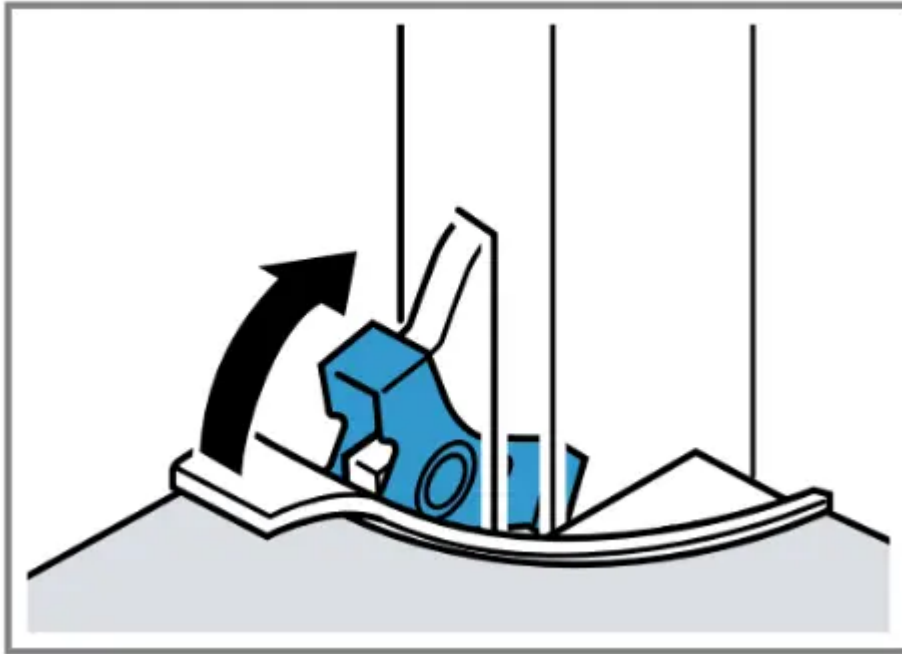

✓ The locking levers are closed. The appliance door is secured and cannot be detached.

4. Close the appliance door.

Removing the door panes from the upper the appliance door




1. Open the appliance door fully.


2. Open the locking levers on the left- and right-hand hinges **1**.

✓ The locking levers are open. The hinges are now se- cured and cannot snap shut.


3. Close the appliance door fully **2**. Grab hold of the appliance door with both hands (on the left and right) and pull it upwards and out **3**.

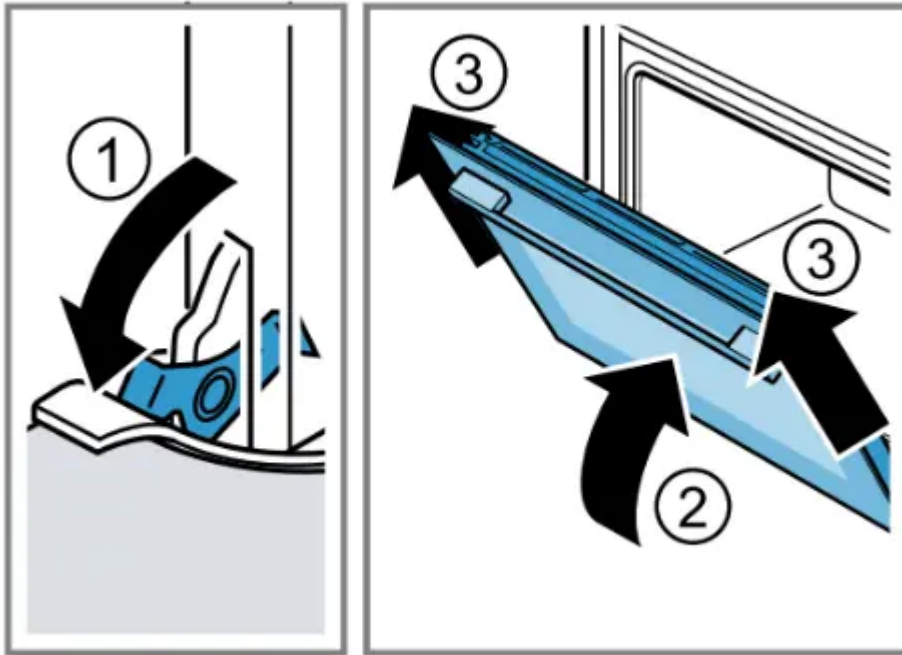

4. Carefully place the appliance door on a level sur- face.
5. Push on the left- and right-hand side of the door cover from the outside **1** until it is released.
6. Remove the door cover **2**.

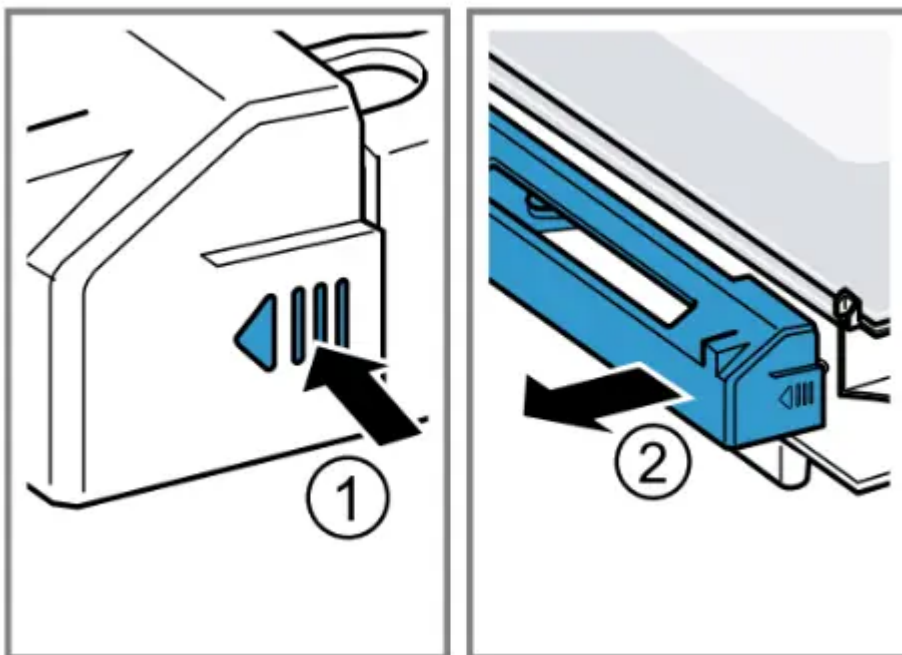

7. Lift out the inner pane and set it down carefully on a flat surface.

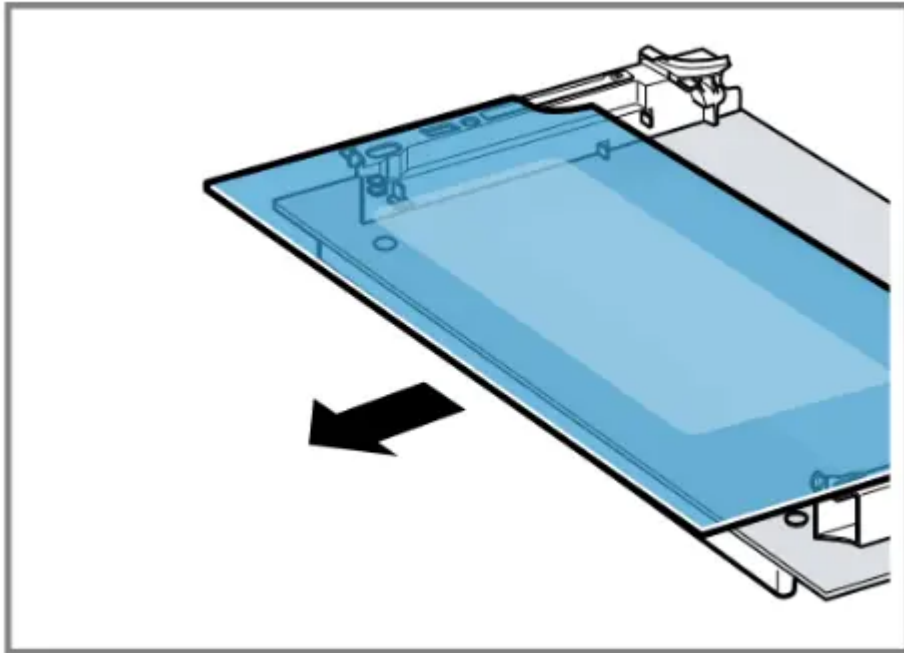


8. Clean the removed door panes on both sides with glass cleaner and a soft cloth.


9. Clean the appliance door. → "Suitable cleaning agents", Page 13

10. Dry the door panes and refit them. → "Installing the door panes for the upper the appliance


door ", Page 20

Installing the door panes for the upper the appliance door


1. Slide the inner pane in. In doing so, ensure that the inner pane is in the retainer .

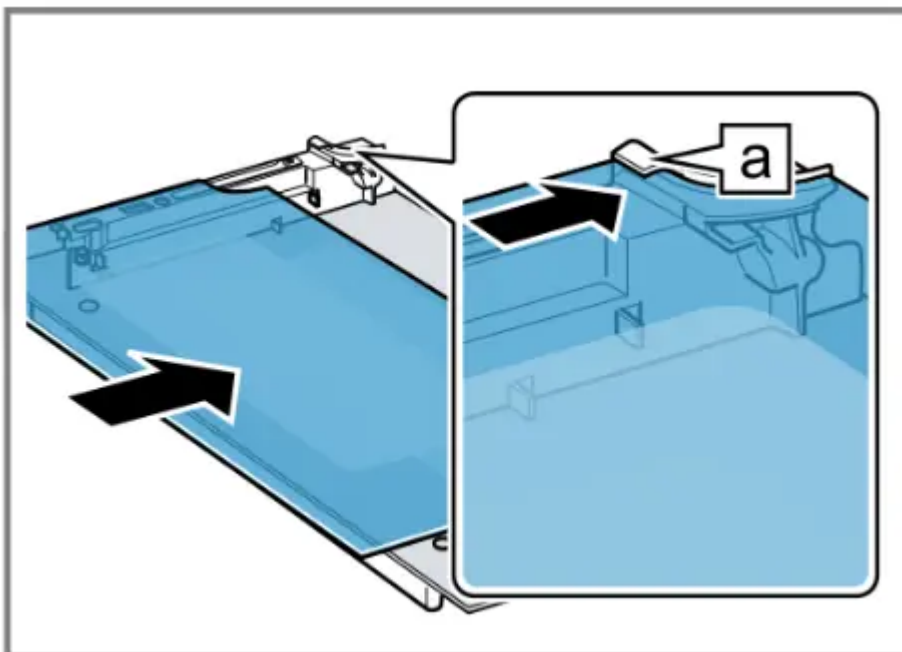


2. Push the inner pane upwards until it is in the left- and right-hand retainers **a** .

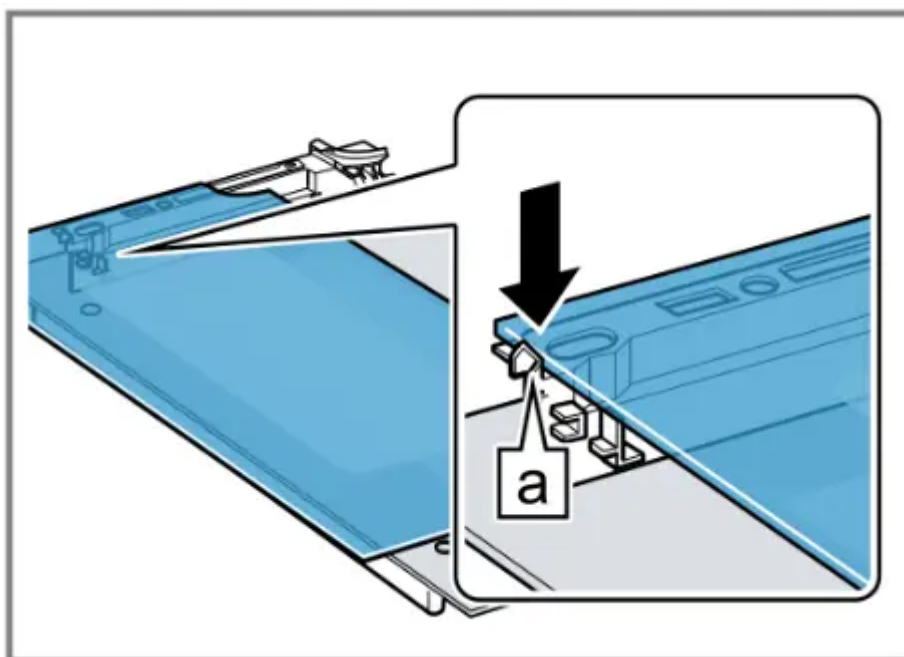


3. Put the door cover in position and push down on it until you hear it click into place.

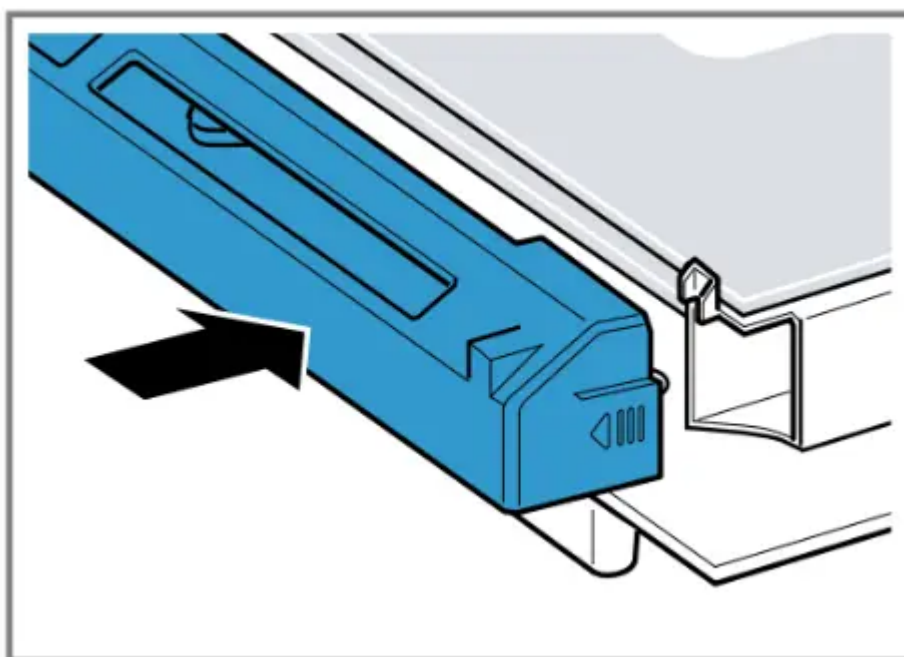

4. Slide the appliance door straight onto the two hinges. Slide the appliance door on as far as it will go. When doing so, ensure that the hinges are inserted into the correct opening.

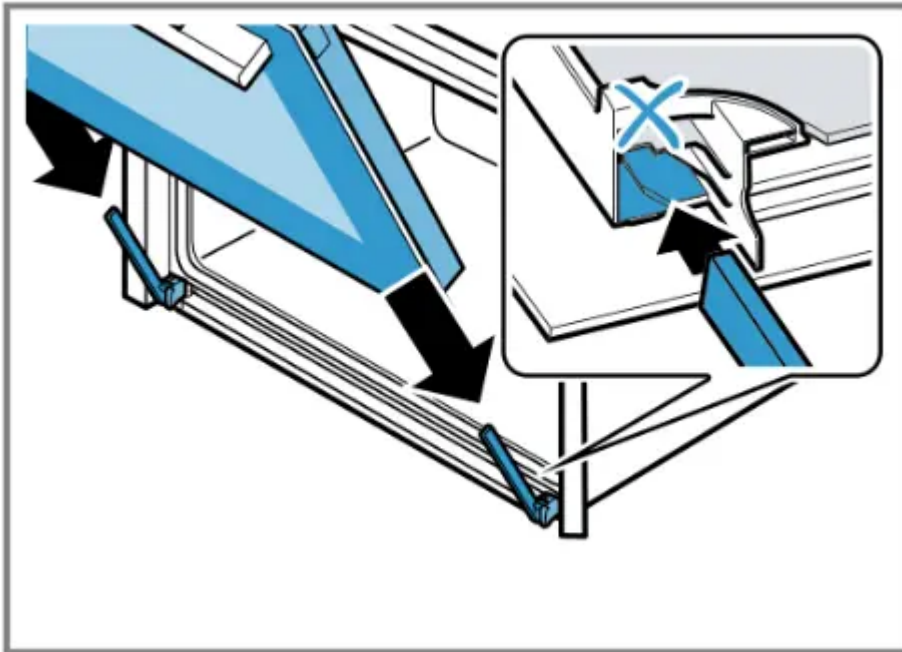

5. Close the locking levers on the left- and right-hand hinges.

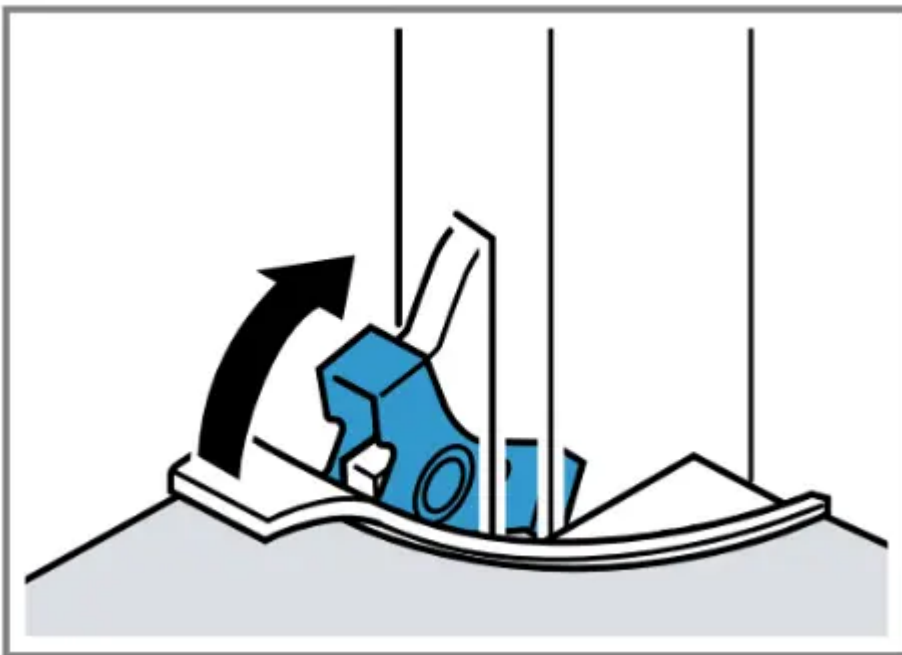

✓ The locking levers are closed. The appliance door is secured and cannot be detached.

6. Close the appliance door.




Troubleshooting

You can rectify minor faults on your appliance yourself.

Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.



Malfunctions

Fault	Cause and troubleshooting
The appliance is not working.	<p>The circuit breaker is faulty.</p> <ul style="list-style-type: none"> • Check the circuit breaker in the fuse box.
	<p>There has been a power cut.</p> <ul style="list-style-type: none"> • Check whether the lighting in your kitchen or other appliances are working.
The appliance does not switch off fully at the end of a cooking time.	<p>At the end of a cooking time, the appliance stops heating up. The oven light and cooling fan do not switch off. For types of heating with recirculation, the fan continues to run in the back wall of the cooking compartment.</p> <ul style="list-style-type: none"> • Turn the function selector to the off position. <ul style="list-style-type: none"> ✓ The appliance is switched off. ✓ The oven light and the fan in the back wall are switched off. ✓ The cooling fan switches off automatically as soon as the appliance has cooled down.
The time flashes in the display.	<p>There has been a power cut.</p> <ul style="list-style-type: none"> • Reset the time. <p>→ "Setting the time on the clock", Page 12</p>
<p>S R F E lights up in the display and no settings can be made on the appliance.</p>	<p>Childproof lock is activated.</p> <ul style="list-style-type: none"> •  Use the  button to deactivate the childproof lock. <p>→ "Childproof lock", Page 13</p>
<p>A message with E appears in the display, e.g. E05-32.</p>	<p>Electronics fault</p> <p>1. Press the  button.</p> <ul style="list-style-type: none"> • If required, reset the time.

✓ If the fault was a one-off, the error message disappears.


2. If the error message appears again, call the after-sales service. Quote the exact error message and the E no. of your appliance.

→ "Customer Service", Page 23

Replacing the oven light bulb

If the light in the cooking compartment fails, change the oven light bulb.

1. Place a tea towel in the cooking compartment to prevent damage.
2. Turn the glass cover anti-clockwise to remove it **1**.
3. Pull out the halogen bulb without turning it **2**.

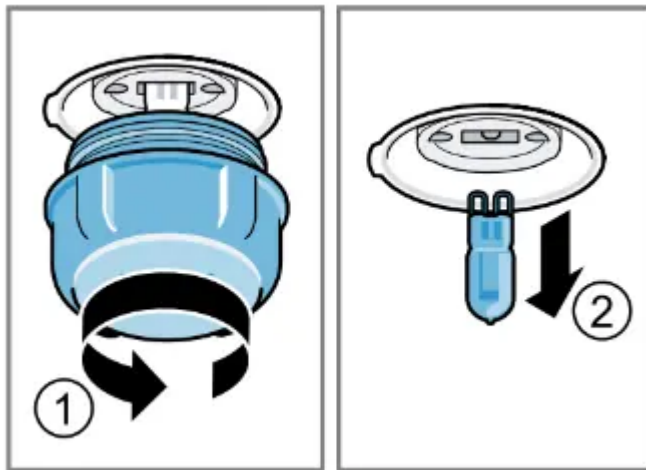

4. Insert the new halogen lamp and press it firmly into the socket. Make sure the pins are positioned correctly.
5. Depending on the appliance model, the glass cover may have a sealing ring. Put the sealing ring in position.
6. Screw the glass cover on.
7. Take the tea towel out of the cooking compartment.
8. Connect the appliance to the power supply.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

