 


User Manual Multi-Purpose Power Scrubber

Indoor / Outdoor Use

Multi-Purpose Power Scrubber
Indoor / Outdoor Use

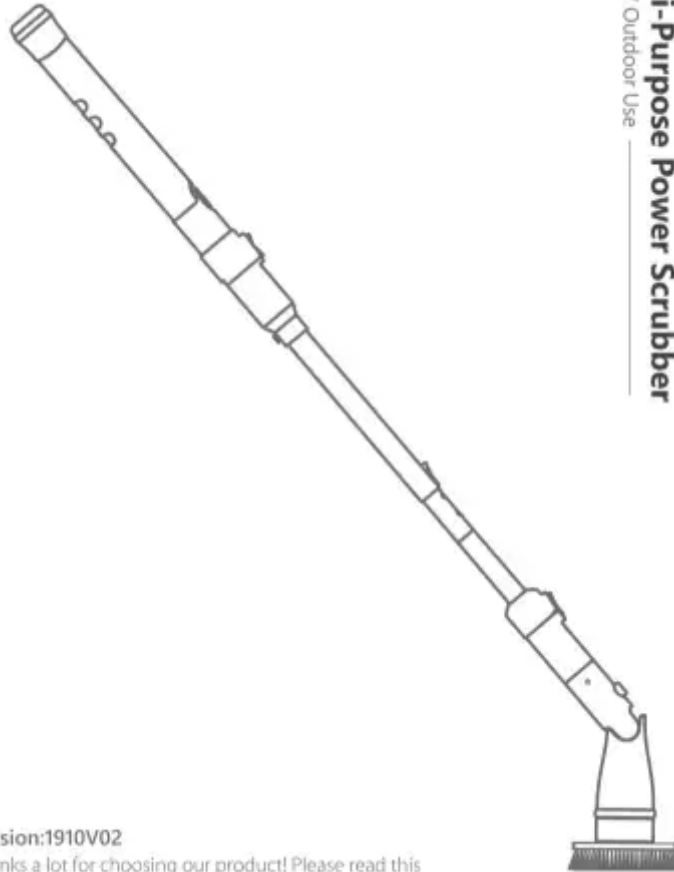


Version:1910V02

Thanks a lot for choosing our product! Please read this manual carefully before using and keep it for future reference.

Package Includes

1. Main Handle
2. Extendable Handle
3. Scrubber Head
4. Corner Brush
5. Dome Brush
6. Small Flat Brush
7. Large Flat Brush
8. Charging Adapter
9. Hook

Diagram

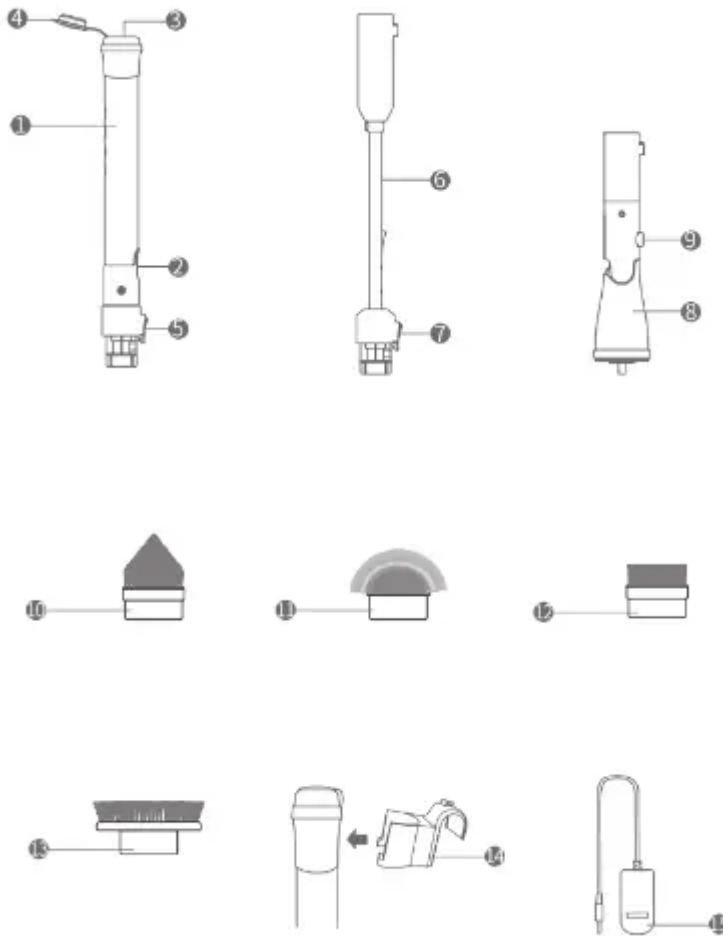

1. Main Handle
2. Power Button
3. Charging Port and Indicator Light
4. Charging cover
5. Bottom Extension Release Button
6. Extension Handle
7. Top Extension Release Button
8. Scrubber Head
9. Button (For adjusting the brush head)
10. Comer Brush (Great for cleaning bathtub and sink)
11. Dome Brush (Idea for cleaning bathtub and sink)
12. Small Flat Brush (Superb for large jobs with lots of flat surface area)
13. large Flat Brush (Superb for large jobs with lots of flat surface area)

- 14. Hook (After cleaning you could install the hook into a bar or rod to hang the power scrubber)
- 15. Charging Adapter

Installation instructions

NOTE: Before assembling any component of this product, make sure the unit is turned off.

Assembly with Extendable Handle

1. Connect the Main Handle to the Extendable Handle until you hear a "CLICK".




2. Next, connect the Scrubber Head to the Extendable Handle until you hear a "CLICK".




Assembly without Extendable Handle

Connect the Main Handle to the Scrubber Head until you hear a "CLICK".

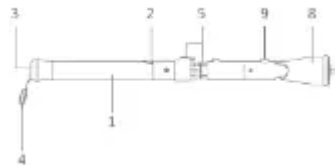


Brush Head Assembly

Firmly hold the Scrubber Head with one hand and then press the selected brush on until secured.

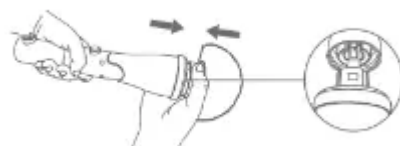

How to pull out the brush head

Hold the connection part of the brush head and pull out vertically.

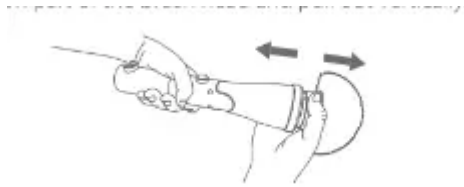


How to adjust the angle of brush head

Press the button to adjust brush head in 0-45 degrees.



How to use the Extendable Handle

1. Push the switch in the direction of the arrow.
2. Push the switch with one hand and pull the extendable handle out until it reaches your required length,
3. You can select different length by pulling the extendable handle to different position of the grooves

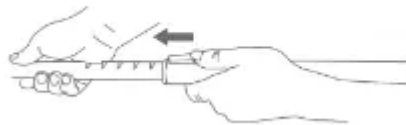

Troubleshooting

I plugged the charger in but no. Red indicator light is on.

- Press the Power Button once again. Red indicator light should come on. Check the outlet to ensure there is power.

I charged the unit but it still didn't work, although the green indicator light was on indicating it was working

- Be sure that the main handle is connected firmly with the extendable handle. Press and connect them until a "click" is heard. Try whether the main handle can be used without extendable handle.

There is a hook and what's the use of the hook?

- The hook can be installed on the power scrubber and you can hang the product for more convenient use.

Warm Tips

1. Allow for transportation safety, the product you obtained is not fully charged. Please fully charge the product before first use.
2. Before using the scrubber, be careful not to get splashing stains into your eyes or on your skin.
3. In order to enhance the cleaning effect, it is recommended to use the scrubber with the cleaning agent. The cleaning effect will be better after soaking the brush head it is not necessary to apply excessive external force during use to avoid blockage
4. When the battery is low, the red indicator light will flash, please charge the product in time.
5. When charging, the red indicator light is on. If there is no red light, please plug the adapter correctly, then press the power button again
6. Please close the cover after charging to avoid water entering to cause the short circuit.
7. Clean the surface of the product with a soft cloth. Except for the brush head, do not soak or rinse the product with water
8. Recommended storage environment ventilated and cool place

FCC STATEMENT

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.