

Parts and Features



1. Steamer/Rinsing Basket

2. Cooking Pot

3. Lid

4. Removable Lid Liner

5. Condensation Collector

6. Control Panel

7. Base

8. Rice Paddle

9. Rice Measuring Cup 6-ounce (177mL)

To order parts:

- US: 1.800.851.8900
- Canada: 1.800.267.2826
- Mexico: 01 800 71 16 100

How to Use the Multi-Cooker

⚠ WARNING **Electrical Shock Hazard:** Cook only in removable cooking pot. Never place water or food directly into the base.

⚠ WARNING **Burn Hazard:** Never use lid handle to carry cooker when contents are hot. Steam from steam vent can cause injury

BEFORE FIRST USE

Wash cooking pot following “Care and Cleaning” instructions; dry thoroughly. Assemble lid with flat side of silicone washer facing down toward cooking pot.

Cooking rice

Rice Measuring Cup – Do not throw away the rice measuring cup that comes with your unit. This is an important tool in using your Multi-Cooker successfully as a rice cooker and its size is standard in the rice industry. One rice measuring cup equals 6 oz. (177 mL) or approximately cup (U.S. standard measuring cup).

Steamer/Rinsing Basket – To use as a rice rinsing basket, add the desired amount of measured uncooked rice to steamer basket. Do not fill above side vents to prevent rice from falling through while rinsing. Place basket under a slow-flowing faucet and rinse. Add drained rice to cooking pot. Repeat rinsing with any remaining rice.

If using Multi-Cooker to cook rice, cereal, or grain:

- 1. Add desired amount of uncooked rice to cooking pot; then fill with water to corresponding water line.

Example: If you add 4 level measuring cups of rice to the cooking pot, add water to the “4” line of the pot. DO NOT exceed 10-cup MAX.

- 2. Place cooking pot straight down on base. Make sure cooking pot is securely placed into base.

NOTE: Make sure bottom of cooking pot is not bent or warped, or it will not conduct heat correctly.

- 3. Plug into outlet. Press to turn on MultiCooker.
- 4. All function buttons will flash. Press desired function button. Selected function and time will flash. MultiCooker will start to heat automatically after 5 seconds.
- 5. At the end of the cooking time, the Multi-Cooker will automatically switch to WARM. Multi-Cooker will keep warm up to 12 hours, then sound an alarm and switch to standby mode.



Program functions

Five functions have preprogrammed cycles with a default cooking time that cannot be adjusted. Actual cooking time depends on the amounts of ingredients and water. If the actual cooking time is less than the default time, the display time will jump to a time designated by the program and start counting down until finished cooking. If actual cooking time is longer than the default, the program holds for a time and then counts down until finished cooking. The Multi-Cooker automatically switches to WARM when done cooking and will keep warm up to 12 hours.

FUNCTION DEFAULT -- COOKING TIME

- WHITE RICE -- 45 minutes
- WHOLE GRAIN -- 60 minutes
- SUSHI RICE -- 40 minutes
- BROWN RICE -- 60 minutes
- QUICK RICE -- 35 minutes

 
Time functions

Eight functions can be adjusted to the time you desire. After selecting function, press and hold the function button to start time. The display will show ON until the cooking temperature is reached, then the timer will count down. The cooker automatically switches to WARM when done cooking and will keep warm up to 12 hours.

FUNCTION -- TIME RANGE

- HOT CEREALS -- 5 minutes-3 hours; timer countdown begins when water boils.
- QUINOA -- 5 minutes-3 hours; timer countdown begins when water boils.
- SAUTÉ -- 0-30 minutes; timer countdown begins when cooking temperature reaches 300°F (150°C).

- SEAR/BROWN -- 0-30 minutes; timer countdown begins when cooking temperature reaches 400°F (205°C).
- STEAM/COOK -- 0-30 minutes; timer countdown begins when water boils.
- SOUP/SIMMER -- 5 minutes-5 hours; timer countdown begins when cooking temperature reaches 195°F (90°C). Temperature is held at 185-203°F (85-95°C) during cooking. Stir occasionally.
- SLOW COOK LOW -- 1-10 hours; timer countdown starts immediately. Automatically switches to
- WARM -- for a total cooking and warm time of 24 hours. For example, if slow cook time is 6 hours, WARM time is 18 hours (24 hours minus 6 hours).
- SLOW COOK HIGH -- Same as SLOW COOK LOW.

NOTE*: If pot boils dry, Multi-Cooker will beep and the remaining time will flash in display. To continue STEAM/COOK, add more water within 3 minutes. If no water is added after 3 minutes, the display will flash “Er” until the ON/OFF  button is pressed.

*While slow cooking, the condensation collector may need to be emptied after each time you open the lid to prevent overflow.

Warm

The WARM function should be used for already-cooked food. Do not cook on WARM. Timer will count up to display the total amount of time on WARM.

Delay time

The Delay Time function can be used with WHITE RICE, BROWN RICE, SUSHI RICE, WHOLE GRAIN, QUICK RICE, HOT CEREALS, QUINOA, STEAM/COOK, and SOUP/SIMMER. Place water and food items in cooking pot or food in steamer basket. Select function and cooking time.

Press DELAY TIME. The function button and the DELAY TIME buttons will flash, and display will flash “0.” Continue to press DELAY TIME to set delay time from 1 to 15 hours. Multi-Cooker will automatically start after 5 seconds, counting down the delay time. Cooking/steaming will begin once the unit has completed the delay time countdown. After cooking is complete, the Multi-Cooker will switch to WARM (except for STEAM/COOK).

Memory Save

If the power is cut off and restarts within 5 seconds, the Multi-Cooker will remember the initial cooking status and continue the previous function automatically. If the power break was longer than 5 seconds, the unit will switch to standby mode.

Care and Cleaning

⚠ WARNING **Electrical Shock Hazard:** Do not immerse base, cord, or plug in water or other liquid.

1. Unplug Multi-Cooker.
2. Lid Liner and Condensation Collector are handwashable. Both Lid Liner and Condensation Collector should be removed and cleaned after each use.
3. Cooking Pot, Steamer/Rinsing Basket, Rice Measuring Cup, and Rice Paddle are dishwasher-safe. DO NOT use the “SANI” setting when washing in the dishwasher. “SANI” cycle temperatures could damage your product.
4. Wipe base with a soft, damp cloth or sponge. To remove stubborn spots, use a mild, nonabrasive cleanser.

Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

 
This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120 V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach in the U.S. or hamiltonbeach in Canada. For faster service, locate the model, type, and series numbers on your appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not touch hot surfaces. Use handles or knobs. Use pot holders when removing hot containers.
5. To protect against a risk of electrical shock, do not immerse cord, plug, or base in water or other liquid.
6. Unplug from outlet when not in use. Unplug and allow to cool before putting on or taking off parts, and before cleaning.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
11. Do not place on or near a hot gas or an electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil, food, water, or other hot liquids.
13. To disconnect, turn off ; then remove plug from wall outlet.
14. Do not use appliance for other than intended use.

15. Lift and open cover carefully to avoid scalding, and allow water to drip into the cooker.

16. **CAUTION:** Risk of electric shock. Cook only in removable container.

17. Do not place the unit directly under cabinets when operating as this product produces large amounts of steam. Avoid reaching over the product when operating.

18. **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.

SAVE THESE INSTRUCTIONS

Other Consumer Safety Information

This appliance is intended for household use only.

⚠ WARNING Electrical Shock Hazard:

This appliance is provided with a polarized plug (one wide blade) to reduce the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.