


Familiarising yourself with your appliance

Control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

Note: On certain models, specific details such as colour and shape may differ from those pictured.

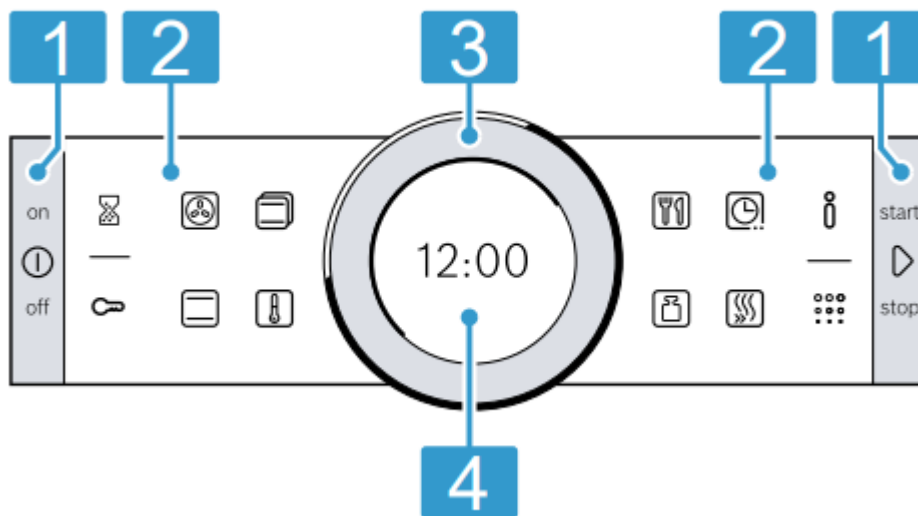

1. **Buttons** - The buttons on the left- and right-hand side of the control panel have a pressure point. Pressing a button will execute its function. On appliances without a stainless steel front, the buttons are also touch-sensitive.
2. **Touch fields** - Touch fields are touch-sensitive surfaces. To select a function, simply press lightly on the relevant field.
3. **Control ring** - The control ring can be turned infinitely in either direction. Press down lightly on the control ring and move it in the direction you require.
4. **Display** - The display shows the current settings, options or relevant information.

Buttons

Use the buttons on the left- and right-hand side of the control panel to switch your device or the operating mode on and off.

Button	Function	Use
	On/Off	Switch the appliance on or off.
	Start/ Stop	Short press: Start or pause operation. Press and hold for approx. three seconds: Cancel operation.

Touch fields

Use the touch fields to select different functions directly. The touch fields on the outside of the control panel are designed for general functions; the touch fields on the inside of the control panel are for the cooking mode. The touch field for the function that is currently selected lights up red.

Touch field on the outside	Function	Use
	Timer	Select the timer.
	Childproof lock	Press and hold for approx. four seconds: Activate or deactivate the childproof lock.
	Information	Display additional information about a function or setting. To call up the basic settings, press and hold this for approx. three seconds when the appliance is switched off.
	Pyrolytic self-cleaning	Select the cleaning function operating mode.
	4D hot air	Directly select the "4D hot air" type of heating.
	Top/bottom heating	Select the "Top/bottom heating" type of heating directly.
	Types of heating	Select the operating mode types of heating.
	Temperature	Select the temperature in the cooking compartment.
	AutoPilot	Select the AutoPilot operating mode with cooking programmes.
	Weight	Select the weight for the operating mode.
	Time-setting options	Select the time-setting options.
	Rapid heating	Starts or cancels rapid heating for the cooking compartment.

Control ring

You can use the control ring to change the setting values that are shown in the display.

If you have reached the maximum value for setting values, such as the temperature, minimum or maximum value, this value remains in the display. If required, use the control ring to turn the value back again.

For lists, e.g. the types of heating, the first value starts again after the last value.

Display

The display shows the current setting values on different levels.

Value in the foreground	The value in the foreground is highlighted in white. You can use the control ring to change the value directly. Once operation has started, the temperature or level is displayed in the foreground.
Value in the background	Values in the background are displayed in grey. To change the value using the control ring, select the required function in advance.
Enlargement	As long as you use the control ring to change a value, only this value will be displayed as enlarged.

Display ring

The display ring is located around the outside of the display.

- Position indicator - If you change a value, the display ring shows you where you are in the selection list. The display ring may be continuous or divided into segments depending on the settings area and the length of the selection list.
- Progress indicator - During operation, the display ring displays the progress and turns red at second-long intervals. As the cooking time counts down, one segment of the display ring disappears every second.

Temperature display

The heating line and the residual heat indicator show you the temperature in the cooking compartment

Due to thermal inertia, the temperature that is displayed may differ slightly from the actual temperature inside the cooking compartment.

- Heating line - Once operation has started, the white line below the temperature turns red as the cooking compartment heats up. When you are preheating the appliance, the optimal time to place your food in the cooking compartment is as soon as the entire line

has turned red. With set levels such as grill settings, the heating line turns red immediately.

- Residual heat indicator - When the appliance is switched off, the display ring shows the residual heat in the cooking compartment. As the residual heat dissipates, the display ring gets darker before eventually disappearing completely.


Cooking compartment

The functions in the cooking compartment make your appliance easier to use.

Shelf supports

The rails in the cooking compartment enable you to place accessories at different heights. → "Accessories"

Your appliance has five shelf positions. The shelf positions are numbered from bottom to top. The rails are equipped with pull-out rails on one or more levels, depending on the appliance type. You can remove the rails, e.g. for cleaning.

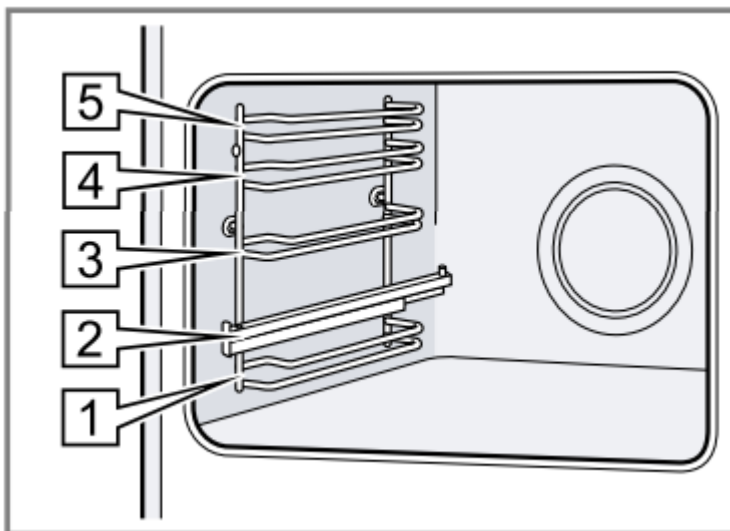

Lighting

One or more oven lights illuminate the cooking compartment. When you open the appliance door, the light in the cooking compartment switches on. If the appliance door remains open for longer than 15 minutes, the light switches off again. For most operating modes, the lighting is switched on during operation. The lighting switches off again when the operation ends.

Cooling fan

The cooling fan switches on and off depending on the appliance's temperature. The hot air escapes above the door.

ATTENTION! Do not cover the ventilation slot above the appliance door. The appliance overheats.

- Ensure that the ventilation slots are unobstructed.

To ensure that the appliance cools down more quickly after operation, the cooling fan continues to run for a certain period afterwards.


Appliance door

If you open the appliance door during operation, the operation stops. When you close the appliance door, the operation continues automatically

Before using for the first time


Initial configuration


When the appliance is connected to the electricity supply for the first time or following a lengthy power cut, you need to configure the settings before you can use it. It may take a few seconds for the settings to appear in the display.



1. Turn the control ring to change the setting as required. Possible settings:
 - Language
 - Clock
2. Press to  confirm. The next setting appears.
3. Work through the settings and make changes as required. After the last setting, a note appears in the display confirming that the initial configuration is complete. The time that is set appears on the display.
4. To check the appliance before heating for the first time, open and close the appliance door once.

Cleaning the appliance before using it for the first time

Clean the cooking compartment and accessories before using the appliance to prepare food for the first time.


1. Remove the product information and the accessories from the cooking compartment. Remove any leftover packaging, such as polystyrene pellets, and the adhesive tape that is in or on the appliance.
2. Wipe the smooth surfaces in the cooking compartment with a soft, damp cloth.
3. Press  to switch the appliance on.
4. Apply the following settings:

Type of heating	4D hot air 
Temperature	Maximum
Cooking time	1 hour

5. Press  to start. – Keep the kitchen ventilated while the appliance is heating. Once the time has elapsed, an audible signal sounds and the display shows the time as zero.
6. Press  to switch the appliance off.
7. Once the appliance has cooled down, clean the smooth surfaces in the cooking compartment with soapy water and a dish cloth.
8. Clean the accessories thoroughly using soapy water and a dish cloth or soft brush.

Basic operation


Switching on the appliance

Press  to switch the appliance on.

- The Bosch logo appears in the display. The types of heating then appear.

Switching off the appliance

Switch your appliance off when you are not using it. The appliance will switch itself off automatically if it is not used for a certain period of time.

Press  to switch the appliance off.

- The appliance switches off. Any functions currently in progress are cancelled.
- The time or residual heat indicator appears in the display.

Starting operation




You must start each operation.

Press  to start.

- The settings, the running time, the display ring and the heating line appear in the display


Pausing or cancelling operation

You can briefly pause operation and then continue. If you cancel operation completely, the settings will be reset.

1. To pause operation briefly:
 - Briefly press .
 - To continue operation, press .
2. To cancel operation completely, press and hold  for approx. 3 seconds.
 - Operation will stop and all the settings will be reset.




Setting the operating mode

Once you have switched on the appliance, it suggests an operating mode, e.g. types of heating.

1. If you want to use a different operating mode to the one suggested, press the relevant touch field. The touch field lights up red. → "Operating modes"
2. To implement other settings, press the relevant touch fields.
3. Use the control ring to change the values.
4. Press  to start.

Setting the type of heating and temperature

Requirement: The operating mode "Types of heating"  has been selected.

1. Use the control ring to set the required type of heating.
2. Press . The temperature is highlighted in white.
3. Use the control ring to set the temperature.
4. Press  to start. The appliance starts heating. The target temperature, the time and how long the appliance has already been in operation are shown in the display.
5. When the food is ready, press  to switch the appliance off.


Tip: The most suitable type of heating for your food can be found in the description of the type of heating. → "Types of heating"

Note: You can also set a cooking time and end time on the appliance. → "Time-setting options"

Changing the type of heating

When you change the type of heating, the other settings will also be reset.

1. Press to pause operation.

2. Press . The first type of heating appears in the display with the corresponding default temperature.
3. Use the control ring to change the type of heating.

Changing the temperature

Once operation has started, you can change the temperature directly.

- Use the control ring to change the temperature. The temperature is applied immediately


Directly selecting types of heating

You can select certain types of heating directly using a touch field.

1. Press the touch field for the required type of heating. Available types of heating with direct selection:


° 4D hot air 

° Top/bottom heating a The temperature is highlighted in white. 

2. Use the control ring to set the temperature.
3. Press  to start. The appliance starts heating. The target temperature, the time and how long the appliance has already been in operation are shown in the display.

Displaying information




In most cases, you can call up information about the function that you have just started. The appliance displays some information, e.g. to ask you to do/confirm something or to issue a warning, automatically.

1. Press . If available, information is displayed for a few seconds.
2. Use the control ring to scroll through longer passages of text.

Time-setting options




Overview of the time-setting options

You can set a cooking time and end time for the operation. The timer can be set independently of the appliance when it is in operation.

Time-setting option	Use
Timer 	The timer can be set independently of the appliance when it is in operation. It does not affect the appliance.
Cooking time 	If you set a cooking time for the operation, operation of the appliance stops automatically once this time has elapsed.
End 	For the cooking time, you can set the time at which operation ends. The appliance starts up automatically so that it finishes cooking at the required time.


Setting the timer

The timer runs independently of the appliance when it is in operation. The timer can be set when the appliance is switched on or off, up to 23 hours and 59 minutes. The timer has its own audible signal so that you can tell whether it is the timer or a cooking time which has elapsed.

1. Press . The symbol lights up red.
2. Use the control ring to set the timer duration.
3. Press  to start the timer. The timer starts automatically after a few seconds.
 - The timer counts down.
 - When the appliance is switched off, you will still be able to see the timer counting down in the display. When the appliance is switched on, the display shows the settings for the current operation. To display the timer for a few seconds, press .
 - An audible signal sounds once the timer duration has elapsed. The red symbol goes out.
4. Once the timer duration has elapsed:
 - To stop the signal early, press any touch field.
 - To set another timer, press and use the control ring to set the time.



Changing the timer

You can change the timer duration at any time.

1. Press .
2. Use the control ring to change the duration of the timer.
3. Press to confirm.

Cancelling the timer


You can cancel the timer duration at any time.

1. Press .
2. Use the control ring to reset the duration of the timer to zero.
3. Press  to confirm. The red symbol goes out.

Setting the cooking time





You can set a cooking time for operation of up to 23 hours 59 minutes.

Requirement: An operating mode and temperature or setting have been set.

1. Press . The symbol lights up red.
2. Use the control ring to set the cooking time.



Direction of rotation	Default value
Left	10 minutes
Right	30 minutes

The cooking time can be set in one-minute increments up to one hour, and then in five-minute increments. The end time is calculated automatically.

3. Press  to start.
 - The appliance starts to heat and the cooking time counts down.
 - When the time has elapsed, a signal sounds. The time shown in the display is zero.
4. When the cooking time has elapsed:
 - To stop the signal early, press any touch field.
 - To set another cooking time, press  and use the control ring to set the time.
 - To continue without setting a cooking time, press  to start.
 - When the food is ready, press  to switch the appliance off. Changing the cook




Changing the cooking time

You can change the cooking time at any time.

1. Press .
2. Use the control ring to change the cooking time.
3. Press  to confirm.

Cancelling the cooking time

You can cancel the cooking time at any time.

1. Press .
2. Use the control ring to reset the cooking time to zero.
3. Press  to confirm. To continue without setting a cooking time, press  to start.






Setting the end time

You can delay the time at which cooking is due to finish by up to 23 hours and 59 minutes.

Notes



- In order to achieve a good cooking result, do not delay the end time once the appliance is already in operation.
- Food will spoil if you leave it in the cooking compartment for too long.


Requirements

- An operating mode and temperature or setting have been set.
 - A cooking time is set.
1. Press  again.
 2. Use the control ring to delay the end time.
 3. Press  to start.
 - The display shows the start time. The appliance is in standby mode.
 - Once the start time has been reached, the appliance starts to heat up and the cooking time starts counting down. When the time has elapsed, a signal sounds. The time shown in the display is zero.
 4. When the cooking time has elapsed:
 - To stop the signal early, press any touch field.
 - To set another cooking time, press  and use the control ring to set the time.
 - To continue without setting a cooking time, press  to start.
 - When the food is ready, press  to switch the appliance off.

Changing the end time




In order to achieve a good cooking result, only change the set end time before operation starts and the cooking time is counting down.

1. Press  to pause operation.
2. Press  twice.
3. Use the control ring to change the end time.

4. Press  to continue operation.

Cancelling the end time

You can delete the set end at any time.






1. Press  to pause operation.
2. Press  twice.
3. Use the control ring to reset the end time to zero.
4. Press  to continue operation. The appliance starts to heat and the cooking time counts down.

Childproof lock

You can secure your appliance to prevent children from accidentally switching it on or changing the settings.

Activating and deactivating the childproof lock

You can activate and deactivate the childproof lock regardless of whether the appliance is switched on or off.

1. Press and hold  for approx. 4 seconds to activate the childproof lock. A confirmation note appears on the display. The control panel is locked. The appliance can only be switched off using . When the appliance is on,  lights up. When the appliance is off,  does not light up.
2. Press and hold  for approx. 4 seconds to deactivate the childproof lock. A confirmation note appears on the display.



Sabbath mode




You can set a cooking time of up to 74 hours using Sabbath mode. You can use top/bottom heating to keep food warm between 85 °C and 140 °C during this time without having to switch the appliance on or off.

Starting Sabbath mode

Notes: If you open the appliance door during operation, the appliance stops heating. When you close the appliance door, the appliance continues to heat again. Once it has started, you can no longer change or interrupt Sabbath mode.

Requirement: Sabbath mode is activated in the basic settings. → “Basic settings”.

1. Use the control ring to set the  Sabbath mode type of heating.
2. Press . The temperature is highlighted in white.

3. Use the control ring to set the temperature.
4. Press . The symbol lights up red.
5. Use the control ring to set the cooking time. The end time cannot be delayed.
6. Press  to start the operation. The appliance starts to heat and the time starts to count down.
7. Once the cooking time has elapsed, an audible signal sounds. The cooking time is at zero. The appliance stops heating up and responds again as usual outside of Sabbath mode. – Press  to switch the appliance off. The appliance automatically switches off after approx. 10 to 20 minutes.

Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

Cleaning products

In order to avoid damaging the various oven surfaces on the appliance, do not use unsuitable cleaning products.

WARNING – Risk of electric shock! An ingress of moisture can cause an electric shock.

- Do not use steam- or high-pressure cleaners to clean the appliance.

ATTENTION! Unsuitable cleaning products may damage the surfaces of the appliance.

- Do not use harsh or abrasive cleaning products.
- Do not use cleaning products with a high alcohol content.
- Do not use hard scouring pads or cleaning sponges.
- Do not use any special cleaners for cleaning the appliance while it is hot.

Using oven cleaner in a hot cooking compartment damages the enamel.

- Never use oven cleaner in the cooking compartment when it is still warm.
- Remove all food remnants from the cooking compartment and the appliance door before you next heat up the appliance. New sponge cloths contain residues from production.
- Wash new sponge cloths thoroughly before use.

Suitable cleaning agents

Only use cleaning agents that are suitable for the different surfaces on your appliance.

Appliance front

Surface	Suitable cleaning agents	Information
Stainless steel	<ul style="list-style-type: none"> • Hot soapy water • Special stainless steel cleaning products suitable for hot surfaces 	<p>To prevent corrosion, remove any limescale, grease, starch or albumin (e.g. egg white) stains on stainless steel fronts immediately.</p> <p>Apply a thin layer of the stainless steel cleaning product with a soft cloth.</p>
Plastic or painted surfaces E.g. control panel	<ul style="list-style-type: none"> • Hot soapy water 	<p>Do not use glass cleaner or a glass scraper.</p> <p>To avoid permanent stains, remove any descaling agent that gets onto the surface immediately.</p>

Appliance door



Area	Suitable cleaning agents	Information
Door panels	<ul style="list-style-type: none"> • Hot soapy water 	<p>Do not use a glass scraper or a stainless steel wool.</p> <p>Tip: Remove the door panels in order to clean them thoroughly. → "Appliance door"</p>
Door cover	<ul style="list-style-type: none"> • Made of stainless steel: Stainless steel cleaner • Made of plastic: Hot soapy water 	<p>Do not use glass cleaner or a glass scraper.</p> <p>Do not use stainless steel care products.</p> <p>Tip: Remove the door cover for thorough cleaning. → "Appliance door"</p>
Stainless steel interior door frame	Stainless steel cleaner	<p>Discolouration can be removed using stainless steel cleaner.</p> <p>Do not use stainless steel care products.</p>
Door handle	<ul style="list-style-type: none"> • Hot soapy water 	To avoid permanent stains, remove any descaling agent that gets onto the surface immediately
Door seal	<ul style="list-style-type: none"> • Hot soapy water 	Do not remove or scrub.

Cooking compartment

Area	Suitable cleaning agents	Information
Enamel surfaces	<ul style="list-style-type: none"> • Hot soapy water • Vinegar water • Oven cleaner 	<p>Soak any heavily soiled areas and use a brush or steel wool. Leave the appliance door open to dry the cooking compartment after cleaning it.</p> <p>Notes</p> <ul style="list-style-type: none"> • It is best to use the cleaning function. → “Cleaning function Pyrolytic self-cleaning” • Enamel burns at very high temperatures, causing minor discolouration. The functionality of your appliance is not affected by this. • The edges of thin trays cannot be completely enamelled and may be rough. This does not impair corrosion protection. • Food residues will leave a white coating on the enamel surfaces. The coating does not pose a health risk. The functionality of your appliance is not affected by this. You can remove residues with lemon juice.
Glass cover for the oven light	<ul style="list-style-type: none"> • Hot soapy water 	Use oven cleaner to remove very heavy soiling.
Rails	<ul style="list-style-type: none"> • Hot soapy water 	<p>Soak any heavily soiled areas and use a brush or steel wool.</p> <p>Note: To clean thoroughly, detach the rails. → “Rails”</p>
Pull-out system		Use a brush to remove very heavy soiling.

	<ul style="list-style-type: none"> • Hot soapy water 	<p>Clean the pull-out rails while they are pushed in so that you do not remove the lubricant.</p> <p>Do not clean in the dishwasher.</p> <p>Note: To clean thoroughly, detach the pull-out system. → “Rails”.</p>
Accessories	<ul style="list-style-type: none"> • Hot soapy water • Oven cleaner 	<p>Soak any heavily soiled areas and use a brush or steel wool. Enamelled accessories are dishwasher-safe.</p>

Cleaning the appliance

In order to avoid damaging the appliance, you must clean your appliance only as specified, and with suitable cleaning products.

WARNING – Risk of burns! The appliance and its parts that can be touched become hot during use.

- Caution should be exercised here in order to avoid touching heating elements.
- Young children under 8 years of age must be kept away from the appliance.

WARNING – Risk of fire! Loose food remnants, fat and meat juices may catch fire.

- Before using the appliance, remove the worst of the food residues and remnants from the cooking compartment, heating elements and accessories.

Requirement: Read the information on cleaning products. → “Cleaning products”

1. Clean the appliance using hot soapy water and a dish cloth. – For some surfaces, you can use alternative cleaning agents. → “Suitable cleaning agents”
2. Dry with a soft cloth.

Cleaning function Pyrolytic self-cleaning

With the "Pyrolytic self-cleaning" cleaning function, the cooking compartment is cleaned virtually automatically. Use the cleaning function to clean the cooking compartment every two to three months. You can use the cleaning function more often, if required. The cleaning function requires approx. 2.5–4.7 kilowatt hours.

Preparing the appliance for the cleaning function

To achieve a good cleaning result and prevent damage, prepare the appliance carefully

WARNING – Risk of fire! Combustible objects that are left in the cooking compartment may catch fire.

- Never store combustible objects in the cooking compartment.
- If smoke is emitted, the appliance must be switched off or the plug must be pulled out and the door must be held closed in order to stifle any flames.

Loose food remnants, fat and meat juices may catch fire when the cleaning function is in progress.

- Before starting the cleaning function, always remove the worst of the food residues and remnants from the cooking compartment and accessories.

The outside of the appliance gets very hot when the cleaning function is in progress.

- Never hang combustible objects, e.g. tea towels, on the door handle.
- Leave the front of the appliance clear.
- Keep children at a safe distance.

If the door seal is damaged, a large amount of heat is generated around the door.

- Do not scrub or remove the seal.
- Never operate the appliance if the seal is damaged or missing.

1. Remove coarse dirt from the cooking compartment and from the accessories.
2. Use a detergent solution and a soft cloth to clean the surfaces at the edges of the cooking compartment around the door seal. Do not remove or scrub the door seal. Use oven cleaner to remove stubborn dirt from the inner door pane.
3. To clean an accessory as well, insert the accessory at level 2. **Note:** Only clean accessories that were included with the appliance and that are enamelled, e.g. the universal pan or the baking tray. Wire racks are not suitable for the cleaning function and will become discoloured.
4. Remove any objects from the cooking compartment. The cooking compartment must be empty except for the accessory that is also being cleaned.

Setting the cleaning function

Ventilate the kitchen while the cleaning function is running

WARNING – Risk of harm to health! The cleaning function heats up the cooking compartment to a very high temperature so that food left over from roasting, grilling and baking will burn off. This process releases vapours, which can irritate mucous membranes.

- Keep the kitchen well ventilated while the cleaning function is running.
- Do not remain in the room for long periods.
- Keep children and pets away.

WARNING – Risk of burns!

The cooking compartment gets very hot when the cleaning function is in progress.


- Never open the appliance door.
- Allow the appliance to cool down.
- Keep children at a safe distance.

The outside of the appliance gets very hot when the cleaning function is in progress.

- Never touch the appliance door.
- Allow the appliance to cool down.
- Keep children at a safe distance.






Note: The oven light does not light up while the cleaning function is running.

Requirement: → “Preparing the appliance for the cleaning function”.

1. Press . The cleaning setting is highlighted in white.
2. Use the control ring to set the cleaning setting.

Cleaning setting	Cleaning level	Duration in hours
1	Low	Approx. 1:15
2	Medium	Approx. 1:30
3	High	Approx. 2:00

Select a higher cleaning setting for heavier or older soiling. The duration cannot be changed.

3. Press . A notification stating that you should carry out the necessary preparatory work for the cleaning function appears in the display.
4. Press  to start. The cleaning function starts and the duration counts down. The heating line does not appear. For your safety, the appliance door locks once a certain temperature is reached in the cooking compartment.  appears in the display. When the cleaning function ends, a signal sounds and the duration is at zero in the display.
5. Press  to switch the appliance off. When the appliance has cooled down, the appliance door is unlocked and  goes out.
6. → “Preparing the appliance for use following the cleaning function”.

Preparing the appliance for use following the cleaning function

1. Allow the appliance to cool down. 2. Wipe off any ash that has been left behind in the cooking compartment, on the rails and around the appliance door with a damp cloth.

2. Slide the pull-out rails in and out several times. While the cleaning function is running, the rails may become discoloured. This discolouration does not compromise the functionality of the appliance.
3. Remove white residues with lemon juice.

Note: White residues on the enamel surfaces may be caused by heavy soiling. These food residues are harmless. The deposits do not compromise the functionality of the appliance.






Cleaning assistance

The cleaning assistance is a quick alternative for occasionally cleaning the cooking compartment. The cleaning assistance softens dirt by vaporising the soapy water. It is then easier to remove dirt.

Setting the cleaning assistance

WARNING – Risk of scalding! If there is water in the cooking compartment when it is hot, this may create hot steam. Never pour water into the cooking compartment when the cooking compartment is hot.

Requirement: The cooking compartment has cooled down completely.

1. Remove the accessories from the cooking compartment.
2. Mix 0.4 litres water with a drop of washing-up liquid and pour into the centre of the cooking compartment floor. Do not use distilled water.
3. Press .
4. Use the control ring to set the bottom heating .
5. Press .
6. Use the control ring to set the temperature to 80 °C.
7. Press .
8. Use the control ring to set the cooking time to four minutes.
9. Press  to start. a The appliance starts to heat and the cooking time counts down. When the time has elapsed, a signal sounds. The time shown in the display is zero.
10. Use  to switch the appliance off and leave the cooking compartment to cool for approx. 20 minutes.

Wiping down the cooking compartment

ATTENTION! The prolonged presence of moisture in the cooking compartment leads to corrosion. After using the cleaning assistance, wipe the cooking compartment and allow it to dry completely.

Requirement: The cooking compartment must have cooled down.


1. Open the appliance door and remove the remaining water with an absorbent sponge cloth.
2. Clean the smooth surfaces in the cooking compartment with a dish cloth or a soft brush. Remove stubborn food remnants using a stainless steel scouring pad.
3. Remove limescale with a cloth soaked in vinegar. Then wipe with clean water and rub dry with a soft cloth (including under the door seal).
4. In order to dry the cooking compartment, leave the appliance door open in the detent position (approx. 30°) for approx. one hour.




Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

Malfunctions



Fault	Cause and troubleshooting
The appliance is not working.	<p>The circuit breaker is faulty.</p> <ul style="list-style-type: none"> ▶ Check the circuit breaker in the fuse box.
	<p>There has been a power cut.</p> <ul style="list-style-type: none"> ▶ Check whether the lighting in your kitchen or other appliances are working
"Sprache Deutsch" appears in the display.	<p>There has been a power cut.</p> <ul style="list-style-type: none"> ▶ Implement the settings for the initial configuration. - Language - Clock
The operation does not start or is interrupted.	<p>Different causes are possible.</p> <ul style="list-style-type: none"> ▶ Check any notifications that appear in the display. → <i>"Displaying information"</i>
	<p>Malfunction</p> <ul style="list-style-type: none"> ▶ Call the after-sales service. → "Customer Service"
Appliance does not heat up.	<p>Demo mode is activated in the basic settings; 3 appears in the display.</p> <ol style="list-style-type: none"> 1. Briefly disconnect the appliance from the power supply by switching the circuit breaker in the fuse box off and back on again. 2. Deactivate demo mode within three minutes in the → <i>"Basic settings"</i>.
	<p>There has been a power cut.</p> <ul style="list-style-type: none"> ▶ Open and close the appliance door once after a power failure. The appliance is ready to use.
The time is not displayed when the appliance is switched off.	<p>Basic setting has been changed.</p> <ul style="list-style-type: none"> ▶ Change the basic setting for the time display. → <i>"Basic settings"</i>
Appliance door cannot be opened.	<p>The cleaning function locks the appliance door; () lights up in the display.</p>

 	<p>▶ Allow the appliance to cool down until () goes out in the display. → “<i>Clean Pyrolytic self-cleaning</i>”.</p> <p>The childproof lock locks the appliance door.</p> <p>▶ Use the  button to deactivate the childproof lock. → “<i>Childproof lock</i>”.</p> <p>You can switch off the lock in the basic settings. → “<i>Basic settings</i>”.</p>
<p>The control ring has fallen out of the mount in the control panel.</p>	<p>The control ring has been detached.</p> <ol style="list-style-type: none"> 1. Insert the control ring into the mount in the control panel. 2. Push the control ring into the mount so that it clicks into place and can
<p>The control ring is difficult to turn.</p>	<p>There is dirt below the control ring.</p> <p>The control ring can be removed.</p> <p>Note: To ensure that the mount remains stable, do not remove the control ring too</p> <ol style="list-style-type: none"> 1. To loosen the control ring, press on the outer edge of the control ring. The control ring tilts and is easier to grip. 2. Remove the control ring from the mount. 3. Clean the control ring and its mount on the appliance carefully using soap and a dish cloth. Dry with a soft cloth. <p>Do not use any harsh or abrasive cleaning agents.</p> <p>Do not soak the control ring.</p> <p>Do not clean the control ring in the dishwasher.</p>
<p>The interior lighting does not work.</p>	<p>The halogen lamp is defective.</p> <p>▶ Change the oven light bulb.</p> <p>→ “<i>Replacing the oven light bulb</i>”.</p>
<p>Maximum operating time reached.</p>	<p>To prevent an unwanted permanent operation, the appliance automatically stops several hours if the settings are unchanged. A message appears in the display.</p> <p>The point at which the maximum operating time is reached is determined by the corresponding settings for an operating mode.</p> <ol style="list-style-type: none"> 1. To continue the operation, press any touch field and turn the control ring 2. If you do not need to use the appliance, use  to switch it off.

	<p>Tip: To prevent the appliance from switching off when you do not want it to, set a time.</p> <p>→ <i>"Setting the cooking time"</i>.</p>
<p>A message with "D" or "E" appears in the display, e.g. D0111 or E0111.</p>	<p>The electronics have detected a fault.</p> <ol style="list-style-type: none"> 1. Switch the appliance off and on again. If the fault was a one-off, it disappears. 2. If the message appears again, call the after-sales service. Please specify the error message when calling. <p>→ <i>"Customer Service"</i>.</p>
<p>The cooking result is not satisfactory.</p>	<p>Settings were unsuitable.</p> <p>Setting values, e.g. temperature or cooking time, depend on the recipe, quantity and...</p> <p>► Next time, set lower or higher values.</p> <p>Tip: A lot of information about the food preparation and corresponding setting values can be found on our website www.bosch-home.com.</p>

Replacing the oven light bulb

If the light in the cooking compartment fails, change the oven light bulb.

Note: Heat-resistant, 40-watt, 230 V halogen bulbs are available from the after-sales service or specialist retailers. Only use these bulbs. Hold the new halogen bulbs only with a clean, dry towel. This increases the service life of the bulb.

WARNING – Risk of burns! The appliance and its parts that can be touched become hot during use.


- Caution should be exercised here in order to avoid touching heating elements.
- Young children under 8 years of age must be kept away from the appliance

WARNING – Risk of electric shock! When changing the bulb, the bulb socket contacts are live.

- Before replacing the bulb, ensure that the appliance is switched off in order to prevent a potential electric shock.
- Also unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

Requirements: The appliance is disconnected from the power supply. The cooking compartment has cooled down. You have a new halogen bulb to replace the old one.

1. Place a tea towel in the cooking compartment to prevent damage.
2. Turn the glass cover anti-clockwise to remove it (1).
3. Pull out the halogen bulb without turning it (2) .

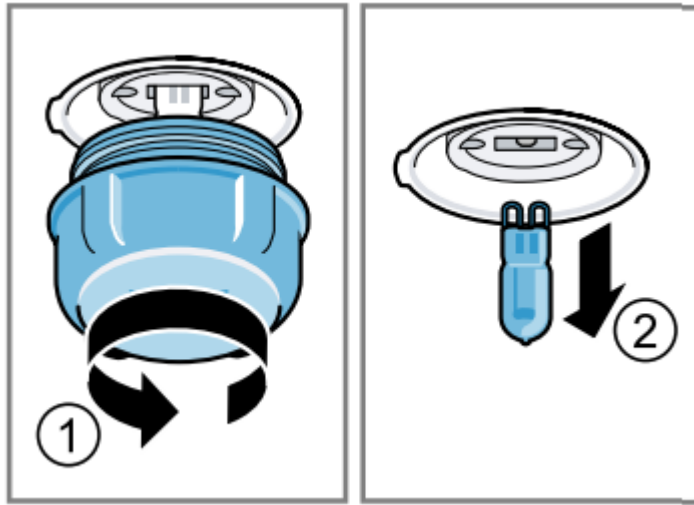

4. Insert the new halogen lamp and press it firmly into the socket. Make sure the pins are positioned correctly.
5. Depending on the appliance model, the glass cover may have a sealing ring. Put the sealing ring in position.
6. Screw the glass cover on.
7. Take the tea towel out of the cooking compartment.
8. Connect the appliance to the power supply.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.