


TELEVISION ANTENNA CONNECTION PROTECTION

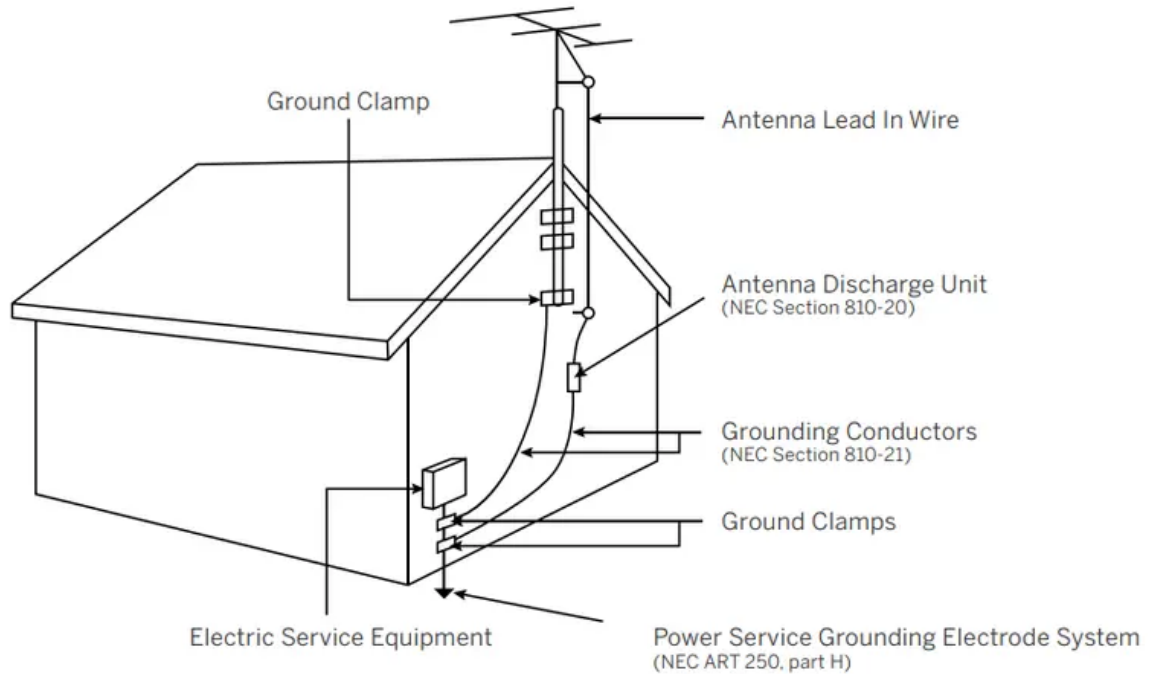

- The TV shall be installed in accordance with the applicable provisions of Article 810 and Article 820.
- If an outside antenna/satellite dish or cable system is to be connected to the TV, make sure that the antenna or cable system is electrically grounded to provide some protection against voltage surges and static charges.
- Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of the grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements of the grounding electrode.
- Lightning Protection: For added protection of the TV during a lightning storm or when it is left unattended or unused for long periods of time, unplug the TV from the wall outlet and disconnect the antenna or cable system.
- Power Lines: Do not locate the antenna near overhead light or power circuits, or where it could fall into such power lines or circuits. Remember, the screen of the coaxial cable is intended to be connected to earth in the building installation.

- Installation of CATV: The installation instructions states the cable distribution system should be grounded (earthed) in accordance with ANSI/NFPA 70. the National Electrical Code (NEC), in particular Section 820.93, Grounding of Outer Conductive Shield of a Coaxial Cable.
- Installation of Antenna: The installation instructions states the cable distribution system used for connection to antennas and dishes should be grounded (earthed) in accordance with ANSI/ NFPA 70. the National Electrical Code (NEC), in particular Section 810.21, Bonding Conductors and Grounding Electrode Conductors — Receiving Stations.

Getting to Know Your TV


FRONT PANEL



Remote Sensor and Power Indicator: When using the remote, aim it directly at this sensor. The power indicator flashes on when the TV turns on, then goes out after several seconds. To keep the power indicator on, see Turning the Power Indicator On or Of


REAR PANEL

REAR PANEL

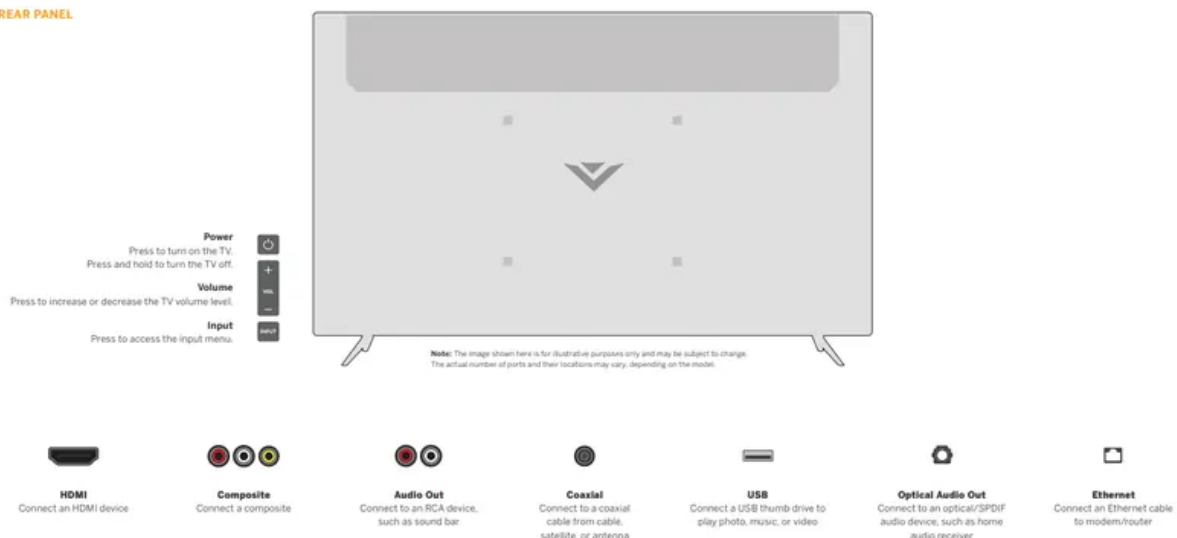

Connecting a device — AUDIO & VIDEO CABLE TYPES

Your TV can be used to display output from most devices.

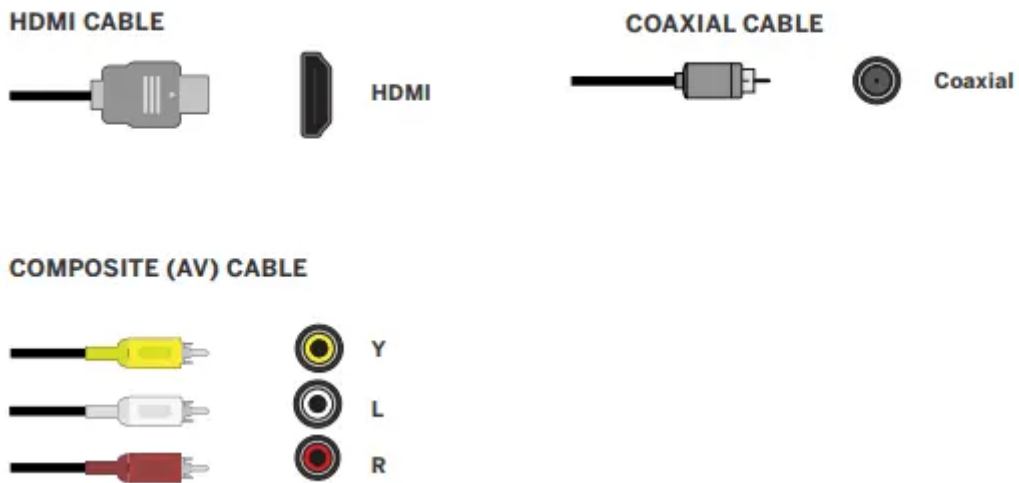

1. Verify that your device has a video port that matches an available port on the TV (HDMI, Composite, etc.).
2. Connect the appropriate cable (not included) to the TV and the device.
3. Turn the TV and your device on.
4. Set the TV's input to match the connection you used (HDMI-1, HDMI-2, etc.).

 
Connecting a device — AUDIO CABLE TYPES

Your TV can be output sound to an audio device, such as a receiver or sound bar.


HDMI CABLE



COMPONENT AND/OR COMPOSITE CABLE



OPTICAL/SPDIF CABLE

 

1. Verify that your device has an audio port that matches an available port on the TV (optical, RCA, etc).
2. Connect the appropriate cable (not included) to the TV and the device.
3. Turn the TV and your device on.


Note: The actual ports and their locations may vary, depending on the TV model.

WALL-MOUNTING THE TV

First you will need a wall mount. Consult the provided table below to find the appropriate mount for your TV.

Be sure the mount you choose is capable of supporting the weight of the TV.

To install your TV on a wall:

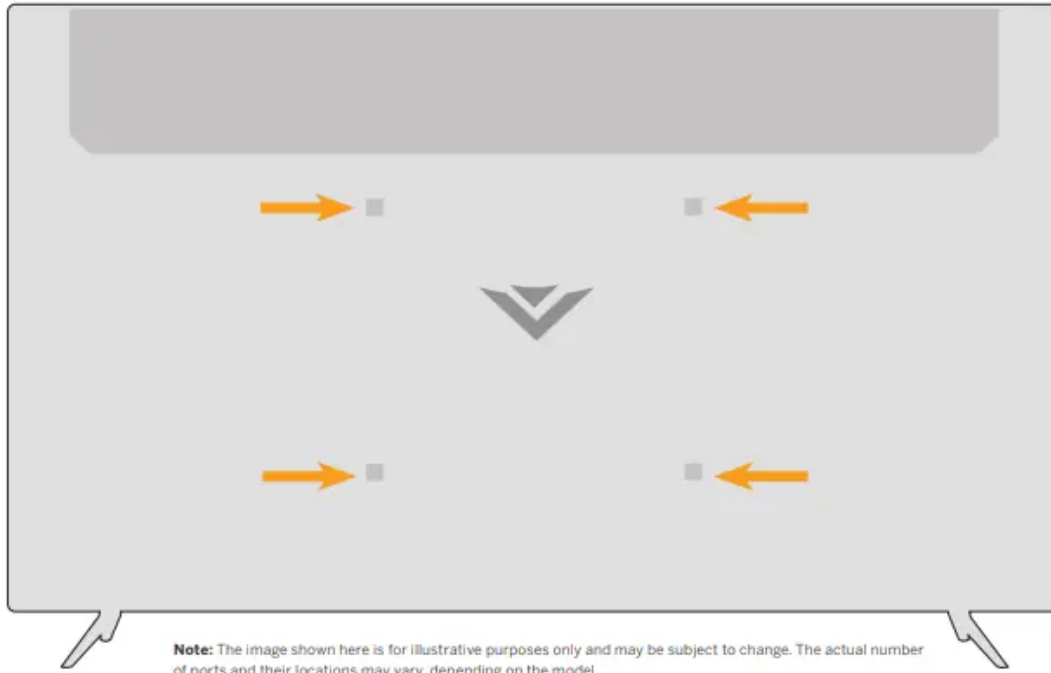


1. Disconnect any cables connected to your TV.
2. Place the TV face-down on a clean, flat, stable surface. Be sure the surface is clear of debris that can scratch or damage the TV.
3. If attached, remove the stands by loosening and removing the screws.
4. Attach your TV and wall mount to the wall by carefully following the instructions that came with your mount. Use only with a UL-listed wall mount bracket rated for the weight/load of your TV.

TIP: Installing a TV on a wall requires lifting. To prevent injury or damage to the TV, ask someone to help you.

WARNING: Do not use the screws that are included inside the wall mount holes to mount TV


	V431-J01	V505-J01	V505-J09	V555-J01	V585-J01	V655-J04	V655-J09	V705-J03	V795-J04
Screw Size	M6	M6	M6	M6	M6	M6	M6	M6	M8
# of Screws (not included)	4	4	4	4	4	4	4	4	4
Hole Depth	14 mm	14 mm	10.2 mm	14 mm	14 mm	10 mm	9 mm	12 mm	12 mm
Hole Pattern	200 x 200 mm	200 x 200 mm	200 x 200 mm	300 x 200 mm	300 x 200 mm	400 x 200 mm	400 x 200 mm	400 x 200 mm	400 x 400 mm
Weight w/o Stand	15.65 lb (7.1 kg)	21.38 lb (9.7 kg)	18.87 lb (8.56 kg)	30.14 lb (13.67 kg)	31.53 lb (14.3 kg)	42.6 lb (19.32 kg)	39.24 lb (17.8 kg)	52.7 lb (23.9 kg)	59.97 lb (27.2 kg)

USING THE REMOTE

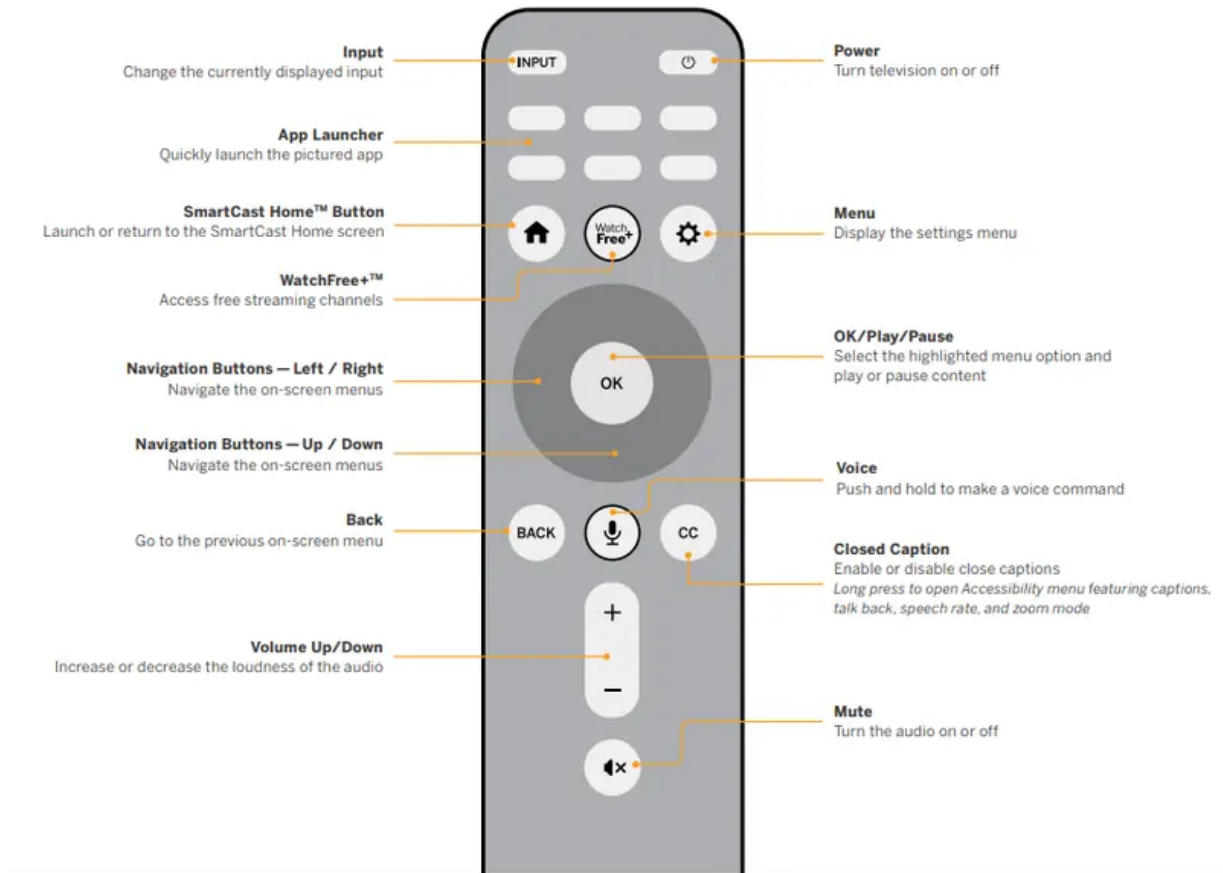

Replacing the Batteries

1. Push and slide the cover down. Then lift the cover to access the battery compartment.
2. Insert two batteries into the remote control. Make sure that the (+) and (-) symbols on the batteries match the (+) and (-) symbols inside the battery compartment.
3. Replace the battery cover and slide to close.

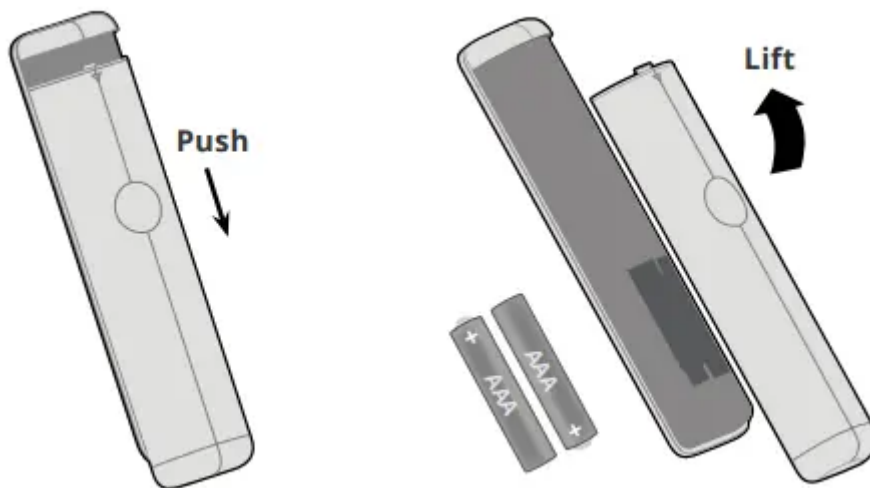

In many places batteries cannot be thrown away or discarded with household waste. Please ensure you properly dispose of your batteries consistent with the laws and/or regulations where you live.

WARNING: Keep the remote control batteries away from children. It may cause choking and/or lead to a fire or chemical burn if mishandled. Do not dispose of batteries in fire. Replace only with batteries of the correct type. Risk of fire or explosion if the battery is replaced by an incorrect type.


TIP: When needed, VIZIO recommends replacing the batteries that came with this remote with two, new Duracell 'AAA' alkaline batteries.

USING VOICE CONTROL


You can easily control your TV with the included Voice Remote.


To pair your remote to the TV: During first-time setup, your remote should automatically pair to your TV with Bluetooth.

To manually pair:

-  Press the MIC button to launch pairing mode.
- TIP: The voice remote must be within close enough range of the TV to pair properly.

How to use the voice control:

1.  Push and hold the MIC button while speaking a command.

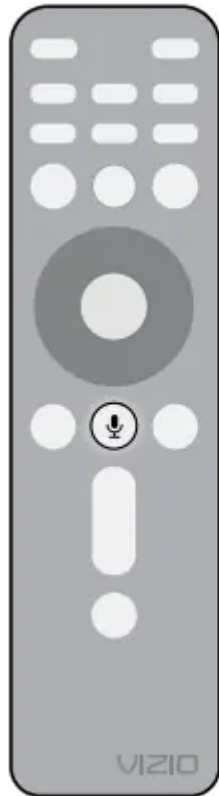

Here are some phrases you can say:

- ▼ "Find free comedy movies."
- ▼ "Switch input to HDMI-2."
- ▼ "Launch WatchFree+."
- ▼ "Turn on captions."
- ▼ "Lower volume to 10."

Using the SmartCast Mobile™ app for voice control:

- You can also use the free VIZIO SmartCast Mobile app as a voice control remote. Refer to the SmartCast Mobile section on page 29 for more information.

Connect to other popular voice assistant devices:

- VIZIO TVs also work with Google Assistant, Siri, and Alexa-enabled devices for hands-free voice control.



- TIP: If you want to use a voice assistant to turn your TV on, make sure Quick Start Mode is enabled. Refer to Adjusting the Power Mode

This device is equipped with the VIZIO Voice feature. By activating the VIZIO Voice feature (either through the mobile application or Bluetooth remote), you can control your Smart TV, and use many of its features, with voice commands. In order to provide you the VIZIO Voice feature, some voice commands may be transmitted to a third-party service provider that will translate your voice command into text and provide VIZIO Voice features. We may also capture and collect voice commands and associated text(s) in order to provide the VIZIO Voice feature and evaluate and improve the features. VIZIO will only capture voice commands when you press the microphone button on your remote or mobile app and speak into the microphone on the remote control or

mobile phone. You may disable the VIZIO Voice feature for your remote at any time by unpairing your Bluetooth remote.


Completing the First-Time Setup

Before you begin the first-time setup:


- Your TV should be installed and the power cord should be connected to an electrical outlet.
- If you have a wireless network, have the network password ready.
- If you are connecting to your network with an Ethernet cable, connect it to the Ethernet port on the TV.

The first time you turn on the TV, the on-screen instructions will guide you through each of the steps necessary to get your TV ready for use:


1. Choose your language. Pressing the CC button will enable TTS (text-to-speech) functionality.

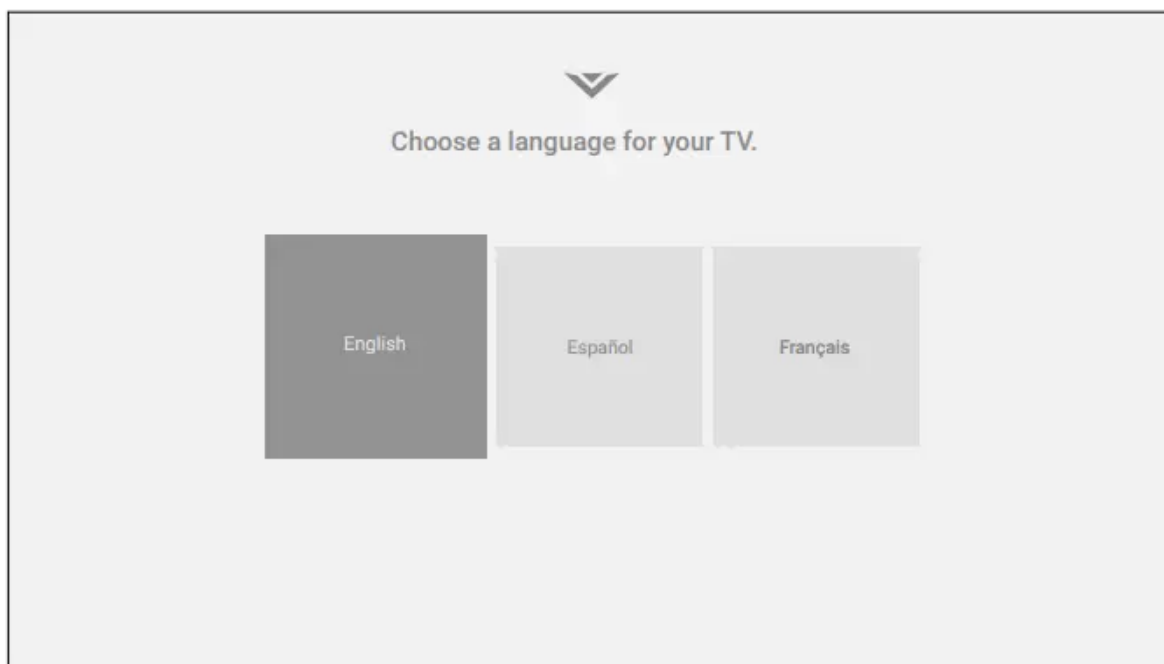


2. Choose home use.

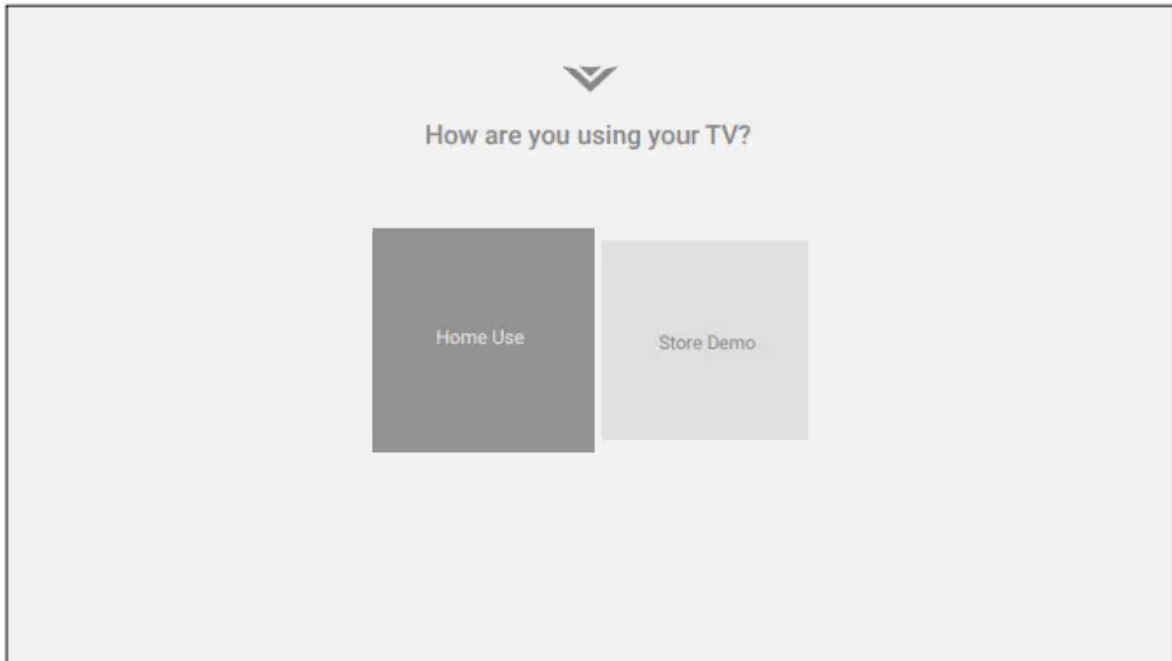


3. Pair your voice remote

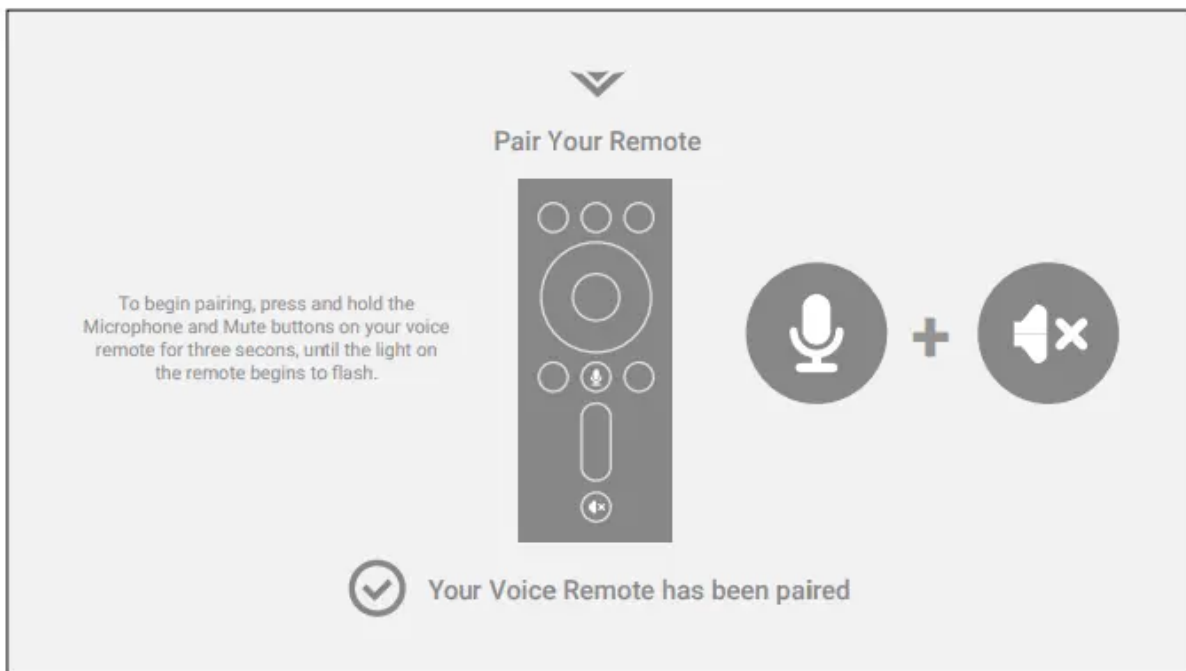

4. Choose your country (if applicable).

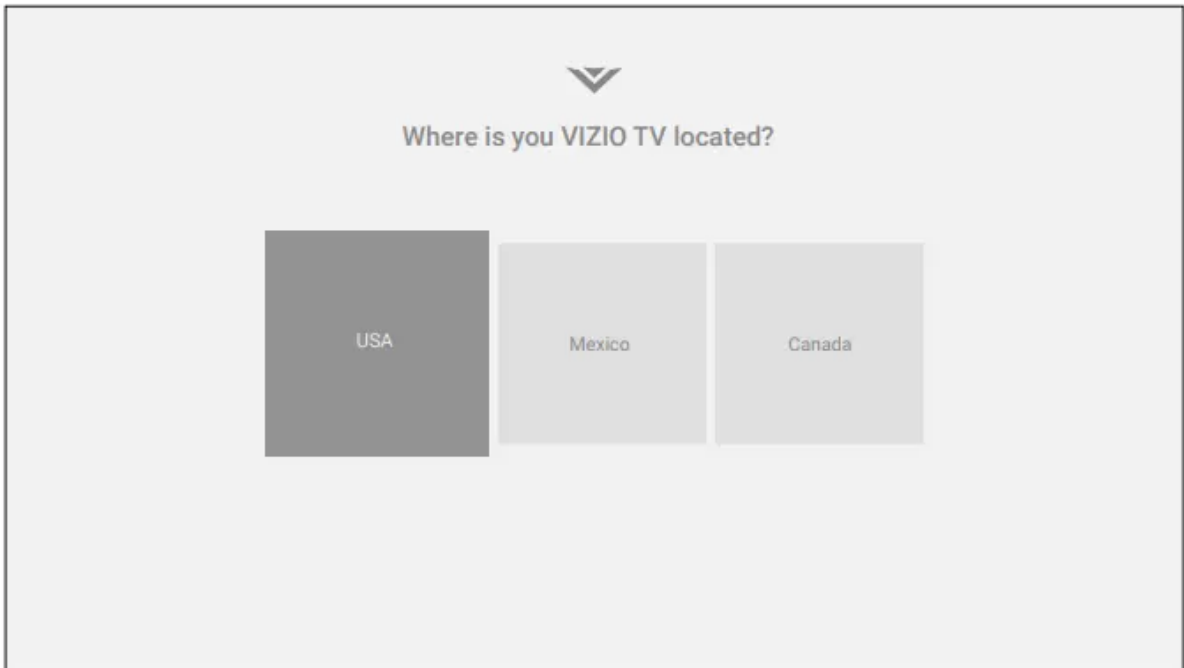


5. Choose your Wi-Fi network and enter the password.

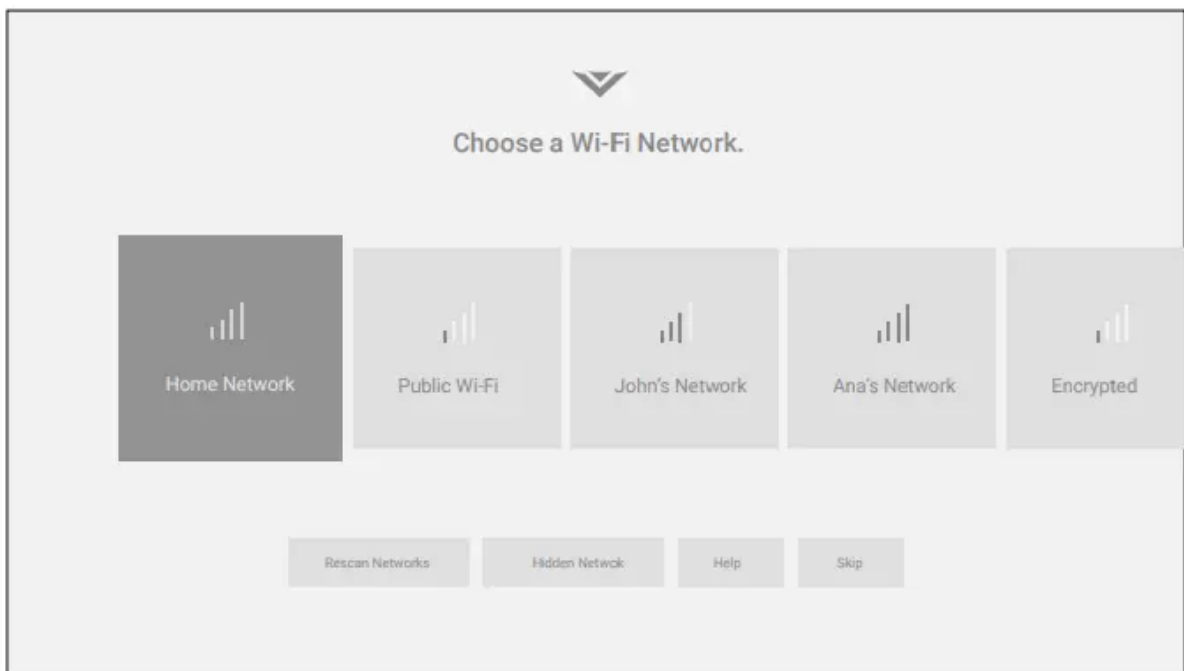

6. Name your TV.




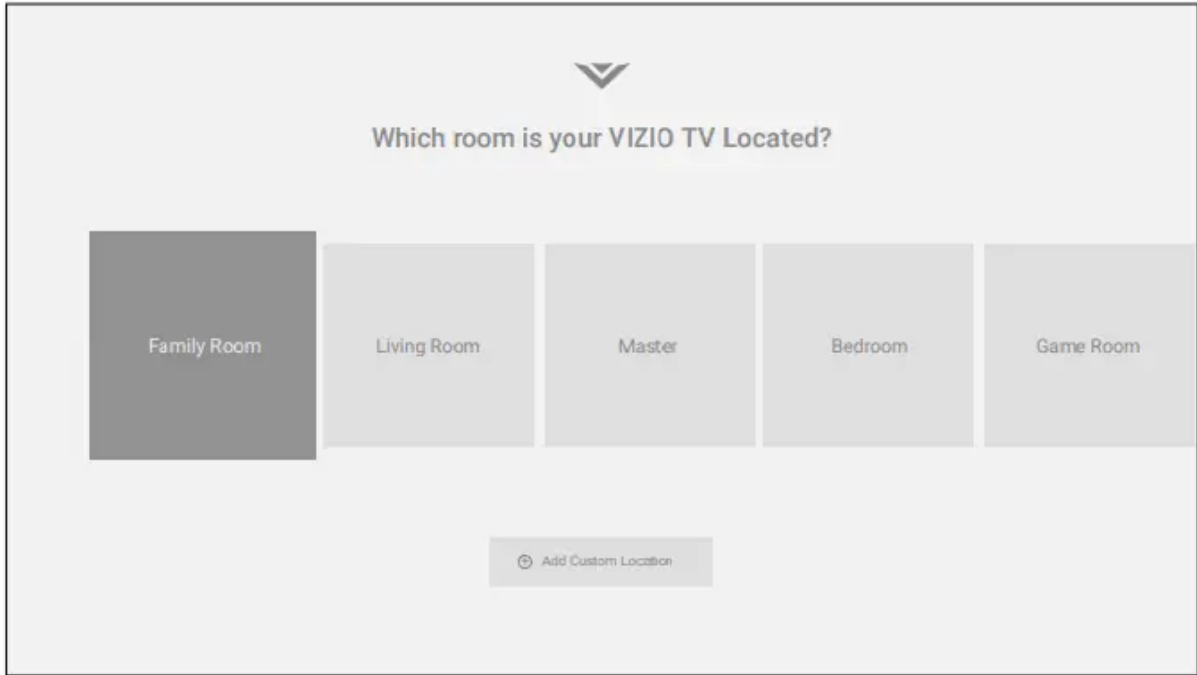


7. Scan for channels.



8. Accept the Terms & Conditions.

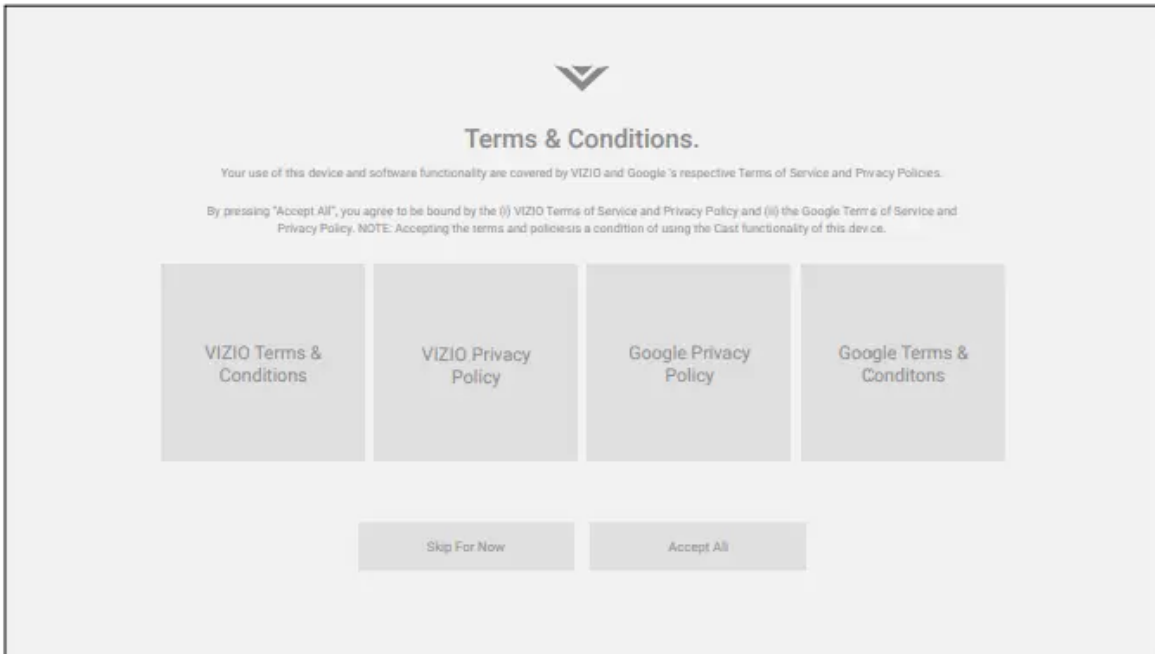

9. View and accept VIZIO Viewing Data Policy.

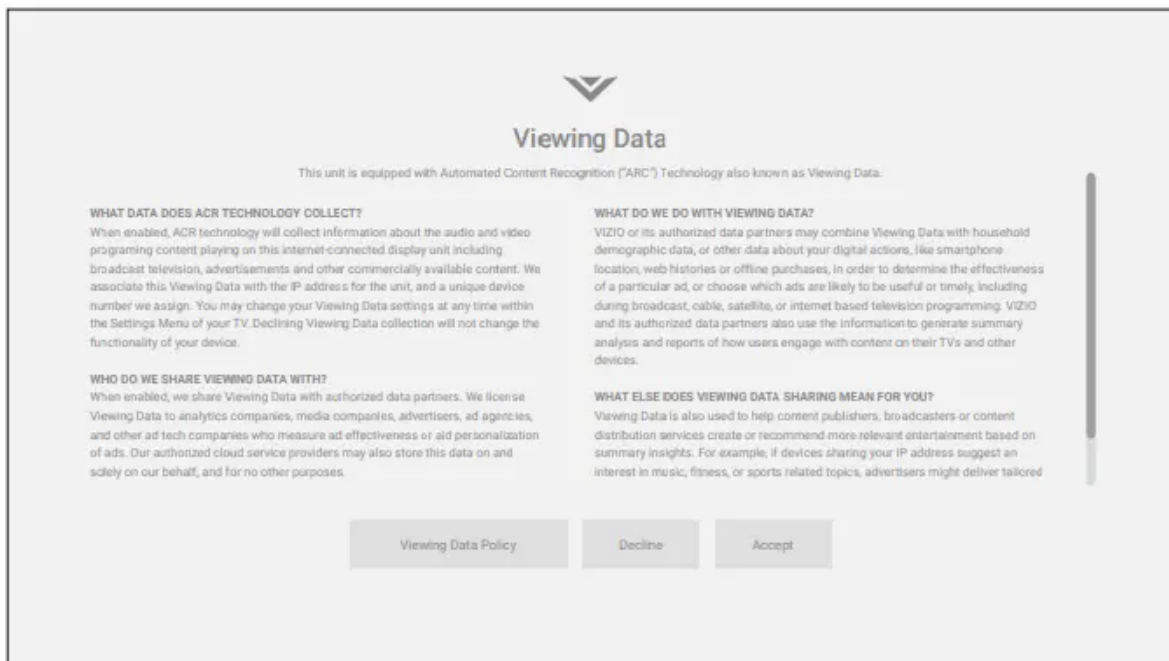


Using the On-Screen Menu

Your TV features an easy-to-use on-screen menu.

To open the on-screen menu, press the Menu button on the remote. From this menu, you can:

- Adjust the Picture settings
- Adjust the Audio settings
- Adjust the Network settings

- Set up the Timers
- Adjust the Channel settings
- Set up Closed Captioning
- Name and adjust Inputs
- Adjust TV settings
- View user manual

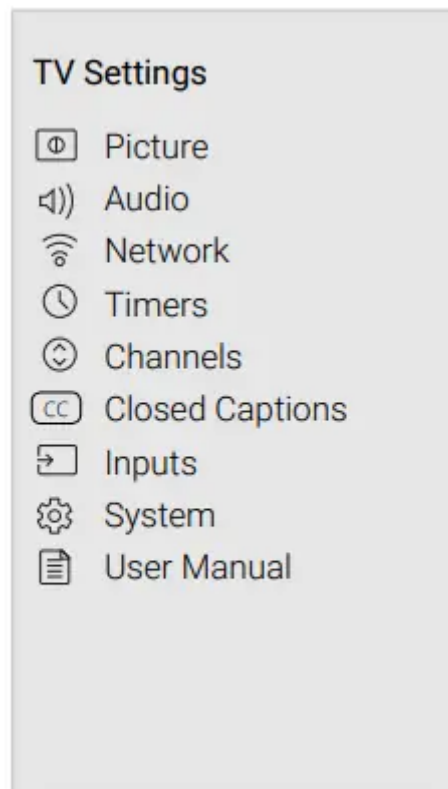

NAVIGATING THE ON-SCREEN MENU

To open the on-screen menu:

1. Press the MENU button on the remote.
2. Use the Navigation buttons to highlight a menu option, and press the OK button to select that option.


TIP: While navigating the on-screen menu, you can press the BACK button at any time to return to the previous menu screen.

CHANGING THE INPUT SOURCE

External devices such as DVD players, Blu-ray Players, and video game consoles can be connected to your TV. To use one of these devices with your TV, you must first change the input source using the INPUT menu.

To change the input sources:

1. Press the INPUT button on the remote. The input menu is displayed.
2. Use the Navigation buttons or the INPUT button on the remote to highlight the input you wish to view. The corresponding inputs are named on the back of your TV.
3. Press OK or release the INPUT button. The selected input is displayed.

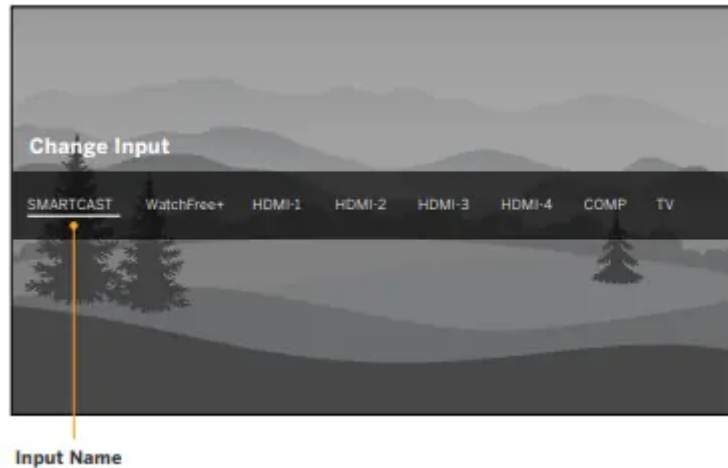

The underlined input on the left is the current input selected. Inputs may vary by TV.

TIP: You can change the input names that appear on the Input menu to make your devices easy to recognize. See Renaming Devices on the Input Menu

ADJUSTING THE PICTURE SETTINGS

Your TV can be adjusted to suit your preferences and viewing conditions.

To adjust the picture mode settings: Menu > Picture > Picture Mode


1. Use the Navigation buttons on the remote to highlight Picture Mode, then use the Left/Right Navigation buttons to change the picture mode:
 - Vivid — Sets the picture settings to values that produce a brighter, more vivid picture.
 - Bright — Great for viewing everyday TV, such as news and TV shows, that requires a brighter image with motion enhancements.
 - Calibrated — Accurate colors intended for cinema content viewing in a bright room.
 - Calibrated Dark — Accurate colors intended for cinema content viewing in a dark room or at nighttime.
 - Game — Reduces throughput delays and optimizes the picture settings for displaying game console output. Also the preferred picture mode for computer mode.

- Sports — Sets the picture settings to values ideal for watching sport events with motion control setting
 - TIP: If you save changes to the setting for a picture mode, an asterick will appear after its name. See Saving a Custom Picture Mode

2. To manually change each of the picture settings, use the Up/Down Navigation buttons on the remote to highlight that picture setting, then use the Left/Right Navigation buttons to adjust the setting:

- Backlight (SDR content) or Tone Mapping (HDR content) — Adjusts the LED brightness to affect the overall brilliance of the picture.
- Brightness — Adjusts the black level of the picture. When this setting is too low, the picture may be too dark to distinguish details. When this setting is too high, the picture may appear faded or washed out.
- Contrast — Adjusts the white level of the picture. When this setting is too low, the picture may appear dark. When this setting is too high, the picture may appear faded or washed out. If the setting is too high or too low, detail may be difficult to distinguish in dark or bright areas of the picture.
- Color — Adjusts the intensity of the picture colors.
- Tint — Adjusts the hue of the picture. This setting is useful in adjusting the flesh tones in the picture. If flesh appears too orange, reduce the level of color before adjusting tint.

- Sharpness — Adjusts the edge sharpness of picture elements. It can be used to sharpen non-HD (high definition) content; however, it will not produce detail

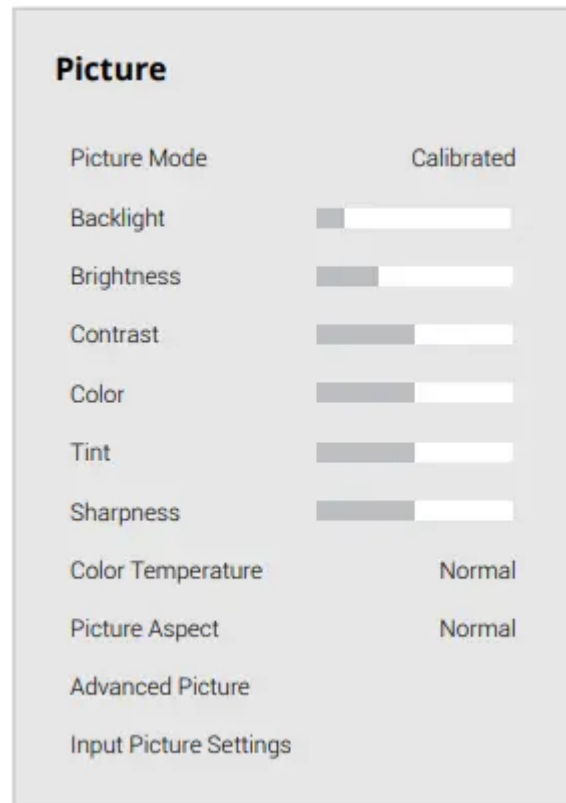


that does not otherwise exist.

Adjusting the Color Temperature: Adjusting the color temperature changes the white balance of the picture.

To adjust the color temperature: Menu > Picture > Color Temperature - Use the Navigation buttons on the remote to highlight a color temperature preset and then press OK.

- Warm — Produces an orange-hued picture.
- Cool — Produces a blue-hued picture.
- Normal — Optimized for television viewing.

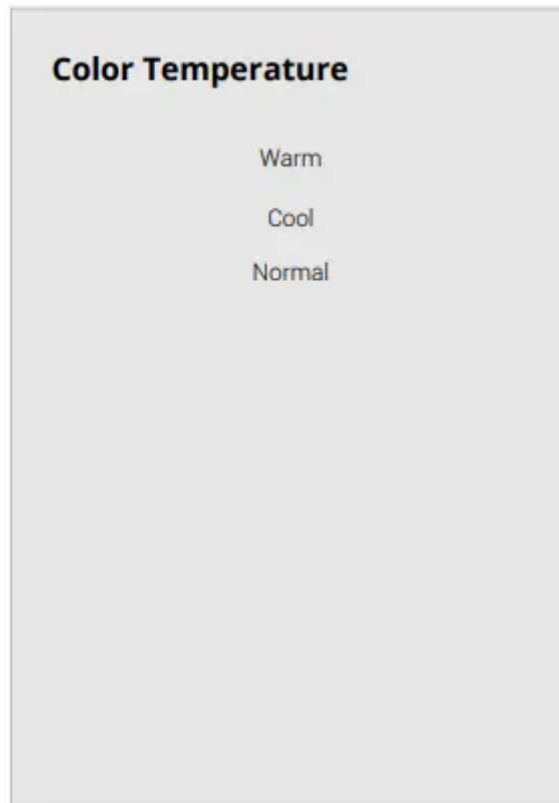

Changing the Picture Aspect Ratio

To change the screen aspect ratio: Menu > Picture > Aspect Ratio


Use the Navigation buttons to highlight the aspect ratio you wish to view.

Your TV can display images in different modes:

Normal (default) — No change to aspect ratio.

- Panoramic* — Stretches a 4:3 image to fill 16:9 screen with an algorithm so the center doesn't look stretched.
- Wide — Stretches a 4:3 aspect ratio to fill 16:9 screen. If a 16:9 image, adds black bars to top and bottom.
- Zoom — Expands image both horizontally and vertically by 14%.
- Stretch* — When the 16:9 signal is a 4:3 image with black bars left and right, stretches to fill the screen.

Some programs have black bars on the top or sides of the screen so that the picture keeps its original shape. Examples include widescreen movies and older TV programs.

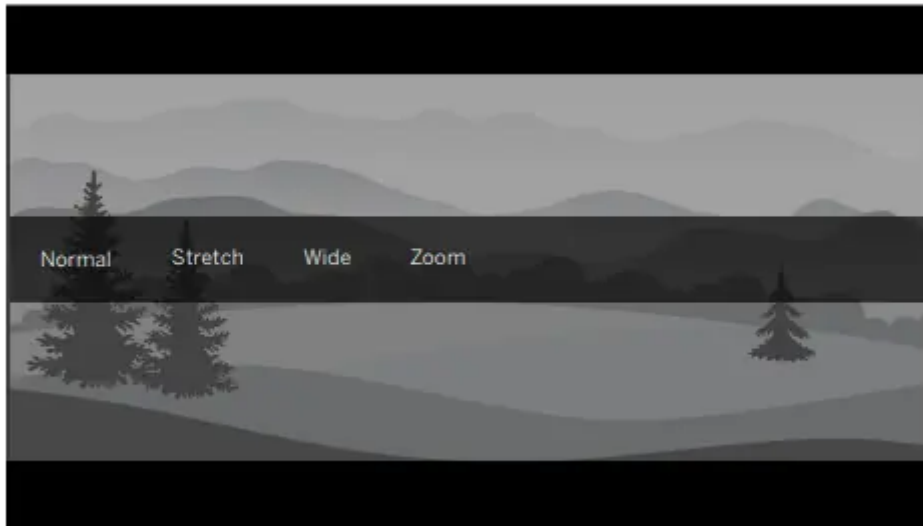


TIP: The aspect ratio cannot be changed for Ultra HD content or HDR content.

* Available aspect ratio settings may vary by input source. Panoramic mode is only available for standard definition TV (480i/480p) and Stretch mode is only available for high definition TV (720p/1080i/1080p).

Adjusting Advanced Picture Settings

To adjust advanced picture settings: Menu > Picture > Advanced Picture

Use the Navigation buttons to highlight the setting you wish to adjust, then press the Left/Right Navigation buttons to change the setting:

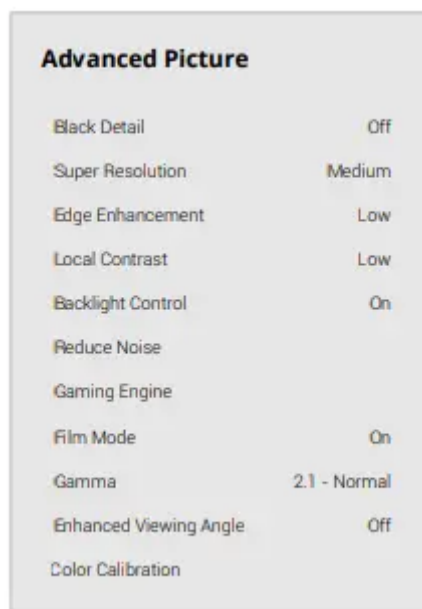

- Black Detail — Adjusts the average brightness of the picture to compensate for large areas of brightness.
- Super Resolution — Configures the resolution to enhance dim and blurred pictures resulting in a sharper image.

- Edge Enhancement — Increases the smoothness of edges.
- Local Contrast — Adjust the contrast of the picture locally.
- Backlight Control — Dynamically improves the contrast ratio of the picture by adjusting the backlight.
- Reduce Noise:
 - Signal Noise: Reduces background picture noise when viewing analog sources. This function helps to correct "speckle" noise with a slight reduction in sharpness.
 - Block Noise: Reduces the side effects of digital compression such as "blocking" and noise on sharp edges. The High setting will cause a slight reduction in sharpness.
 - Contour Smoothing: Removes visible contour noise without loss of the complex detail.
- Gaming Engine:
 - Game Low Latency: Reduces video delay (lag) when gaming. When set to Auto and Automatic Low Latency Mode (ALLM) is detected, ALLM will apply for the duration of the game.
 - Game HDR: Optimizes picture quality for HDR game.
- Film Mode — Optimizes the picture for watching films. Select On or Off.
- Gamma — Set the shape of the Gamma curve. Use lower Gamma values for bright room conditions, and higher values when it's dark.
- Enhanced Viewing Angle** — Increases the viewing angle with richer colors and a higher contrast image. This mode reduces horizontal resolution.
- Color Calibration — Calibrate colors using HSB, gain, offset and 20 point white balance and test or reset colors to defaults.

Adjusting the Color Tuner Settings

The Color Tuner settings allow you to adjust the color management system, 20 point white balance, turn color channels off for testing, and display SMPTE, flat, ramp, and uniformity analyzer test patterns.

To access the color tuner table: Menu > Picture > Advanced Picture > Color Calibration > Color Tuner

WARNING: The Color Tuner, White Balance, and test patterns allow technicians to manually calibrate the TV. Calibration requires specialized training, an input with precisely set colors, and a specialized light meter.

To turn color channels off and on:

1. Use the Navigation buttons on the remote to highlight Red, Green, or Blue.
2. Press the OK button to turn the color channel off or on. An X appears over a color channel that has been turned off.
3. Only two color channels can be turned off at the same time

TIP: Any changes made affect the color temperature setting. Select the preferred color temperature setting first. See Adjusting the Color Temperature


To adjust the color management system settings:

1. Use the Navigation buttons on the remote to highlight the Hue, Saturation, Brightness, Offset, or Gain of the color you wish to adjust. Press the OK button.
2. Use the Left/Right Navigation buttons to adjust the value. When you are finished press the OK button to save the setting.



	Red	Green	Blue	Cyan	Magenta	Yellow
Hue	0	0	0	0	25	-14
Saturation	-1	5	-4	0	-2	0
Brightness	-24	0	-22	0	0	0

To show or hide the SMPTE Test Pattern: Menu > Picture > Advanced Picture > Color Calibration > Color Tuner > SMPTE Test Pattern

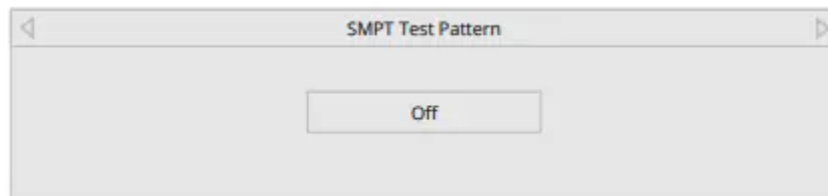


1. Use the Navigation buttons on the remote to highlight Off. Use the Left/Right Navigation buttons to select On to show the SMPTE Pattern. —or—
2. To hide the SMPTE Test Pattern, use the Left/Right Navigation buttons to select Off.

To show or hide the Flat Test Pattern: Menu > Picture > Advanced Picture > Color Calibration > Color Tuner > Flat Test Pattern




1. Use the Navigation buttons on the remote to highlight Off. Use the Left/Right Navigation buttons to select the percentage brightness for the flat test pattern. Selecting a percentage immediately shows the flat pattern at that brightness. —or—
2. To disable the Flat Test Pattern, use the Left/Right Navigation buttons to select Off.

To show or hide the Ramp Test Pattern: Menu > Picture > Advanced Picture > Color Calibration > Color Tuner > Ramp Test Pattern

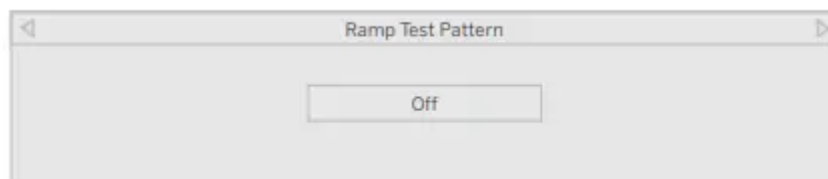

1. Use the Navigation buttons on the remote to highlight Off. Use the Left/Right Navigation buttons to select the color for the ramp test pattern. Selecting a color immediately shows that color ramp. —or—
2. To hide the Ramp Test Pattern, use the Left/Right Navigation buttons to select Off.

To show or hide the Uniformity Analyzer Test Pattern: Menu > Picture > Advanced Picture > Color Calibration > Color Tuner > Uniformity Analyzer Test Pattern

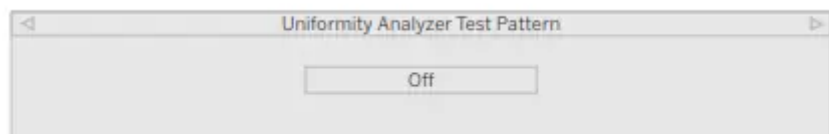

1. Use the Navigation buttons on the remote to highlight Off. Use the Left/Right Navigation buttons to select On to show the Uniformity Analyzer Test Pattern. —or—
2. To hide the Uniformity Analyzer Test Pattern, use the Left/Right Navigation buttons to select Off.

To adjust the White Balance Tuner settings: Menu > Picture > Advanced Picture > Color Calibration > White Balance Tuner

1. Use the Navigation buttons on the remote to highlight the Gain and Color values you wish to adjust. Press the OK button and use the Left/Right Navigation buttons to adjust the value. When you are finished, press the OK button to save the setting.

White Balance Tuner				
	Red	Green	Blue	
IRE% 5	0	0	0	
Offset	0	0	0	
Gain	0	0	0	

Adjusting Picture Input Settings

Enable HDMI Mode, Full Color 4:4:4, and adjust picture size and position.

To adjust the Input settings: Menu > Picture > Input Picture Settings Use the Navigation buttons to highlight the setting you wish to adjust.


- Picture Size and Position* — configure the display size and position of the picture to the screen.
- HDMI Mode* — Expanded color display. Only available for an HDMI input.
- Full Color 4:4:4* — Maintains full color data with 4:4:4 content. Some picture settings will not be available when this setting is On. Only available for an HDMI input.
- Color Space Range — Select Color Space for the source. Video sources uses YCbCr, but PC uses RGB.

Adjusting the Picture Mode Edit Settings

Manage custom picture modes and reset preset picture modes.

To adjust the Picture Mode Edit settings: Menu > Picture > Picture Mode Edit Use the Navigation buttons to highlight the setting you wish to adjust, then press OK to change the setting:

- Save Picture Mode — Save a custom picture mode.
- Copy Picture Mode — Copy the settings for a custom picture mode.
- Lock Picture Mode—Prevent changes to custom picture modes.
- Reset Picture Mode—Reset the picture mode settings to factory default values. Only available on customized preset modes.
- Delete Picture Mode—Delete a custom picture mode. Inputs assigned to the custom picture mode will use the Calibrated picture mode.

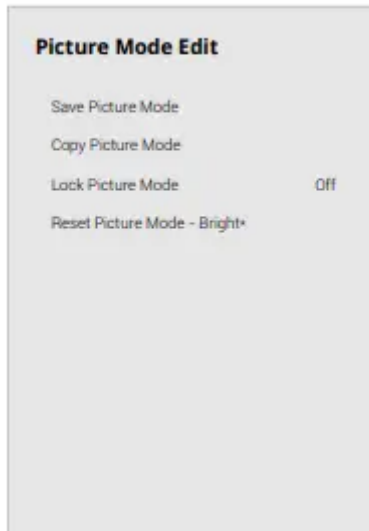

Saving a Custom Picture Mode

- Custom picture modes allow you to save a group of custom settings for various viewing conditions and video sources.

To save a custom picture mode: Menu > Picture > Picture Mode Edit > Save Picture Mode > Enter a Name > Save

- Custom picture modes allow you to save a group of custom settings for various viewing conditions and video sources.
 - Changes made while on any preset picture mode will add an asterisk on the top right corner of the preset mode.
 - The custom picture mode is not automatically saved.




Copy a Picture Mode: Custom picture mode settings can be copied to be applied to other inputs.

1. Complete the desired changes for the selected picture mode.
 1. Select Save Picture Mode to save picture mode for all inputs.
2. Select the input you want to copy your saved picture mode edits to.
3. Change the picture mode to your custom saved mode: Menu > Picture > Picture Mode > select saved custom picture mode
4. Copy your custom picture mode: Menu > Picture > Picture Mode Edit > Copy Picture Mode
5. Select what picture mode you would like to copy over.
6. A notification displays after the copy to your selected picture mode is completed. Now this picture mode will have your custom settings saved over it for the selected input.
7. Repeat as needed to customize additional inputs.

Lock a Picture Mode

Custom picture modes can be locked/unlocked with a unique PIN to prevent accidental changes to their settings. If not previously set, you can set up your system PIN code here.

- To lock all custom picture modes: Menu > Picture > Picture Mode Edit > Lock Picture Mode > On > Enter Your PIN > Save
- To unlock all custom picture modes: Menu > Picture > Picture Mode Edit > Lock Picture Mode > Off > Enter Your PIN

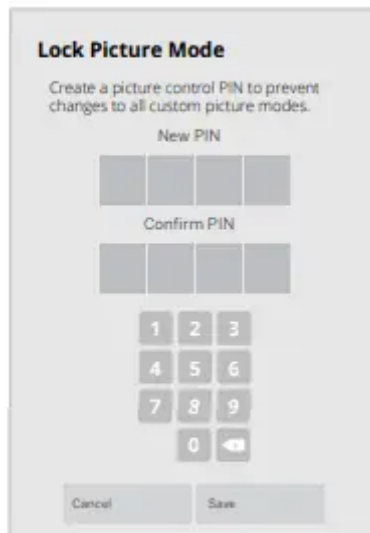


TIP: To set a custom PIN code, see Setting a System PIN Cod

Deleting a Picture Mode

Custom picture modes that are no longer needed can be deleted.

TIP: Inputs assigned to deleted custom picture modes become assigned to the Calibration picture mode.

- To delete a custom picture mode: Menu > Picture > Picture Mode Edit > Delete Picture Mode > Delete

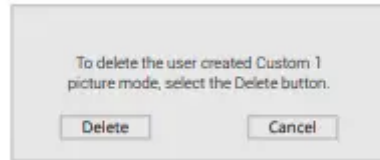


Resetting a Picture Mode

- A preset picture mode that has been edited can be restored to the factory default settings.
- To reset a customized preset picture mode: Menu > Picture > Picture Mode Edit > Reset Picture Mode > Reset

ADJUSTING THE AUDIO SETTINGS

To adjust the audio settings: Menu > Audio

Use the Navigation buttons to highlight the setting you wish to adjust, then press Left/Right Navigation buttons to change the setting:

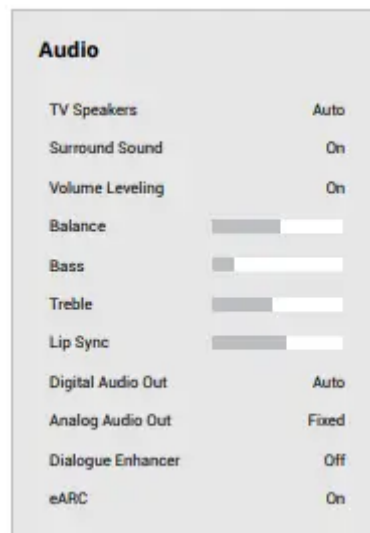

- TV Speakers — Built-in speakers automatically turn off if a sound bar is discovered. Turn the built-in speakers On or Off.
- Surround Sound — When set to On, enables surround sound suitable for sports and TV shows. Virtual:X™ adds virtualized height best for movies.
- Volume Leveling — When set On, DTS TruVolume™ audio solution levels the speaker volume.

- Balance — Balance the audio loudness between the left and right speakers.
- Bass — Increase or decrease the bass level.
- Treble — Increase or decrease the treble level.
- Lip Sync — Synchronize the display image with the audio track.
- Digital Audio Out — Select the digital audio output format for both the optical and HDMI ARC audio devices.
 - To hear talk back when Talk Back function is enabled, digital audio out must be set to PCM.
 - TIP: You must select Digital for audio with more than two channels (e.g., 3.0, 5.0, or 5.1).
- Analog Audio Out — Select Variable if you are controlling the volume with the remote. Select Fixed if an external audio device (sound bar or AV receiver) will control the volume.
- Dialogue Enhancer — If enabled and the signal source includes Dolby 5.1 AC-4 audio then clarity of dialogue is enhanced.
- eARC — Toggle between ARC (Off) and eARC (On) for audio output using HDMI 1. If On, audio is sent using eARC and is uncompressed. If Off, audio is sent using ARC and some audio formats may play in standard Dolby Audio, DTS Digital Surround, or PCM.
 - TIP: Your connected sound bar or audio receiver must support eARC in order to receive uncompressed audio. Check your device's user manual for more information.
- Equalizer — Only available when Surround Sound is set to OFF. Boosts or attenuates loudness at different frequencies.

SOUND BAR SETTINGS


- If a VIZIO sound bar is detected and connected via CEC (HDMI ARC/eARC), sound bar settings will appear.
- To adjust the sound bar settings: Menu > Audio > Sound Bar Settings Use the Navigation buttons to highlight the setting you wish to adjust, then press Left/Right Navigation buttons to change the setting.
- TIP: Available sound bar menu settings will be specific to the type of VIZIO sound bar connected. See Adjusting the CEC Settings to enable CEC under the SYSTEM settings.

ADJUSTING THE NETWORK SETTINGS

Your TV is Internet-ready, featuring both an Ethernet port and built-in high-speed wireless internet.

TIP: If your TV is connected to a network with an Ethernet cable, you will not see the wireless network connection menu. You must unplug the Ethernet cable to set a wireless network connection.

Connecting to a Wireless Network

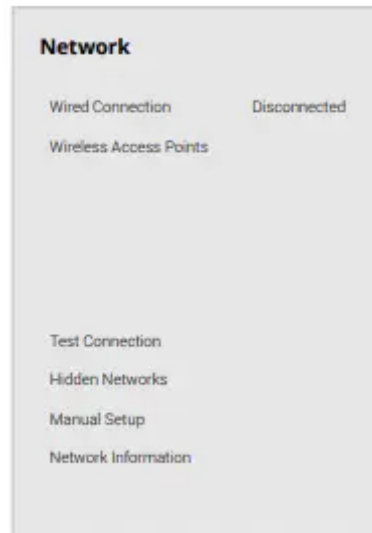

- To connect to a wireless network whose network name (SSID) is being broadcast: Menu > Network > Choose your network > Enter in the password > Connect

To forget a saved network:

- Highlight a saved wireless access point > OK > Forget
- If you do not see your wireless network displayed, click on: More Access Points > Highlight your wireless network > Enter in the password > Connect

Testing Your Network Connection

- To test your network connection: Menu > Network > Test Connection

Connecting to a Hidden Network

- To connect to a wireless network whose network name (SSID) is not being broadcast: Menu > Network > Hidden Network > Enter the Access Point Name > Connect > Enter in the password



Changing the Manual Setup Settings

- Advanced users can fine-tune the network settings using the Manual Setup feature. The security settings on your router may require you to enter the TV's MAC address.

To change advanced network settings: Menu > Network > Manual Setup > DHCP > Off


1. Use the Navigation and OK buttons to adjust each setting:

- IP Address — The IP address assigned to the TV.
- Subnet Mask — The subnet Exit 2D.
- Default Gateway — Your network's default gateway address.
- Pref. DNS Server — Your preferred domain name server address.
- Alt. DNS Server — Your alternate domain name server address.

2. Use the Navigation buttons on the remote to highlight Save and press OK

To find the TV's MAC address: Menu > Network > Manual Setup

You can find your TV's MAC address at the bottom of the list. The MAC addresses for the connections in use are displayed:

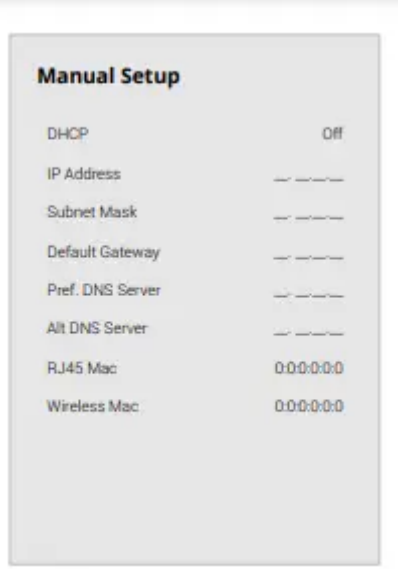

- RJ45 MAC — The Ethernet or RJ45 MAC address may be needed to set up your network when you have connected the TV to your network when you have connected the TV to your network with an Ethernet (Cat 5) cable.
- Wireless MAC — The Wireless (Wi-Fi) MAC address may be needed to connect your TV to your network with Wi-Fi.


To view network information Menu > Network > Network Information

SETTING UP TV CHANNELS

You can use the TV's Channels menu to:

- Find Channels
- Select channels to skip
- Analog Audio
- Digital Audio
- Set Parental Controls



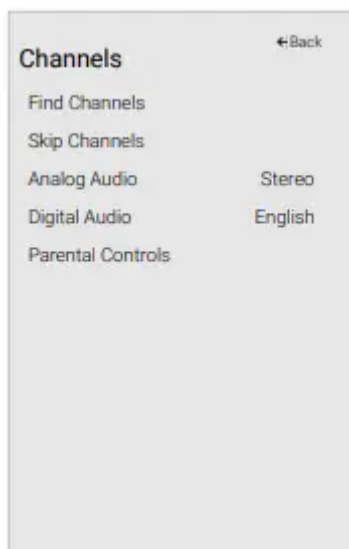


Scanning for Channels

The TV may need to scan for channels before it can display programs and their associated information. A channel scan is required for free over-the-air channels (using an antenna) and cable channels from an out-of-the-wall connection (without a cable box). Moving the TV to an area with different channels requires the TV to scan for channels again.

To perform an Auto Channel Scan: Menu > TV Channels > Find Channels

Wait until the channel scan is 100% complete. Highlight Done and press OK.

- If the channel scan is canceled, the channels that were already discovered are retained

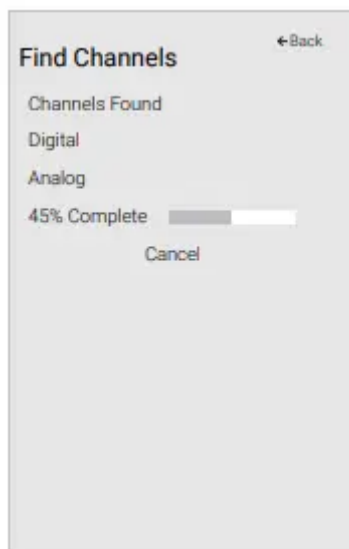


To perform a New Channel Scan: Menu > TV Channels > Find New Channels

A New Channel Scan saves the current channel map and scans for additional channels.

Skipping Channels


After a channel scan is completed, you may find that some channels are too weak to watch comfortably. There may also be some channels you do not want to view. You can remove these channels from the TV's memory with the Skip Channel feature.

WARNING: Channels that have been removed with the Skip Channel feature can still be viewed if the channel is entered using the Number Pad. If you wish to completely block a channel from being viewed, use the parental controls. See Locking and Unlocking Channels.

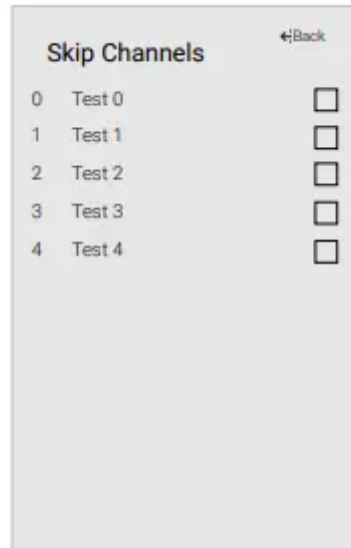

To remove a channel:

1. From the CHANNELS menu, highlight Skip Channel, and press OK. The SKIP CHANNEL menu is displayed.
2. For each channel you wish to remove, use the Up/Down Arrow buttons on the remote to

highlight the channel and press OK. A  appears to the right of each channel you select.

Changing the Analog Audio Language


Some analog over-the-air (free) and cable channels broadcast programs in more than one language. The TV's Analog Audio feature allows you to listen to audio in an alternate language using Secondary Audio Programming (SAP).

To use the Analog Audio feature: Menu > TV Channels > Analog Audio

WARNING: Not all programs are broadcast in SAP. The Analog Audio Language feature only works when the program being viewed is being broadcast with Secondary Audio Programming.


- Stereo — More than one speaker channel is being used. Sounds may be dispersed through different speakers depending on how the audio is programmed.

- SAP (Secondary Audio Program) — Typically used for audio in a different language other than the native one used in the program.
- Mono — All speakers are producing the same sound; there is no distinction between left or right sounds.

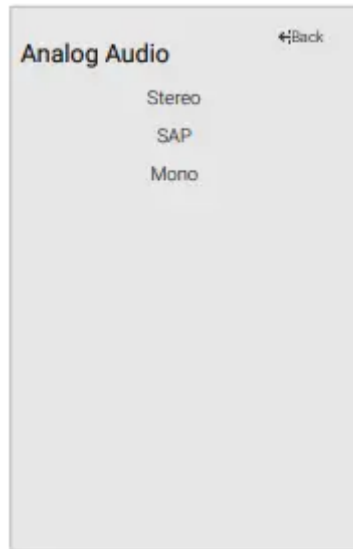

To use the Digital Language feature: Menu > TV Channels > Digital Audio

- Select the preferred audio language. Available languages or video description depend on the broadcast content.

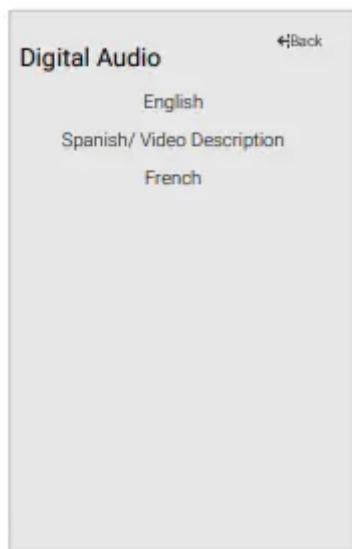

Using Parental Controls

- The TV's parental controls allow you to prevent the TV from displaying certain channels or programs unless a PIN is used.

Accessing the Parental Controls Menu

- To access the Parental Controls menu you must first set up a system PIN: Menu > TV Channels > Parental Controls > Enter in PIN
- TIP: to set a custom PIN code, see Setting a System PIN Code
- The Parental Controls menu only appears when:
 - You are using the tuner to receive your TV signals, such as when you are using an antenna for Over-the-Air signals or when connected to cable TV directly from the wall (no cable box).
 - You have a device connected using a composite video cable or a coaxial cable, such as a VCR, satellite or cable box, or DVR.
- TIP: Other devices have their own parental control settings.


Enabling or Disabling Program Ratings


- To manage program content according to its rating, you must first enable the Program Rating feature.
- To enable or disable the Program Rating feature: Menu > TV Channels > Parental Controls > Locks > Off/On

Locking and Unlocking Channels

When a channel is locked, it cannot be accessed. Locking a channel is a good way to prevent children from viewing inappropriate material.

To lock or unlock a channel: Menu > TV Channels > Parental Controls > Channel Locks Highlight the channel you want to lock or unlock and press OK.

- When a channel is locked, the Lock icon appears  locked. The channel is not accessible unless the system PIN is entered.

- When a channel is unlocked, the Lock icon appears  unlocked.


Blocking and Unblocking Content by Rating


A channel may sometimes broadcast programs that are meant for a variety of audiences (some for children and some for adults). You might not want to block the channel completely using a channel lock, but you can block certain programs from being viewed.

You can use the TV's Rating Block feature to block content based on its rating

To block or unblock content by its rating:

1. From the Parental Controls menu, highlight the content type you want to adjust and press OK:
 - USA TV — USA television program broadcasts.
 - USA Movie — USA movie broadcasts.
 - Canadian English — Canadian English television program broadcasts.
 - Canadian French — Canadian French television program broadcasts.
2. For each rating type you want to block or unblock, use the Navigation buttons to highlight the rating type and press OK.

◦
When the rating type is blocked, the Lock icon appears  locked. Content with this rating and all higher ratings cannot be viewed.

◦
When the rating type is unblocked, the Lock icon appears  unlocked. Content with this rating and all lower ratings can be viewed.

- If you want to block all unrated content, highlight Block Unrated Shows and use the Navigation buttons on the remote to select On.


To enable or disable the Block Unrated Shows setting: Menu > TV Channels > Parental Controls > Block Unrated Shows > Off/On

- Reset Locks: Reset all locks to default and clear all channel or ratings locks to the unlocked state.
- To reset locks: Menu > TV Channels > Parental Controls > Reset Locks

ACCESSIBILITY SETTINGS

VIZIO is committed to providing intuitive, user-friendly products. Your new VIZIO TV offers several accessibility features that can help you with easy navigation.

To access the Accessibility menu: Menu > Accessibility

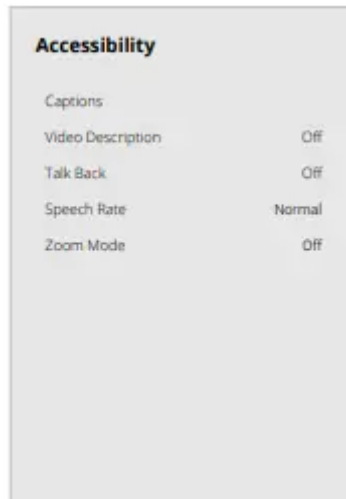

1. Captions — Activate and customize analog and digital closed captions.
2. Video Description — If included by the broadcaster, provides a narrated description of the action for the content.
3. Talk Back* — Enables your TV to speak all settings changes and adjustments using the remote in English.
4. Speech Rate — Adjusts the rate in which Text-to-Speech is spoken. Select Slow, Normal (default), or Fast.
5. Zoom Mode — Enlarges a section of the screen by approximately 200%.


TIP: You can also enable/disable accessibility features using the included remote. See Using the Remote


To access the Video Description menu: Menu > Accessibility > Video Description > Off/On

Setting Up Closed Captioning

- Your TV can display closed captions for programs that include them. Closed captions display a transcription of a program's dialogue.
- TIP: Closed Captioning is available for tuner, composite and streaming content (if supported by the app). Note that most apps will support their own CC from within the app.

To activate or deactivate Close Captions for current content:

Menu > Accessibility > Captions > Closed Captions > Off/On — or — Push the  button on the remote.

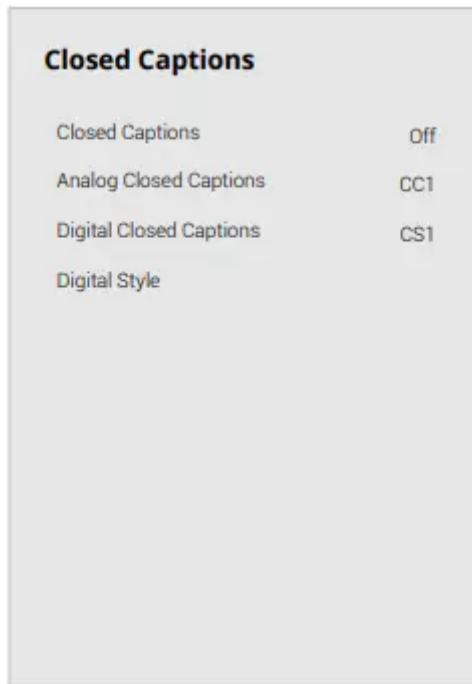

1. Use the Navigation buttons on the remote to highlight either Analog or Digital Closed Captions.
2. Use the Left/Right Navigation buttons on the remote to select the caption channel you wish to display

TIP: The Closed Captions menu does not appear when an HDMI input is selected. Close captions are available when using the tuner or a composite video cable.

Changing the Appearance of Digital Closed Captions

Digital closed captions can be displayed according to your preference. See the diagram on the next page for an explanation of the parts of the closed caption area.

To change the appearance of digital closed captions: Menu > Accessibility > Captions > Digital Style

1. Use the Left/Right Navigation buttons on the remote to select Custom. The Digital Style menu appears as shown.
2. Use the Up/Down Navigation buttons on the remote to highlight the setting you wish to change, then use the Left/Right Navigation buttons to change the settings (choose "As Broadcast" to keep default setting):
 - Text Style — Change the font used for the closed captioning text.
 - Text Size — Make the text larger or smaller.
 - Text Color — Change the color of the text.
 - Text Opacity — Change the transparency of the text.


- Text Edges — Change the effects at the edges of the text, such as raising the edges or adding drop shadows.
- Text Edges Color — Change the color of the text edge effects.
- Background Color — Change the color of the background directly behind the text.
- Background Opacity — Change the transparency of the background directly behind the text.
- Window Color — Change the color of the closed captioning box.
- Window Opacity — Change the opacity of the closed captioning box.

Digital Style	
Text Style	As Broadcast
Text Size	Large
Text Color	Blue
Text Opacity	As Broadcast
Text Edges	As Broadcast
Text Edges Color	As Broadcast
Background Color	As Broadcast
Background Opacity	As Broadcast
Window Color	As Broadcast
Window Opacity	As Broadcast

Typical choices include:

- Opaque background, transparent window — Only a strip of background appears behind the text, expanding as the text appears. This is the typical "As Broadcast" mode.
- Opaque background and window in the same color — When text appears, the entire line fills with color at once.


In the example, the closed caption text is green, the background is black, and the window is red.

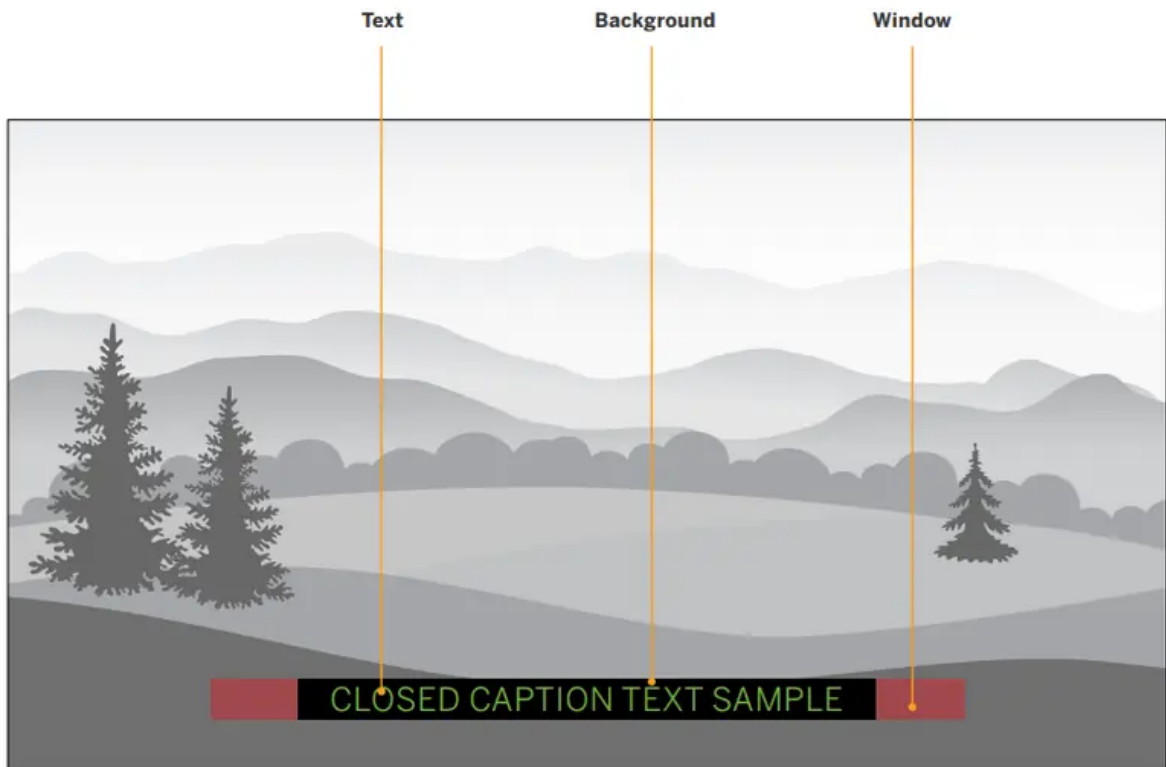

CHANGING THE SYSTEM SETTINGS

Using the System menu, you can:


- Change the on-screen menu language
- Set the time zone and local settings
- Name the TV
- Name an input
- Hide inputs not in use
- Adjust the power mode settings
- Set the USB power mode
- Turn the power indicator on or off
- Set up timers
- Set a system PIN code
- Adjust CEC settings
- Manage paired devices
- Manage a voice remote control

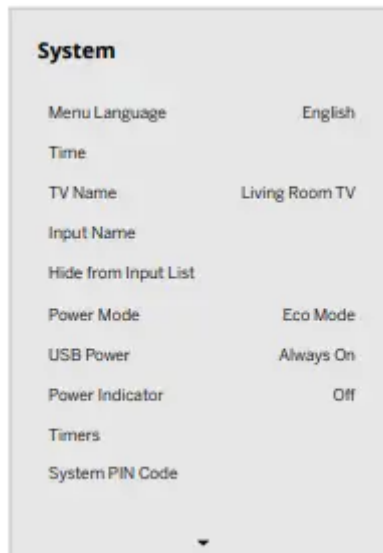

Changing the On-Screen Menu Language

- Your TV can display the on-screen menu in different languages.

To change the on-screen menu language: Menu > System > Menu Language Highlight your preferred language (English, Español, or Français) and press OK.

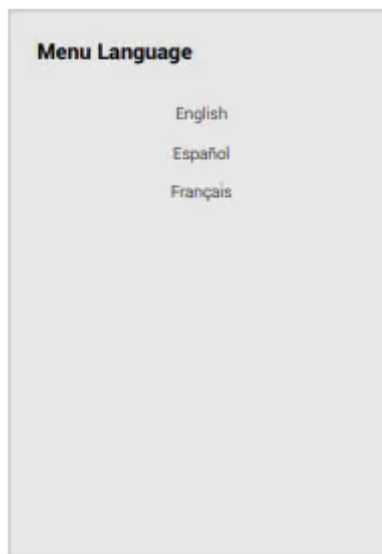

Setting the Time

To ensure the correct time is displayed when you press the INFO button, set the TV's time zone:
Menu > System > Time > Time Zone

To turn Daylight Saving Time on or off:

1. Highlight Daylight Saving Time and press OK. The Daylight Saving Time menu is displayed.
2. Choose On if it is currently Daylight Savings Time, Off if it is Standard Time, or Auto to have the system automatically detect Daylight Savings Settings.

To change Time Format:

1. Highlight Time Format and use the Left/Right Navigation buttons to change between a 12-hour format or 24-hour format.

Changing the TV Name

- Naming your TV helps differentiate it from other cast devices you may have in your home.
- To edit your TV name: Menu > System > TV Name > Enter a Name



Renaming Devices on the Input Menu

- You can rename the inputs to make them easier to recognize on the Input menu. For example, if you have a DVD player connected to the HDMI-1 input, you can rename that input to display “DVD Player.”
- See Changing the Input Source
- To change the name of an input: Menu > System > Input Name
- To enter a custom name:
 - Highlight the Name Input row and press OK.
 - Enter your custom label using the on-screen keyboard and press OK.
- TIP: The current input you are on will be the input name you are changing. You cannot change every input (i.e. WatchFree+ or SmartCast inputs).
- To Hide an Input from the List: Menu > System > Hide from Input List
 - Highlight the input name you would like to hide. Hidden inputs will not be displayed in the input list.
 - Use the Left/Right Navigation buttons to toggle from visible and hidden

Adjusting the Power Mode

- Your TV is set to Eco Mode by default. When the TV is powered off, the Eco Mode setting uses less than 0.5W of power. Quick Start Mode enables your display to power on faster and also to turn on when powered from another device (such as when you are casting onto the TV).
- **WARNING:** Please note that by changing this setting the energy consumptions required to operate this device will change.
- To switch between Eco Mode and Quick Start Mode: Menu > System > Power Mode
- Highlight either Eco Mode or Quick Start Mode and press OK.
- **TIP:** If you want to use a voice assistant to turn your TV on, make sure Quick Start Mode is turned on.

Using the USB Power Feature


- The USB port can be used to charge devices.
- The two options for this feature are:
 - Always On — Power is always available.
 - Off When TV Off — Power is only available with the TV is on.



Turning the Power Indicator On or Off

- The power indicator on the front of your TV normally does not glow when the TV is on. You can change this setting if you prefer the light to be on.
- To turn the Power Indicator Light On or Off: Menu > System > Power Indicator > Off/On

Setting Timers

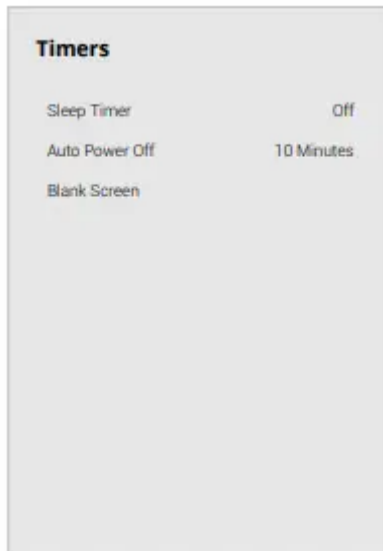

- When activated, the TV's timer will turn the TV off after a set period of time.
- To setup a sleep timer: Menu > System > Timers > Sleep Timer
- Use the Left/Right Navigation buttons on the remote to highlight the period of time after which you want the TV to go to sleep: 30, 60, 90, 120, or 180 minutes. If you don't want the sleep timer to activate, change the setting to Off.

Setting the Auto Power Off Feature

- To help save energy, your TV is set by default to turn off after 10 minutes without a video or audio signal. This feature can be deactivated.
- To set the Auto Power Off feature: Menu > System > Timers > Auto Power Off > Off

Using the Blank Screen Feature

- To help save LED life, your TV screen can turn on or off while audio is streaming.
- To use the Blank Screen feature: Menu > System > Timers > Blank Screen
- To exit Blank Screen, press any key (except the volume and mute keys).

Setting a System PIN Code




- You can set a system pin to lock content and picture modes, as well as prevent accidental system resets. The first time you select System PIN code, you will need to create a PIN.
- To create a PIN: Menu > System > System PIN Code > Enter Your PIN > Save
- WARNING: You will need to enter your current PIN code the next time you access this menu or if you'd like to change your PIN.

Adjusting the CEC Settings

- The CEC function on your TV enables you to control devices connected to an HDMI input with the VIZIO TV remote, without any programming: Menu > System > CEC
- Select a setting and then press OK.
 - CEC — To use CEC, you must select Enable.
 - Device Discovery — To determine if your device is connected and supports CEC, select Device Discovery and then press OK.
- CEC Audio Setup Connect your audio device to the HDMI-1 (HDMI eARC) input on the TV. On your audio device, select the HDMI ARC/eARC input.
- Using CEC, your VIZIO TV remote can control such features including (depending on specific device):
 - Power On/Off
 - Volume and mute
 - Play and pause
- WARNING: Not all HDMI devices support CEC. See your device's user manual for details.

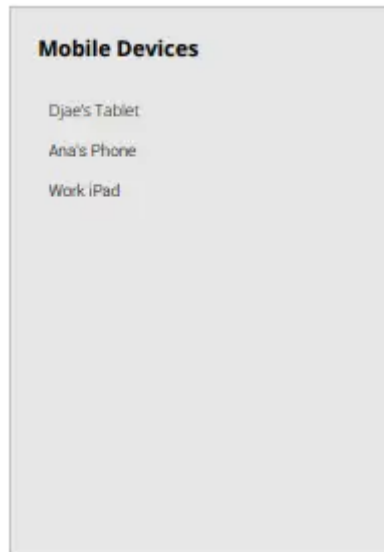

Managing Mobile Devices




- Your TV can be paired with a mobile device so you can easily control your TV across multiple devices.
- To see a list of paired devices or unpair a device: Menu > System > Mobile Devices
- Highlight a device name to delete it and press OK.

Voice Remote: Your TV can be controlled with a VIZIO Voice Remote.

- To pair voice remote: Menu > System > Voice Remote

- Press and hold both the  MIC and  MUTE buttons for 5 seconds to launch pairing mode.

- To use your successfully paired voice remote: Press and hold the  MIC button while speaking a command.


USING THE ADMIN & PRIVACY MENU

You can use the TV's Admin & Privacy menu to restore the TV to its factory default settings as well as access other administrative settings.

Using the ADMIN & PRIVACY menu, you can:

- Force the system to power off and on
- View system information
- View a customer service support code
- Check for system updates
- Reset the TV to factory settings

- Enable or disable viewing data
- Personalize advertising choices
- View the VIZIO Privacy Policy
- Start or stop the store demo mode

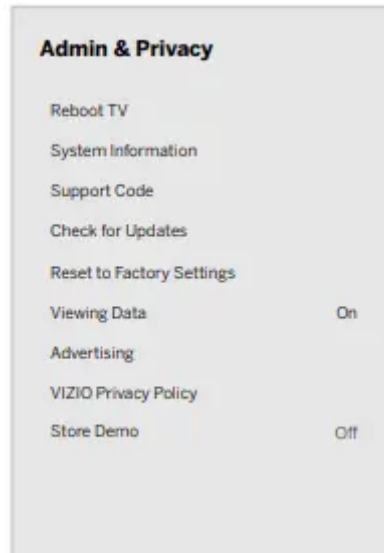

Performing a Reboot

- A reboot forces the TV to turn off then on again.
- To retrieve your reboot the TV: Menu > Admin & Privacy > Reboot TV

Viewing System Information

- To view technical data and status information about your TV and network connection: Menu > Admin & Privacy > System Information

Accessing the Support Code

- Retrieve a customer service support code/PIN or access basic TV information to assist in a customer service interaction.
- To retrieve your support code: Menu > Admin & Privacy > Support Code

Checking for System Updates

- To check for a system update: Menu > Admin & Privacy > Check for Updates
- If an update is found, the TV will ask to confirm the update. If no update is found, the screen will note The TV is up-to-date.

Restoring the TV to Factory Default Settings

- All of the on-screen menu settings can be reset to the factory defaults.
- **WARNING:** If you restore the TV to the factory default settings, all change you have made to the settings will be lost. This includes any wireless or picture settings.

- To restore the TV to its factory default settings: Menu > Admin & Privacy > Reset to Factory Settings
 1. If you set a system PIN code, enter it now.
 2. The TV displays, "Select Reset to restore all TV settings to factory defaults."
 3. Highlight Reset and press OK.
 4. Wait for the TV to turn off. The TV will turn back on shortly afterward and the setup process will begin.

Viewing Data

To turn viewing data on or off: Menu > Admin & Privacy > Viewing Data

Use the Left/Right Navigation buttons to toggle from on or off

About Viewing Data

- **WHAT DATA DOES ACR TECHNOLOGY COLLECT?** When enabled, ACR technology will collect information about the audio and video programming content playing on this internet-connected display unit including broadcast television, advertisements and other commercially available content. We associate this Viewing Data with the IP address for the unit, and a unique device number we assign. You may change your Viewing Data settings at any time within the Settings Menu of your TV. Declining Viewing Data collection will not change the functionality of your device.
- **WHO DO WE SHARE VIEWING DATA WITH?** When enabled, we share Viewing Data with authorized data partners. We license Viewing Data to analytics companies, media companies, advertisers, ad agencies, and other ad tech companies who measure ad effectiveness or aid personalization of ads. Our authorized cloud service providers may also store this data on and solely on our behalf, and for no other purposes.
- **WHAT DO WE DO WITH VIEWING DATA?** VIZIO or its authorized data partners may combine Viewing Data with household demographic data, or other data about your digital actions, like smartphone location, web histories or offline purchases, in order to determine the effectiveness of a particular ad, or choose which ads are likely to be useful or timely, including during broadcast, cable, satellite, or internet based television programming. VIZIO and its authorized data partners also use the information to generate summary analysis and reports of how users engage with content on their TVs and other devices.
- **WHAT ELSE DOES VIEWING DATA SHARING MEAN FOR YOU?** Viewing Data is also used to help content publishers, broadcasters or content distribution services create or recommend more relevant entertainment based on summary insights. For example, if devices sharing your IP address suggest an interest in music, fitness, or sports related topics, advertisers might deliver tailored ads to this display unit or other devices associated with your IP address.

- You can easily turn this feature On or Off in the ADMIN & PRIVACY menu. If you have trouble enabling or disabling Viewing Data, please contact VIZIO Customer Support

Managing Advertising Settings

- Your advertising choices can be personalized.

Limited Ad Tracking

- When enabled, TV Ad ID will not be passed or used for personalized ads on this device.
- To turn on or off: Menu > Admin & Privacy > Advertising > Limited Ad Tracking
 - Use the Left/Right Navigation buttons to toggle from on or off

Reset TV Advertiser ID

- An Identifier for Advertising — can be reset to a new identifier at any time.
- To reset the TV Advertiser ID: Menu > Admin & Privacy > Advertising > Reset TV Advertiser ID > OK

Ad Replacement

- Replaces Standard Ads with Personalized Ads in Linear TV.
- To turn Ad Replacement on or off: Menu > Admin & Privacy > Advertising > Ad Replacement
 - Use the Left/Right Navigation buttons to toggle from on or off


View VIZIO Privacy Policy

- To view VIZIO Privacy Policy: Menu > Admin & Privacy > VIZIO Privacy Policy > OK

Store Demo

- To set to Off, Demo 1, or Demo 2: Menu > Admin & Privacy > Store Demo

USING THE INFO WINDOW

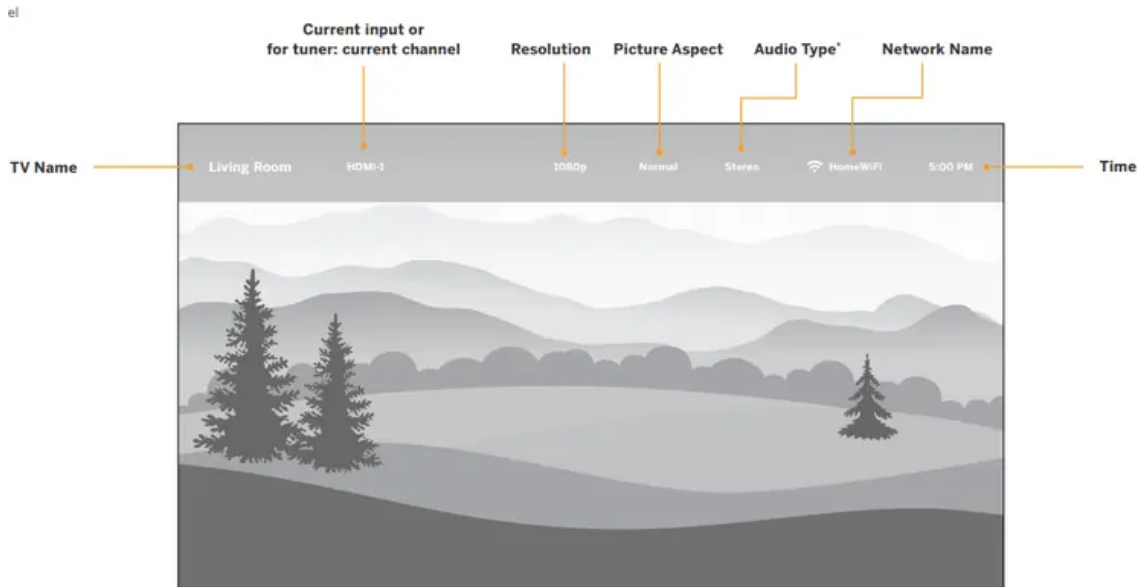

Press the INFO button to display:


- TV name
- Current input or for tuner: current channel
- Picture resolution
- Picture aspect
- Audio type
- Network name
- Time


SmartCast Home™

What is SmartCast Home? SmartCast Home lets you discover, stream, and control your content like never before! Access top apps, like Netflix, Disney+, and Hulu, by using the remote to easily browse and launch content directly from the home screen. SmartCast Home makes finding something to watch easy and fun.

How to Launch SmartCast Home

To begin streaming with SmartCast Home:

- Press the SmartCast Home  button on your remote. —or—
- Select SmartCast from the list of inputs.

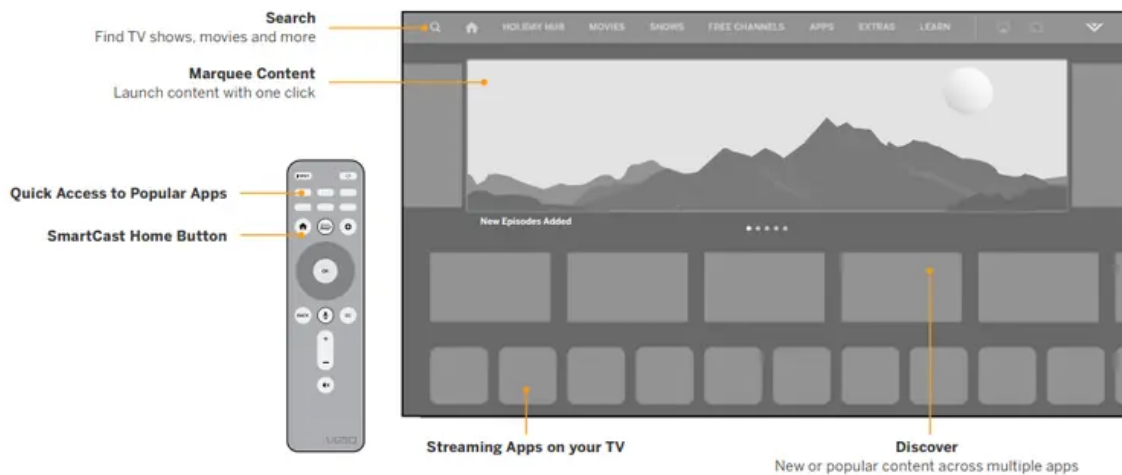

What you can do with SmartCast Home

- Stream high quality entertainment.
- Launch top tier apps directly from the home screen.
- Access free channels to watch without a subscription through WatchFree+.
- Rearrange apps on your home screen just the way you like it.
- Mirror your laptop or mobile device onto your TV through Apple Airplay or Chromecast



- Works with Google Assistant, Siri, and Alexa-enabled devices for hands-free voice



control.


Control your TV with the SmartCast Mobile™ App

Download the VIZIO SmartCast Mobile app and turn your smartphone into a remote to control and configure your TV.

With SmartCast Mobile, you can:

- Power on/off devices, play/pause content, and modify advanced settings, all from the palm of your hand.
- Control playback and TV settings using your voice.
- Easily enter text onto your TV/display from your mobile device using a full keyboard.
- Browse and discover movies, TV shows, music, live streams, and more, across multiple apps at once.
- Access a quick look at show ratings, synopsis, cast, crew, clips, and other details.

WatchFree+™

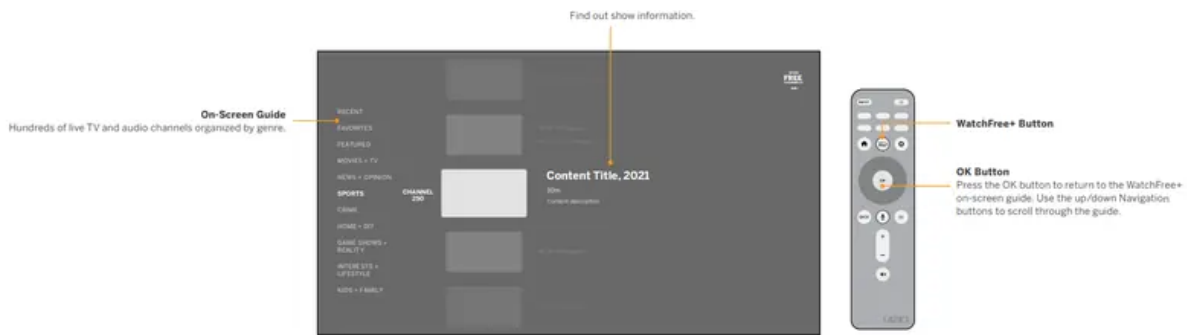


What is WatchFree+? VIZIO WatchFree+ takes your cord-cutting entertainment experience one step further! With the simple press of a button, enjoy free streaming TV with hundreds of live TV channels to choose from – news, movies, sports, comedy, music and more. A built-in on-screen guide makes finding something to watch easier than ever.

And it's all FREE—no fees, no subscriptions, or logins.

What you can do with WatchFree+


- Stream hundreds of live TV channels absolutely free – news, movies, sports, comedy, music and more.
- Navigate through channels, organized by genre, with an intuitive on-screen guide.
- Watch the best of internet TV.
- No logins, subscriptions or transactions fees.

How to Launch WatchFree+: To launch and begin watching entertainment offered on WatchFree+:

- Press the WatchFree+  button on your remote. —or—
- Select WatchFree+ from the list of inputs or app row.

Playing USB Media

The USB Media Player allows you to connect a USB flash drive to your TV and play music, video, or photos.

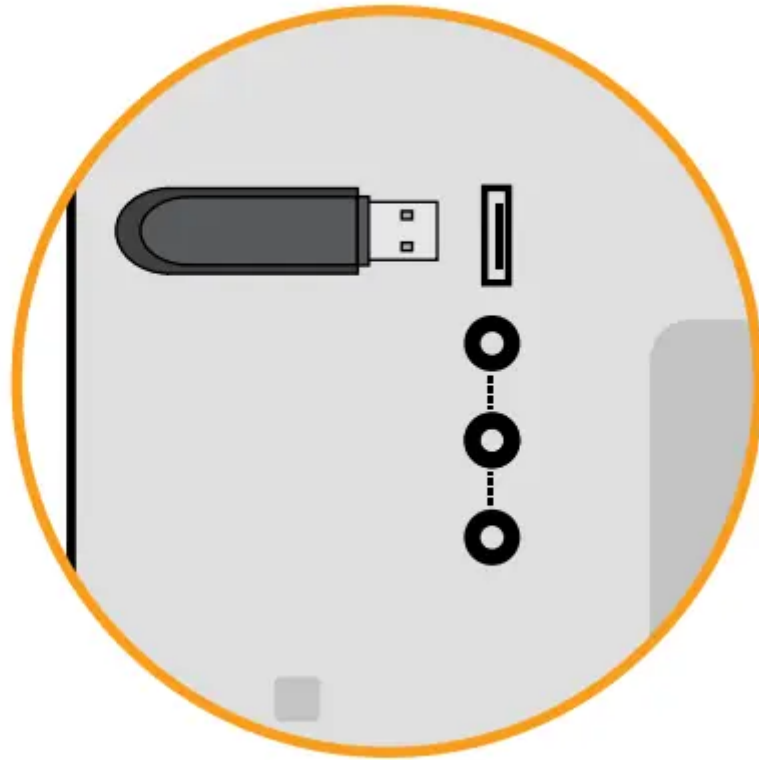

Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary, depending on the model.

Preparing Your USB Drive to Play USB Media: To display USB media, you must first save your videos onto a USB flash drive:

- The USB flash drive must be formatted as FAT32.
- Files on the USB flash drive must end in a supported file extension (.mp3, .jpg, etc).
- The player is not designed to play media from external hard drives, MP3 players, cameras, or smartphones.

Displaying USB Media: To display your USB media:

1. Connect your USB flash drive to the USB port on the side of the TV.
2. The TV will recognize the USB. Use the Navigation Keys on the remote to select the content you want to play. —or—
3. Select USB from the bottom streaming icons on the SmartCast Home™ page.

TIP: You can display your photos in Fullscreen. Select the photo, press OK, then highlight Fullscreen and press OK.

Removing the USB Drive from the TV: To safely remove your USB flash drive from the TV:

1. Turn the TV off.

2. Disconnect your USB flash drive from the USB port on the side of the TV.

WARNING: Do not remove the USB drive while the TV is on. Doing so may damage the drive.

Playing USB Media: Music

Back Button
Highlight this button and press **OK** to return to the previous screen.

Connected Sources
Displays connected USB devices.

Current Folder
My Music

Playback Control

Toggle Music/Photos
Browse Photos

Sort by Album/Artist/Track
Sort: Artist: A - Z
View: Folders

View All or View Folders
Toggle between viewing all content and only viewing folders.

Now Playing Information
Displays song title, album title, and other information.

Progress Bar
Displays the duration of the currently playing song. The bar will lengthen as the song progresses.

Album Art
If included on the USB thumb drive and associated with your music, the album art will display here.

Folder Contents/Playlist
This area displays the contents of the currently selected folder. You can browse among files using the **Arrow** and **OK** buttons on the remote.

Page Information
If your USB thumb drive has more files than can be displayed on a single screen, the page number is displayed here.

#	Track	Album	Artist	Duration
1	Starry Summer	Summer	JCheesy	2:42
2	Summer Nights	Summer	DJ Sunset	3:11
3	Mango Dream	Beach Mix	Ana Bariana	8:46
4	Crystal Waters	Beach Mix	The Dash	4:21
5	Smooth Waves	Breezy Mix	Rio Steve	7:58

Playing USB Media: Video

Back Button
Highlight this button and press **OK** to return to the previous screen.

Connected Sources
Displays connected USB devices.

Current Folder
My Videos

Sort by Date or File Name
Sort: Date New-Old

View All or View Folders
Toggle between viewing all content and only viewing folders.

Play once or continuously
Play


Preview Window

Folder Contents/Playlist
This area displays the contents of the currently selected folder. You can browse among files using the **Arrow** and **OK** buttons on the remote.

Page Information
If your USB thumb drive has more files than can be displayed on a single screen, the page number is displayed here.

#	File	Date	Duration
1	Family Vacation - California	-	00:23:43
2	28th Birthday Party	-	00:38:28
3	Korea 2019	-	00:41:08
4	Sunny's Graduation	-	00:25:32

Playing USB Media: Photo

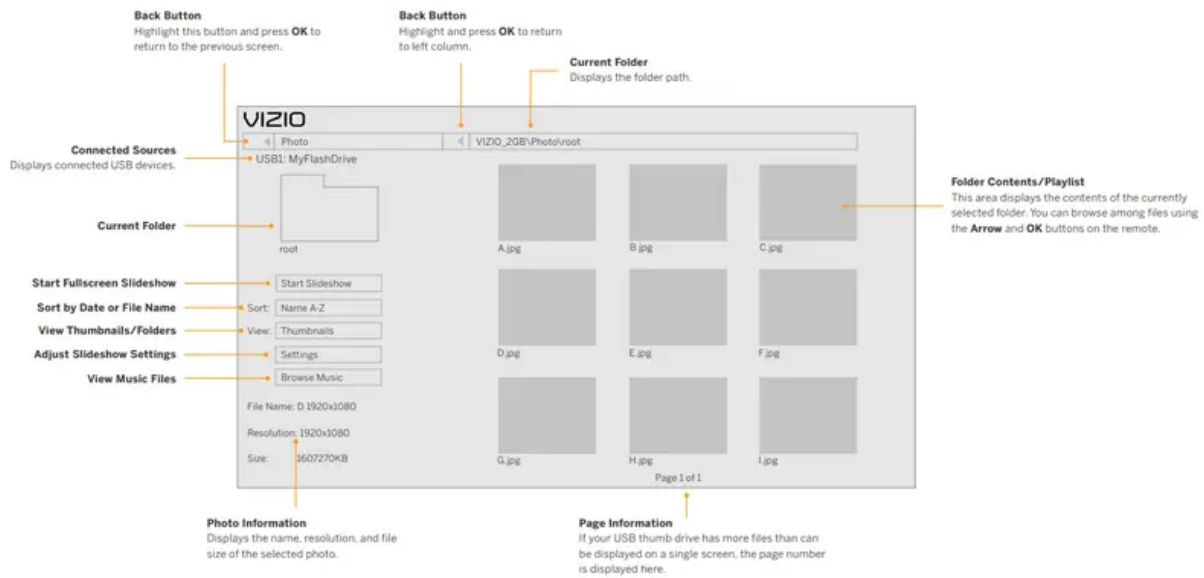

Help Topics

1. The remote is not responding.

- Make sure the batteries are properly inserted matching the - and + symbols.
- Replace the batteries with fresh ones.

2. The TV displays “No Signal.”

- Press INPUT button on the remote control to select a different input source.
- If you are using cable TV or antenna connected directly to the TV, scan for channels. See Scanning for TV Channels.

3. There is no power.

- Ensure the TV is plugged into a working electrical outlet.
- Ensure the power cable is securely attached to the TV.
- Press the Power/Standby button on the remote or on the back of the TV to turn the TV on.

4. The power is on, but there is no image on the screen.

- Ensure all cables are securely attached to the TV.
- Ensure all devices are connected correctly. Devices differ; see your device’s user manual for details.
- Adjust Brightness, Contrast, or Backlight. See Adjusting the Picture Settings
- Press the INPUT button on the remote to select a different input source.

5. The sound is flat or dialog is not audible.

- Turn off Volume Leveling. See Adjusting the Audio Settings

6. Where do I find information on the accessibility features of this product and other VIZIO products?

- Please visit vizio.com/accessibility,
- Email us at: Accessibility@vizio.com, or
- Give us a call at 1-877-698-4746.

7. How do I stream apps like Netflix to my VIZIO SmartCast® TV?

- Popular apps are located on the SmartCast Home™ screen, so you can simply navigate to the app row on your SmartCast TV to start streaming.
- You can also use Apple AirPlay or Chromecast built-in™ to stream content from your device directly to your SmartCast TV. For more information, please visit: – VIZIO.com/Apple – VIZIO.com/Google

8. The colors on the TV don't look right.

- Adjust the Color and Tint settings in the Picture menu. See Adjusting the Picture Settings
- Select a pre-set picture mode. VIZIO recommends selecting Calibrated.
- Check all cables to ensure they are securely attached.

9. The image quality is not good.

- For the best image quality, view high-definition programs using digital sources. Connect your devices with HDMI cables.
- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.

10. The picture is distorted.

- Move the TV away from electrical appliances, cars, and fluorescent lights.
- Ensure all cables are securely attached

11. The TV image does not cover the entire screen.

- If you are using TV, AV, or Component with 480i input, go to Menu > Picture > Picture Aspect.

12. The TV has pixels (dots) that are always dark.

- Your HD TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.

13. The buttons on the remote aren't working.

- Ensure you are only pressing one button at a time.
- Point the remote directly at the TV when pressing a button.
- Replace the remote batteries with new ones. See Replacing the Batteries.

14. There is no sound.

- Press Volume Up on the remote control.
- Press the MUTE button on the remote to ensure mute is off.
- Check the audio settings. See Adjusting the Audio Settings
- Check the audio connections of external devices (Blu-ray player, game console, cable/satellite box) that are connected to the TV.
- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.
- Set eARC to Off and use ARC mode.

15. I see "noise" or static on the screen.

- When your TV's digital capabilities exceed a digital broadcast signal, the signal is up-converted (improved) to match your TV's display capabilities. This upconverting can sometimes cause irregularities in the image.
- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.

16. When I change input source, the TV image changes size.

- The TV remembers the viewing mode on each input source. If the viewing mode on the new input source differs from the one on the input source you switch from, the difference may be noticeable.
- See Changing the Picture Aspect Ratio

17. How do I download the VIZIO SmartCast Mobile™ App?

- Make sure your phone or tablet is connected to a Wi-Fi network. Open a browser on your phone or tablet.
- Navigate to vizio.com/smartcastapp and follow the on-screen instructions to download the VIZIO SmartCast Mobile™ App.

18. How do I change the Inputs?

- Press the INPUT button on the back of the TV to cycle through the Inputs.
- Press the INPUT button on the remote to cycle through the Inputs.

- Make sure the VIZIO SmartCast Mobile™ app is installed on your phone or tablet. Open the VIZIO SmartCast Mobile app. Tap on the Device list and select your TV. Tap on the Input key and select the Input of your choice.

19. How do I connect to my Wi-Fi network?

- On your TV remote, press the MENU button then go to Network > Select your Wi-Fi name > Enter password.
- Open the VIZIO SmartCast Mobile™ app on your phone or tablet. Tap on the Menu Tab > SmartCast Devices > Your TV/Device Name > Network
- Tap on the Settings icon > Network > Wireless Access Points. Select your Wi-Fi network from the list, enter the Wi-Fi password, and tap Connect.

20. How do I exit Demo Mode?

- Press and hold the INPUT button on the back of the TV to exit the demo mode.

21. How do I watch Cable/Antenna TV channels?

- If you subscribe to cable or satellite, simply connect an HDMI cable (not included) to the receiver.
- If you use external antennas to watch local broadcast channels, use a coaxial cable to connect.

22. Some of my Channels are missing.

- Press the MENU button on your TV remote and select the channels option. Then select Find Channels.
- Open the VIZIO SmartCast Mobile app on your phone or tablet.
- Click on: Menu Tab > SmartCast Devices > Your TV/Device Name > Channels > Find Channels.

23. How do I disable/enable Viewing Data?

- Press the MENU button on your remote and select ADMIN & PRIVACY. Then select Viewing Data to turn the feature on or off.

24. The television will not turn on using Alexa or Google Assistant.

- Ensure the television is in Quick Start Mode.
- Tap on Menu > System > Power Mode > Quick Start.

25. How do I know I am getting 4K resolution or HDR content such as Dolby Vision?

- As you are watching content on the television, press the INFO button on the remote or VIZIO SmartCast Mobile app. You will see the current resolution being displayed along with the version of video.
- HDR will show as a Dolby Vision icon, HDR10 or HLG.

Specifications

	V435-J01	V505-J01	V509-J09	V555-J01	V685-J01	V699-J04
Size	43"	50"	50"	55"	58"	65"
Viewable Area	42.5"	49.5"	49.5"	54.5"	57.5"	64.5"
PRODUCT DIMENSIONS						
Dimensions w/ Stand	38.31" x 24.52" x 8.35" (973.1 x 622.80 x 212.1 mm)	44.46" x 28.26" x 10.20" (1129.3 x 717.8 x 259.1 mm)	44.20" x 28.06" x 10.01" (1122.6 x 712.8 x 254.2 mm)	49.06" x 30.87" x 10.24" (1246.1 x 784.09 x 260.1 mm)	51.38" x 32.43" x 10.24" (1305.1 x 823.72 x 260.1 mm)	57.70" x 36.10" x 11.00" (1465.6 x 916.94 x 279.4 mm)
Dimensions w/o Stand	38.31" x 22.35" x 3.31" (973.1 x 567.69 x 84.1 mm)	44.46" x 25.85" x 3.36" (1129.3 x 656.59 x 85.3 mm)	44.20" x 25.66" x 2.54" (1122.6 x 651.8 x 64.5 mm)	49.06" x 28.47" x 3.40" (1246.1 x 723.13 x 86.4 mm)	51.38" x 30.02" x 3.39" (1305.1 x 762.50 x 86.1 mm)	57.70" x 33.50" x 3.10" (1465.6 x 850.9 x 78.7 mm)
Weight w/ Stand	15.87 lb (7.2 kg)	22.05 lb (10 kg)	19.29 lb (8.75 kg)	30.78 lb (13.96 kg)	32.19 lb (14.6 kg)	43.60 lb (19.78 kg)
Weight w/o Stand	15.65 lb (7.1 kg)	21.38 lb (9.7 kg)	18.87 lb (8.56 kg)	30.14 lb (13.67 kg)	31.53 lb (14.3 kg)	42.60 lb (19.32 kg)
Mounting Screw Size	M6	M6	M6	M6	M6	M6
Hole Pattern	200 mm x 200 mm	200 mm x 200 mm	200 mm x 200 mm	300 mm x 200 mm	300 mm x 200 mm	400 mm x 200 mm
# of Screws (not included)	4	4	4	4	4	4
PICTURE QUALITY						
Maximum Resolution	3840 x 2160 (UHD)	3840 x 2160 (UHD)	3840 x 2160 (UHD)	3840 x 2160 (UHD)	3840 x 2160 (UHD)	3840 x 2160 (UHD)
LCD Backlight	Full Array LED	Full Array LED	Full Array LED	Full Array LED	Full Array LED	Full Array LED
Dynamic Motion Rate	60Hz	60Hz	60Hz	60Hz	60Hz	60Hz
INPUTS / OUTPUTS						
HDMI Inputs	3	3	3	3	3	3
Composite Video Input	1	1	1	1	1	1
Ethernet Input	1	1	1	1	1	1
RF Antenna Input	1	1	1	1	1	1
USB	1	1	1	1	1	1
Audio Output	HDMI eARC, Analog Stereo Out, Digital Optical	HDMI eARC, Analog Stereo Out, Digital Optical	HDMI eARC, Analog Stereo Out, Digital Optical	HDMI eARC, Analog Stereo Out, Digital Optical	HDMI eARC, Analog Stereo Out, Digital Optical	HDMI eARC, Analog Stereo Out, Digital Optical
OTHER						
Remote Control Type	Voice Remote	Voice Remote	Voice Remote	Voice Remote	Voice Remote	Voice Remote
Power Consumption	70 W	94 W	98 W	98 W	93 W	145 W
Standby Power	<0.5W	<0.5W	<0.5W	<0.5W	<0.5W	<0.5W
Voltage	120V	120V	120V	120V	120V	120V
OSD Language	English, French, Spanish	English, French, Spanish	English, French, Spanish	English, French, Spanish	English, French, Spanish	English, French, Spanish
Certification	UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision	UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision	UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision	UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision	UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision	UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision

	V655-J09	V705-J03	V755-J04
Size	65"	70"	75"
Viewable Area	64.5"	69.5"	74.5"
PRODUCT DIMENSIONS			
Dimensions w/ Stand	57.41" x 35.63" x 11.95" (1458.2 x 905.002 x 303.5 mm)	61.80" x 38.40" x 13.00" (1569.7 x 975.36 x 330.2 mm)	66.40" x 41.1" x 13.2" (1686.6 x 1043.94 x 335.3 mm)
Dimensions w/o Stand	57.41" x 33.14" x 2.44" (1458.2 x 841.75 x 62.0 mm)	61.80" x 35.70" x 2.70" (1569.7 x 906.78 x 68.6 mm)	66.40" x 38.30" x 3.10" (1686.6 x 972.82 x 78.7 mm)
Weight w/ Stand	40.12 lb (18.2 kg)	53.80 lb (24.40 kg)	61.07 lb (27.7 kg)
Weight w/o Stand	39.24 lb (17.8 kg)	52.70 lb (23.9 kg)	59.97 lb (27.2 kg)
Mounting Screw Size	M6	M6	M8
Hole Pattern	400 mm x 200 mm	400 mm x 200 mm	400 mm x 400 mm
# of Screws (not included)	4	4	4
PICTURE QUALITY			
Maximum Resolution	3840 x 2160 (UHD)	3840 x 2160 (UHD)	3840 x 2160 (UHD)
LCD Backlight	Full Array LED	Full Array LED	Full Array LED
Dynamic Motion Rate	60Hz	60Hz	60Hz
INPUTS / OUTPUTS			
HDMI Inputs	3	3	3
Composite Video Input	1	1	1
Ethernet Input	1	1	1
RF Antenna Input	1	1	1
USB	1	1	1
Audio Output	HDMI eARC, Analog Stereo Out, Digital Optical	HDMI eARC, Analog Stereo Out, Digital Optical	HDMI eARC, Analog Stereo Out, Digital Optical
OTHER			
Remote Control Type	Voice Remote	Voice Remote	Voice Remote
Power Consumption	121 W	156 W	184 W
Standby Power	<0.5W	<0.5W	<0.5W
Voltage	120V	120V	120V
OSD Language	English, French, Spanish	English, French, Spanish	English, French, Spanish
Certification	UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision	UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision	UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision



Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)