

POLARIZED PLUG



This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

POWER CORD INSTRUCTIONS

A short power-supply cord or detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
- If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord. Do not pull, twist or otherwise abuse the power cord.

NOTICES

- Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your countertop oven to prevent possible damage to the surface.
- During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

PRODUCT DIAGRAM


1. LCD Screen Display

2. Light, Start and Cancel/OFF Buttons
3. Function Selector Dial
4. Turbo Convection Selector Button
5. Time/ Temperature Selector Button
6. Time/ Temperature Control Dial
7. Two Rack Positions
8. *Air Fry Basket / Dehydrate Rack
9. *Baking Pan
10. *Removable Wire Rack
11. *Removable Crumb Tray
12. Interior Light (not shown in image)



LCD DISPLAY

- a. Function Options
- b. Function Indicator
- c. Shade Setting or Temperature Setting
- d. Timer e. Air Fry and Turbo Convection Icon

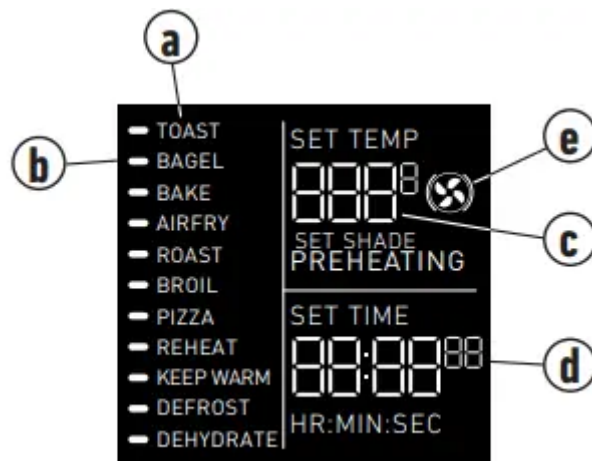

PREPARING YOUR COUNTERTOP OVEN

- Remove all packaging before using the Calphalon® Performance Air Fry Oven.
- Wipe Countertop Oven with a damp cloth. **DO NOT IMMERSE IN WATER.** Make sure to only use mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit. Dry the unit thoroughly before using.

NOTE: Do not immerse the cord, plug or body of the unit in water.

- Clean accessories. Remove them from packaging and immerse in warm, soapy water and wipe with soft cloth or sponge. These accessories may also be washed in the top rack of the dishwasher. Dry thoroughly.
- Select a location for the countertop oven. The location should be in an open area, on a dry, stable, level surface where the plug will reach an outlet.
- Plug the Countertop Oven into the electrical outlet.

OVEN FUNCTIONS OVERVIEW

Function	Rack Position	Preheat	Range
Toast	Upper	No	Shade 1-7 1:35 mins. - 12:30 mins.
Air Fry	Upper	Yes	250°F - 450 °F Up to 1 hour
Bagel	Upper	No	Shade 1-7 1:35 mins. - 11:00 mins.
Bake	Lower	Yes	150°F - 450°F Up to 1 hour
Roast	Lower	Yes	150°F - 450°F Up to 2 hours
Broil	Upper	Yes	350°F - 450°F Up to 2 hours
Pizza	Upper	Yes	150°F - 450°F Up to 1 hour
Reheat	Upper/Lower	No	150°F - 200°F Up to 1 hour
Keep Warm	Upper/Lower	No	150°F - 450°F Up to 1 hour
Defrost	Upper/Lower	No	150°F - 200°F Up to 1 hour
Dehydrate	Upper	Yes	150°F - 200°F Up to 4 hours

HOW TO USE YOUR COUNTERTOP OVEN

- Once the Calphalon® Performance Air Fry Countertop Oven is plugged in, the LCD screen will illuminate and the START Button LED light will flash.
- The Function Options will be displayed on the LCD Screen with the Function Indicator on the default preset TOAST function.
- Turn the Function Selector Dial to select one of the following 11 options: Toast, Bagel, Bake, Air Fry,
- Roast, Broil, Pizza, Reheat, Keep Warm, Defrost, and Dehydrate. The Function Indicator will scroll as the Function Selector Dial is turned.
- Once the desired function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature or shade (for TOAST and BAGEL functions). Turn clockwise to increase and counter-clockwise to decrease.
- Press the START button to begin preheating. PREHEATING will display on the LCD screen. Ensure the Oven door is closed for preheating. Oven does not

preheat for BAGEL and TOAST functions. For these functions, food items may be placed inside the Oven immediately after pressing the START button.

- Once the Countertop Oven is preheated, it will beep and PREHEATING will disappear from the LCD screen.
- You may set the timer before the oven begins preheating, during preheating, or once preheating is complete. Press the Time/ Temperature Selector Button to change the Time/ Temperature Selector Dial to time selection. Turn dial clockwise to increase cooking time and counter-clockwise to decrease cooking time. The maximum time setting is 4 hours.

NOTE: TOAST and BAGEL functions automatically select time based on shade setting.

- Once preheating is complete and timer is set, put food into the Countertop Oven, using the Wire Rack, Baking Pan or Air Fry Basket / Dehydrate Rack. When using the Baking Pan, always place on top of the Wire Rack.

NOTE: Never place food or accessories directly on the Quartz Heating elements.

- Once food is inside, close the door and press the START button again. The Timer will begin counting down.

NOTE: When dehydrating or broiling, leave the door open approximately 3 inches from the closed position (See Figure 1).

- Press the Turbo Convection Button for better air circulation and crispier food if needed.
- Once the allotted time has expired, the Countertop Oven will beep, and it will stop heating, but the display will remain lit for a period of time and then it will time out. You may press Cancel/OFF to turn off the display before it times out.
- Use pot holders to carefully remove food from the Countertop Oven.
- The LCD screen light will turn off after 90 seconds of inactivity. Press any button to wake up the appliance.
- Press the Cancel/OFF Button to turn off the Countertop Oven.

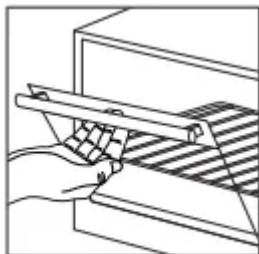


Figure 1

COOKING FUNCTIONS DETAILS

Toast

For best TOAST results, place wire rack in the upper rack position. This function is ideal for toasting sliced bread, English muffins and frozen waffles.

NOTE: For darker toast results, use a higher shade setting.

1. Insert the wire rack into the upper rack position.
2. Place food in the center of the wire rack for more even toasting.
3. Close the countertop oven door.
4. Turn the Function Selector Dial to select the TOAST function. Once the function has been selected, use the Time/Temperature Control Dial to select the desired shade. Turn the Time/Temperature Control Dial clockwise to increase shade selection and counter-clockwise to decrease.
5. Press the START button to begin toasting.
6. When toasting cycle is complete, an audible alert will sound.
7. Open countertop oven door fully and remove food carefully with oven mitt.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

Bagel

For optimal results, place wire rack in the upper rack position.

1. Insert the wire rack into the upper rack position.
2. Place food in the center of the wire rack for more even cooking.
3. Close the countertop oven door.
4. Turn the Function Selector Dial to select the BAGEL function. Once the function has been selected, use the Time/Temperature Control Dial to select the desired shade. Turn the Time/Temperature Control Dial clockwise to increase shade selection and counter-clockwise to decrease.
5. Press the START button to begin the bagel cycle.
6. When bagel cycle is complete, an audible alert will sound.
7. Open countertop oven door fully and remove food carefully. We recommend using oven mitts or pot holders when removing food from the countertop oven.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

Bake

For optimal results, place wire rack in the lower rack position.

1. Insert the wire rack into the lower rack position. Note that certain baked goods call for upper rack placement.
2. Ensure the countertop oven door is closed for preheating.
3. Turn the Function Selector Dial to select the BAKE function. Once the function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature and time. Turn the Time/Temperature Control Dial clockwise to increase temperature and time and counter-clockwise to decrease.
4. Press the TURBO CONVECT button for better air circulation and crispier food if needed. The turbo convection fan will appear on the LCD screen to indicate that Turbo Convection is on. To cancel convection setting, press the TURBO CONVECT button once more.
5. Press the START button to begin preheating. PREHEATING will appear on the LCD screen.
6. Once preheating is complete, an audible alert will sound. The START button will flash.
7. Carefully place food in the center of the wire rack for more even cooking.
8. Close the countertop oven door.
9. Press the START button to begin the baking cycle.
10. When baking cycle is complete, an audible alert will sound.
11. Open countertop oven door fully and remove food carefully. We recommend using oven mitts or pot holders when removing food from the countertop oven.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

Air Fry

For optimal results, slide the Air Fry Basket into the upper rack position. For foods with high amounts of fat or grease, it is recommended to place the baking pan below the Air Fry Basket during the cooking cycle.

1. Place food evenly on the Air Fry Basket in a single layer and leave space between the pieces.
2. Carefully slide the Air Fry Basket into in the upper rack position.
3. Close the Countertop Oven door.
4. Turn the Function Selector Dial to select the Air Fry function. Once the function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature and time. Turn the Time/Temperature Control Dial clockwise to increase temperature and time and counter-clockwise to decrease.

5. Press the START button to begin the Air Fry cycle.
6. When Air Fry cycle is complete, an audible alert will sound.
7. Open the Countertop Oven door fully and remove food carefully. We recommend using oven mitts or pot holders when removing food from the Countertop Oven.

WARNING: Cooked food can be very hot. Handle with care. Do not leave the Countertop Oven unattended.

FOOD	Weight	Accessory	Function	Temperature (F)	Time (Min)	Oil?
Meat/Poultry/Fish						
Breaded Chicken Breast	1 lb	Air Fry Basket	Air Fry	400	20-25 Min	No
Chicken Breast	1 lb	Air Fry Basket	Air Fry	400	20-25 Min	No
Chicken Wings	1 lb	Air Fry Basket	Air Fry	450	20-25 Min	No
Steak	1 lb	Air Fry Basket	Air Fry	450	12-15 Min	No
Pork Chops	1.5 lb	Air Fry Basket	Air Fry	425	20 Min	No
Hamburger	1 lb	Air Fry Basket	Air Fry	450	15 Min	No
Breaded Fish	1 lb	Air Fry Basket	Air Fry	400	15-20 Min	No
Salmon	1 lb	Air Fry Basket	Air Fry	450	20-25 Min	No
Bacon	8 oz	Air Fry Basket	Air Fry	450	20 Min	No
Potatoes						
Potato Skins	1 lb	Air Fry Basket	Air Fry	450	10 Min	Yes
Hand-Cut Fries	1 lb	Air Fry Basket	Air Fry	450	35-40 Min	Yes
Hand-Cut Sweet Potato Fries	1 lb	Air Fry Basket	Air Fry	450	35-40 Min	Yes
Frozen Hash Brown	1 lb	Air Fry Basket	Air Fry	450	25-30 Min	No
Frozen Fries (Thick Cut)	1.5 lbs	Air Fry Basket	Air Fry	450	35-40 Min	No
Frozen Fries (Thin Cut)	1 lb	Air Fry Basket	Air Fry	450	25 Min	No
Vegetables						
Fresh Mixed Veggies	1 lb	Baking Pan	Air Fry	450	20 Min	Yes
Broccoli	8 oz	Baking Pan	Air Fry	450	15 Min	Yes
Asparagus	8 oz	Baking Pan	Air Fry	450	8 Min	Yes
Brussel Sprouts	1.5 lbs	Baking Pan	Air Fry	450	20 Min	Yes
Mushrooms	1 lb	Baking Pan	Air Fry	450	10 Min	Yes
Snacks						
Frozen Chicken Nuggets	1 lb	Air Fry Basket	Air Fry	450	22-25 Min	No
Frozen Mozzarella Sticks	8 oz	Air Fry Basket	Air Fry	450	15-20 Min	No
Frozen Onion Rings	1 lb	Air Fry Basket	Air Fry	450	25-30 Min	No

Roast

For optimal results, place wire rack in the lower rack position.

1. Insert the wire rack into the lower rack position.
2. Ensure the countertop oven door is closed for preheating.
3. Turn the Function Selector Dial to select the ROAST function. Once the function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature and time. Turn the Time/Temperature Control Dial clockwise to increase temperature and time and counter-clockwise to decrease.
4. Press the TURBO CONVECT button for better air circulation and crispier food if needed. The turbo convection fan will appear on the LCD screen to indicate that Turbo Convection is on. To cancel convection setting, press the TURBO CONVECT button once more.
5. Press the START button to begin preheating. PREHEATING will appear on the LCD screen.
6. Once preheating is complete, an audible alert will sound. The START button will flash.
7. Carefully place food in the center of the wire rack for more even roasting.
8. Close the countertop oven door.
9. Press the START button to begin the roasting cycle.
10. When roasting cycle is complete, an audible alert will sound.
11. Open countertop oven door fully and remove food carefully. We recommend using oven mitts or pot holders when removing food from the countertop oven.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

Broil

For optimal results, place wire rack in the lower rack position.

1. Insert the wire rack into the lower rack position.
2. Ensure the countertop oven door is closed for preheating.
3. Turn the Function Selector Dial to select the BROIL function. Once the function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature and time. Turn the Time/Temperature Control Dial clockwise to increase temperature and time and counter-clockwise to decrease.
4. Press the TURBO CONVECT button for better air circulation and crispier food if needed. The turbo convection fan will appear on the LCD screen to indicate that Turbo Convection is on. To cancel convection setting, press the TURBO CONVECT button once more.

5. Press the START button to begin preheating. PREHEATING will appear on the LCD screen.
6. Once preheating is complete, an audible alert will sound. The START button will flash.
7. Carefully place food in the center of the wire rack for more even roasting.
8. Leave the door open approximately 3 inches from the closed position.
9. Press the START button to begin the broiling cycle.
10. When BROILING cycle is complete, an audible alert will sound.
11. Open countertop oven door fully and remove food carefully. We recommend using oven mitts or pot holders when removing food from the countertop oven.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

Pizza

For optimal results, place wire rack in the lower rack position.

1. Insert the wire rack into the lower rack position.
2. Ensure the countertop oven door is closed for preheating.
3. Turn the Function Selector Dial to select the PIZZA function. Once the function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature and time. Turn the Time/Temperature Control Dial clockwise to increase temperature and time and counter-clockwise to decrease.
4. Press the TURBO CONVECT button for better air circulation and crispier food if needed. The turbo convection fan will appear on the LCD screen to indicate that Turbo Convection is on. To cancel convection setting, press the TURBO CONVECT button once more.
5. Press the START button to begin preheating. PREHEATING will appear on the LCD screen.
6. Once preheating is complete, an audible alert will sound. The START button will flash.
7. Carefully place pizza on the center of the wire rack for more even cooking.
8. Close the countertop oven door.
9. Press the START button to begin the pizza cycle.
10. When pizza cycle is complete, an audible alert will sound.
11. Open countertop oven door fully and remove food carefully. We recommend using oven mitts or pot holders when removing food from the countertop oven.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

Reheat

For optimal results, place wire rack in the desired rack position.

1. Insert the wire rack in desired rack position.
2. Place food on an oven-safe accessory. Then, carefully place accessory in the center of the wire rack for even heating.
3. Close countertop oven door.
4. Turn the Function Selector Dial to select the REHEAT function. Once the function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature and time. Turn the Time/Temperature Control Dial clockwise to increase temperature and time and counter-clockwise to decrease.
5. Press the TURBO CONVECT button for better air circulation and crispier food if needed. The turbo convection fan will appear on the LCD screen to indicate that Turbo Convection is on. To cancel convection setting, press the TURBO CONVECT button once more.
6. Press the START button to begin the reheat cycle.
7. When reheat cycle is complete, an audible alert will sound.
8. Open countertop oven door fully and remove food carefully. We recommend using oven mitts or pot holders when removing food from the countertop oven.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

Keep Warm

For optimal results, place wire rack in desired rack position.

1. Insert the wire rack in desired rack position.
2. Close the countertop oven door.
3. Carefully place food on an oven-safe accessory. Then, carefully place accessory in the center of the wire rack for even heating.
4. Turn the Function Selector Dial to select the KEEP WARM function. Once the function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature and time. Turn the Time/Temperature Control Dial clockwise to increase temperature and time and counter-clockwise to decrease.
5. Press the TURBO CONVECT button for better air circulation and crispier food if needed. The turbo convection fan will appear on the LCD screen to indicate that Turbo Convection is on. To cancel convection setting, press the TURBO CONVECT button once more.

6. Press the START button to begin the warming cycle.
7. When warming cycle is complete, an audible alert will sound.
8. Open countertop oven door fully and remove food carefully. We recommend using oven mitts or pot holders when removing food from the countertop oven.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

Defrost

For optimal results, place wire rack in the upper rack position.

1. Insert the wire rack into the upper rack position.
2. Ensure the countertop oven door is closed for preheating.
3. Turn the Function Selector Dial to select the DEFROST function. Once the function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature and time. Turn the Time/Temperature Control Dial clockwise to increase temperature and time and counter-clockwise to decrease.
4. Press the START button to begin preheating. PREHEATING will appear on the LCD screen.
5. Once preheating is complete, an audible alert will sound. The START button will flash.
6. Carefully place food in the center of the wire rack.
7. Close the countertop oven door.
8. Press the START button to begin the defrost cycle.
9. When defrost cycle is complete, an audible alert will sound.
10. Open countertop oven door fully and remove food carefully. If food requires more time to defrost, place it back inside the countertop oven and repeat steps 3, 4, 7 & 8. If food is sufficiently defrosted, place it back into the oven and choose the appropriate Cooking Function and Cooking Time to complete food preparation.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

Dehydrate

For optimal results, slide DEHYDRATE RACK in the upper rack position.

1. Place food evenly on the DEHYDRATE RACK in a single layer and leave space between the pieces.
2. Insert the DEHYDRATE RACK directly into the upper rack position.
3. Ensure the countertop oven door is closed for preheating.

4. Turn the Function Selector Dial to select the DEHYRATE function. Once the function has been selected, use the Time/Temperature Control Dial to select the desired cooking temperature and time. Turn the Time/Temperature Control Dial clockwise to increase temperature and time and counter-clockwise to decrease.
5. Press the TURBO CONVECT button for better air circulation and crispier food if needed. The turbo convection fan will appear on the LCD screen to indicate that Turbo Convection is on. To cancel Turbo Convection option, press the TURBO CONVECT button once more.
6. Press the START button to begin preheating. PREHEATING will appear on the LCD screen.
7. Once preheating is complete, an audible alert will sound. The START button will flash.
8. Leave the door open approximately 3 inches from the closed position.
9. Press the START button to begin the dehydrate cycle.
10. When dehydrate cycle is complete, an audible alert will sound.
11. Open countertop oven door fully and remove food carefully. We recommend using oven mitts or pot holders when removing food from the countertop oven.

WARNING: Cooked food can be very hot. Handle with care. Do not leave countertop oven unattended.

During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few hours.

CLEANING & MAINTENANCE

- Clean oven and any accessory after each use.
- Before cleaning your Calphalon® Performance Air Fry Countertop Oven, press the CANCEL/OFF button to turn OFF the countertop oven. Unplug the cord and allow it to cool before cleaning.
- To clean exterior of oven, wipe with a damp cloth. **DO NOT IMMERSER IN WATER.** Make sure to only use mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit.
- To clean the Wire Rack, Baking Pan, or Air Fry Basket/ Dehydrate Rack remove from the Oven and immerse in warm, soapy water and wipe with soft cloth or sponge. These accessories may also be washed in the top rack of the dishwasher. Dry thoroughly.
- Remove the Removable Crumb Tray and shake off crumbs. Wash with soapy water, and dry thoroughly. Cleaning the Crumb Tray often will avoid any accumulations.

TROUBLESHOOTING

Oven does not turn ON

- Plug the Countertop into the electrical outlet.
- Check that the power plug is securely inserted into the outlet.
- Insert the power plug into a different outlet.
- Press the START button.

Smoke odor

- During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

Oven light does not turn ON

- Press the LIGHT button.

Heating elements do not stay ON

- Be certain that function is as desired. Heating elements will cycle ON and OFF to maintain proper heat.

Overcooked/ undercooked foods

- You may have to adjust the time and temperature to desired taste.
- Because your countertop oven is smaller than your regular oven, it will heat up faster and generally cook in shorter periods of time.
- Rack may need to be adjusted to accommodate food type.

Burnt smell

- Refer to “Cleaning & Maintenance.” Food build-up inside the countertop oven, on heating elements, in crumb tray can sometimes cause burnt smell.

LCD display turns OFF

- Press any button to wake up the appliance. The LCD screen light turns off after 90 seconds of inactivity.

Steam is escaping from the unit

- This may happen when cooking foods with high water content. To prevent condensate forming, move unit away from walls or other kitchen appliances.

WARRANTY

3 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. ("Calphalon") warrants that for a period of three year from the date of purchase, this product will be free from defects in material and workmanship. Calphalon, at its option, will repair or replace this product or any component of the product found to be defective during the guarantee period. Replacement will be made with a new or remanufactured product or component.

If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive guarantee. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this guarantee. This guarantee is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain satisfaction guarantee performance. Calphalon dealers, service centers, or retail stores selling Calphalon, do not have the right to alter, modify or any way change the terms and conditions of this guarantee. This guarantee does not cover damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Calphalon or an authorized Calphalon service center. Further, the guarantee does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Calphalon's Liability?

Calphalon shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory guarantee or condition. Except to the extent prohibited by applicable law, any implied guarantee or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above guarantee.

Calphalon disclaims all other guarantees, conditions or representations, express, implied, statutory or otherwise. Calphalon shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied guarantee lasts, so the above limitations or exclusion may not apply to you. This guarantee gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

