

## User Manual Coffeemaker



### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is

necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.

5. Unplug from outlet when either the appliance or display clock (if provided) is not in use, and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an Authorized Service Center for examination, repair or adjustment. Do not attempt to replace or splice a damaged cord.

7. The use of an accessory not recommended by the appliance manufacturer for use with this appliance may result in fire, electric shock or injury to persons.

8. Do not use outdoors.

9. Do not let cord hang over edge of table or counter, or touch hot surfaces. 10. Do not place on or near a hot gas or electric burner, or in a heated oven. 11. Always attach plug to appliance first, then plug cord into the wall outlet

(for appliances with detachable cords). To disconnect, turn any control to the off position, then remove plug from wall outlet.

12. Do not use appliance for other than intended use.

13. All lids should be closed during use.

14. Scalding may occur if the lid is removed or brew basket door is opened during or immediately after the brewing cycles. Contents may be hot. Allow to cool before opening the lid.

#### **For appliances with glass containers:**

15. The container is designed for use with this appliance. It must never be used on a range top.

16. Do not set a hot container on a wet or cold surface.

17. Avoid sudden temperature changes, such as rinsing, washing, filling, or immersing a hot container with cold liquids.

18. Do not use a cracked or chipped container or a container having a loose or weakened handle.

 
19. Do not clean container with cleansers, steel wool pads, or other abrasive material.

#### **PRODUCT NOTICES**

1. Place the appliance on a hard, flat, level surface to avoid interruption of airflow underneath the coffeemaker.

2. Glass carafes only: Discard the carafe immediately if it is ever boiled dry.
3. Glass carafes only: Protect the carafe from sharp blows, scratches or rough handling.
4. Do not operate the appliance with an empty water tank.
5. Keep the area above the appliance clear during use, as hot steam will escape the appliance.

## GET TO KNOW YOUR COFFEEMAKER

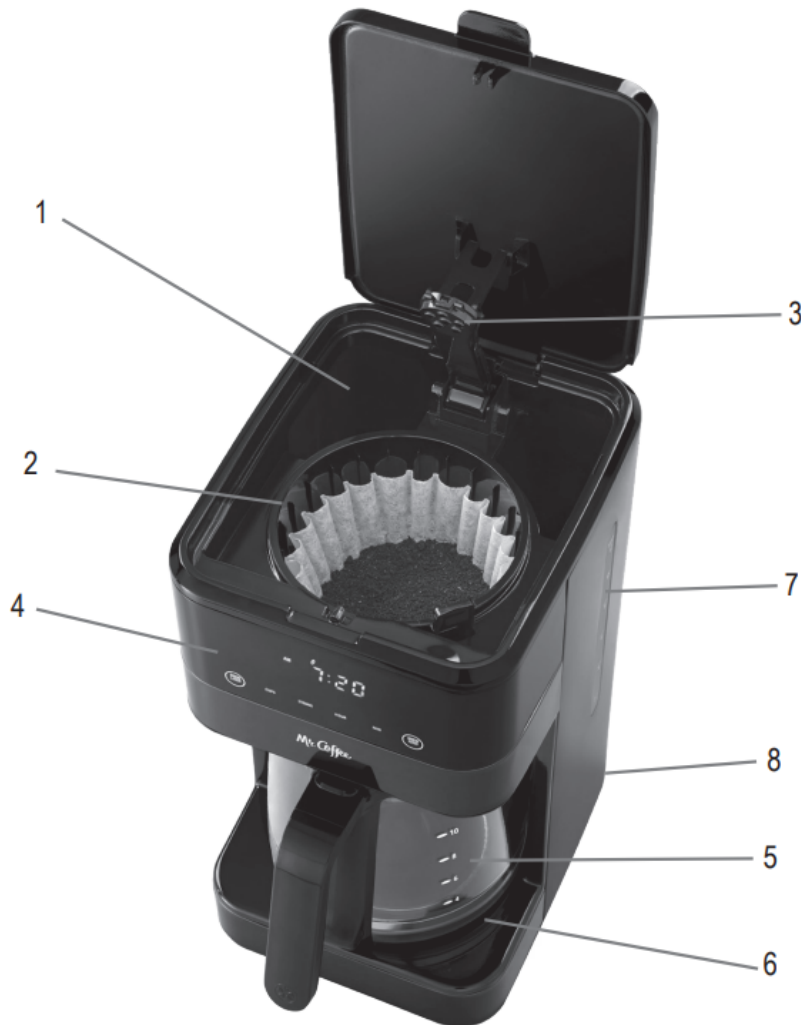

1.	Water Reservoir	5.	Carafe
2.	Brew Basket	6.	Warming Plate
3.	Showerhead	7.	Water Window
4.	Control Panel	8.	Cord Storage (not shown)

## GETTING STARTED

### Unpack your Coffeemaker

1. Unpack your coffeemaker and remove plastic bags, cartons and any tape on the unit.

**WARNING:** KEEP PLASTIC BAGS AWAY FROM CHILDREN.

### Clean Coffeemaker Before Use

Just follow these simple steps:

1. Wash the carafe and the brew basket in a mixture of mild detergent and water. Rinse each thoroughly.
2. Replace all the parts and close the lid. Then, run a brew cycle by adding only water to the coffeemaker. After adding water, press Brew Now.
3. When brewing is complete, turn your coffeemaker off. Turn your coffeemaker off by pressing the Brew Now button again.
4. Discard the water in the carafe and rinse the carafe, carafe lid, and brew basket. **NOTE:** Carafe and brew basket are top rack dishwasher safe.

### Setting the Clock

Plug in the coffeemaker and set the current time using the hour and minute buttons. 3 Seconds of inactivity will set clock at time selected.

## HOW TO MAKE YOUR FIRST POT OF COFFEE

### Suggested Coffee Measurement Chart:

To Brew	Ground Coffee	1 level tablespoon (tbsp) = 5 gr./0.17 oz. 1 cup = 5 fl. oz. of brewed coffee Use more or less coffee to suit your taste.
4 cups	4 tbsp	
6 cups	6 tbsp	
8 cups	8 tbsp	
10 cups	10 tbsp	
12 cups	12 tbsp	

\*Using fine coffee or decaf may cause overflow.

**Bonus: For a BOLDER CUP, use heaping TBS**

1. Fill the carafe with fresh cold water to the desired level.

**NOTE:** Some water will be absorbed into the coffee grounds and water filter during the brewing process.

2. Line the brew basket with a standard basket-style paper filter (sold separately) or reusable filter (if included).

3. Referencing the chart above, scoop the equivalent amount of coffee grounds into the filter using a tablespoon.

 
4. You are ready to brew now!


5. Enjoy fresh coffee every time!



# BREW NOW

## UNDERSTAND YOUR CONTROL PANEL

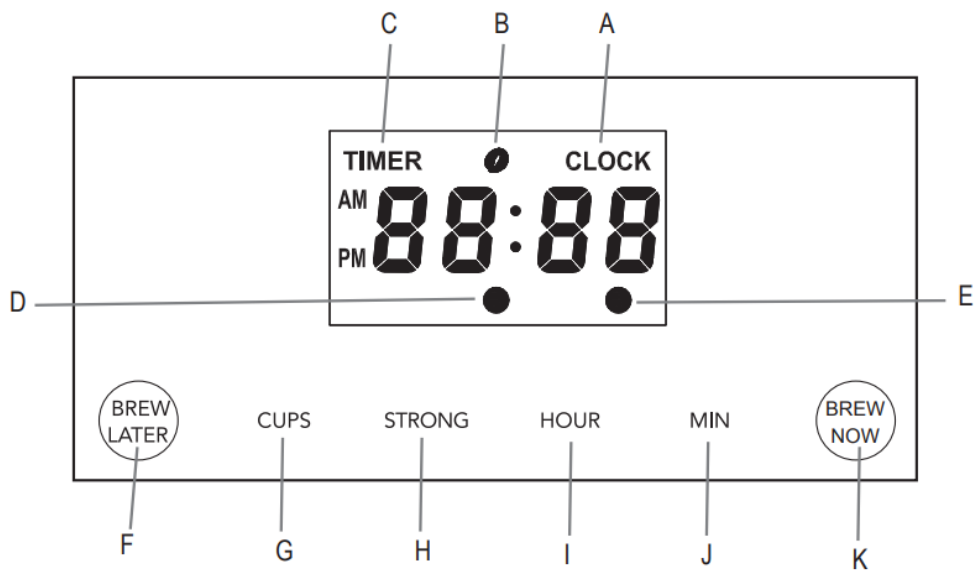


A.	Clock Display	G.	Cup Selector Button
B.	Strong Brew Indicator (  )	H.	Strong Brew Button
C.	Set Brew Later indicator	I.	Hour Button
D.	Brew Later indicator (Amber light)	J.	Minute Button
E.	Brew Now Indicator (Green Light)	K.	Brew Now
F.	Brew Later Button		

**NOTE:** This coffeemaker allows you to set the number of cups of coffee you'd like to brew, rather than using all available water in the reservoir. A full reservoir can brew up to three 4-Cup batches before needing to refill. However, if the number of cups is not selected, the machine will act like a traditional coffeemaker by brewing all the water in the reservoir.

1. After filling the coffeemaker with water and grounds, press the Brew Now button.
2. The display will change for a few seconds to allow you to select the number of cups you desire to brew. You can select to brew 4, 6, 8,10,12 cups of coffee or ALL. The default ALL

cup function allows you to brew all the water in the reservoir without selecting a specific cup size.

 3. A green light will appear on the display once the machine is in the brewing process and will remain ON until the machine is turned off or after the 4 hours have passed.

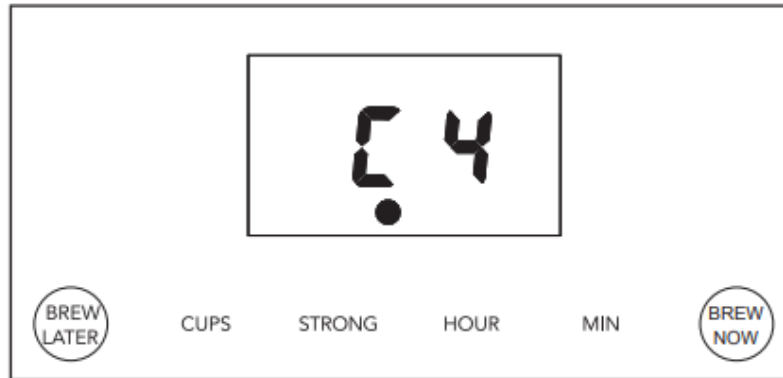

4. For a stronger, bolder coffee, simply press the Strong Button. A small coffee bean (☿) will appear on the screen indicating STRONG BREW is activated. To turn off STRONG BREW, simply press the Strong Button again. The bean (☿) will disappear.

**NOTE:** If you don't press the Strong Button to turn off STRONG BREW, the STRONG feature will remain active.



5. Once brewing is complete the coffeemaker will beep. The warming plate will keep the coffee hot for up to 4 hours and then will automatically shut off.

6. To turn off the warming plate prior to auto-shut off, press the BREW NOW button.

**NOTE:** Push Brew Now button prior to 4 hours to turn the coffeemaker off early.

## BREW LATER

**IMPORTANT:** You must set the clock before using this feature.

1. Press the BREW LATER button. The display will flash the previously set brew later time. If no brew later time has previously set the display will flash 12:00 AM. The display will flash for a few seconds to allow you to set the brew time, using the HOUR and MIN buttons. After 3 seconds of inactivity the brew later time will be set for the selected time.
2. A yellow/amber indicator light will show up on the display to indicate the BREW LATER function has been activated.
3. If you change your mind and wish to turn off the BREW LATER feature, simply press the BREW LATER button again and it will turn off.

Once the BREW LATER feature has been set up, the coffeemaker will automatically remember the last settings until you change it again or if the coffeemaker is unplugged.

**NOTE:** As a reminder, if you want to continue to use the Brew Later feature, you have to press Brew Later each time. The coffeemaker will not automatically start again the next day.

## HOW TO BREW THE PERFECT COP

### Paper Filters vs. Reusable Filters

**PAPER FILTERS:** To achieve a smoother, less bitter cup of coffee, use a paper filter. It will be most effective in trapping bitter sediments.

**REUSABLE FILTERS:** For a more robust and full taste, use a reusable filter. It will allow the coffee's full flavor to fill your cup. Reusable filters have tiny holes that allow rich coffee oils to brew through.

### COFFEEMAKER EXTRAS

**(not included with this model)**



**Reusable Filter**

### **Water**

While it may not seem like an important ingredient, coffee is 98 percent water. The type of water that you brew with greatly affects the final taste. Always use clean, fresh water that is filtered and free of impurities - avoid hard water or well water.

### **Cleanliness**

A clean coffeemaker is essential to brewing great tasting coffee each and every time.

## **ROUTINE CLEANING**

### **Daily Cleaning**

**CAUTION:** Make sure your coffeemaker is unplugged and has cooled completely before cleaning.

- Remove the brew basket, reusable filter (if applicable), carafe, carafe lid, and wash them in a solution of hot water and mild liquid soap, and dry thoroughly. You can also place in the dishwasher; top-rack only.

### **Decalcifying your MR. COFFEE® LED Touch Display Coffeemaker**

Minerals (calcium/limestone) found in water will leave deposits in your coffeemaker and affect its performance. It's recommended that you regularly remove these deposits using a vinegar solution.

1. Prepare a solution of equal parts water and vinegar and pour the solution into the Water Reservoir.
2. Place an empty 12 cup basket-style paper filter or MR. COFFEE® reusable filter into the brew basket and close the coffeemaker's lid.
3. Place the empty carafe back in the unit, centered on the warming plate.
4. Select 12 or ALL using the CUPS button.
5. Brew prepared cleaning solution through the coffeemaker.

6. Turn the coffeemaker off and let stand for 30 minutes.
7. Discard the cleaning solution and rinse the carafe thoroughly with clean water.
8. Fill the water reservoir with 12 cups of clean, fresh water.
9. Place the empty carafe back on the coffeemaker, centered on the warming plate.
10. Remove and discard the paper filter used during the cleaning cycle. If a MR. COFFEE® reusable filter was used during cleaning, remove it and rinse it thoroughly before replacing it in the brew basket.
11. Turn the switch to ON and allow the full brew cycle to complete, rinsing the coffeemaker with hot water.
12. Discard the water and rinse the carafe thoroughly with clean water.
13. Repeat steps 8 through 12 one more time, to ensure it is fully rinsed.

**Your coffeemaker is now clean and ready to brew the next pot of delicious, hot coffee!**

**NOTE:** It is recommended that you decalcify your coffeemaker every 30 days.

### Cleaning Frequency

TYPE OF WATER	CLEANING FREQUENCY
Soft Water	Every 80 Brew Cycles
Hard Water	Every 40 Brew Cycles

## CARAFE USE AND CARE

Follow the instructions below to reduce or eliminate the chance of breaking the glass carafe:

- Discard the carafe immediately if it is ever cracked.
- Protect the carafe from sharp blows, scratches or rough handling. Do not use harsh abrasive cleaners that may scratch the carafe. Scratches may cause the carafe to break.

## USER MAINTENANCE

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See warranty available online.

## SERVICE MAINTENANCE AND WARRANTY

- **Coffee Filters** - For better tasting coffee, we recommend that you use a MR. COFFEE® brand 8-12 cup filter or a MR. COFFEE® brand permanent filter. These filters are available at most grocery stores.
- **Carafes:** You can usually purchase a replacement carafe from the store where you purchased your coffeemaker or online. If you are unable to find a replacement, please call 1-800-MRCOFFEE (1 -800-672-6333) in the U.S. for information on where you can find a store that carries replacement carafe.

### Repairs

If your coffeemaker requires service, do not return it to the store where you purchased it. All repairs and replacements must be made by Sunbeam or by an authorized MR. COFFEE® Service Center. If you live in the U.S., please call us at the following toll-free telephone numbers to find the location of the nearest authorized service center: U.S. 1-800-MR COFFEE (1 -800-672-6333)

You may also visit our website for a list of service centers. To assist us in serving you, please have the coffeemaker model number and date of purchase available when you call. The model number is on the bottom of the coffeemaker.

We welcome your questions, comments or suggestions. In all your communications, please include your complete name, address and telephone number and a description of the problem.

Visit our website and discover the secret to brewing the perfect cup of coffee. You will also find a rich blend of gourmet recipes, entertaining tips and the latest information on MR. COFFEE® products.

### POWER CORD INSTRUCTIONS

A short power supply cord (or detachable power-supply cord) may be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used:

- a. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
- b. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord; and
- c. The longer cord should be arranged so that it will not drape over the counter top or table where it can be pulled on by children or tripped over unintentionally. Do not pull, twist or otherwise abuse the power cord.

Do not pull, twist or otherwise abuse the power cord.

**Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](#)

