

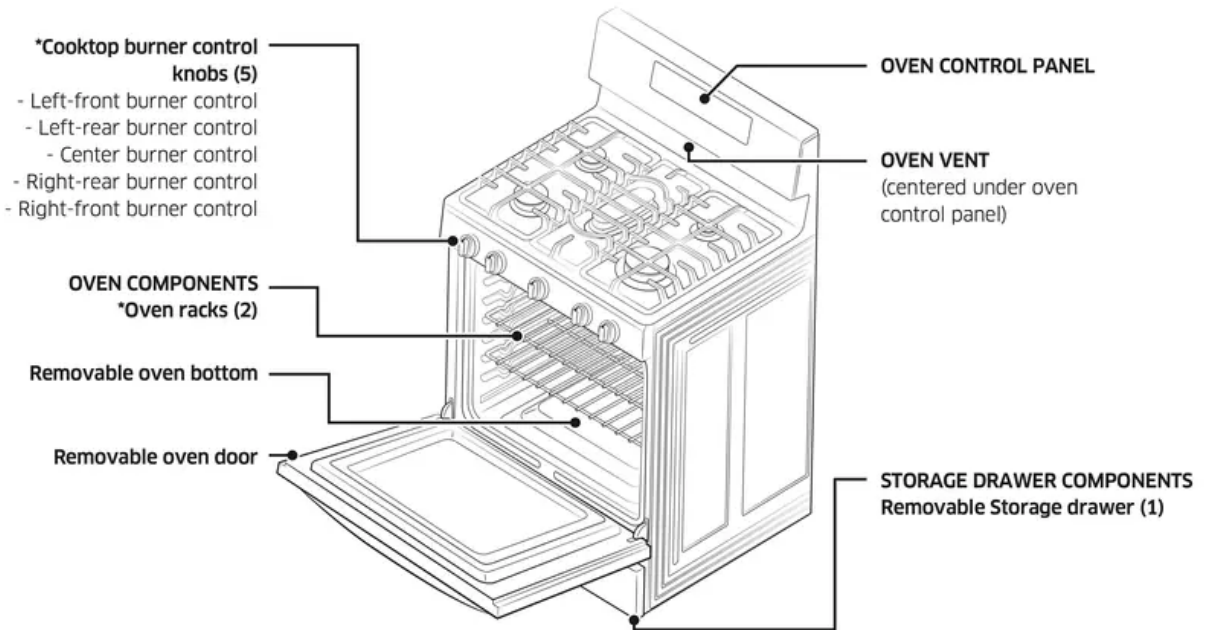


## Introducing your new range

### Overview

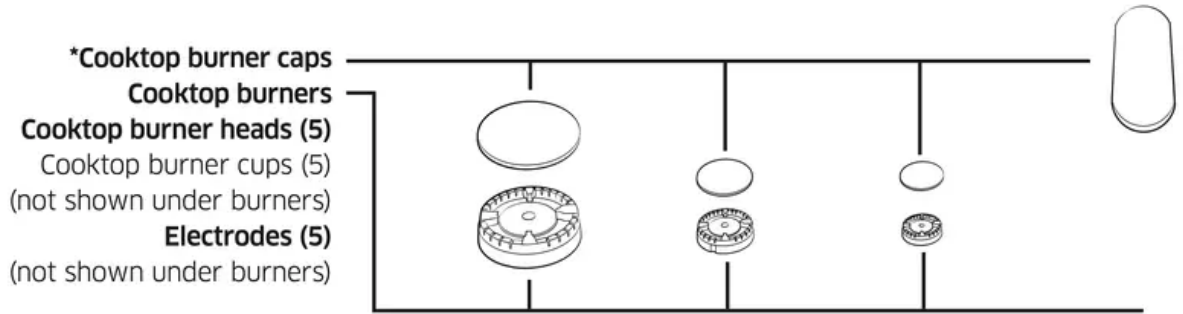


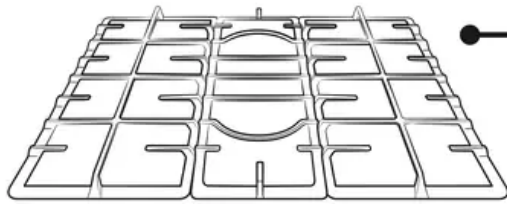

## COOKTOP COMPONENTS

Heavy-duty continuous cast grates

- \*Left burner grate
- \*Center burner grate
- \*Right burner grate

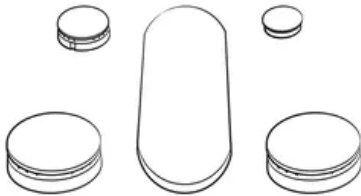


## OVEN COMPONENTS

Oven rack position guide

Broil oven burner

\*Oven light (1)

Bake oven burner

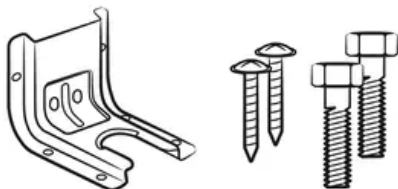

ADJUSTABLE LEVELING  
LEGS (4)

(not shown)

ANTI-TIP BRACKET KIT (1)


## Surface cooking

**WARNING:** BEFORE USING THE SURFACE BURNERS, make sure to follow all the safety warnings and precautions listed on page 7. Failure to do so could result in product damage, personal injury, and/or death.

### Lighting a gas surface burner

Make sure all surface burners are positioned and assembled properly.

1. Push in and turn the control knob to the LITE position. You will hear a “clicking” sound indicating the electronic ignition system is working properly.
2. After the surface burner lights, turn the control knob to adjust the power setting of the surface burner and turn off the electronic ignition system.

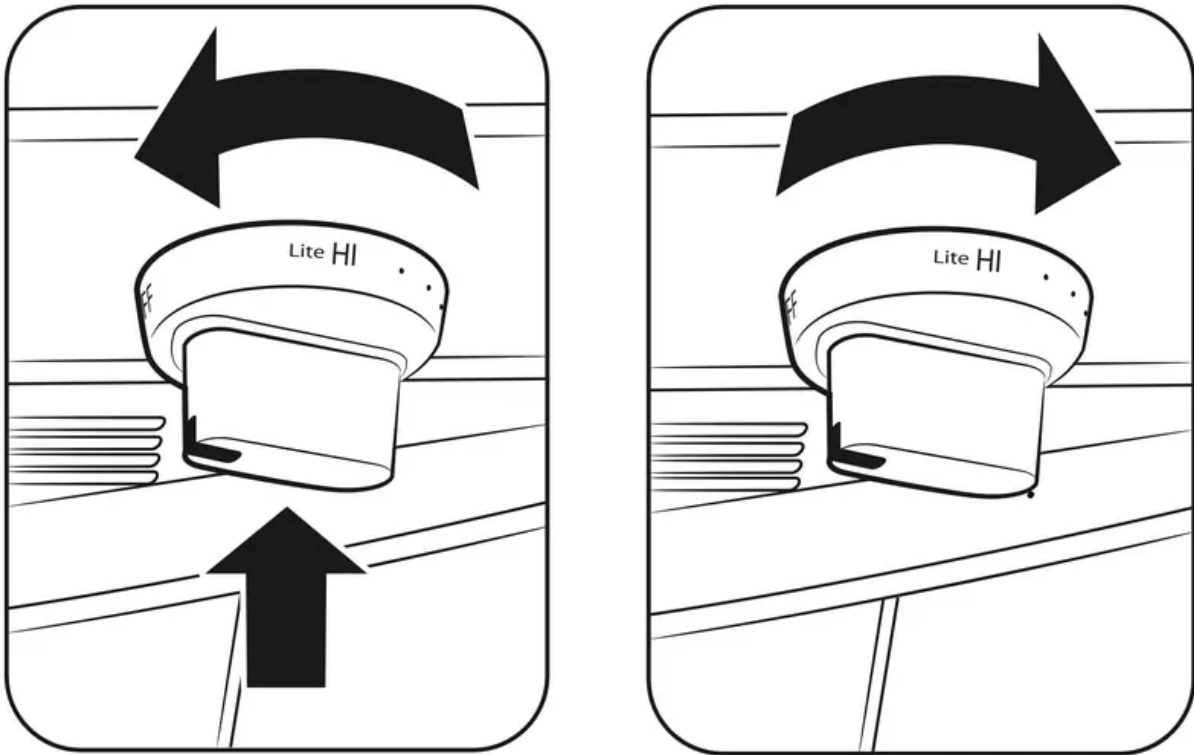

**NOTE:** We highly recommend using the right front side burner for simmering tomato sauce and right rear side burner for melting chocolate.

### Manually lighting a gas surface burner

If a power failure occurs, the surface burners can still be lit manually.

**NOTE:** Use extreme caution when manually lighting a surface burner.

1. Hold a long gas grill lighter to the surface burner you want to light.
2. Push in and turn the control knob for that burner to the LITE position.
3. After the burner has lit, set the control knob and the burner to the desired setting.


## Flame size selection

**WARNING:** Flames larger than the bottom of the cookware will not result in faster heating, but could result in a fire hazard and/or personal injury.

The flames on the burners should always stay under the cookware. The flames should never extend beyond the bottom surface and/or up the sides of the cookware.

Always watch the flames when adjusting the heat setting with the control knob(s). The flames should always match the size of the cookware being used.

## Gas surface burners and control knobs

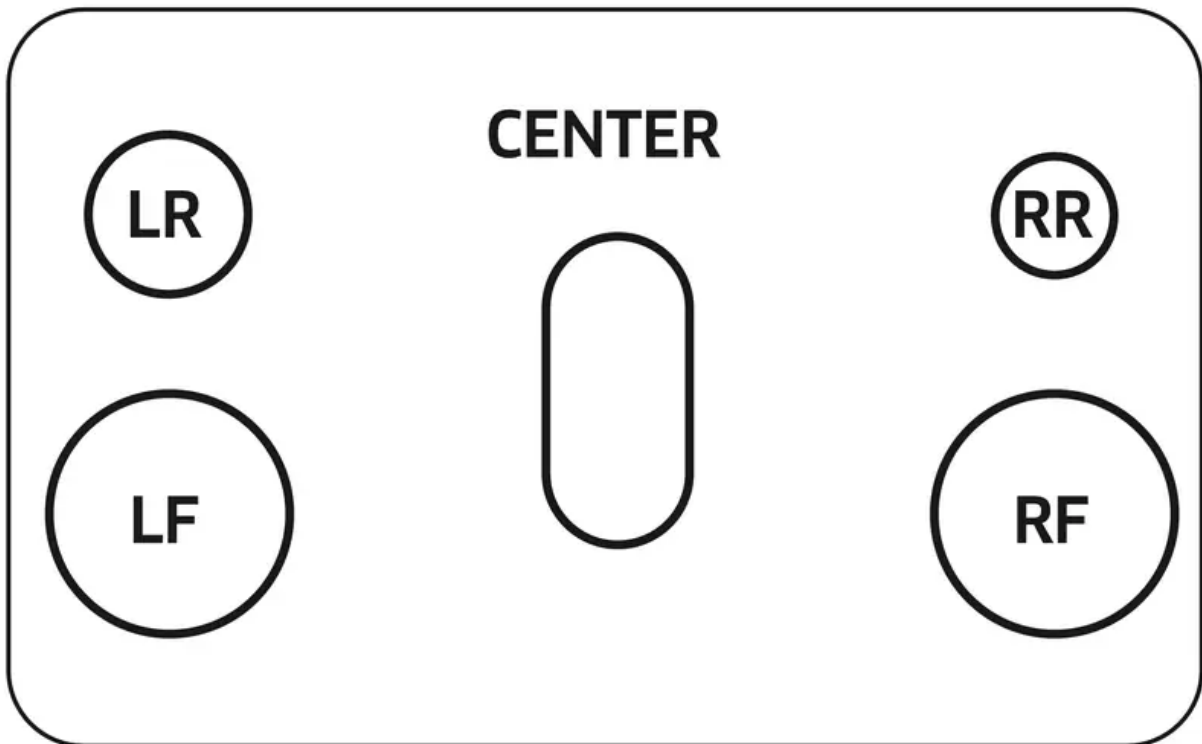

Your gas range cooktop has five gas burners. All sealed cooktop burners are of an open-port design to provide you easy assembly and accurate and dependable operation. The different burner sizes ensure you have the proper heat source for the desired cooking job.

The right rear side burner provides precise cooking performance for delicate foods and foods that require low heat for long cooking time. The right rear side burner lets you use the LO setting for a very low simmer setting.

The left rear side and center round burners are general purpose burners that can be used for most cooking. The HI to LO settings provide a wide range of cooking temperatures to meet your cooking needs.

The right and left front side burners provide maximum output. These burners can also be used as general-purpose burners, but they are designed to provide quick heat to large cookware. The right and left front side burner spreads out the heat with a larger circle of flames.

BURNER POSITION	FUNCTION	TYPE OF FOOD
RIGHT FRONT (RF)	Quick heating	Boiling Food
RIGHT REAR (RR)	Low simmering	Chocolate, Casseroles, Sauces
CENTER OVAL BURNER	Using Griddle	Pancakes, Hamburgers, Fried Eggs, Hot Sandwiches
CENTER ROUND BURNER	General heating Low simmering	General Food Tomato Sauce*, Casseroles
LEFT FRONT (LF)	Quick heating	Boiling Food
LEFT REAR (LR)	General heating Low simmering	General Food Tomato Sauce*, Casseroles

**NOTE:**

\* Tomato sauce needs to be stirred during the low simmering


The center oval burner can also be used for large pots and pans, but is designed to be used with the center burner grate and/or the center griddle accessory.

The oval burner also spreads out the heat more evenly over the large center cooking area.

Each surface burner has a control knob with settings from HI to LO.

They also have a LITE setting that is only used to light the flame. The electronic ignition system sparks when the control knob is in the LITE position.

The surface burner indicator next to the control knob shows which burner the knob controls.

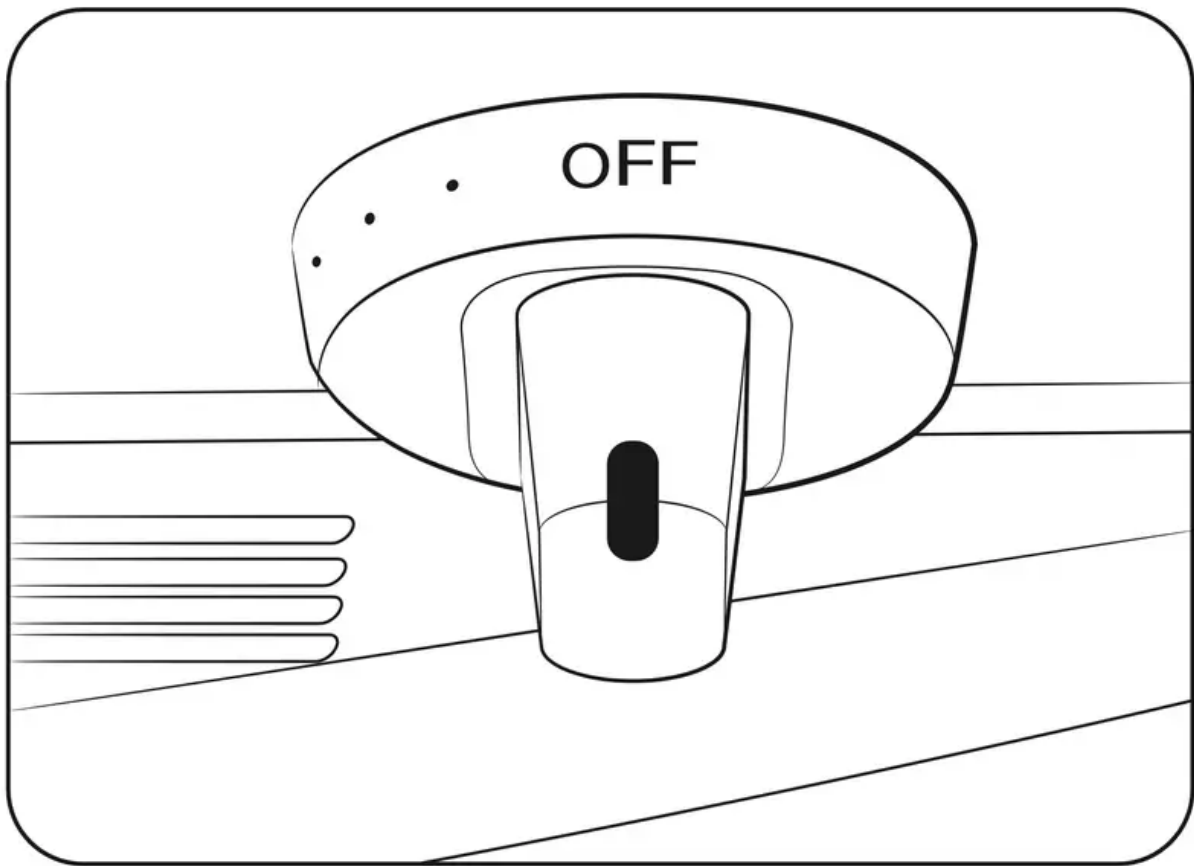

Each surface burner has a control knob with settings from HI to LO.

They also have a LITE setting that is only used to light the flame. The electronic ignition system sparks when the control knob is in the LITE position.

The surface burner indicator next to the control knob shows which burner the knob controls.

### **Cookware usage**


Using the correct cookware can prevent many problems, such as uneven cooking or extended cooking time. Using the proper pans will reduce cooking time and cook food more evenly. Look for the following pan characteristics:

- Flat bottom and straight sides.
- Tight-fitting lid.
- Weight of handle does not tilt pan.
- Pan is well-balanced.
- Pan size matches the amount of food being prepared and the size of the surface burner.
- Made of material that conducts heat well.
- The pot/pan diameter matches the surface burner flame diameter.

What your cookware is made of determines how evenly and quickly heat is transferred from the surface burner to the pan bottom.


- **ALUMINUM:** Excellent heat conductor. Some types of food will cause the aluminum to darken. (Anodized aluminum cookware resists staining and pitting.)
- **COPPER:** Excellent heat conductor, but discolors easily.
- **STAINLESS STEEL:** Slow heat conductor with uneven cooking results. Is durable, easy to clean, and resists staining.
- **CAST-IRON:** A poor conductor, but retains heat very well. Cooks evenly once cooking temperature is reached.
- **ENAMELWARE:** Heating characteristics will vary depending on base material.
- **GLASS:** Slow heat conductor. Glass cookware is designed for two usages—top-of-range cooking or oven use. Only use cookware where it is designated to be used.

**NOTE:** Do not place a small pan or pot with a bottom diameter of about 6" or less on the center grate. Otherwise, it is likely that the pan or pot tips over. We highly recommend you to place such a small-sized pan or pot on the rear of both side grates.

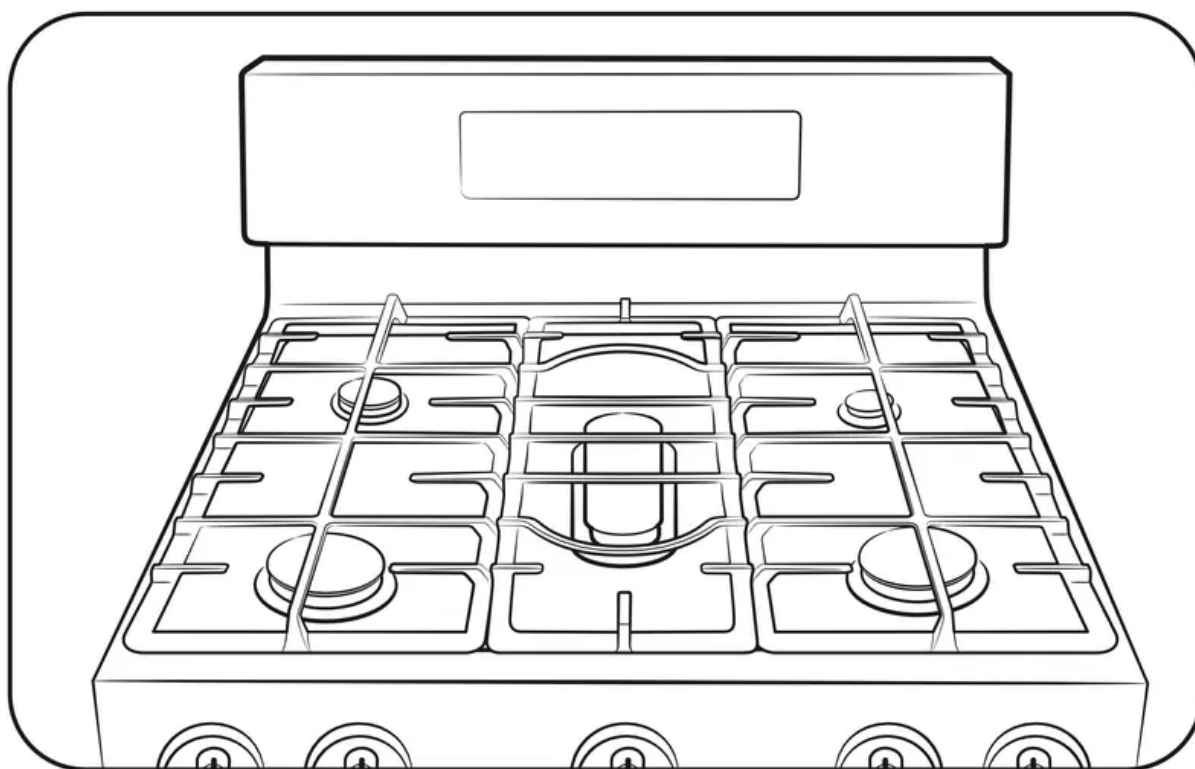


### Center burner grate

Samsung gas ranges come with a center burner grate. This grate fits over the center oval burner as well as round burner. The center burner grate should not be used over any other burners and no other center stovetop grates should be used with this range.

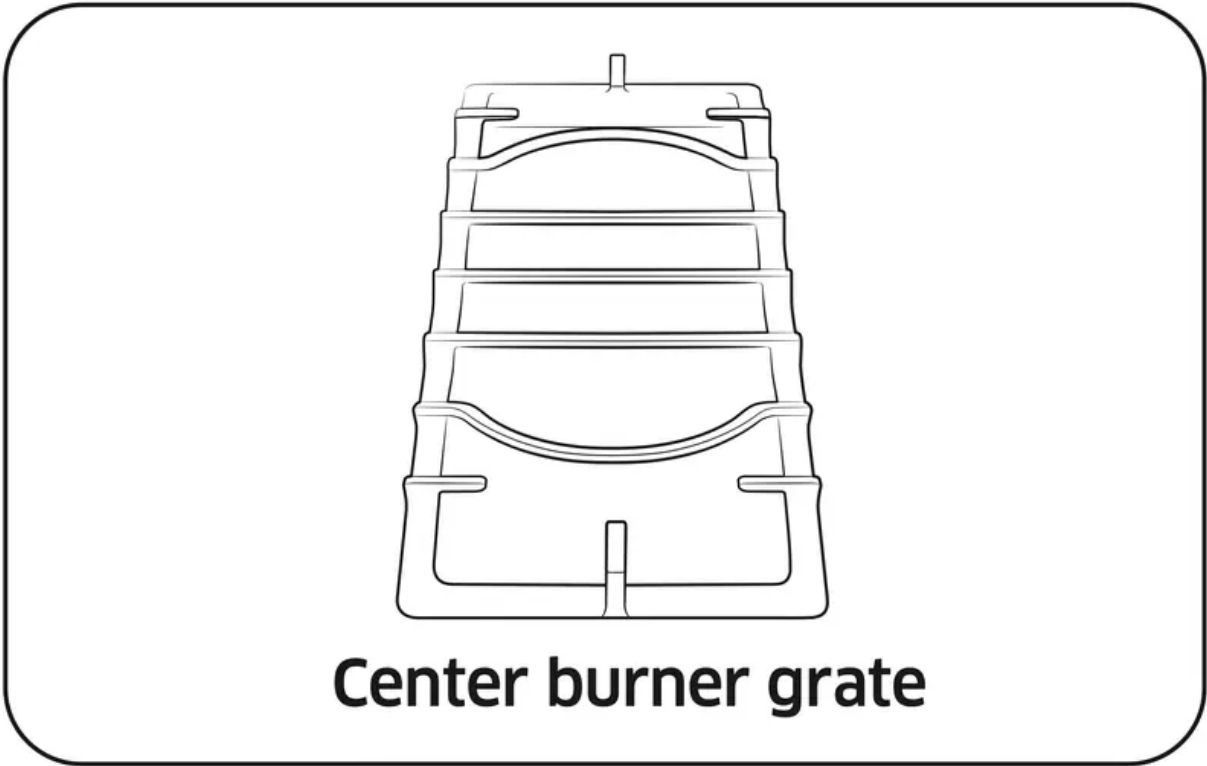

## Operating the oven

### Oven control panels and displays

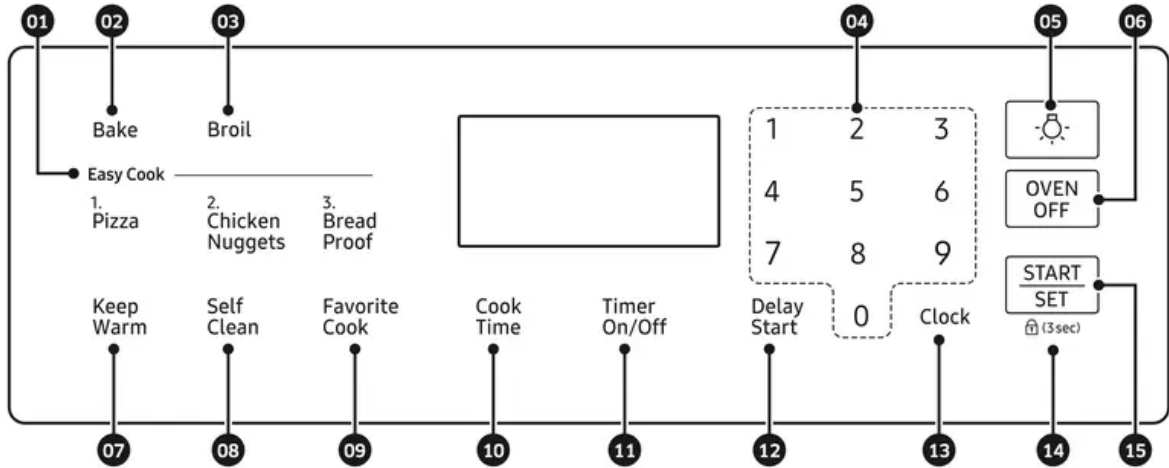


**NOTE:** All oven operations are controlled with electronic touch pads. Use the following pads to program and operate all oven cooking, cleaning, and timing functions. All programmed settings and cooking statuses will show on the digital display.

### Special feature, oven, and time controls

1. **Easy Cook:** Press to recall the Easy cook recipe setting of the upper oven.
2. **Bake:** Press this pad to activate the Bake function. Evenly cooks food using the bottom oven burner.



3. **Broil:** Activates the Broil function. Cooks foods using the top oven burner only.
4. **Number pads:** Press these pads to set the desired time, temperatures, and preset oven functions.
5. **Oven light:** Press this pad to turn the oven light on or off.
6. **OVEN OFF:** Press to cancel all oven operations except the clock and timer.
7. **Keep Warm:** Press this pad to keep cooked foods warm after cooking.  
This lowers the oven temperature and maintains it at 150 °F to 200 °F (66 °C to 93 °C).
8. **Self Clean:** Activates the self-cleaning oven function. Uses very high heat to burn off internal oven soilage.
9. **Favorite Cook:** Activates the favorite cook feature. This feature lets you preprogram up to three frequently used cooking cycles so they can be set and started with the press of a button.
10. **Cook Time:** Press this pad, and then the desired amount of time you want your food to cook. The oven will automatically shut off when the time has elapsed.
11. **Timer On/Off:** Press to select the timer feature. Activates a kitchen timer for the desired amount of time.
12. **Delay Start:** Allows you to set the oven to start and stop automatically. Use with Bake, Cook Time, or Self Clean functions.
13. **Clock:** Allows you to set the clock.
14.  **(3 sec):** Deactivates the control panel touch pads to prevent the oven from accidentally being turned on. It also locks the oven door to prevent accidental tipping of the range. Touch pads will not work and the oven door will stay locked until this function is turned off.
15. **START/SET:** Press this pad to start the oven cooking, cleaning, and/or timing functions.

### Minimum and maximum settings


All the features listed in the following chart have minimum and maximum temperature or time settings.

FEATURE	MINIMUM SETTING	MAXIMUM SETTING
Bake	150 °F (66 °C)	550 °F (288 °C)
Broil	Lo	Hi
Self Clean	2 hours	4 hours
Keep Warm	-	3 hours
Bread Proof	-	12 hours

**NOTE:**

Always bake and/or broil with the oven door closed. If you open the oven door while the oven is operating and leave it open, the oven burner will stop in 1 minute. This is not a product failure. The oven will automatically start again when you close the door.

**Application mode:** Bake, Broil, Pizza, Bread Proof, Chicken Nuggets, Favorite Cook.

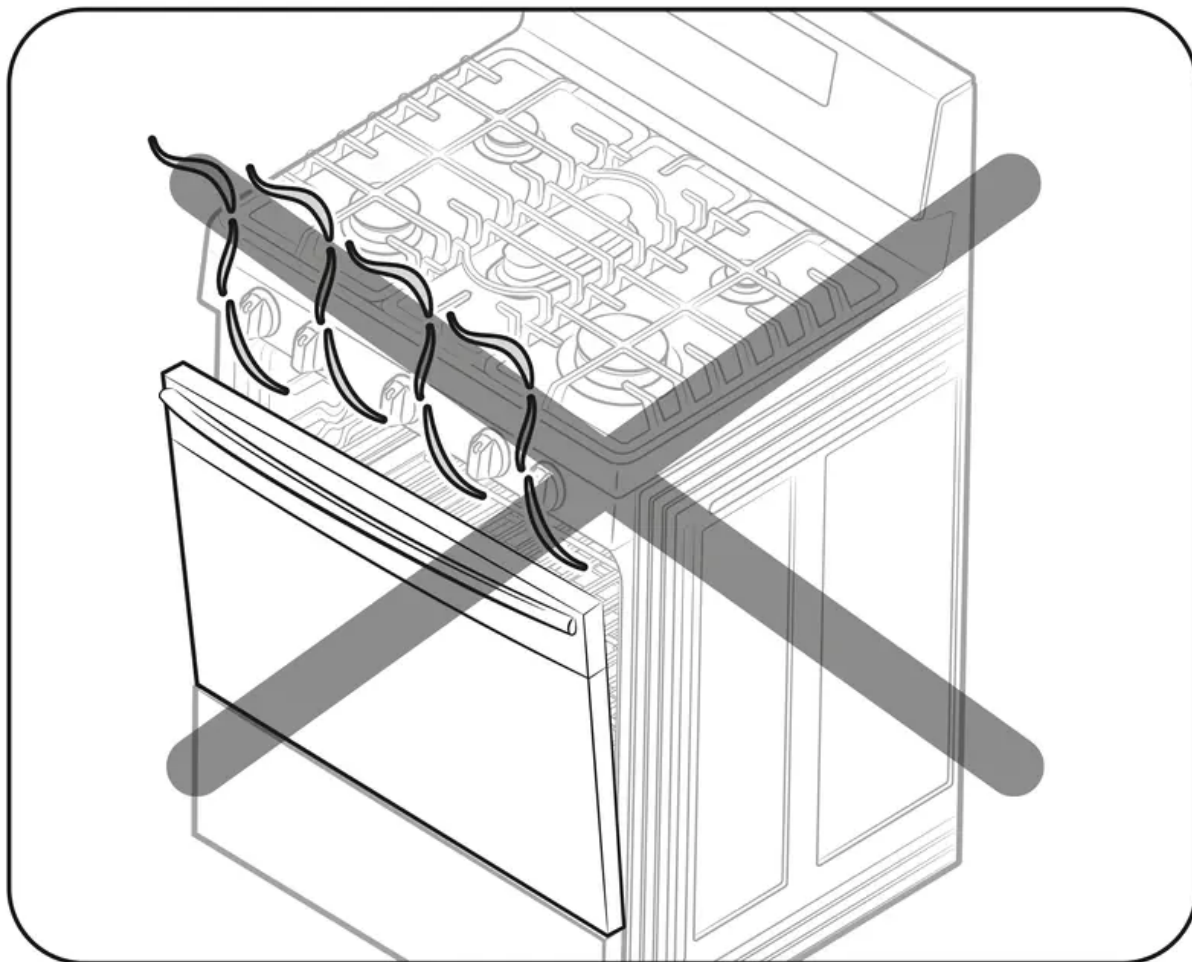


### Setting the clock

The clock must be set to the correct time of day for the automatic oven timing functions to work properly. The clock can be adjusted to show a 12-hour or 24hour display. The 12-hour display is the default setting.


The time of day cannot be changed during a timed cooking, delayed start, self-cleaning, or Sabbath function operation.

## How to set the clock

1. Press the Clock pad.

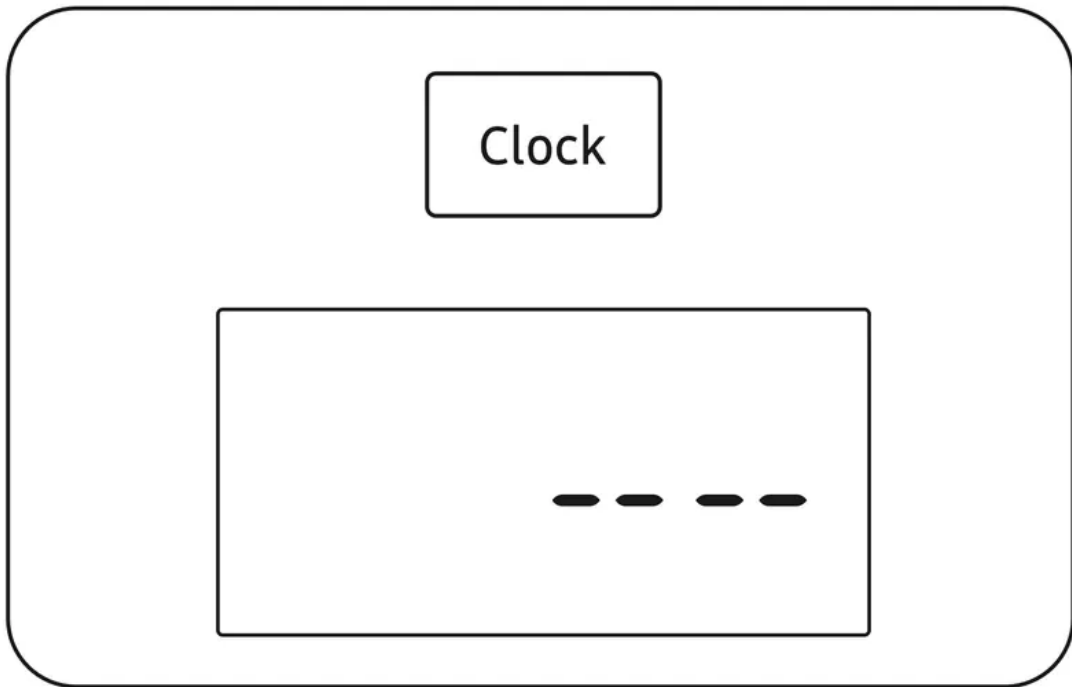


2. Enter the current time in hours and minutes using the number pads (e.g., 1, 3, 0).  
The display will show the time of day.

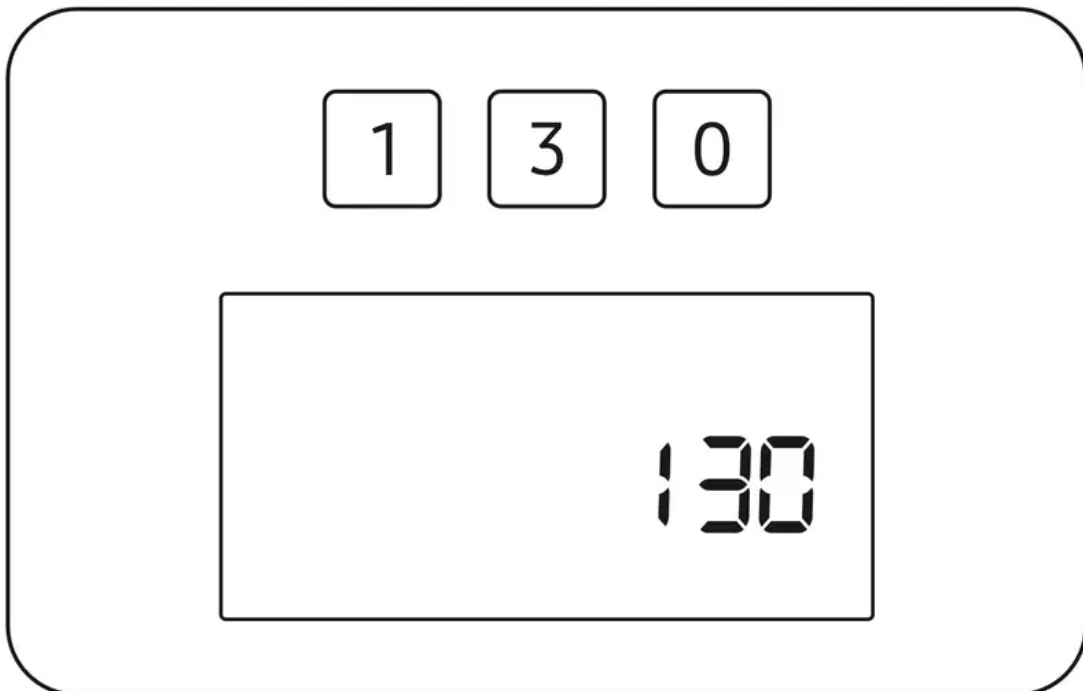

3. Press the START/SET pad to set the clock.

The display will show the time of day.

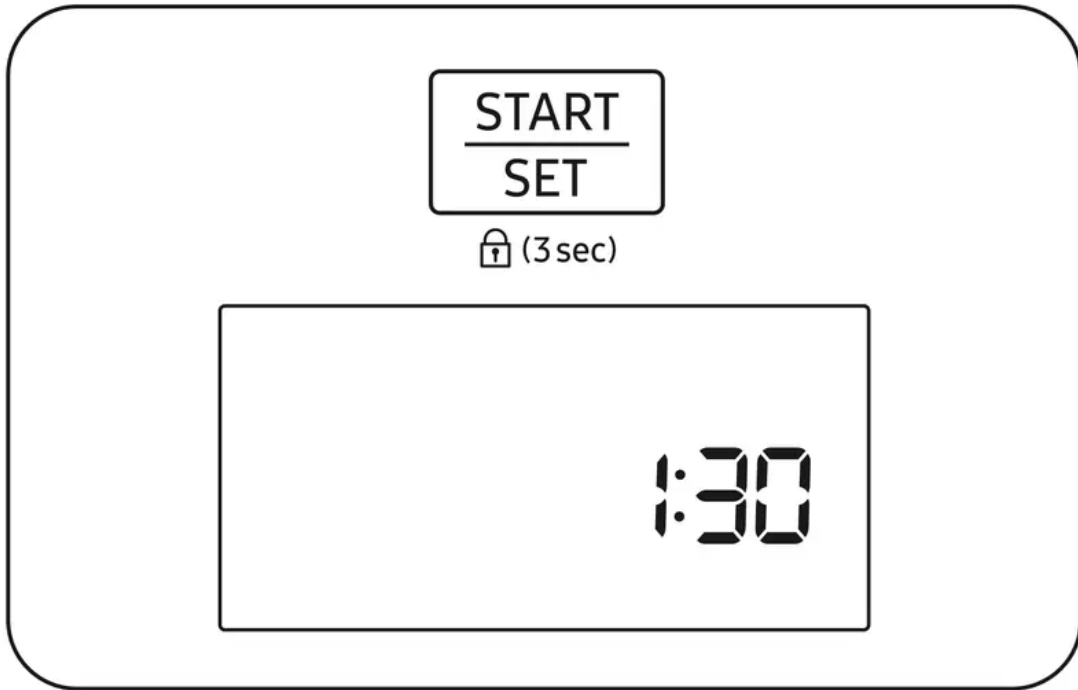


#### How to change between a 12-hour and 24-hour display

1. Press and hold the Clock and 0 pads for 3 seconds.


The display will show the present mode (e.g., 12Hr).

**NOTE:** If one pad is pressed before the other, -- will appear in the display.


Press the OVEN OFF pad and start again.

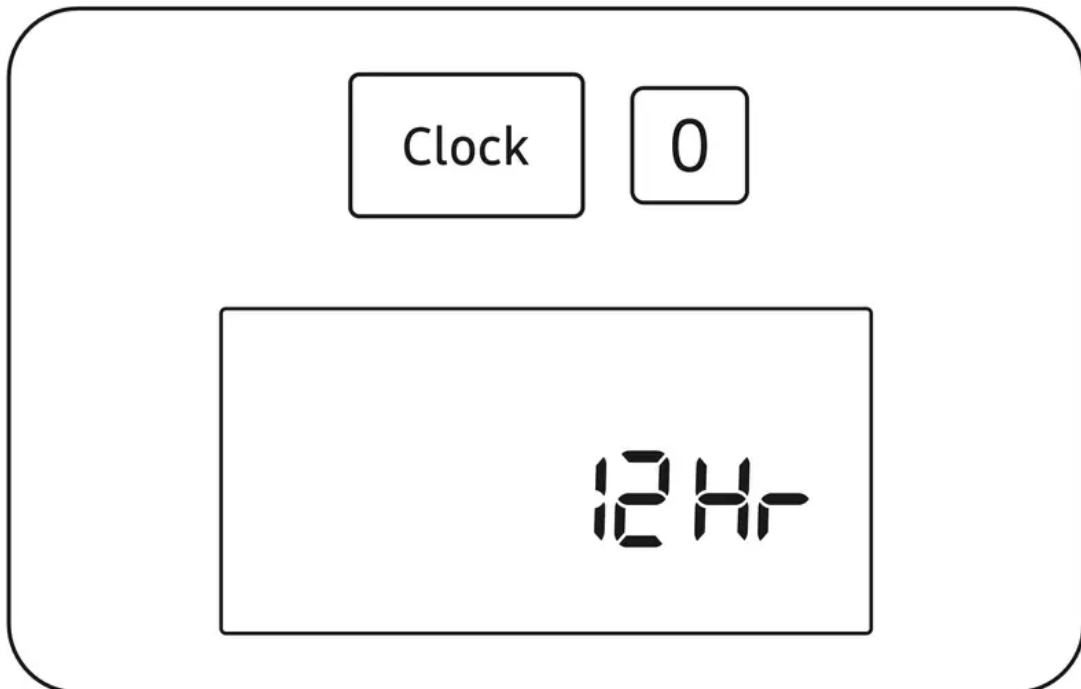

2. Press the 0 pad to toggle between the 12-hour and 24-hour display setting. 12Hr or 24Hr will show in the display depending on your selection.

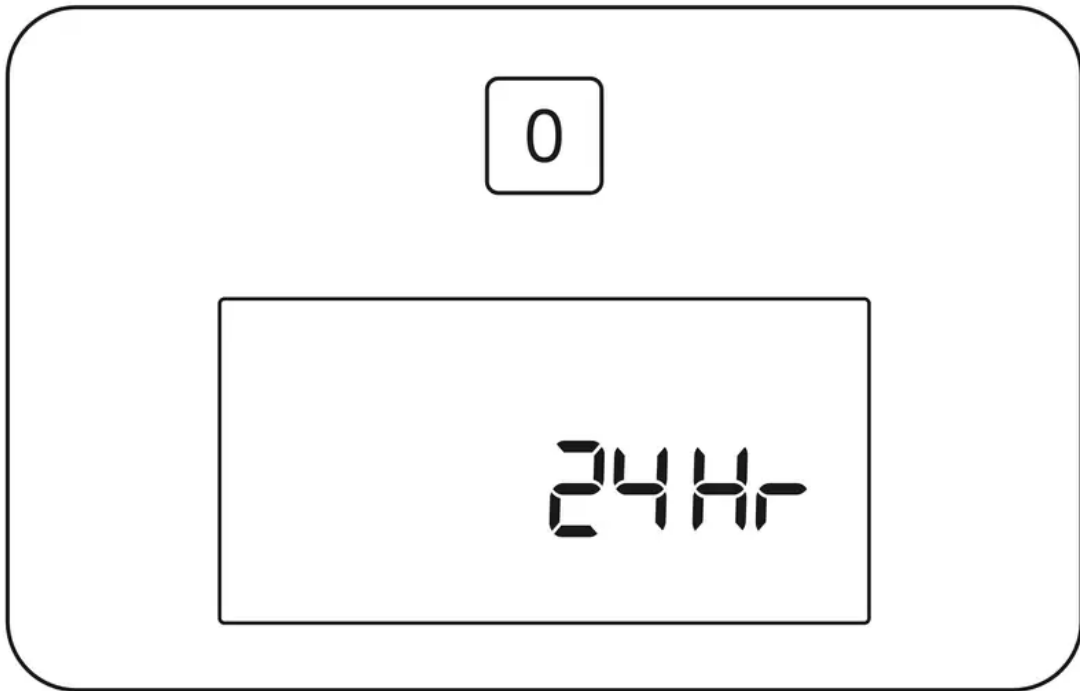

3. Press the START/SET pad to change the clock display mode.

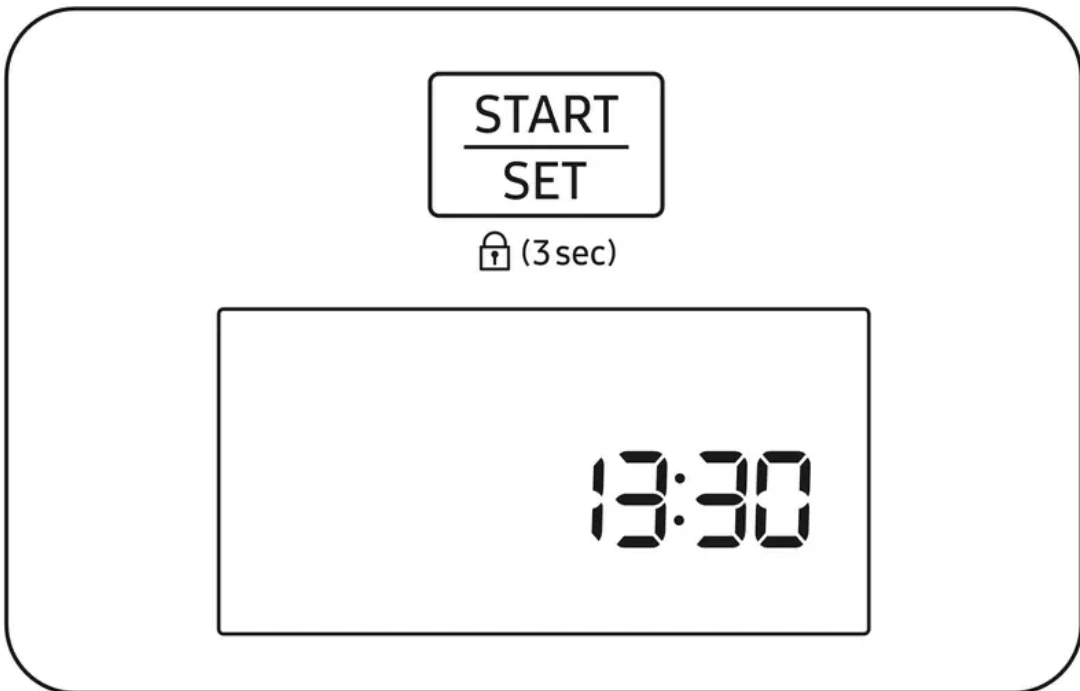


### Setting the timer on/off

The kitchen timer serves as an extra timer that beeps when the set time has elapsed. It does not start or stop cooking functions. The feature can be used at the same time as any other oven functions. The timer can be set for any amount of time between 1 minute and 9 hours and 99 minutes.

## How to set the timer


1. Press the Timer On/Off pad. Press the pad once for hours/minutes, twice for seconds, and three times to turn off or cancel the kitchen timer.

The display will show Timer, and - - - will blink in the display.

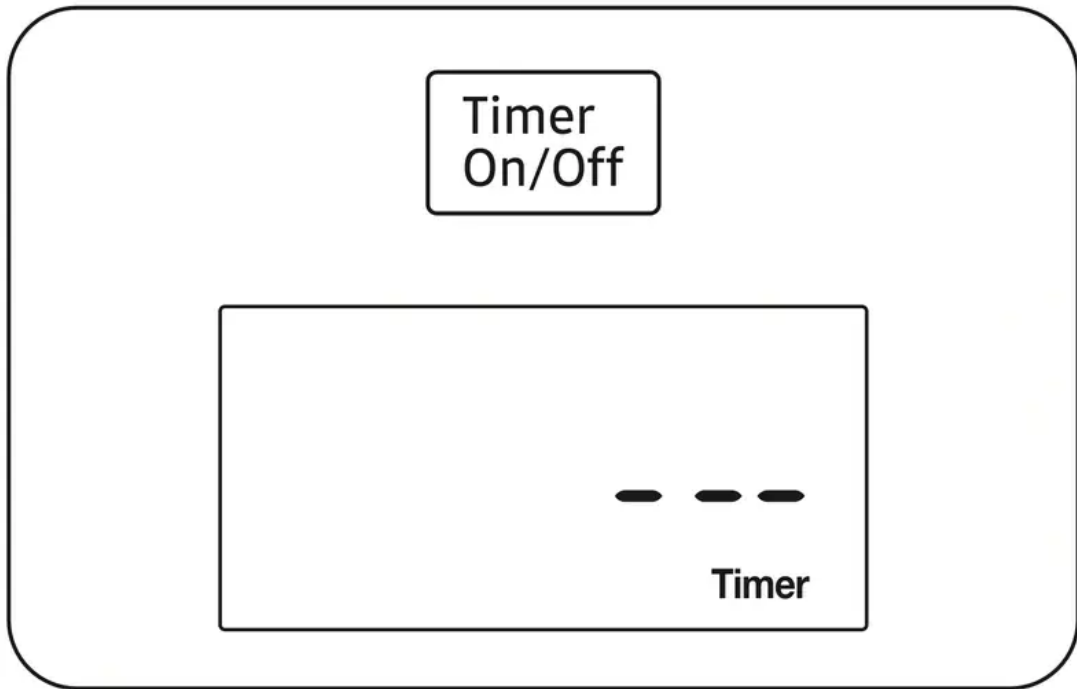

2. Press the number pads to enter the amount of time you want in minutes or hours and minutes (e.g., 1, 5).


The set time will show in the display.

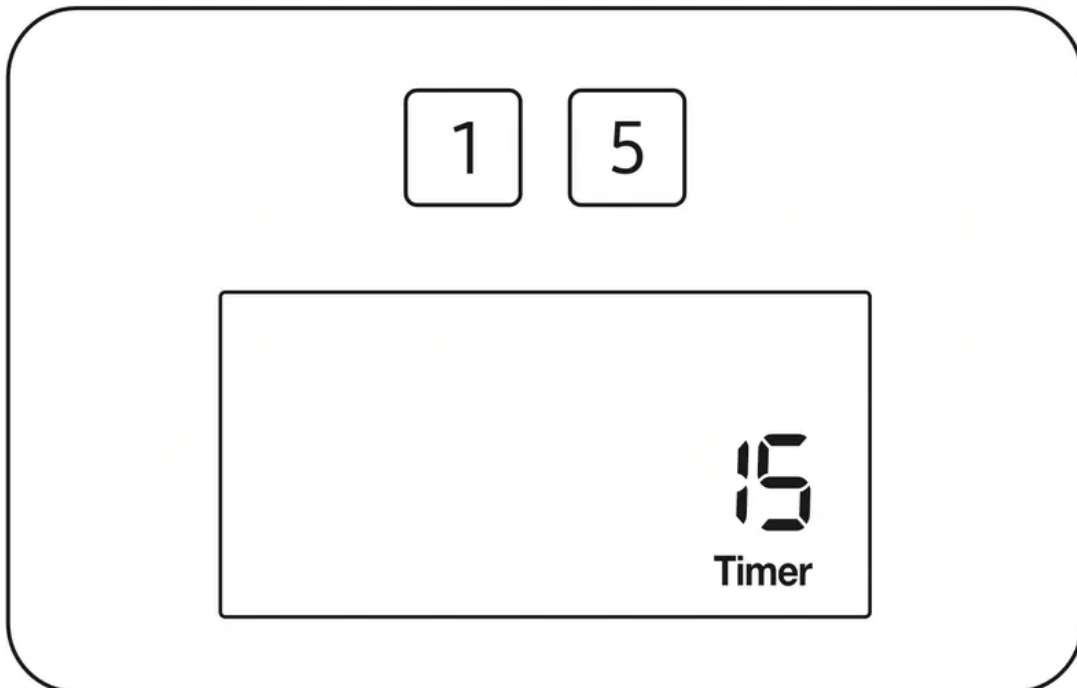

3. Press the Timer On/Off pad to start the timer.


The display will show the remaining time. When time has elapsed, the oven will beep

and the display will show End until you press the Timer On/Off pad. After the pad is pressed, the display will go back to showing the time of day. You can cancel the timer at any time by pressing the Timer On/Off pad.

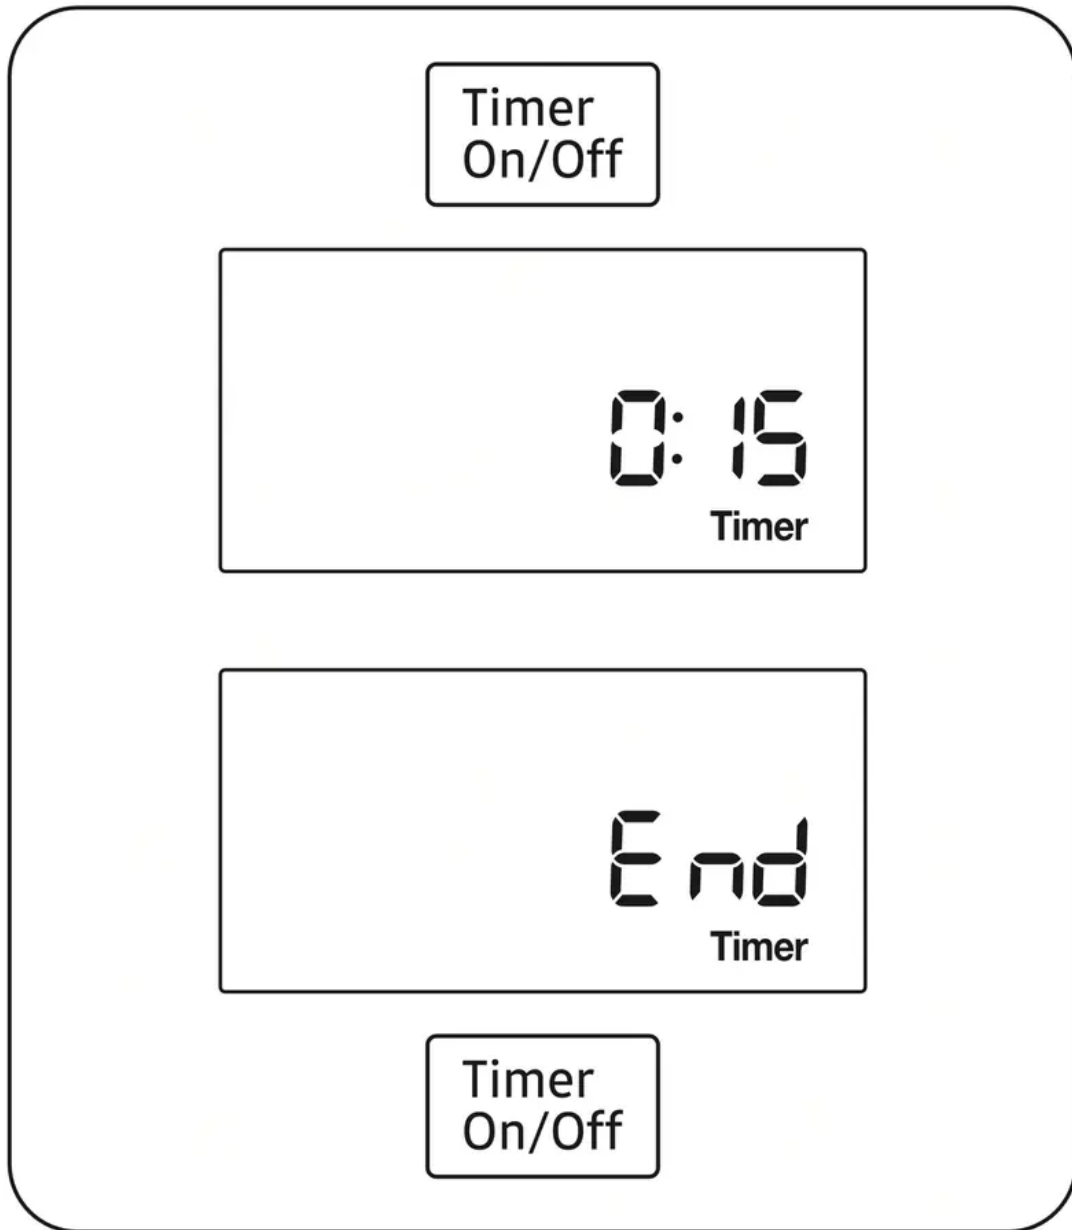

### Positioning the oven racks

The oven racks are removable and can be positioned in any of the seven oven rack positions. Each oven rack has a built-in stop to prevent it from accidentally being pulled completely out. Proper positioning of the oven racks will provide the best cooking results. The diagram to the left shows the rack positions.

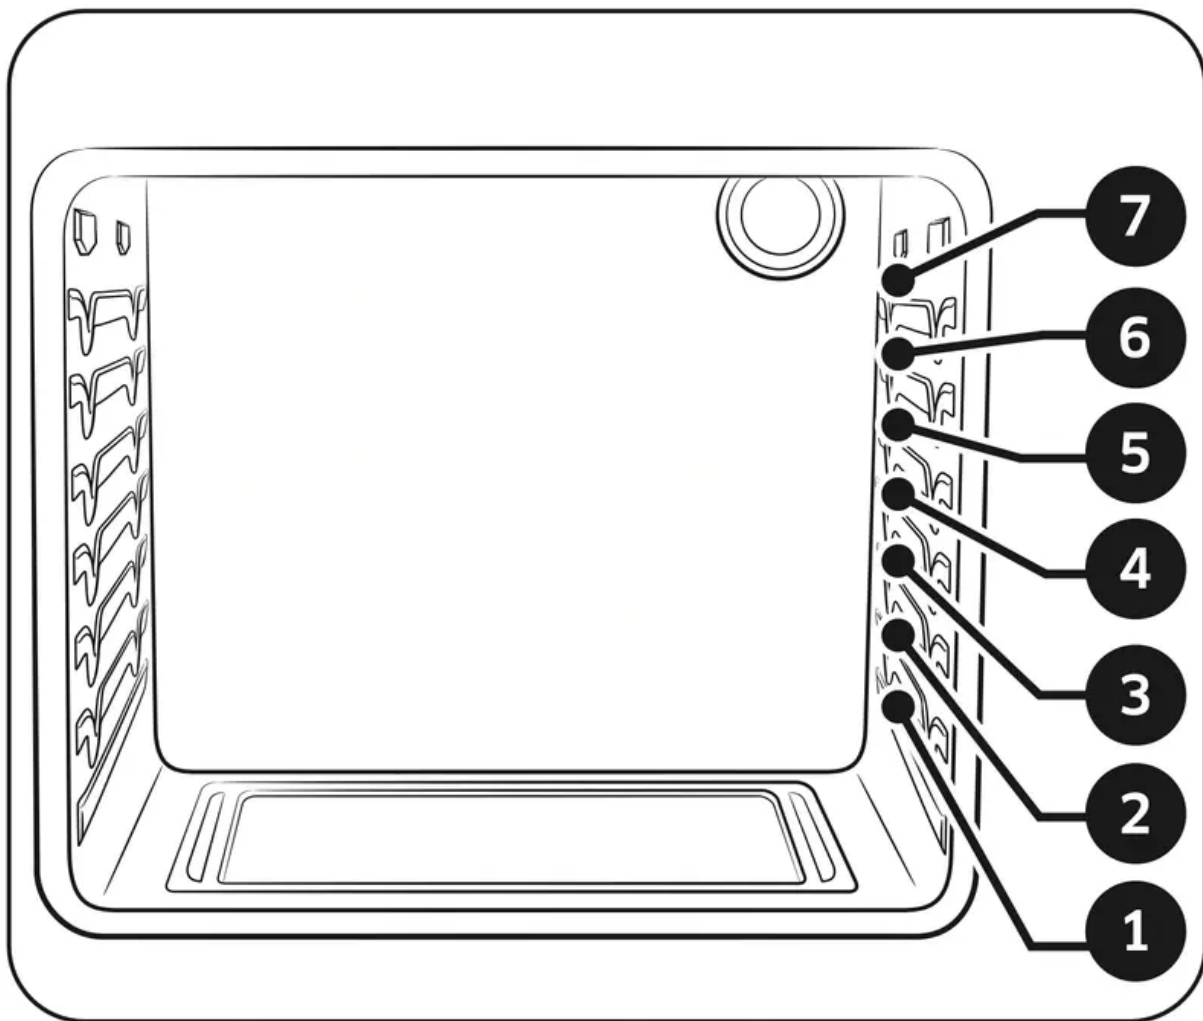


**CAUTION:**

- Do not place aluminum foil on the oven bottom because it could cause damage.
- Do not cover an oven rack with aluminum foil. This will disturb the heat circulation, resulting in poor baking. Foil may be used to catch spills by placing a sheet on a lower rack, several inches below the food.
- Arrange the oven racks only when the oven is cool.
- When placing an oven rack in the topmost rack position (position 7), make sure the rack is stably situated on the embossed stop.

**Oven rack positions**

TYPE OF FOOD	RACK POSITION
Hamburgers and steaks	6 or 7
Toasts	5 or 6
Biscuits, muffins, brownies, cookies	4
Bundt or pound cakes	3
Angel food cake, pies	2
Roasts (small or large), ham, turkeys	1 or 2

### Baking layer cakes

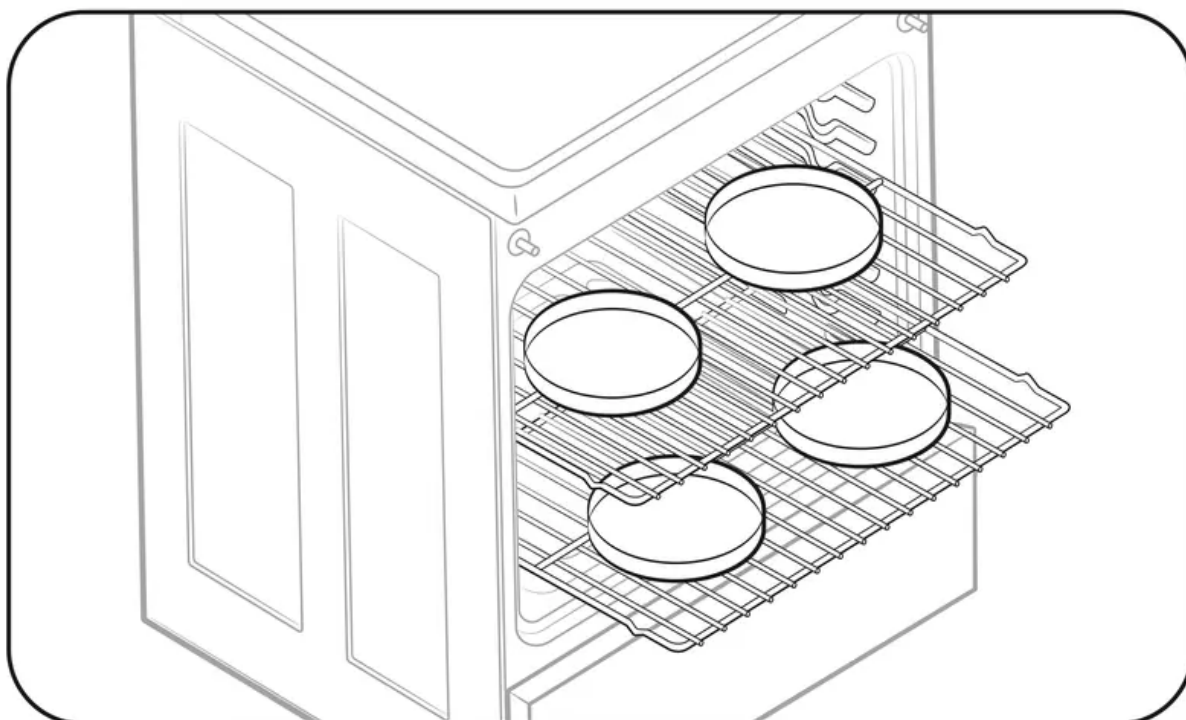


- Centering the baking pans in the oven will produce better cooking results.
- When baking multiple items, make sure to leave a 1 to 1.5" (2.5 to 3.8 cm) space around each item.
- When baking on multiple racks, place the oven racks in positions 2 and 5.
- Place two pans in the rear of the top rack and the other two pans in the front of the bottom rack.

**NOTE:** Proper positioning of food items in the oven will help you achieve the best cooking results.


#### To remove an oven rack:

1. Pull the rack straight out until it stops.
2. Lift the front of the oven rack and pull to remove it from the oven.

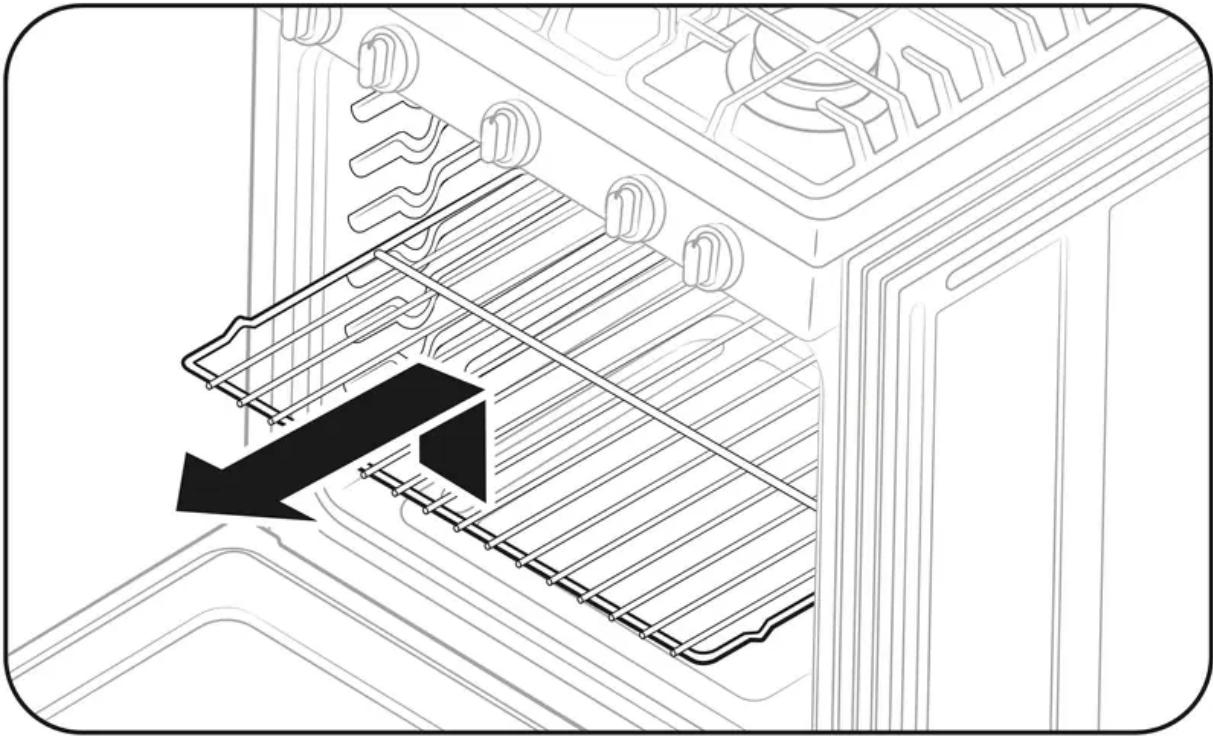

**To replace an oven rack:**

1. Place the back edge of the rack on the desired rack supports.
2. Lift the front of the rack and slide it into the oven.

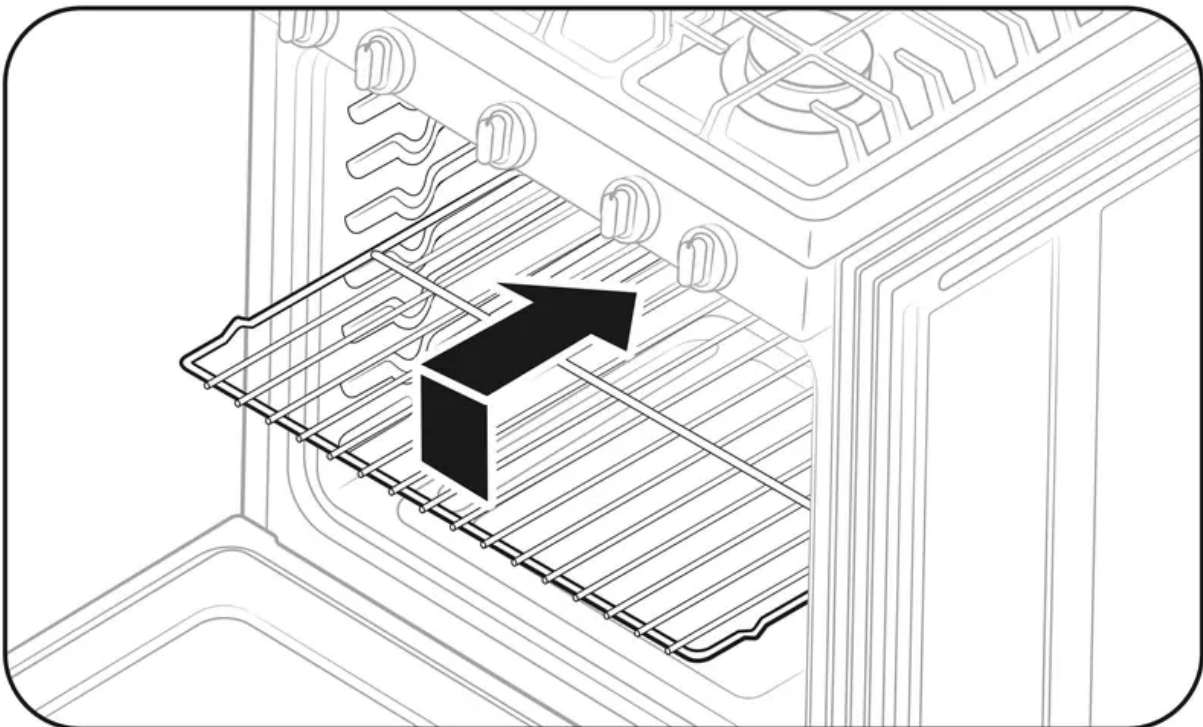


**Oven vent**

The oven vent is located under the oven control panel. Do not block or place items in front of the oven vent. Proper air circulation prevents oven burner combustion problems and ensures good



cooking results. Since the vent and area around the vent can become hot, use care when placing items near the oven vent. Hot steam could heat or melt items placed in front of the oven vent.

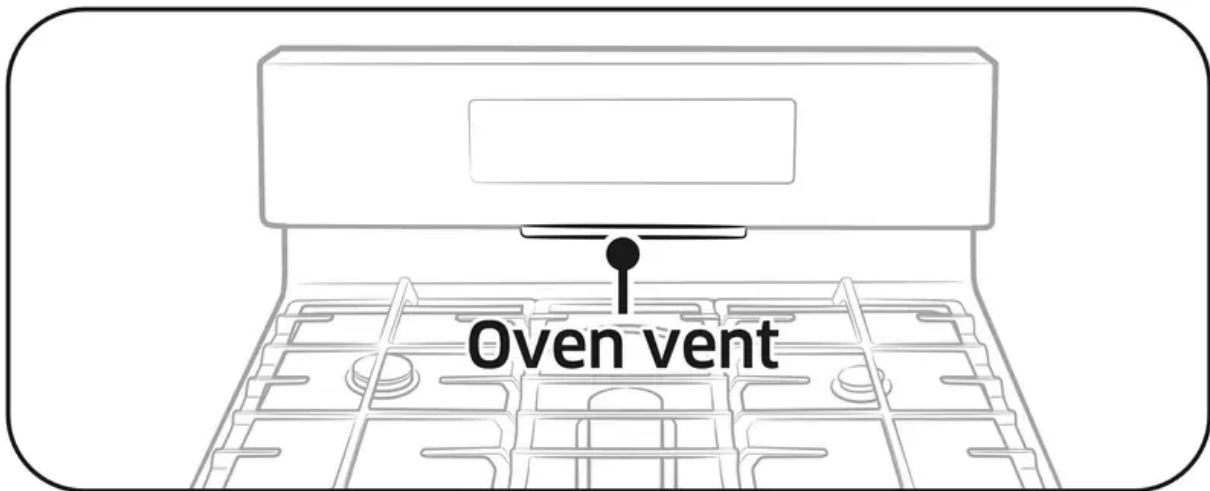


### Oven light

The oven has a light that is located on the rear oven wall in the upper right-rear corner. The light can be turned on or off by pressing the Oven light pad on the oven control panel.

The oven light allows you to check cooking progress without opening the oven door. Always use a 40-watt appliance bulb when replacing the oven light.

See page 52 for light-changing instructions.

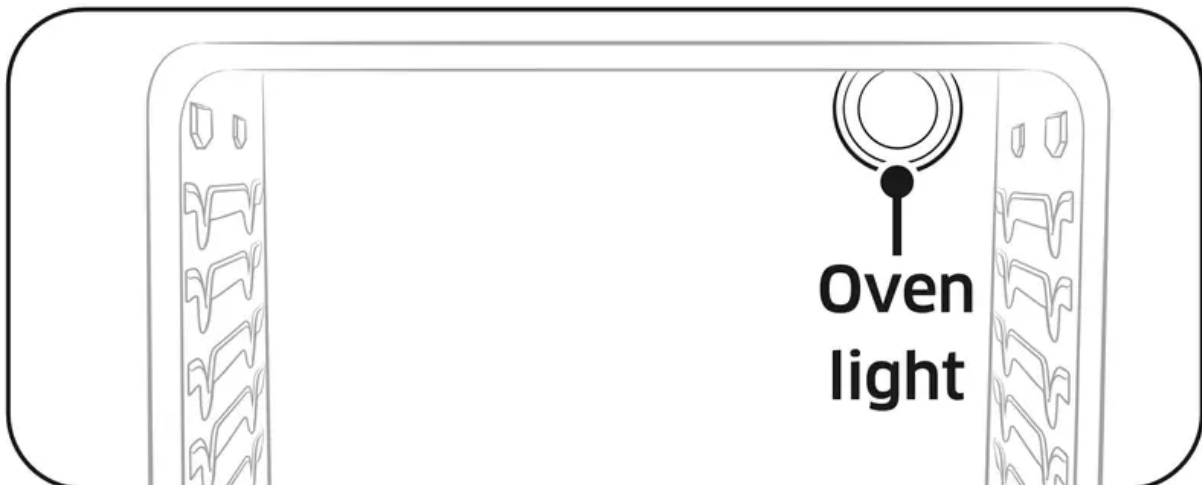

### Baking

The Bake function lets you program the oven to bake at any temperature between 150 °F (66 °C) and 550 °F (288 °C).

#### How to set the oven temperature

1. Position the oven rack in the desired location.

2. Press the Bake pad. The oven will beep every time a pad is pressed. The default temperature, 350° will blink on the display. If the default temperature is the desired cooking temperature, skip to step 4.




3. Press the number pads for the desired cooking temperature (for example, 3, 7, 5). The selected cooking temperature will blink on the display.




4. Press the START/SET pad.  
The oven will automatically light and start preheating. The display will show a blinking •, along with 150° and Bake, until the oven reaches 150°. Then, the display will just show the actual oven temperature.

When the oven reaches the desired baking temperature, it will beep 6 times.

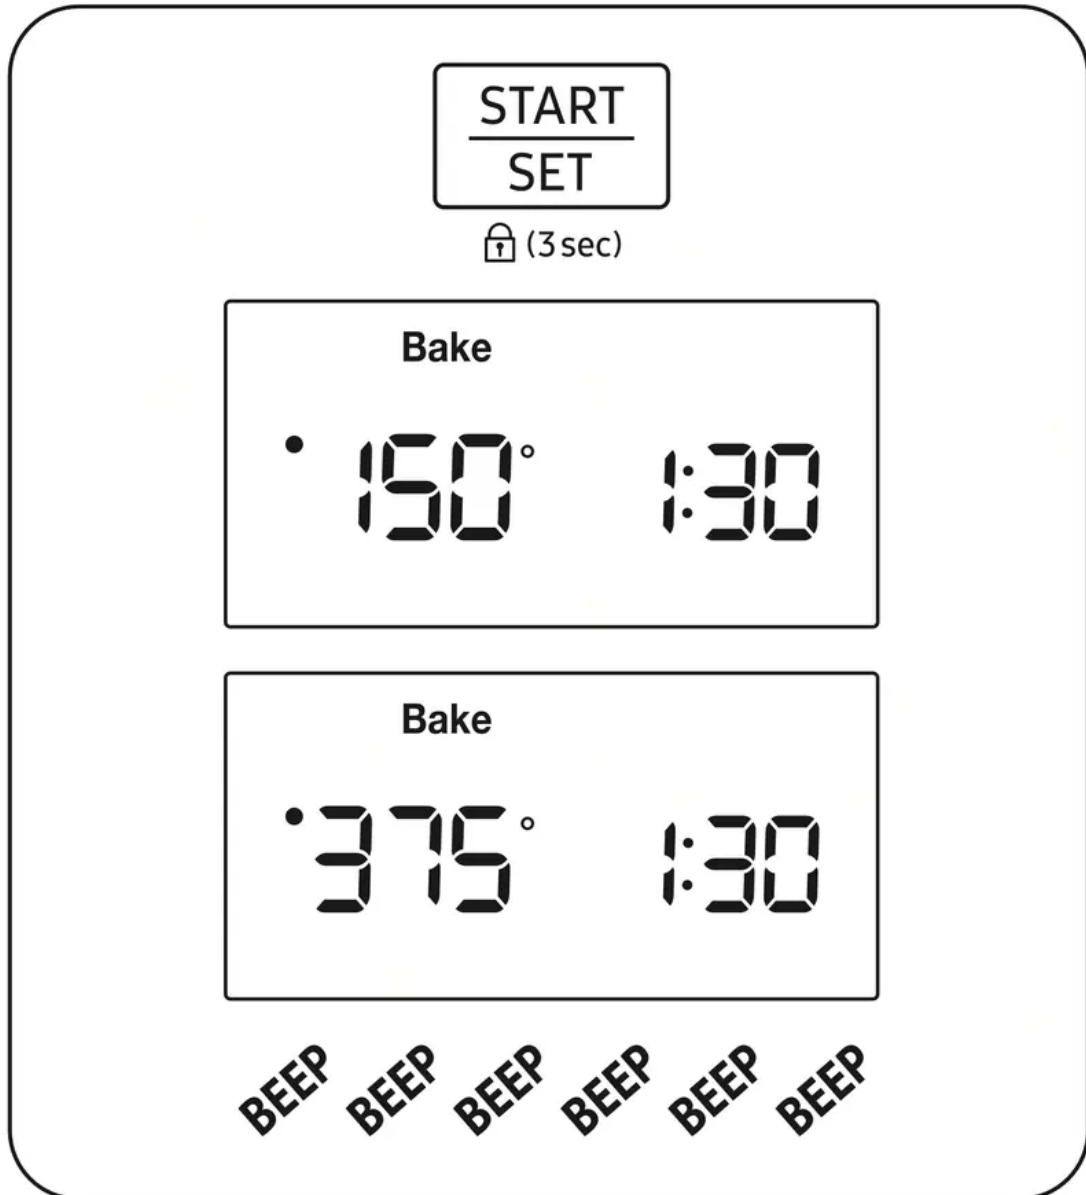

5. Place the food in the oven and close the oven door. Preheating is very important for good baking results.
6. When baking is complete, remove the item(s) from the oven, close the oven door, and press the OVEN OFF pad. The oven will shut off, and the display will show the time of

day.

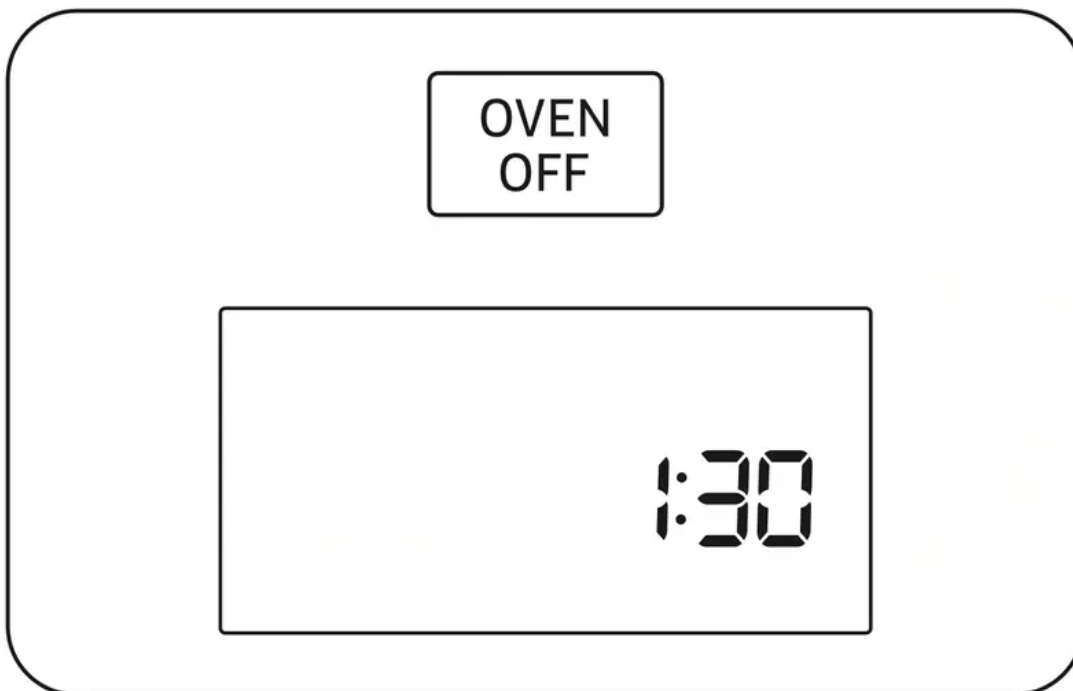


**To change a programmed baking temperature**, press the Bake pad, enter the new baking temperature, and then press the START/SET pad. If the oven temperature is higher than the new setting, the oven will beep 6 times, then show the new setting. The oven will complete cooking at the new temperature.


**If your baking results are not what you are used to, the preset oven cooking temperature can be adjusted  $\pm 30$  °F ( $\pm 17$  °C) as follows:**

1. Press and hold the **Bake** and 0 pads for 3 seconds.


The display will show **AdJ** and 0.

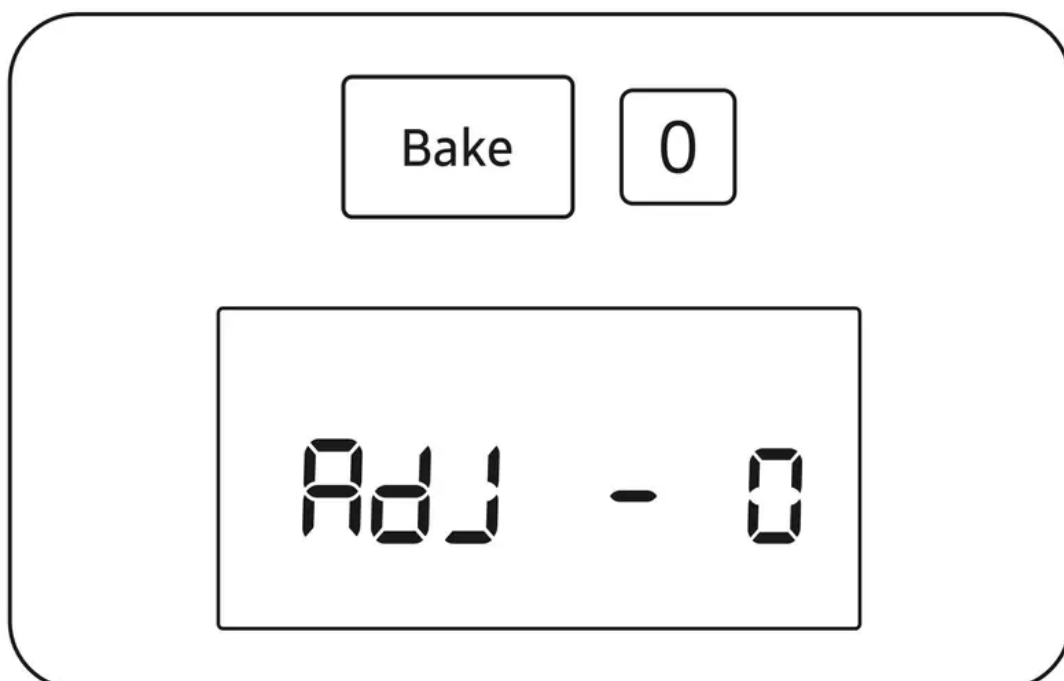

2. Press the Bake pad to toggle between + or – temperature adjustments.
3. Press the number pads for the desired temperature adjustment for example, (1, 0).  
The display will show AdJ and 10.

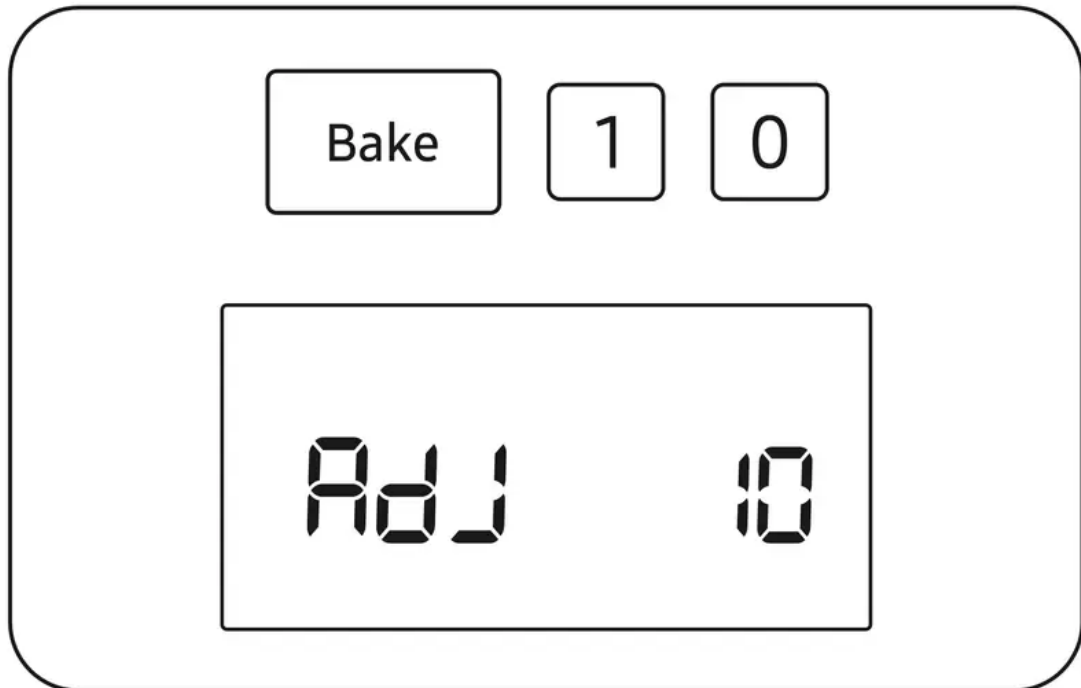

4. Press the START/SET pad.  
The oven will beep twice, and the display will show the time of day. The next time you bake, the oven will use the new temperature setting.

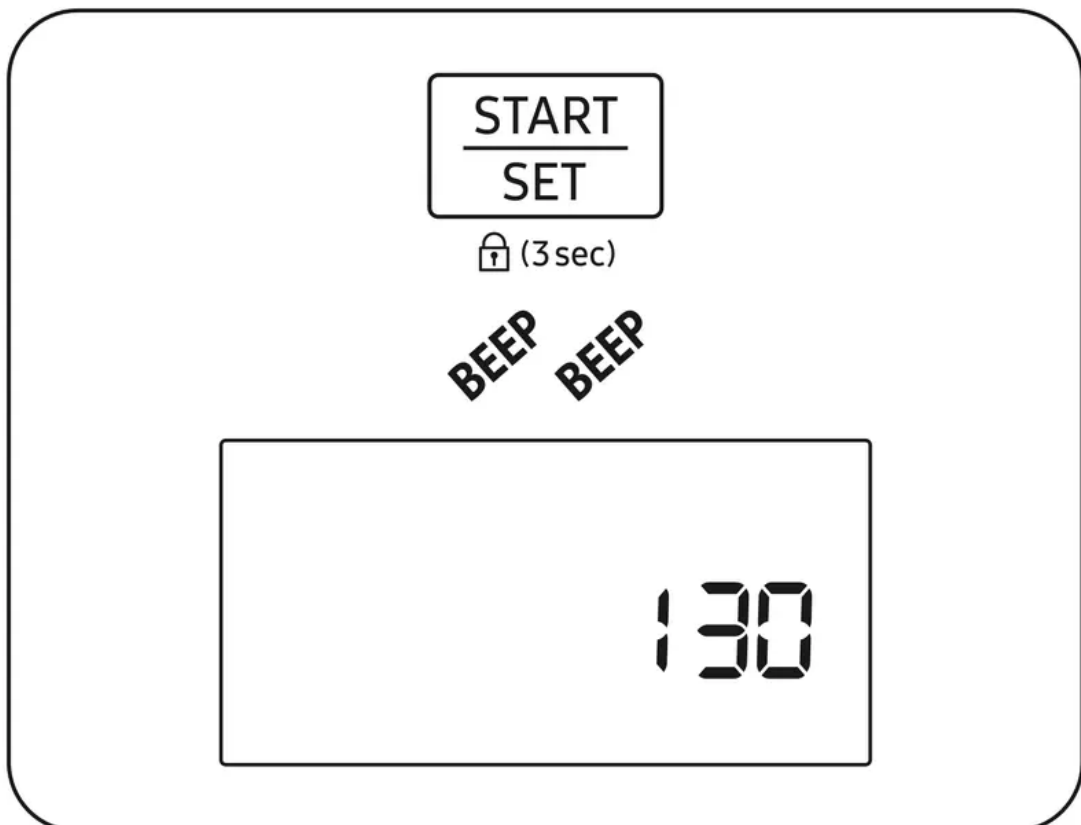

**NOTE:** This adjustment will not affect the broiling or the self-cleaning temperatures. The adjustment will be retained in memory after a power failure.

## Timed cooking

The Cook Time function lets you program the oven to cook food at a set temperature for a desired length of time. At the end of the set time, the oven will automatically shut off.

**CAUTION:** Use caution when using the Cook Time or Delay Start functions. These functions are best used when cooking cured or frozen meats and most fruits and vegetables. Foods that can easily spoil, like milk, eggs, fish, poultry, and meats, should be chilled in a refrigerator before they are placed in the oven. Even when chilled, they should not stand for more than 1 hour before cooking begins and should be removed promptly when cooking is completed. Eating spoiled food can result in sickness from food poisoning.

### How to set the oven for timed cooking


1. Position the oven rack in the desired location. Place the food in the oven and close the oven door.
2. Press the Bake pad.

The default temperature, 350°, will blink on the display.


If the default temperature is the desired cooking temperature, skip to step 4.



3. Press the number pads for the desired cooking temperature (for example, 3, 7, 5).  
The selected cooking temperature will blink on the display.

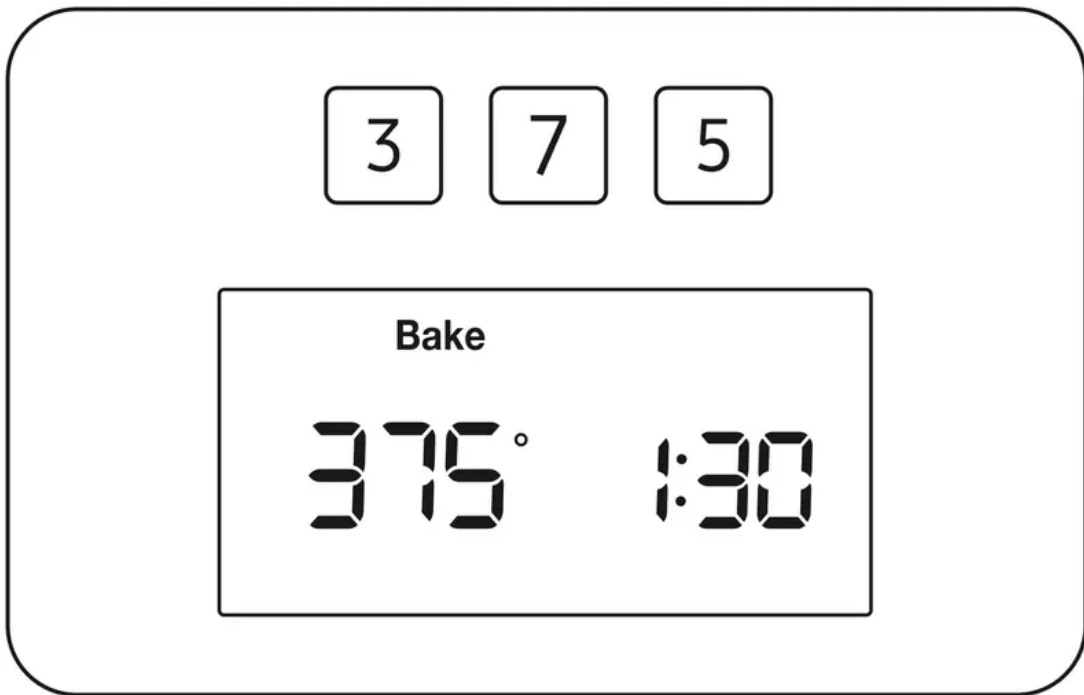

4. Press the Cook Time pad.  
The display will show - -.

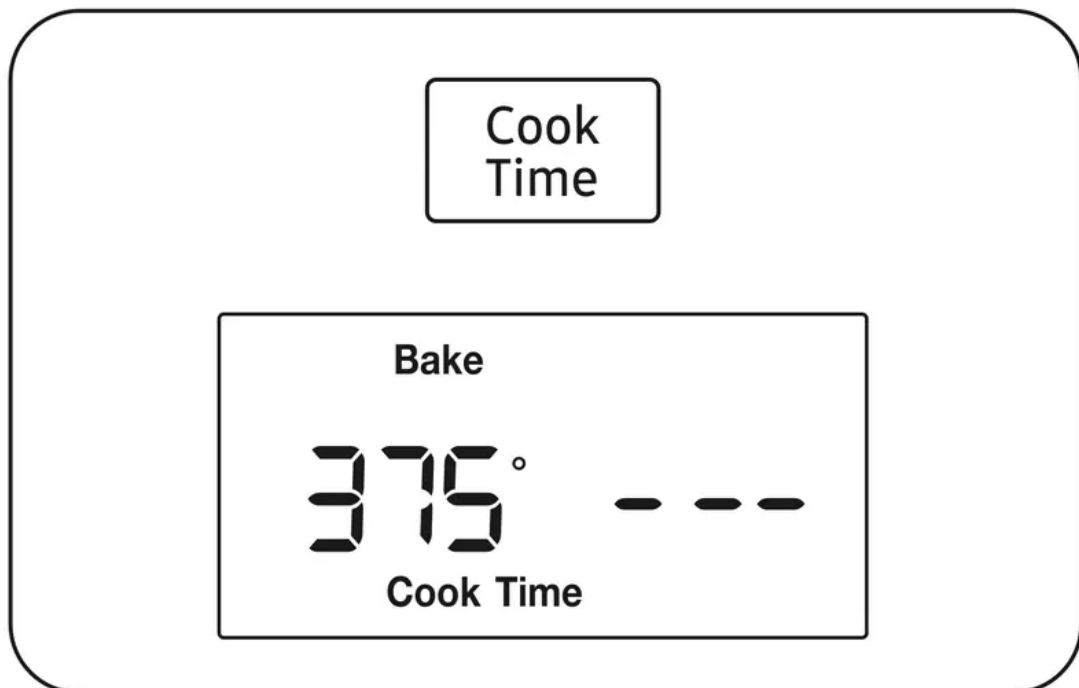

5. Press the number pads for the desired cooking time.  
The display will show the selected time.

You can set the time to any length between 1 minute and 9 hours and 99 minutes.




6. Press the START/SET pad.

The oven will automatically light and start preheating. The display will show a blinking •, along with default or selected temperature and Bake, until the oven reaches that temperature.

When the oven reaches the desired temperature, it will beep 6 times. The oven will start cooking for the set amount of time, and the remaining cooking time will be displayed.

To see the time of day, press and hold the Clock pad. When the Clock pad is released, the display will go back to the remaining cooking time. When the cooking time has

elapsed, the oven will automatically shut off and the display will show the time of day.

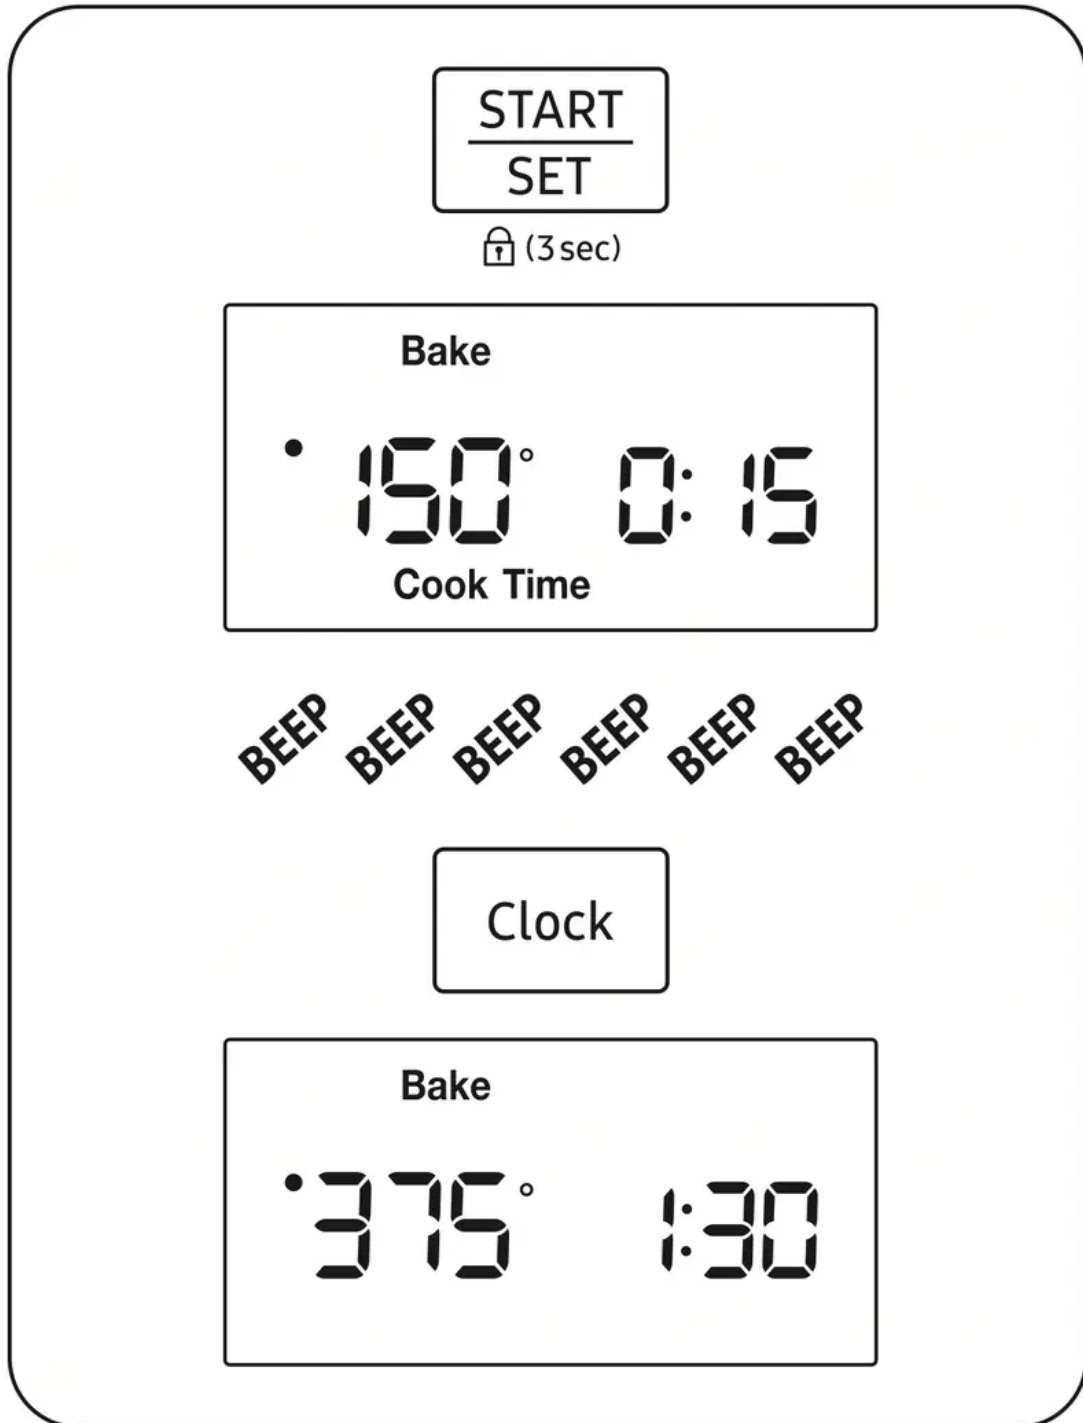

**To change a programmed baking temperature,** press the Bake pad, enter the new baking temperature, and press the START/SET pad. If the oven temperature is above the new setting, the oven will beep 6 times, then show the new setting. The oven will complete cooking at the new temperature.

**To change a programmed cooking time,** press the Cook Time pad, enter the new cooking time, and then press the START/SET pad. The oven will continue cooking for the remaining new set time.

**NOTE:** Place food in the oven after preheating if the recipe calls for it. Preheating is important for good baking results. After the oven has reached the desired cooking temperature, it will beep 6 times.

## Delay timed cooking

The Delay Start function lets you use the kitchen timer to automatically start and stop another cooking program (Bake). Delay Start can be set before other cooking operations for up to 12 hours. The clock must be set to the correct time of day for Delay Start to work properly.

**CAUTION:** Use caution when using the Cook Time or Delay Start functions. These functions are best used when cooking cured or frozen meats and most fruits and vegetables. Foods that can easily spoil, like milk, eggs, fish, poultry, and meats, should be chilled in a refrigerator before they are placed in the oven. Even when chilled, they should not stand for more than 1 hour before cooking begins and should be removed promptly when cooking is completed. Eating spoiled food can result in sickness from food poisoning.

### How to set the oven for delay timed cooking

1. Position the oven rack in the desired location. Place the food in the oven and close the oven door.
2. Press the pad for the desired cooking operation, e.g., Bake.


The default temperature, 350° will blink on the display. If the default temperature is the desired cooking temperature, skip to step 4.



3. Press the number pads for the desired cooking temperature (for example, 3, 7, 5).  
The selected cooking temperature will blink on the display.



4. Press the Cook Time pad.  
The display will show the selected cooking temperature, Bake, and ---.

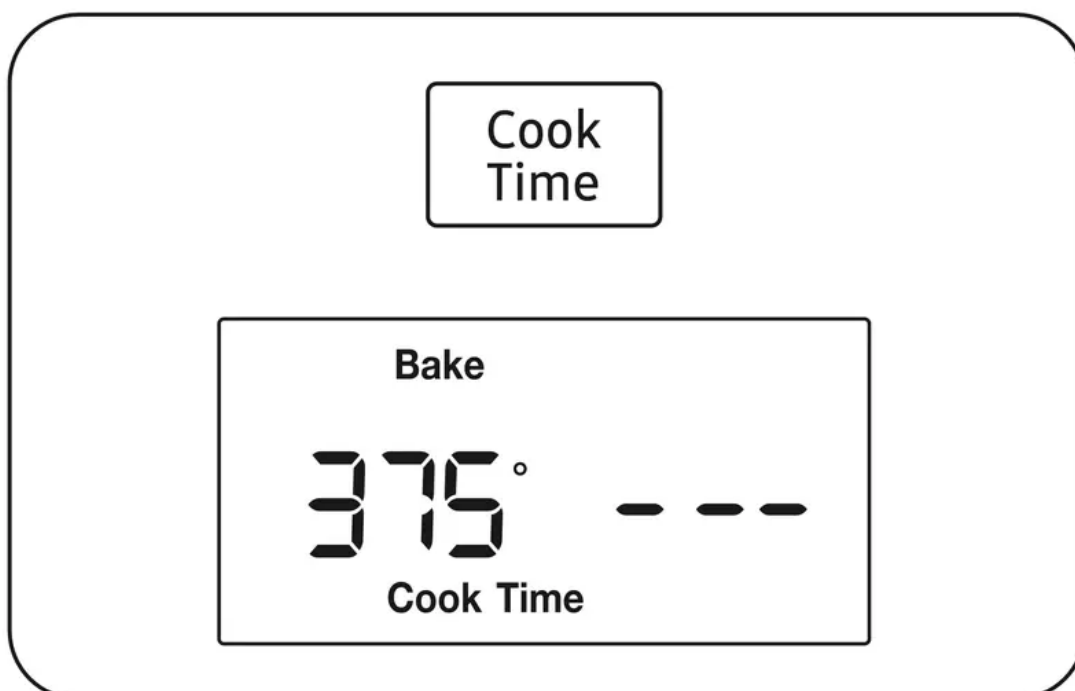


5. Press the number pads for the desired cooking time.  
The display will show the selected cooking time. You can set the time to any amount of

time between 1 minute and 9 hours and 99 minutes.



6. Press the Delay Start pad.

The display will show Delay, and -- -will blink.

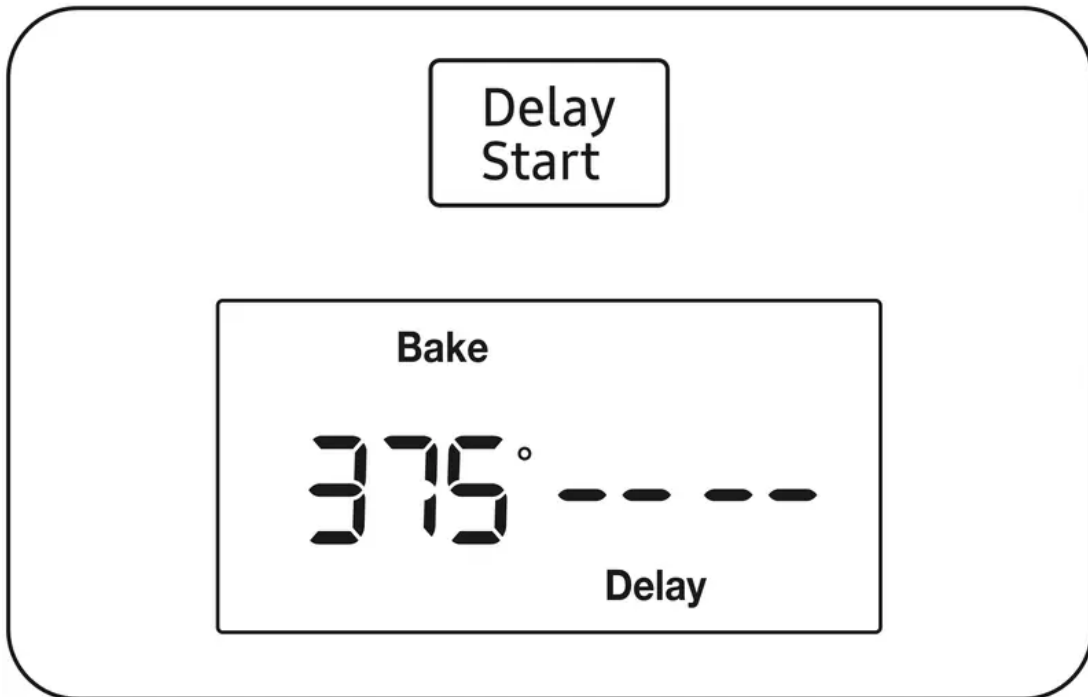

7. Press the number pads for the time you want the oven to turn on (for example, 4, 3, 0).




8. Press the START/SET pad.

The oven will automatically turn on and beep when the set start time is reached. The oven will automatically light and start preheating. When the oven reaches the desired cooking temperature, it will beep 6 times.

The display will count down the set cooking time.

When the cooking time has elapsed, the oven will automatically shut off and the display

will show the time of day.

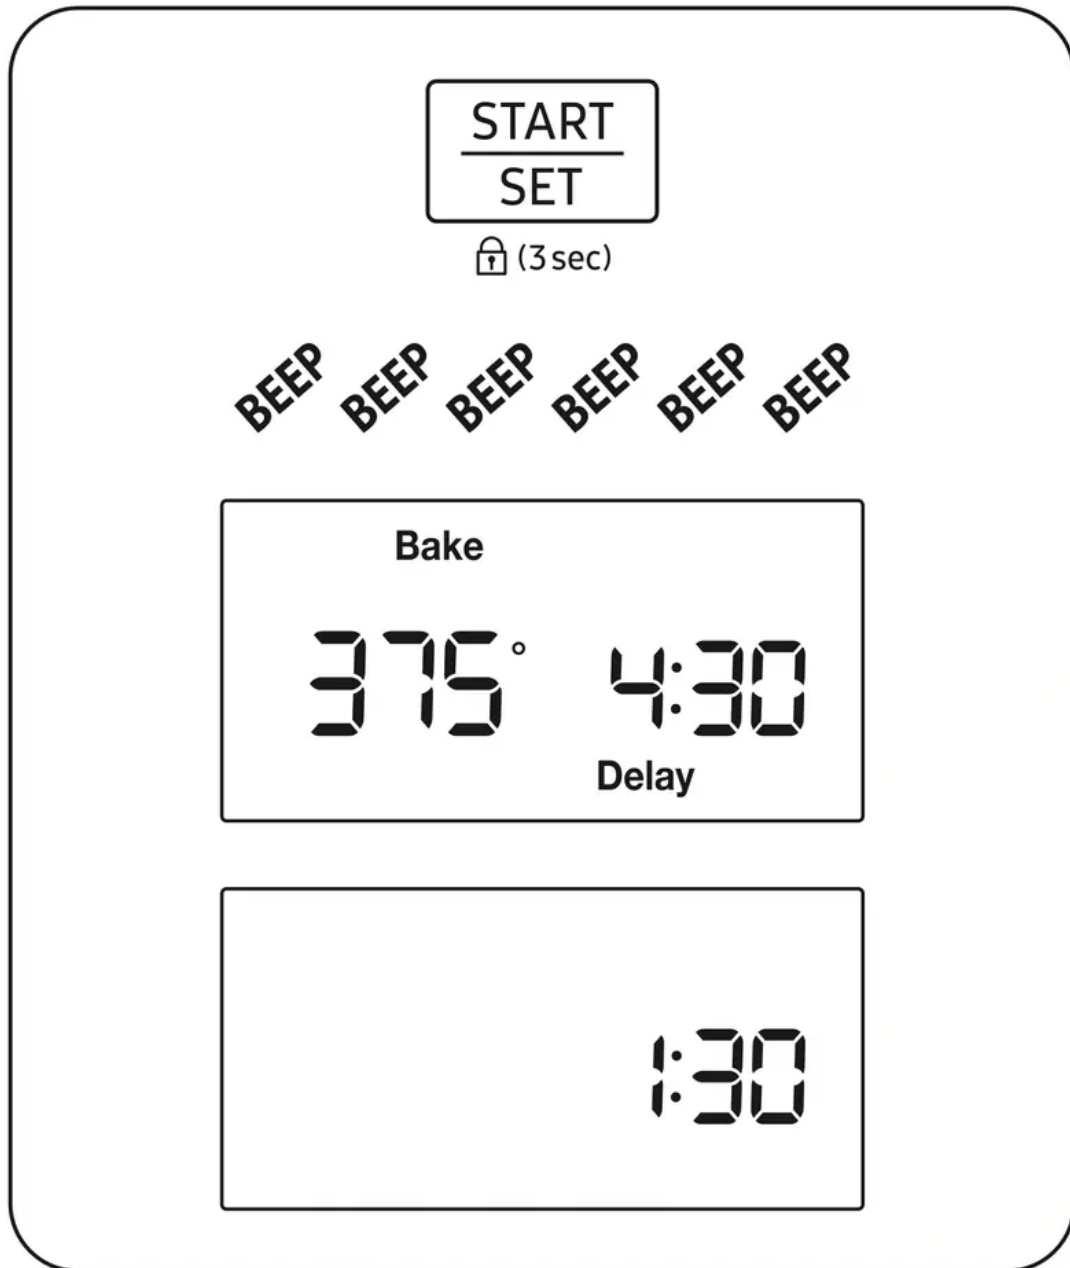

**To change a programmed starting time,** press the Delay Start pad, enter the new starting time, and then press the START/SET pad. The oven will start cooking at the new start time.

**To change a programmed baking temperature,** press the Bake pad, enter the new baking temperature, and then press the START/SET pad. If the oven temperature is above the new setting, the oven will beep 6 times, then show the new setting. The oven will complete cooking at the new temperature.

**To change a programmed cooking time,** press the Cook Time pad, enter the new cooking time, and then press the START/SET pad. The oven will continue cooking for the remaining new set time.

**NOTE:** Place food in the oven after preheating if the recipe calls for it. Preheating is important for good baking results. After the oven has reached the desired cooking temperature, it will beep 6 times.


## Broiling

The Broil function allows you to cook and brown foods using only a top heat source. The oven door must remain closed during broiling. The meat or fish should always be placed on a broiling grid in a broiling pan.

**CAUTION:** If a fire occurs during broiling, leave the oven door closed and turn off the oven. If the fire continues, throw baking soda on the fire or use a foam-type fire extinguisher. Do not put water or flour on the fire. Flour may explode and water can cause a grease fire to spread. Both can cause personal injury and/or property damage.

### How to set the oven for broiling


1. Place the food on a broiling pan with insert grid. Place the food and pan on the top oven rack, positioned as recommended in the Recommended broiling guide on page 37. Close the oven door.
2. Press the Broil pad once for Hi and twice for Lo. The oven will beep every time a pad is pressed.  
Use Lo to cook foods such as poultry or thick cuts of meat thoroughly without overbrowning them.

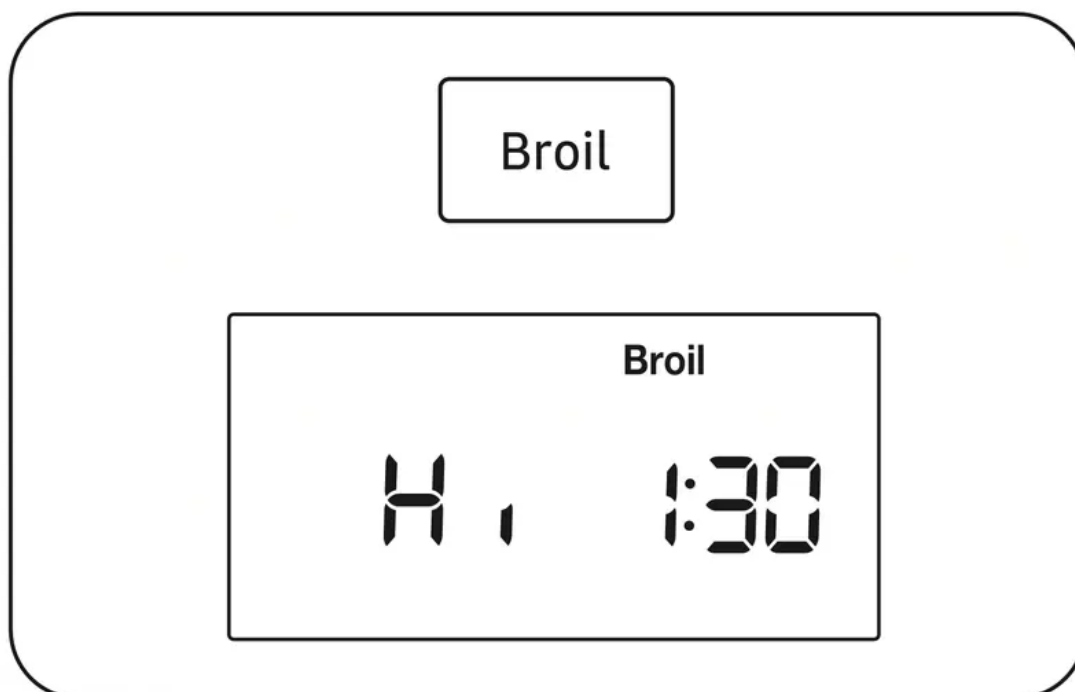

3. Press the START/SET pad.  
The oven will automatically light the top oven burner and start cooking.  
The display will show the selected broil setting (Hi or Lo) and Broil.  
Broil on one side until food is browned; turn and cook on the other side.

When cooking is completed, press the OVEN OFF pad to shut off the oven or to cancel broiling at any time.

The display will show the time of day.

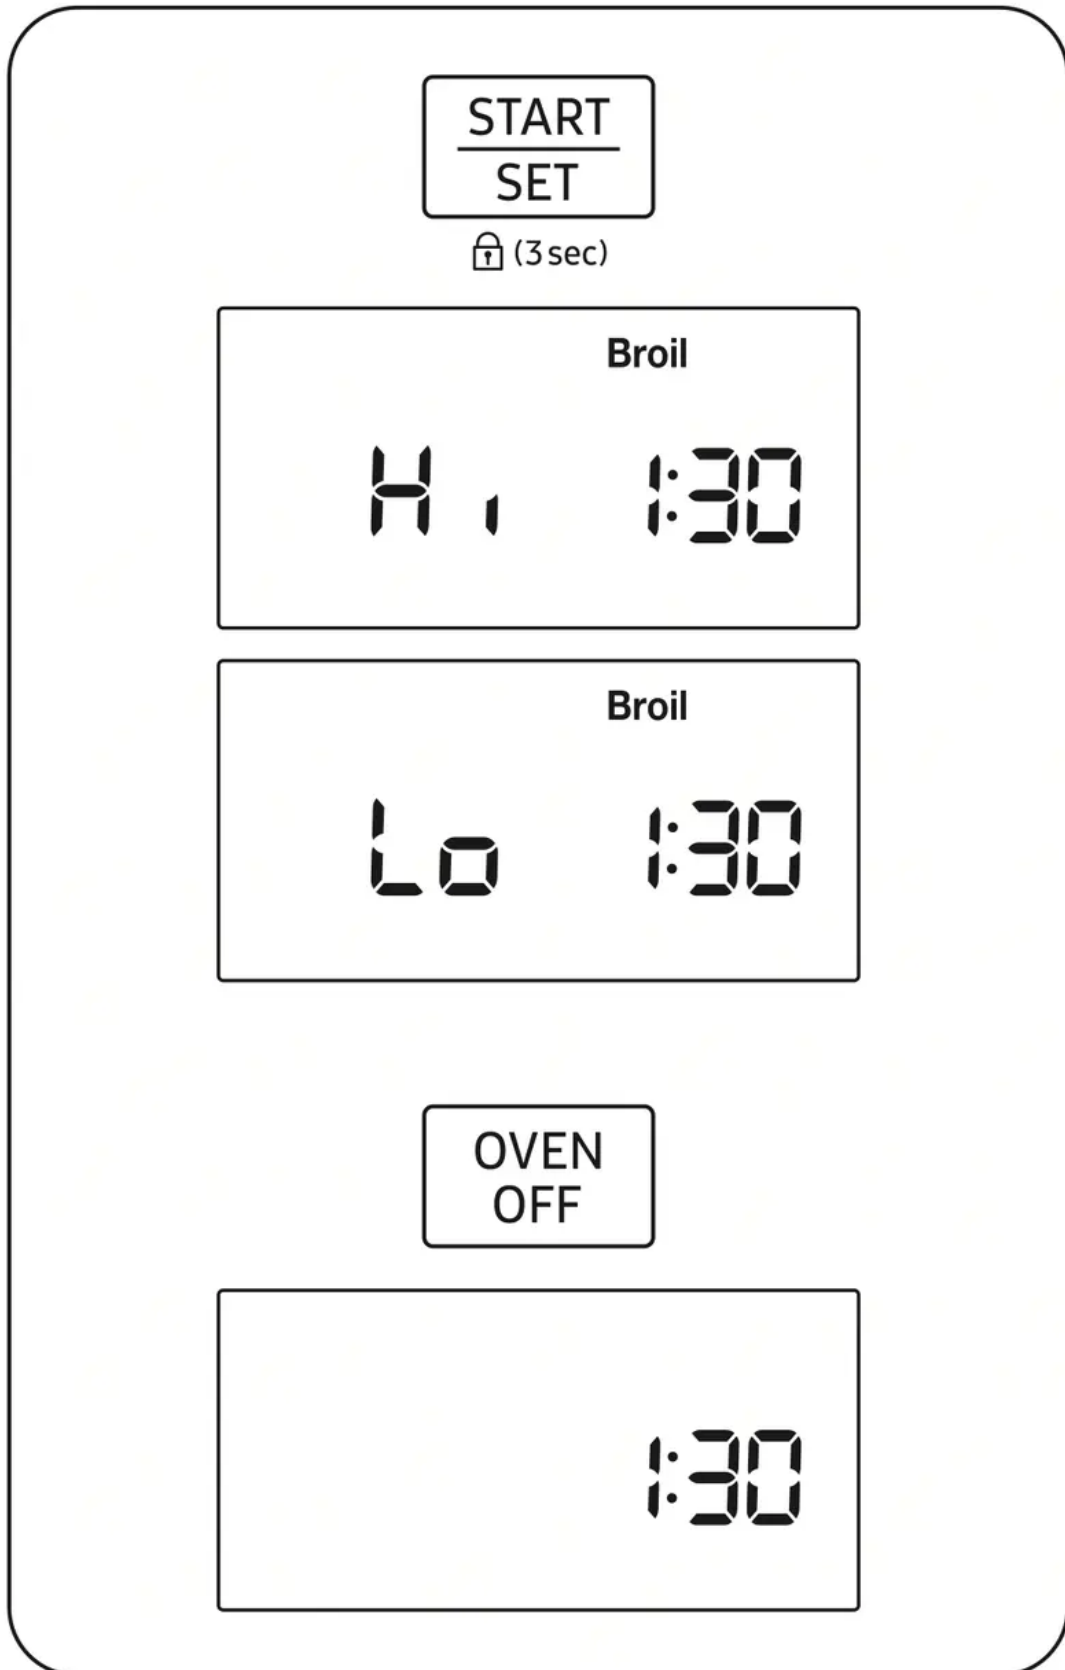

**To change a programmed broiling setting**, press the Broil pad to toggle the setting between Hi and Lo. Pressing the START/SET pad will change the broil setting and complete cooking at the new temperature.

**Recommended broiling guide**

The size, weight, thickness, broiling temperature setting, and your preference of doneness will affect the broiling time. The following guide is based on meats and/ or fish starting at refrigerator temperature.

Food	Quantity and/or Thickness	Rack position*	1st side time (min.)	2nd side time (min.)	Comments
Ground Beef	1 lb (4 patties) 0.5- to 0.75" thick	6 or 7	7-10	5-7	Space evenly. Up to 8 patties may be broiled at once.
Well Done					
Beef Steaks	1" thick 1 to 1.5 lbs	6	10-12	5-7	Steaks less than 1" thick cook through before browning. Pan frying is recommended. Slash fat.
Medium					
Well Done		6	12-14	6-8	
Medium		6	15-18	14-17	
Well Done	1.5" thick 2 to 2.5 lbs	6	18-22	17-19	
Chicken	1 whole cut-up 2 to 2.5 lbs Split lengthwise	4	30-35	15-20	Broil skin-side-down first. Spread open. Brush with melted butter before and halfway through broiling.
	2 breasts	5	15-20	7-12	



Food	Quantity and/or Thickness	Rack position*	1st side time (min.)	2nd side time (min.)	Comments
Fish Fillets	0.25- to 0.5" thick	6	6-10	3-4	Handle and turn very carefully. Brush with lemon butter before and during cooking, if desired.
Ham Slices (precooked)	0.5" thick	6	7-10	5-6	Increase time 5 to 10 minutes per side for 1.5" thick or home-cured ham.
Pork Chops					
Well Done	2 (0.5" thick)	6	8-11	4-6	Slash fat.
Lamb Chops					
Medium	2 (1" thick)	6	8-12	5-8	
Well Done	about 10 to 12 oz	6	10-16	7-11	Slash fat.

**NOTE:** \* See illustration on page 29 for description of rack positions.


## Keep warm

The Keep Warm function allows you to keep cooked foods warm at a low baking temperature. The Keep Warm feature keeps cooked food warm for serving up to 3 hours after cooking has finished. After 3 hours, the feature automatically shuts off the oven.

### How to use the Keep Warm feature

1. Position the oven rack in the desired location. Place the food in the oven and close the oven door.


2. Press the Keep Warm pad.

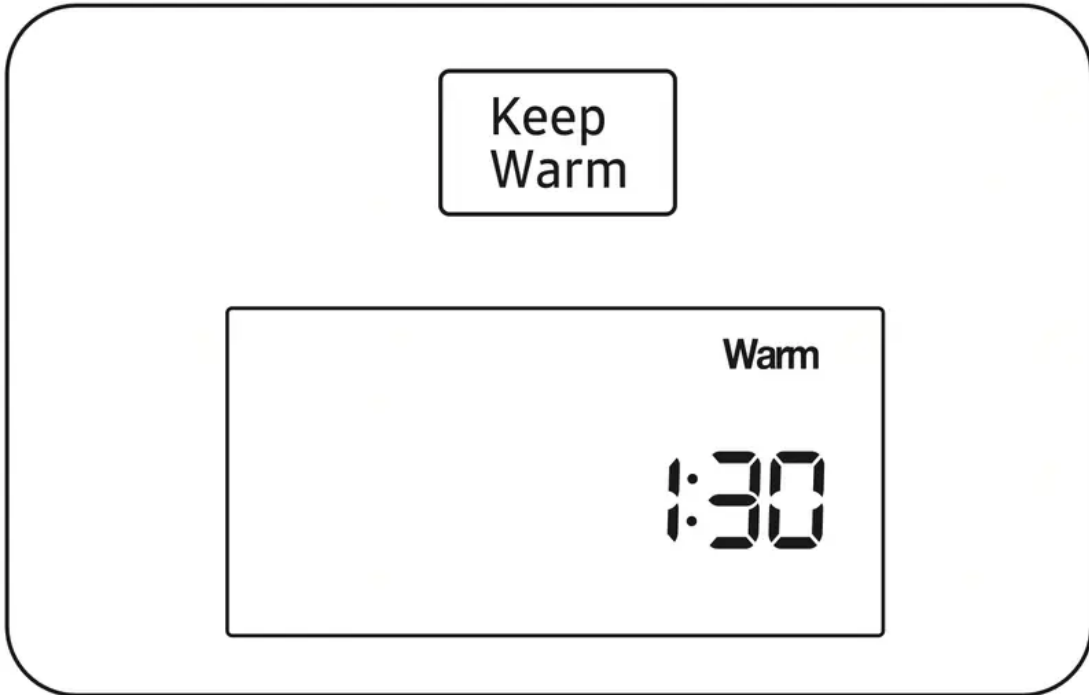

3. Press the START/SET pad.

The oven will automatically light and start preheating to the Keep Warm temperature (approx. 170 °F [77 °C]). The display will show Warm and the time of day.

When warming is completed, press the OVEN OFF pad to shut off the oven or to cancel Keep Warm at any time. The display will show the time of day.

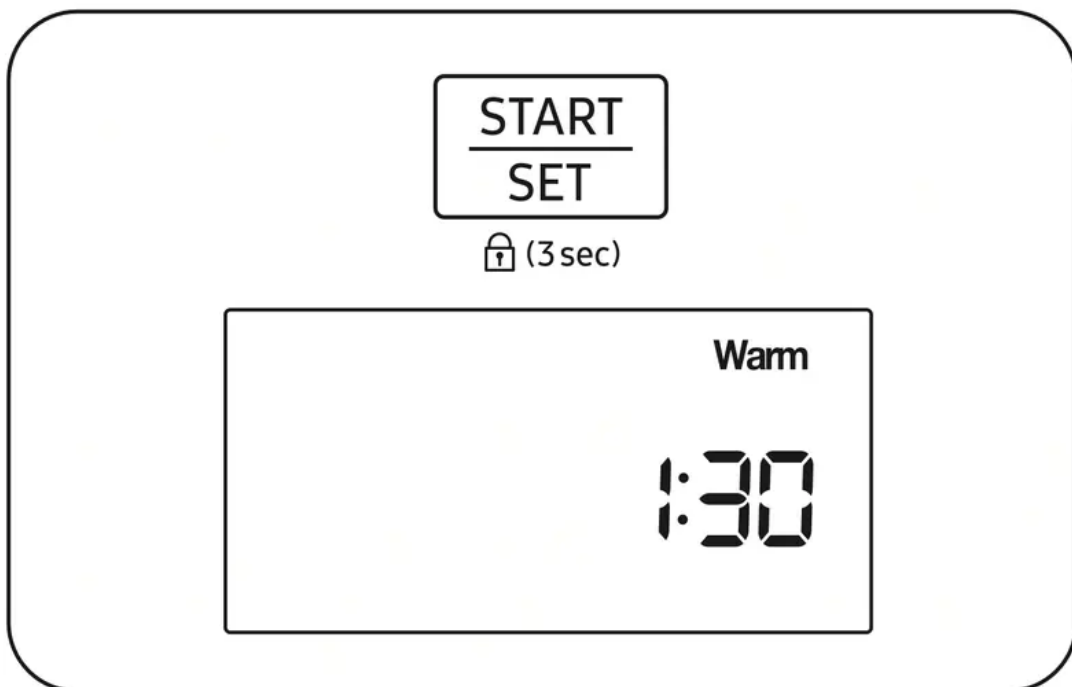

**To program Keep Warm after a timed cooking function**, press the Keep Warm pad after you program the timed cooking function. When Time Cook is complete, the oven will beep 6 times and

lower the oven temperature to the Keep Warm setting. The oven will maintain that temperature until Keep Warm is canceled.


## Using the Easy Cook feature

### Pizza


This pizza function is designed to produce a crisp and browned bottom while keeping the topping moist.

#### How to set the Pizza function

1. Press the Pizza pad.

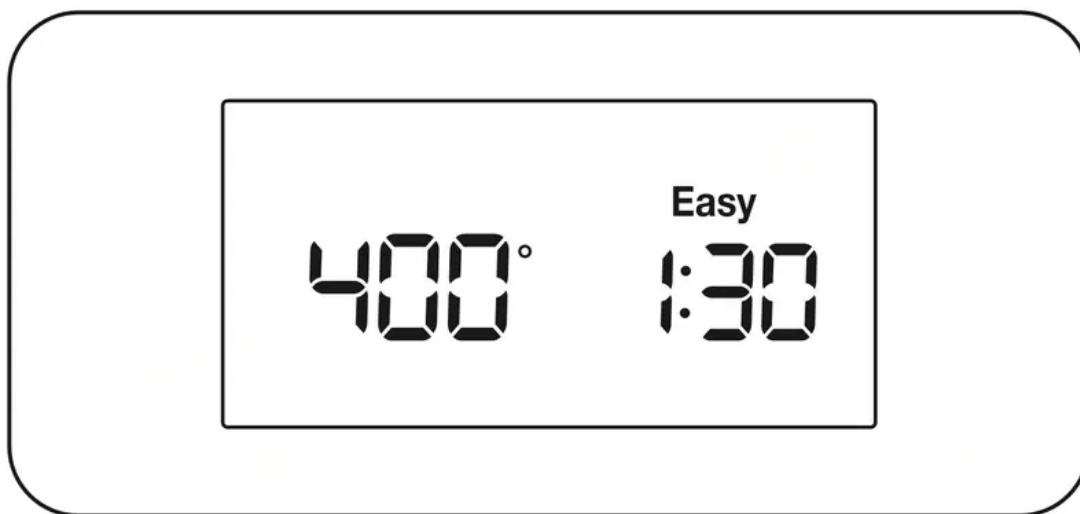

2. Press the START/SET pad to begin pizza cooking.

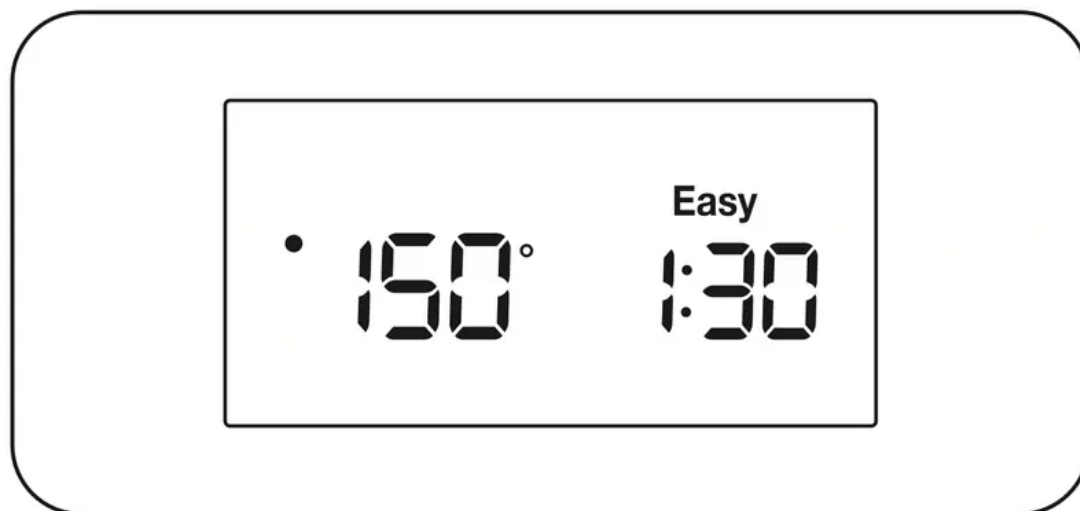

#### NOTE

- Use only 1 rack and place the rack in position 3 or 4 for the best results when using the pizza feature.
- The default temperature is 400 °F. You may adjust the oven temperature to fit your needs.


- Follow the package instructions for preheating and baking time.

### Chicken Nuggets


Use this function is to cook convenience style frozen chicken nuggets.

#### How to set the Chicken Nuggets function

1. Press the Chicken Nuggets pad once for Hi or twice for Lo. Use Lo to cook thick style foods.

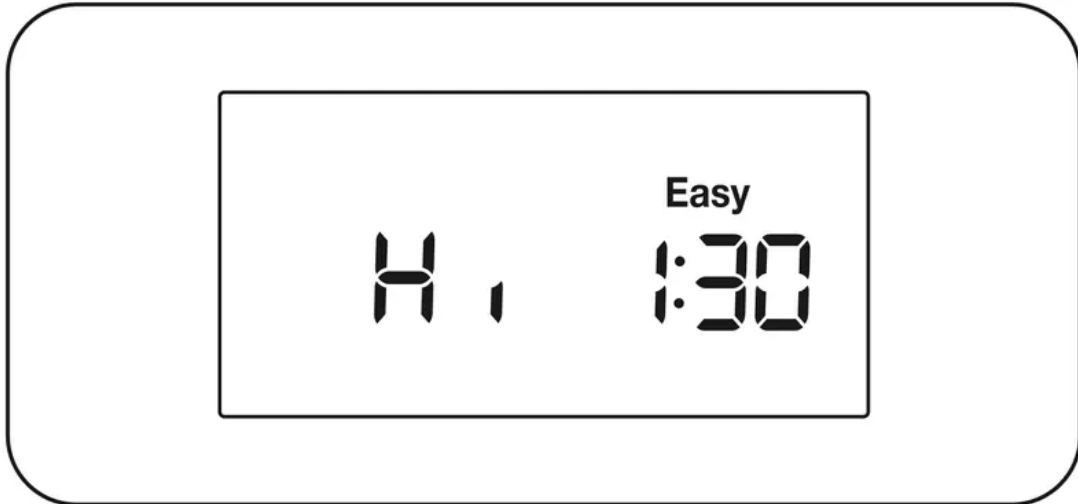

2. Press the START/SET pad to begin chicken nuggets cooking.

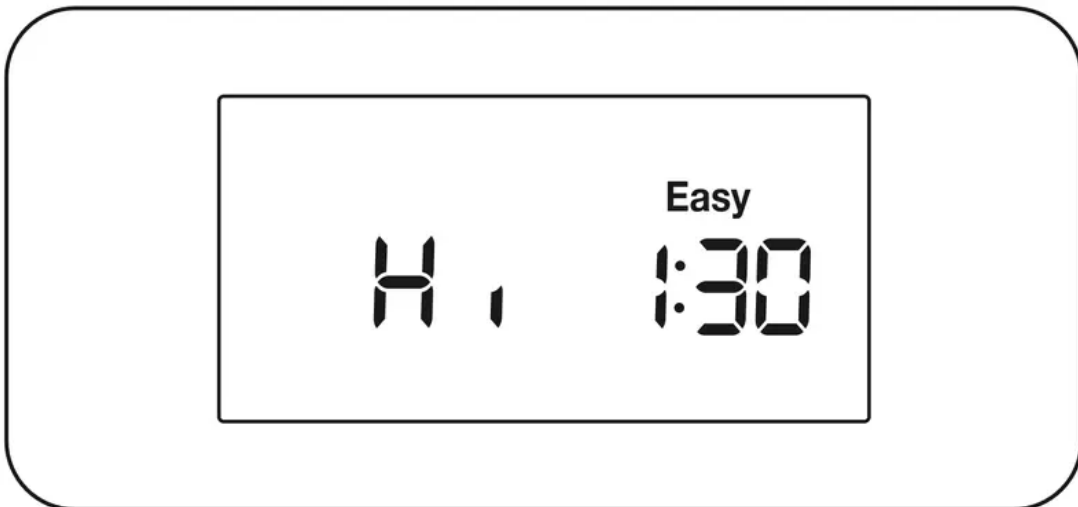

#### NOTE


- When using this function, place the oven rack in position 5 of 6 for the best result.
- Preheating the oven will not be necessary.

### Bread Proof


The proofing feature maintains a warm environment useful for rising yeastleavened products.

## How to set the oven for proofing

1. Enter the proofing mode.  
Press the Bread Proof pad.

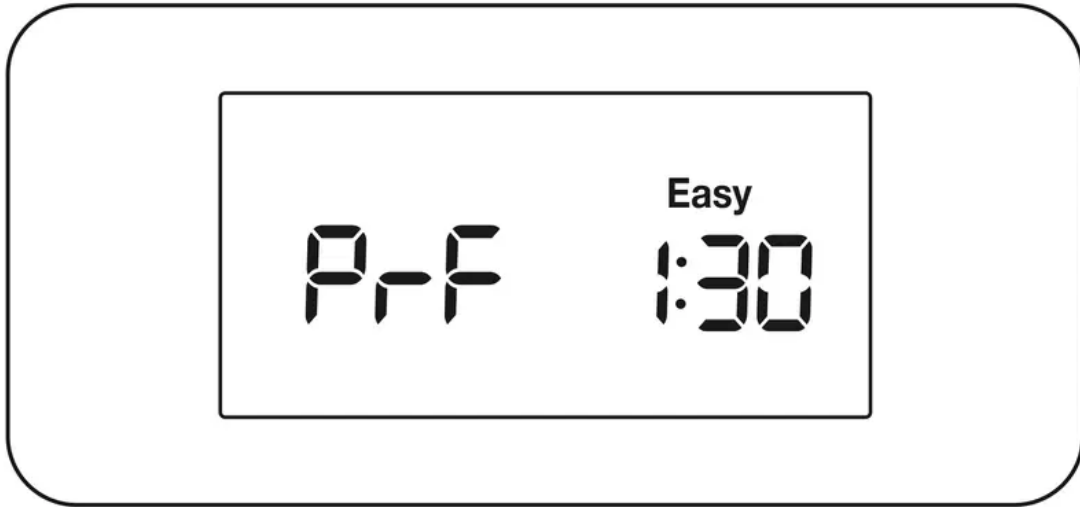

2. Start the proofing function. Press the START/SET pad. The proofing feature automatically provides the optimum temperature for the proof process, and therefore does not have a temperature adjustment.
3. Press the OVEN OFF pad at any time to turn off the proofing feature.

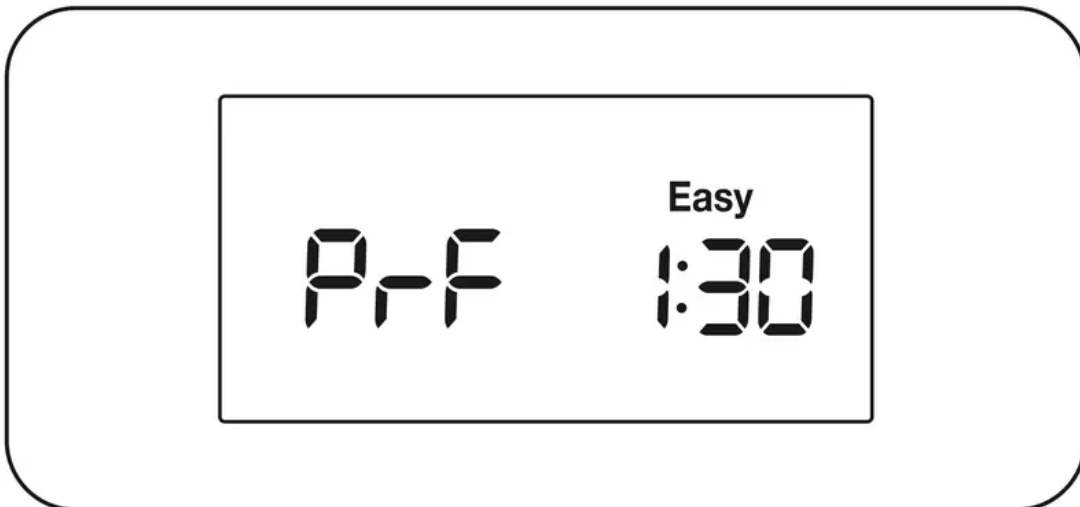

**NOTE:** If you press the Bread Proof pad when the oven temperature is above 100°F, Hot will appear in the display. Because these functions produce the best results when started while the oven is cool, we recommend that you wait until the oven has cooled down and Hot disappears from the display.

- To avoid lowering the oven temperature and lengthening proofing time, do not open the oven door unnecessarily.
- Check bread products early to avoid over-proofing.

- Do not use the proofing mode for warming food or keeping food hot.  
The proofing oven temperature is not hot enough to hold foods at safe temperatures.  
Use the warm feature.
- For best results, place the dough in a dish in the oven on rack 3 or 4 and cover the dough with a cloth or with plastic wrap. (The plastic may need to be anchored underneath the container so the oven fan will not blow it off).

## Favorite cooking

The Favorite Cook function allows you to preprogram up to 3 different cooking functions or favorite recipe settings so they can be recalled and started at a press of a button.

You can use only Bake as a favorite cook selection. You can not use any Delay Start functions as a favorite cook selection.

### How to set a favorite cook selection

1. Press the pad for the cooking operation you want to store, e.g., Bake. The oven will beep every time a pad is pressed. The default temperature 350° will blink on the display. If the default temperature is the desired cooking temperature, skip to step 3.



2. Press the number pads for the desired cooking temperature (for example, 3, 7, 5).  
The selected cooking temperature will blink on the display.




3. Press the Favorite Cook pad the number of times that corresponds to where you want to store the operation and temperature:  
1 time for recipe 1,  
2 times for recipe 2,  
3 times for recipe 3.  
The corresponding number and the setting will show in the display, and the Fav. will blink under the selected Favorite Cook setting for that recipe.



4. Press the START/SET pad.

The display will show the last set or used Favorite Cook temperature setting and the current time of day.

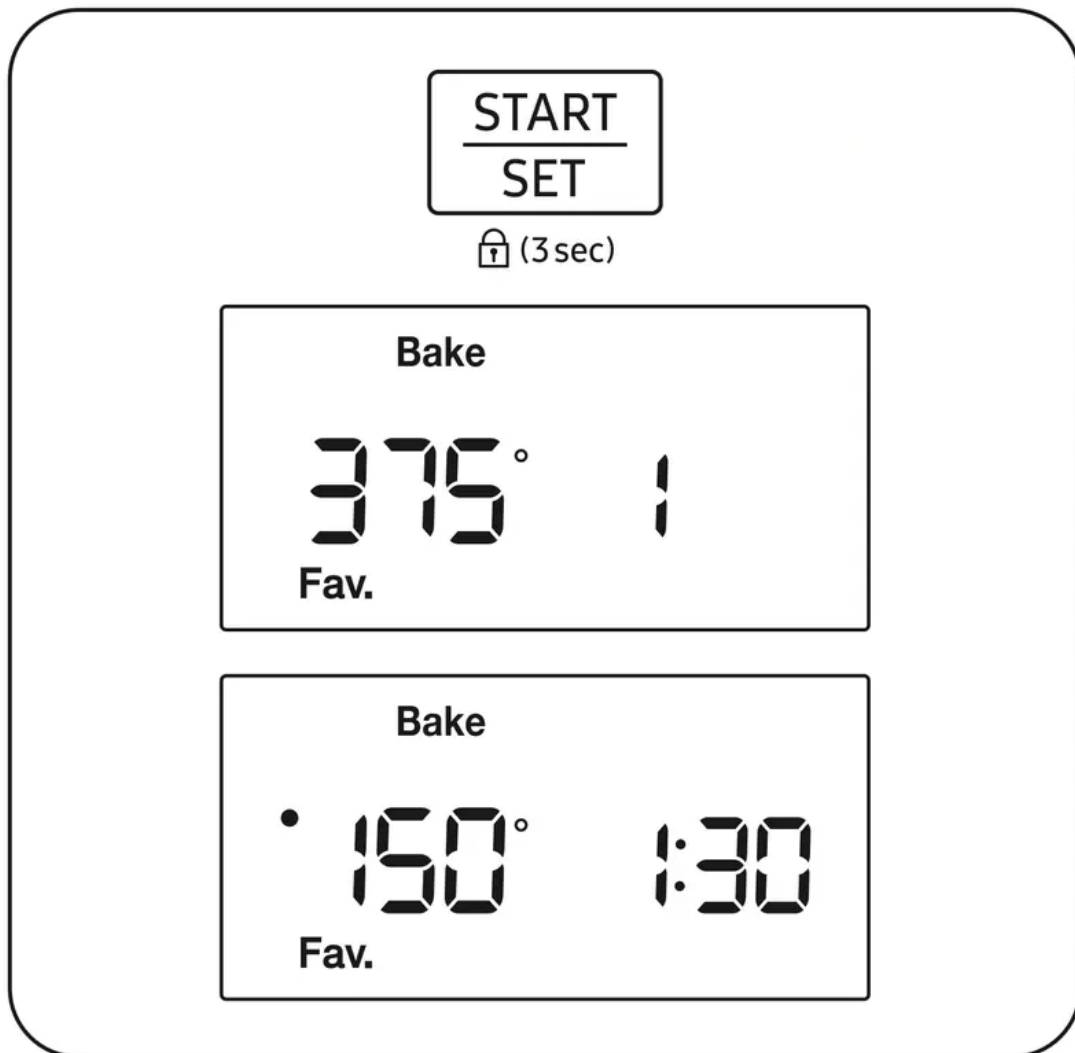


**NOTE:** Press the START/SET pad once to save the Favorite Cook setting or twice to save and start Favorite Cook at the selected setting.

#### **How to use or recall a favorite cook selection**

1. Position the oven rack in the desired location.
2. Press the Favorite Cook pad the number of times that corresponds to where the recipe setting is stored:
  - 1 time for recipe 1,
  - 2 times for recipe 2,
  - 3 times for recipe 3.

The Fav. will blink under the selected Favorite Cook setting for that recipe on the display.

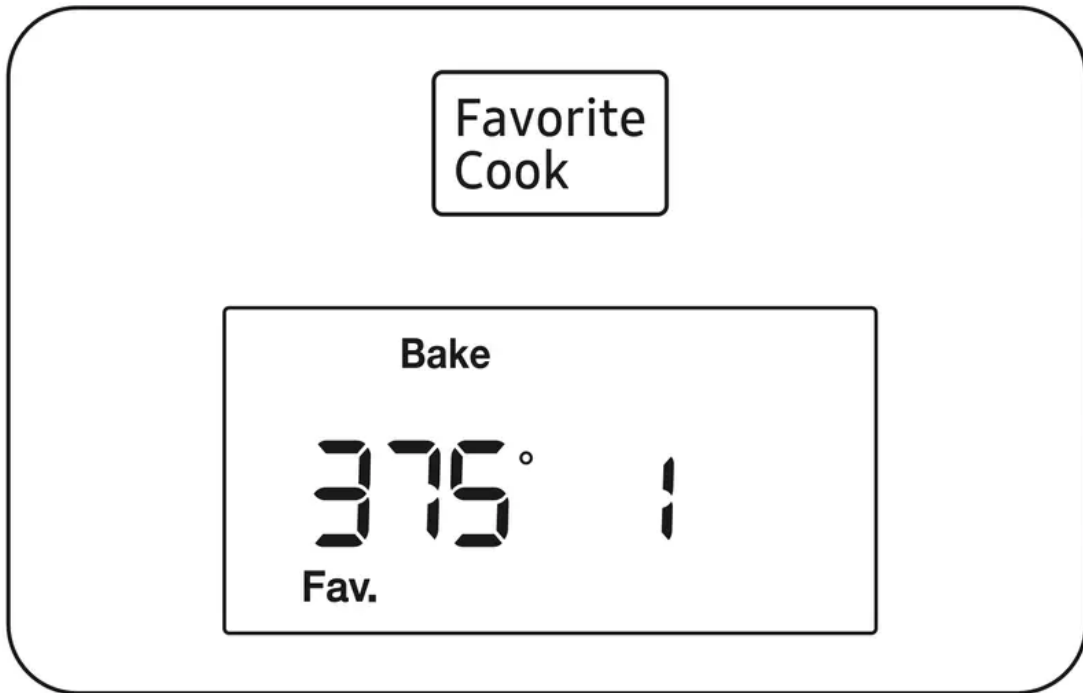


3. Press the START/SET pad.

A • will blink to the left of the default or actual temperature until the selected temperature is reached.


The oven will beep 6 times. The default or actual temperature, the cooking function, and the time of day will be displayed.

When the oven reaches the desired cooking temperature, it will beep 6 times.

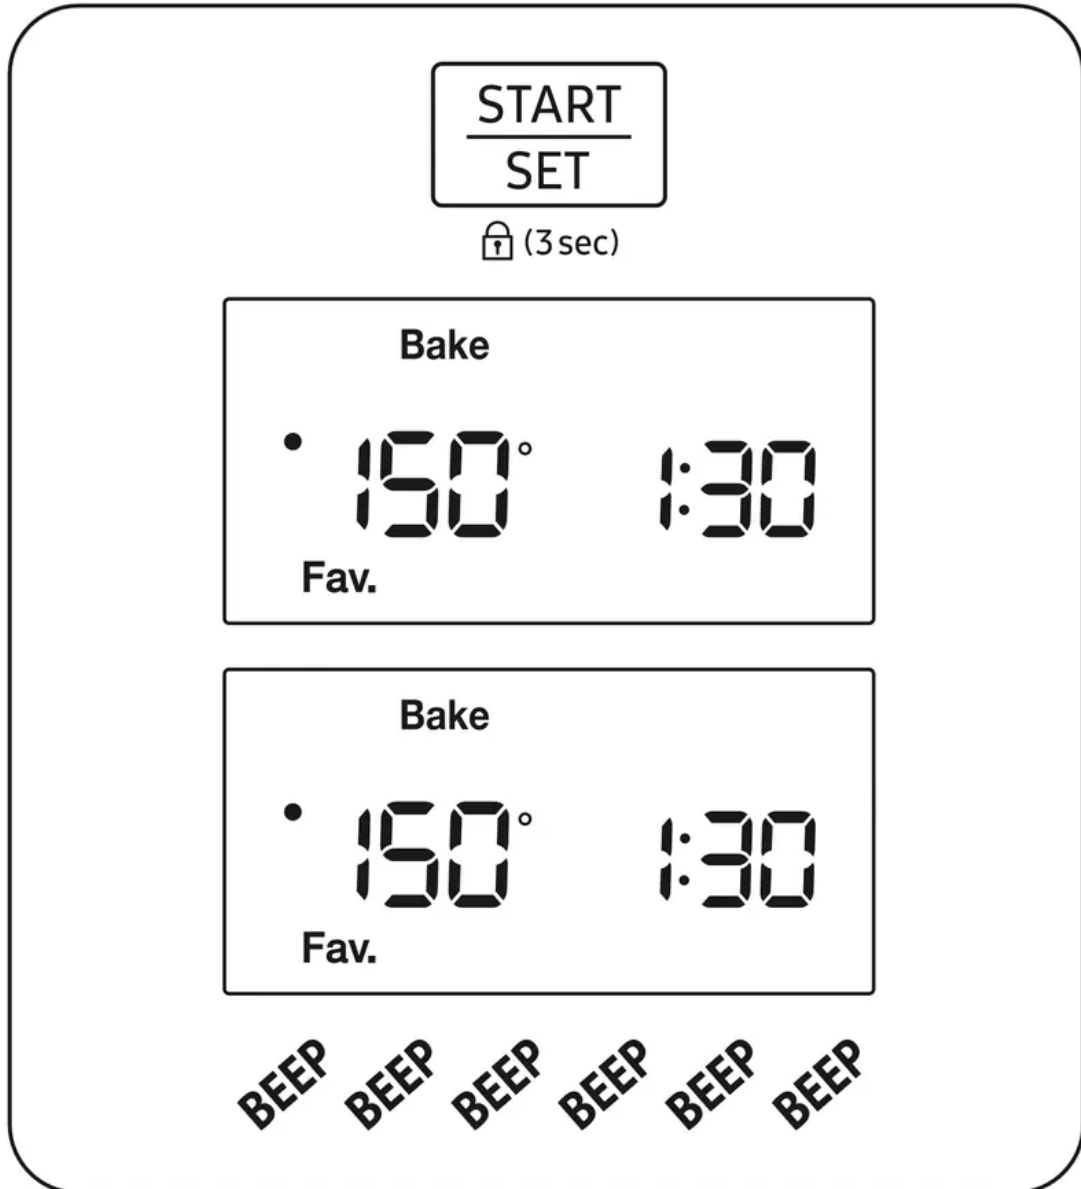

4. Place the food in the oven and close the oven door.  
Preheating is very important for good baking or roasting results.
5. When cooking is complete, remove the item(s) from the oven, close the oven door, and press the OVEN OFF pad.

The oven will shut off and the display will show the time of day.

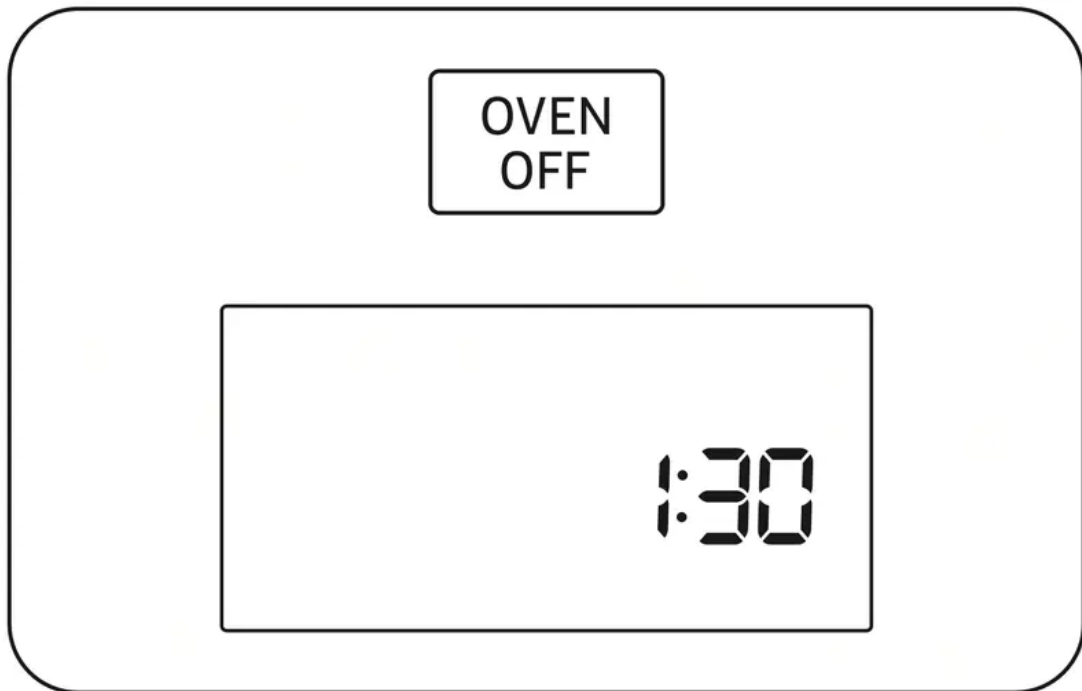

### **Sabbath function**


(For use on the Jewish Sabbath and Holidays) The Sabbath function can only be used with the Bake and Cook Time settings. The oven will operate at the set temperature and stay on until the Sabbath function is cancelled or the set Cook Time has elapsed. When Sabbath is selected, it overrides the preset factory energy-saving features. All display lighting, oven signals, and most control pads, will be deactivated.

#### **How to set the Sabbath function**

1. Position the oven rack in the desired location. See page 29.
2. Press the Bake pad. The oven will beep every time a pad is pressed until the Sabbath function is activated.

The default temperature, 350°, will blink on the display.


If the default temperature is the desired cooking temperature, skip to step 4.

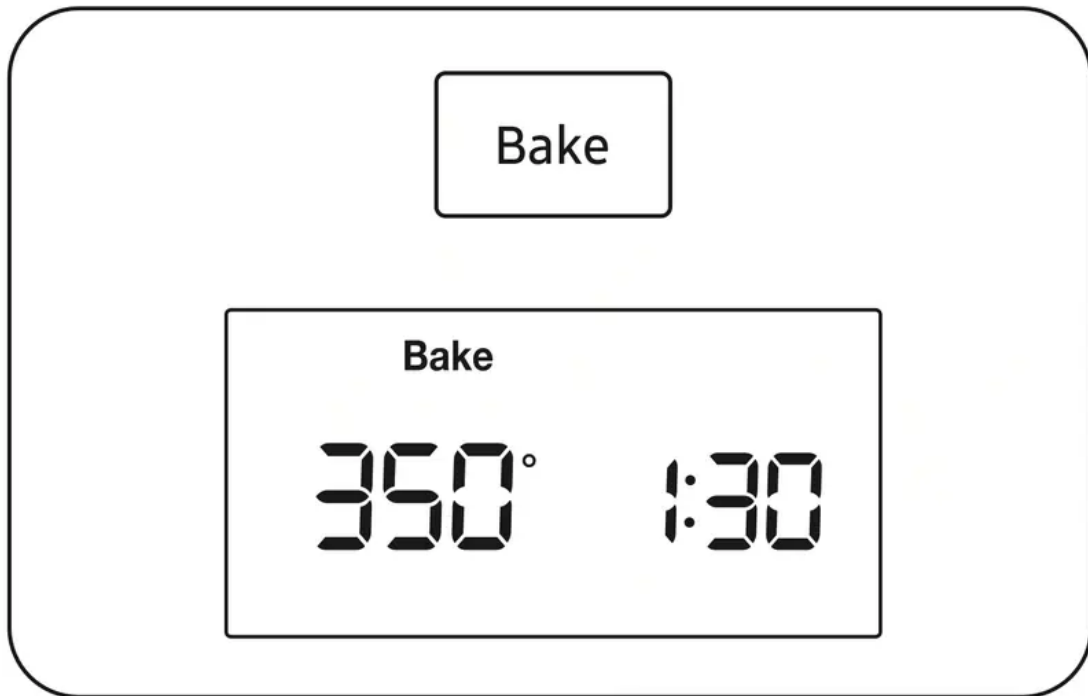


3. Press the number pads for the desired cooking temperature (for example, 3, 7, 5).  
The selected cooking temperature will blink on the display.



4. Press the START/SET pad.

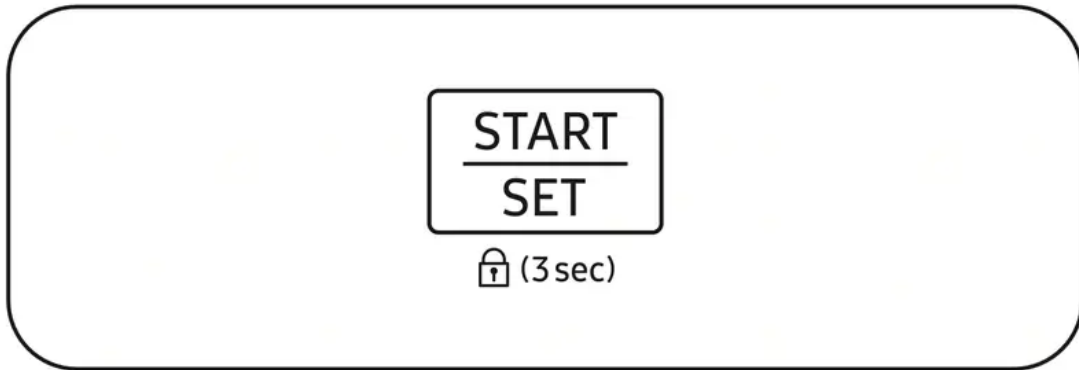

5. Press and hold the Clock and Timer On/ Off pad at the same time for 3 seconds. The display will show SAb. The oven signals, display LEDs, and all oven controls except the number, Bake, Cook Time, START/SET, and OVEN OFF pads will be deactivated. In approximately 20 seconds, the control panel will “click” and the oven will start the lighting and preheating process. After the oven reaches the selected cooking temperature, the oven will continue to cook at that temperature until the Cook Time has elapsed or the Sabbath function is cancelled. The display will not count down the set cook time, but the oven will shut off at the end of the set time.

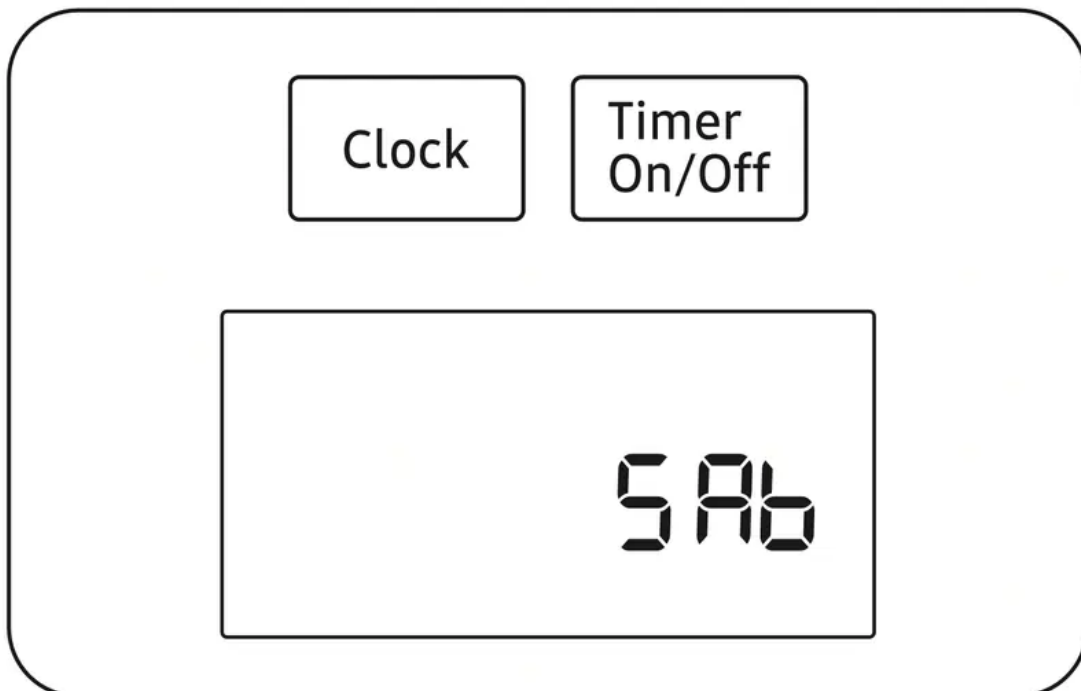


#### How to set timed bake in Sabbath mode

To set timed bake in Sabbath mode, do the following steps after doing step 3 from How to set the Sabbath function.

1. Press the Cook Time pad.

The display will show - --.

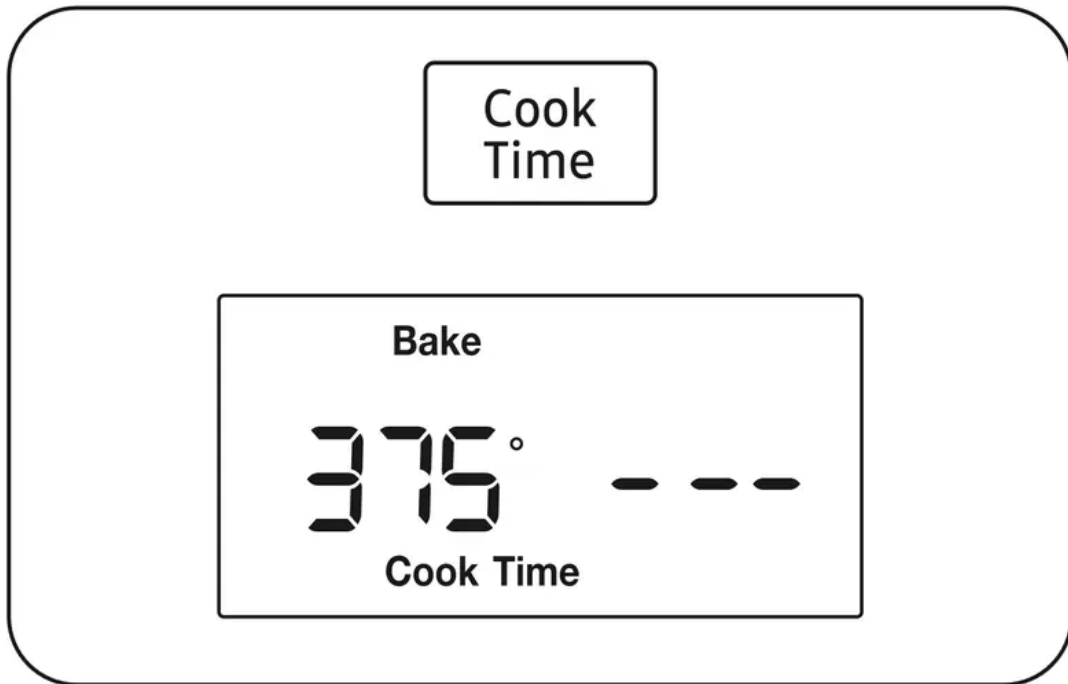

2. Press the number pads for the desired cooking time.


You can set the time to any length of time between 1 minute and 9 hours and 99 minutes.

Proceed with step 4 from How to set the Sabbath function.




**How to change the temperature and exit the Sabbath function**

**To change a programmed baking temperature,** press the Bake pad, enter the new baking temperature, and press the START/SET pad. In approximately 20 seconds, the control panel will “click” and the oven will complete cooking at the new temperature.

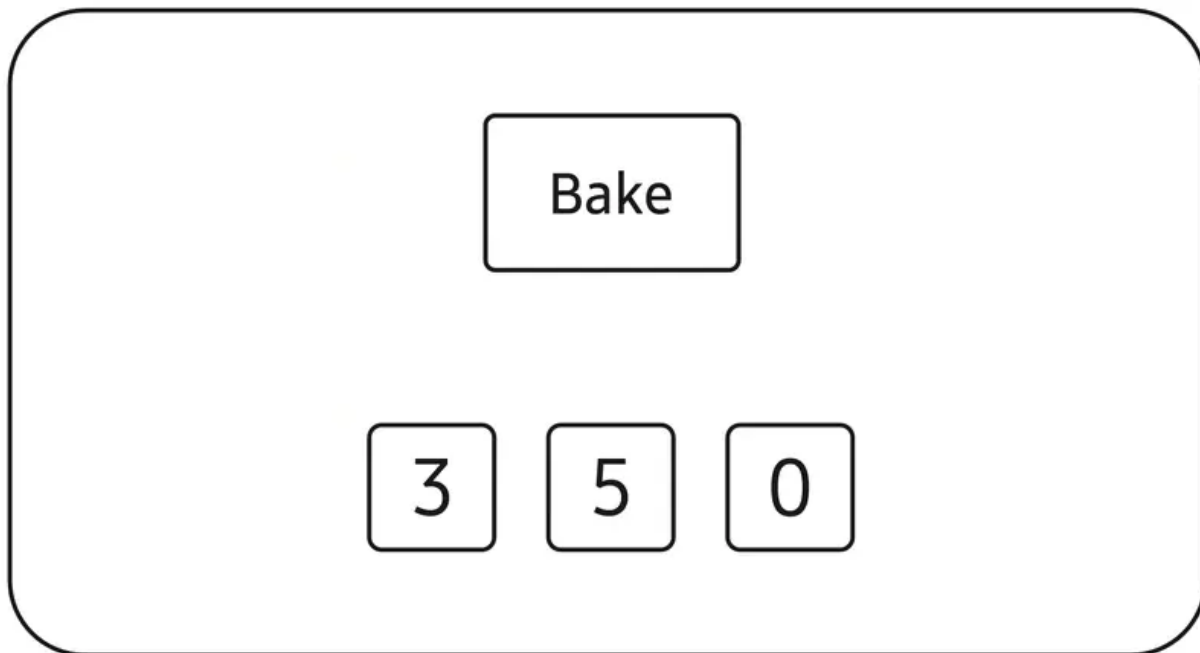

**To exit the Sabbath function,** press and hold the Clock and Timer On/Off pad at the same time for 3 seconds.

The display will show the time of day.

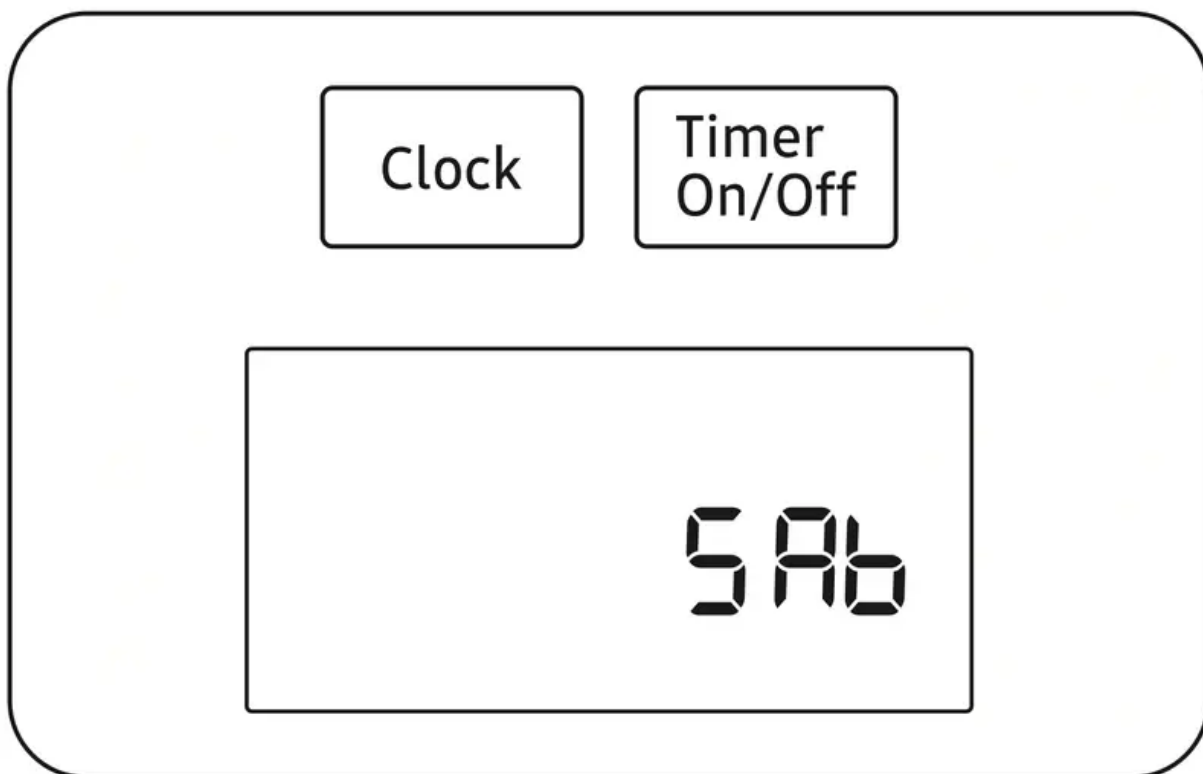


## Extra features

### 12-hour/3-hour energy-saving


With this feature, should you forget and leave the oven on, the control will automatically turn off the oven after 12 hours during baking functions or after 3 hours during a broil function.

How to turn 12-hour energy-saving feature on or off.


1. Press the Cook Time and 0 pads at the same time for 3 seconds.  
The display will show 12 Hr (12 hours shut-off) or -- Hr (no shut-off).  
The default is 12 Hr.

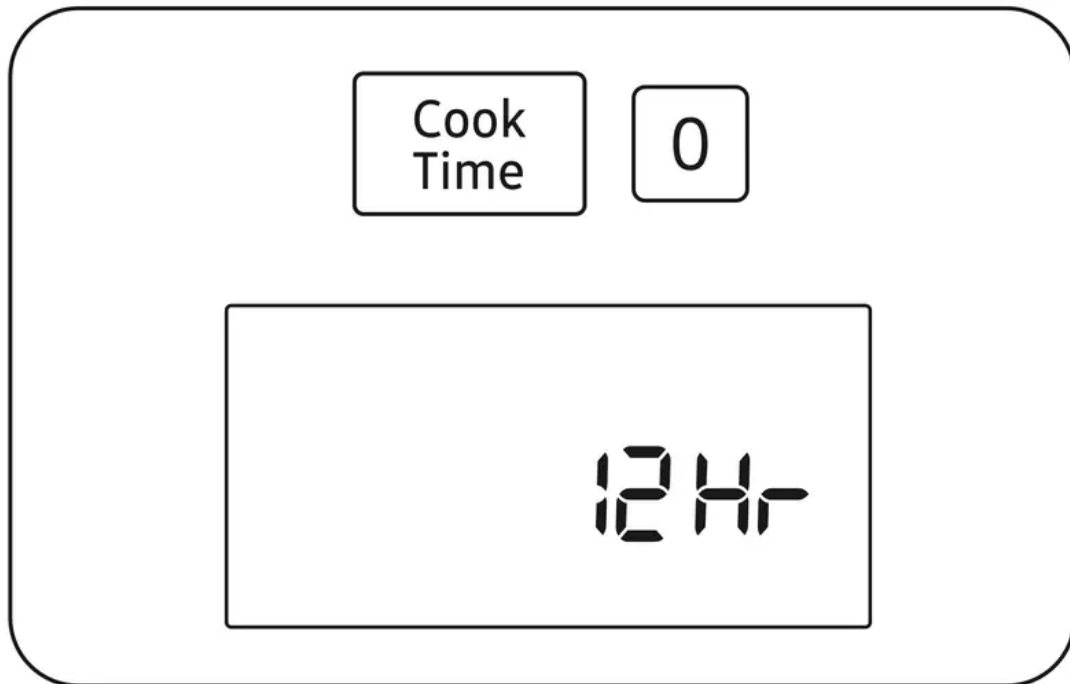

2. Press the 0 pad to select ON (12 Hr) or OFF (-- Hr).

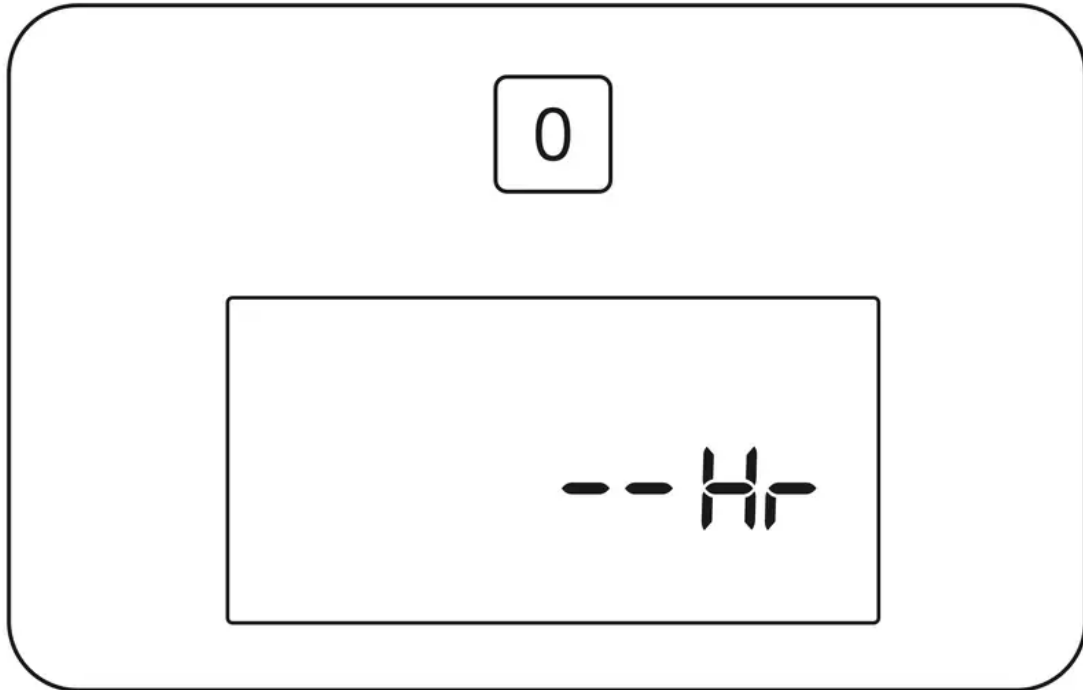

3. Press the START/SET pad to save and start the feature settings.

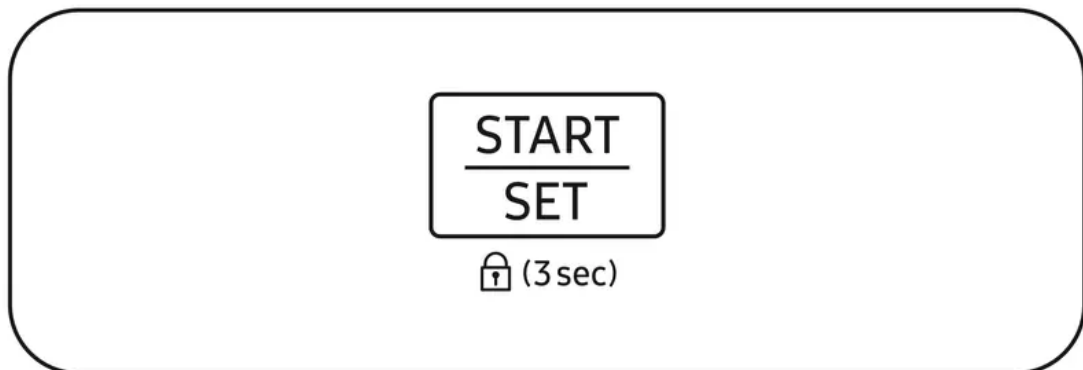


### Fahrenheit or Centigrade temperature selection

The oven control can be programmed to display temperatures in Fahrenheit or Centigrade. The oven has been preset at the factory to display in Fahrenheit.


How to change the display from Fahrenheit to Centigrade or from Centigrade to Fahrenheit.

1. Press the Broil and 0 pads at the same time for 3 seconds.  
The display will show F (Fahrenheit) or C (Centigrade).


The default is F.

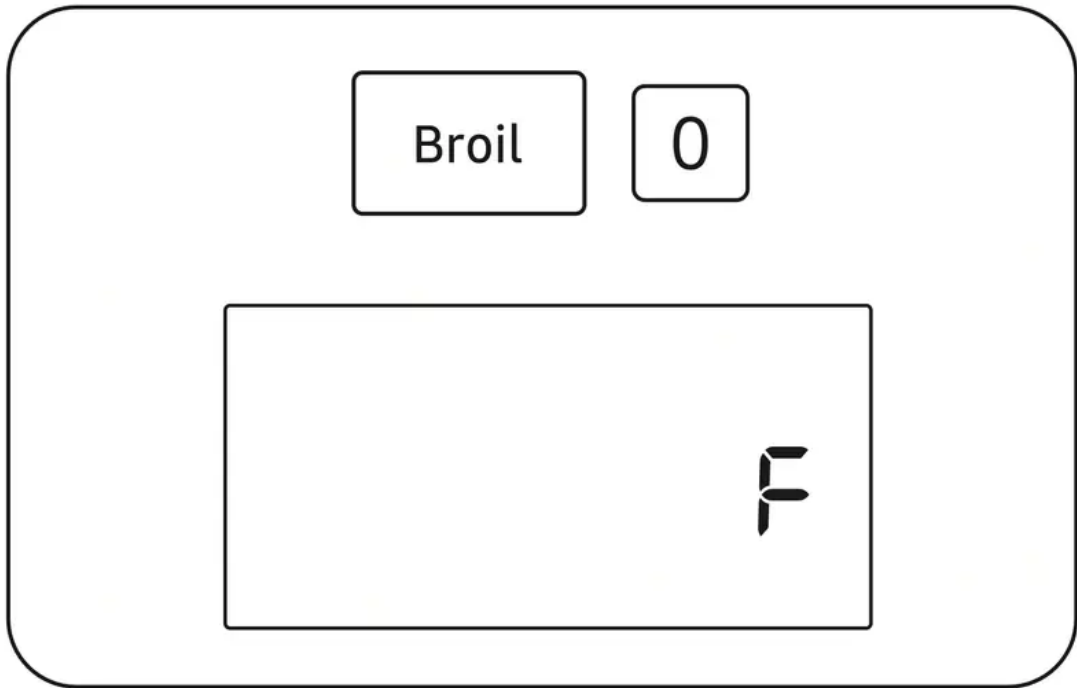

2. Press the 0 pad to select F or C. Pressing the 0 pad toggles between F and C.

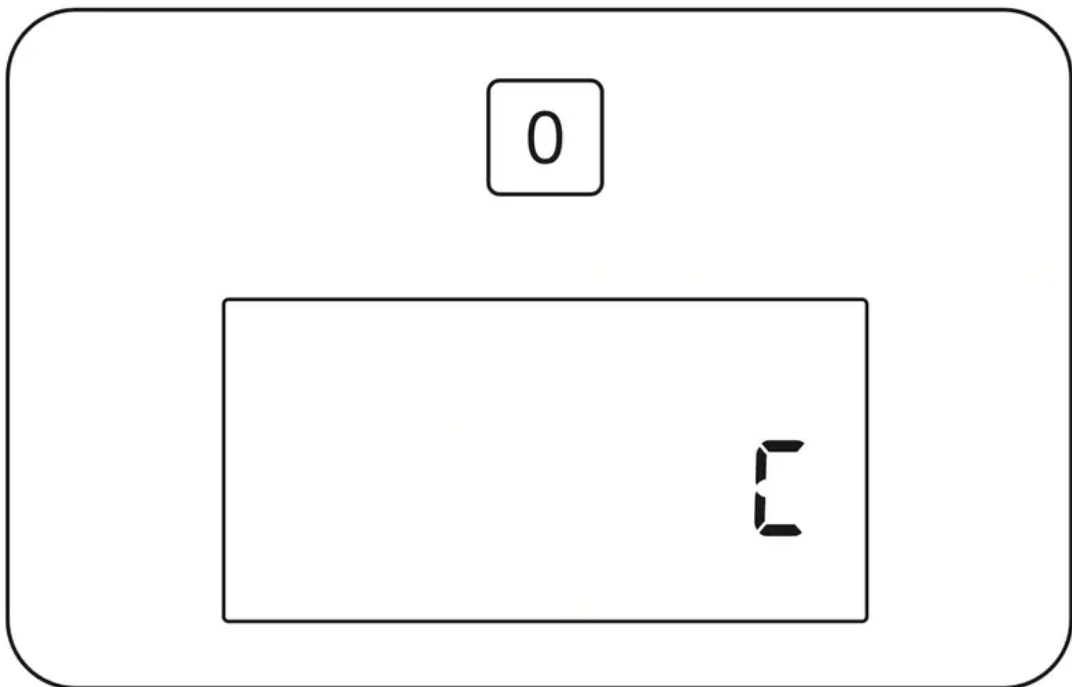

3. Press the START/SET pad to save and set the temperature selection.

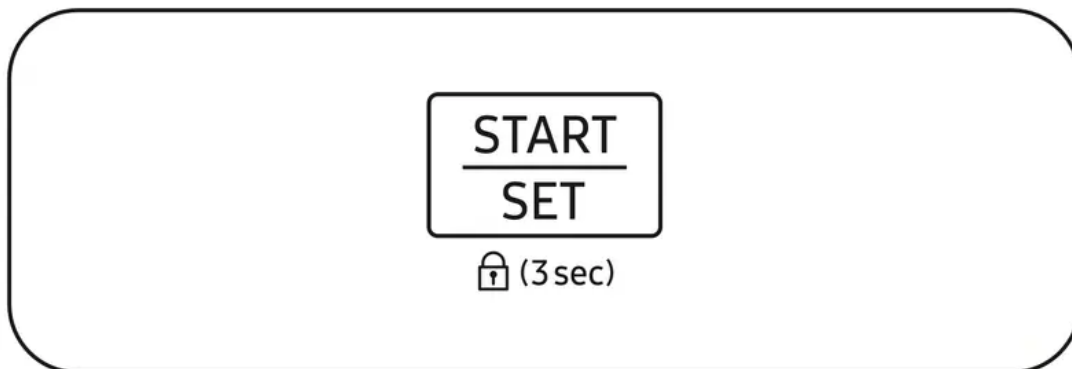


### Sound on/off


By using this feature, you can set the oven controls to operate silently.

How to turn the sound on or off.


1. Press the Oven light and 0 pads at the same time for 3 seconds.  
The display will show Snd On (sound on) or Snd OFF (sound off).  
The default setting is Snd On.

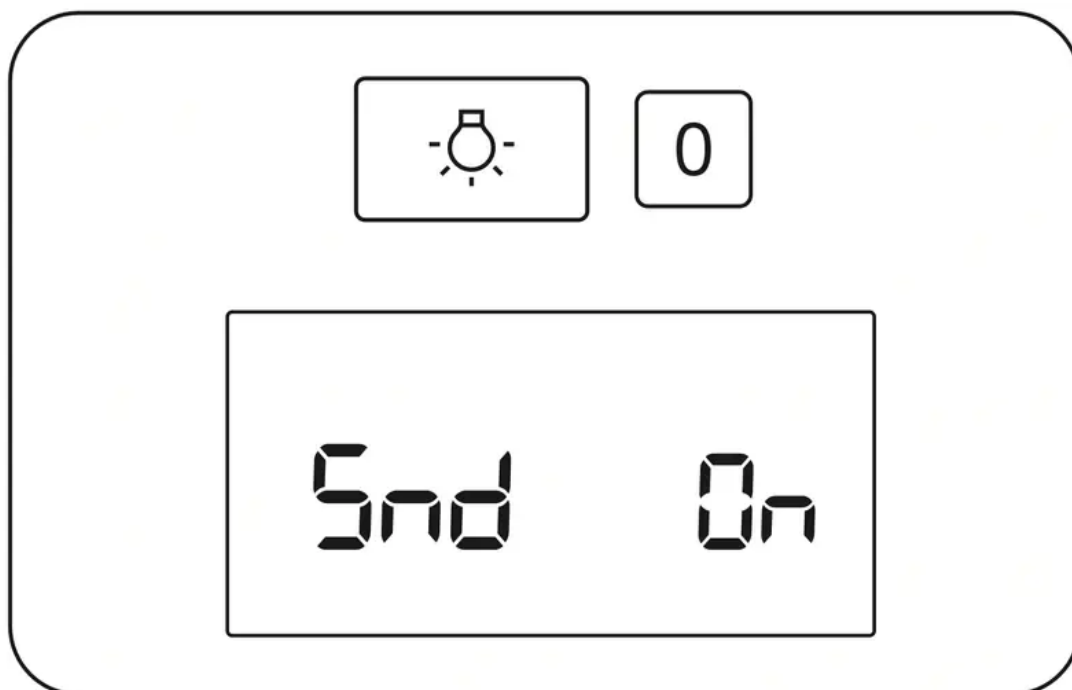

2. Press the 0 pad to toggle between Snd On and Snd OFF.

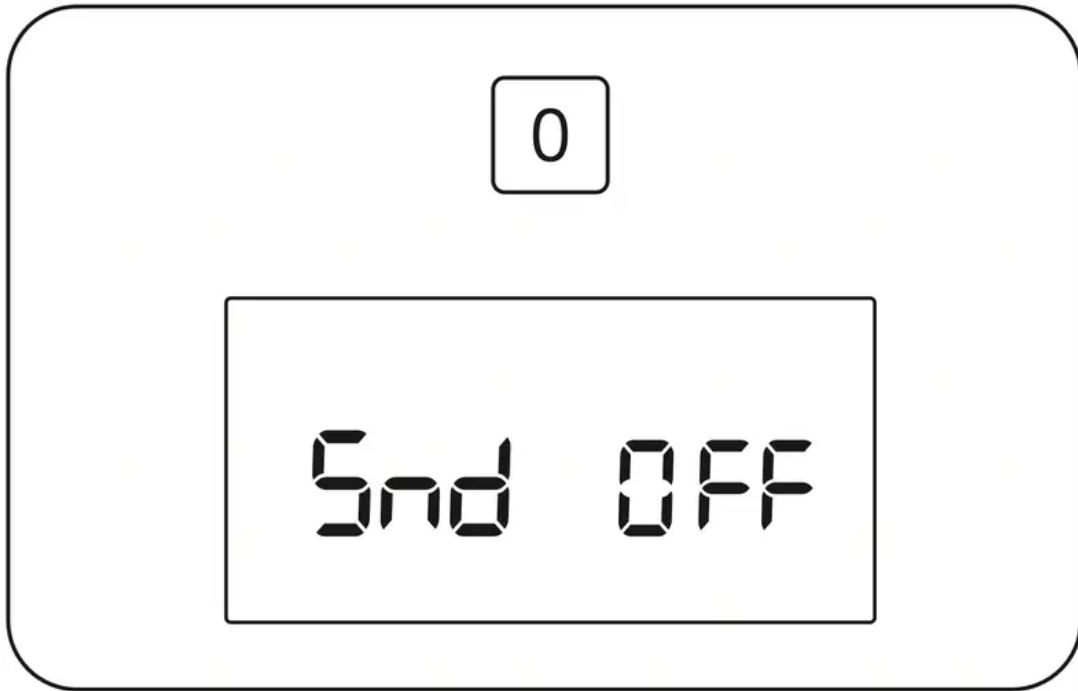

3. Press the START/SET pad to save and set the audible signal setting.

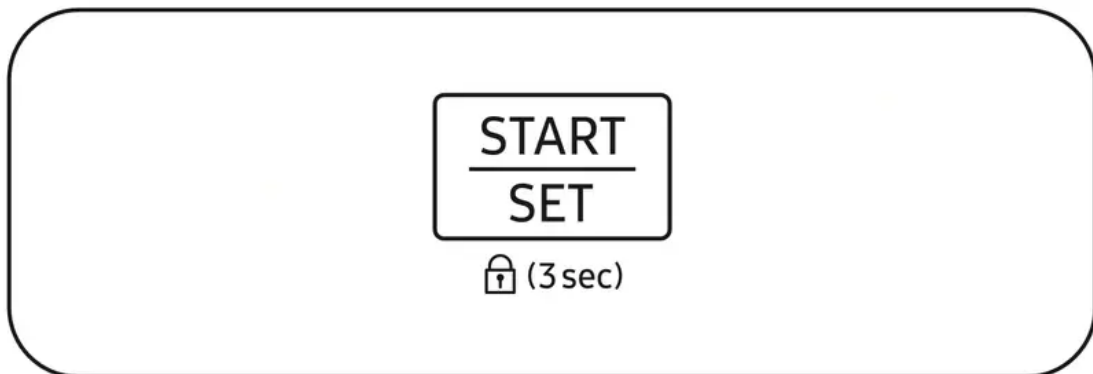

## Maintaining your appliance

### WARNING

- Always make sure the controls are OFF and all surfaces are cool before removing and/or cleaning any of the range parts. This will prevent you from getting burned.
- If the range is pulled out from the wall for any reason, make sure the anti-tip device is reengaged after the range has been pushed back into place. Failure to take this precaution could result in the range tipping and personal injury.
- Take care not to hurt yourself when cleaning the appliance (externally or internally). You may hurt yourself on the sharp edges of the appliance.

## Care and cleaning of the oven

The oven and surface burner control panels can be easily cleaned with a damp cloth and/or glass cleaner. Heavily soiled areas can be cleaned with warm, soapy water.

**CAUTION:** Wear the glove during cleaning.

### NOTE:


Never use steel wool or abrasive cleansers.

Protect the surface from sharp objects.


All of the above items can damage the surface.

### Oven control panel

1. To lock the oven controls and the oven door, press and hold the START/SET pad for 3 seconds. This prevents accidental oven operation and appliance tipping. The oven will beep and the display will show Loc, the time of day, and the Lock icon.

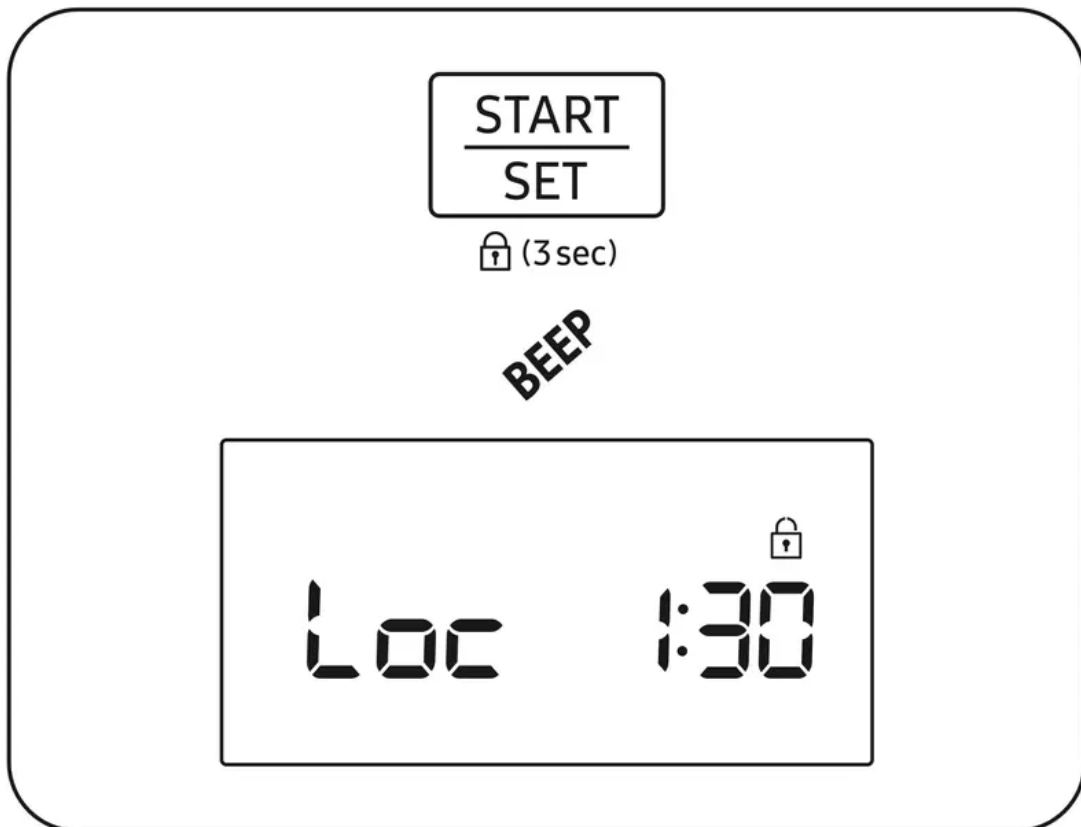


2. Clean spatters with a damp cloth, glass cleaner, or warm, soapy water.

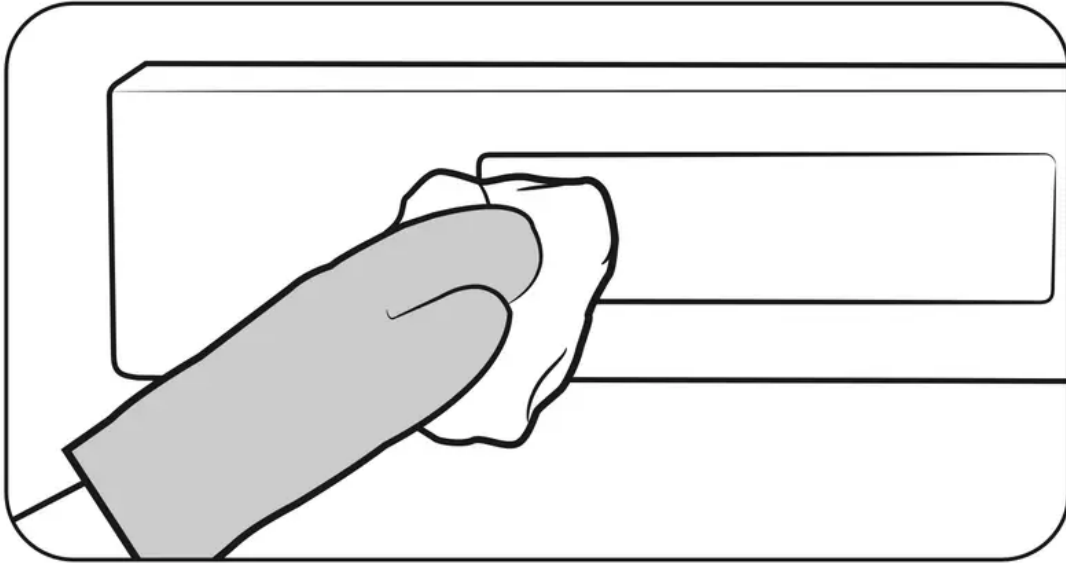


3. To unlock the controls and the door, press and hold the START/SET pad for 3 seconds. To unlock just the controls, hold the door slightly open while pressing and holding the START/SET pad for 3 seconds.

The oven will beep, and Loc and the Lock icon will disappear from the display. Close the oven door, if you are holding it open.

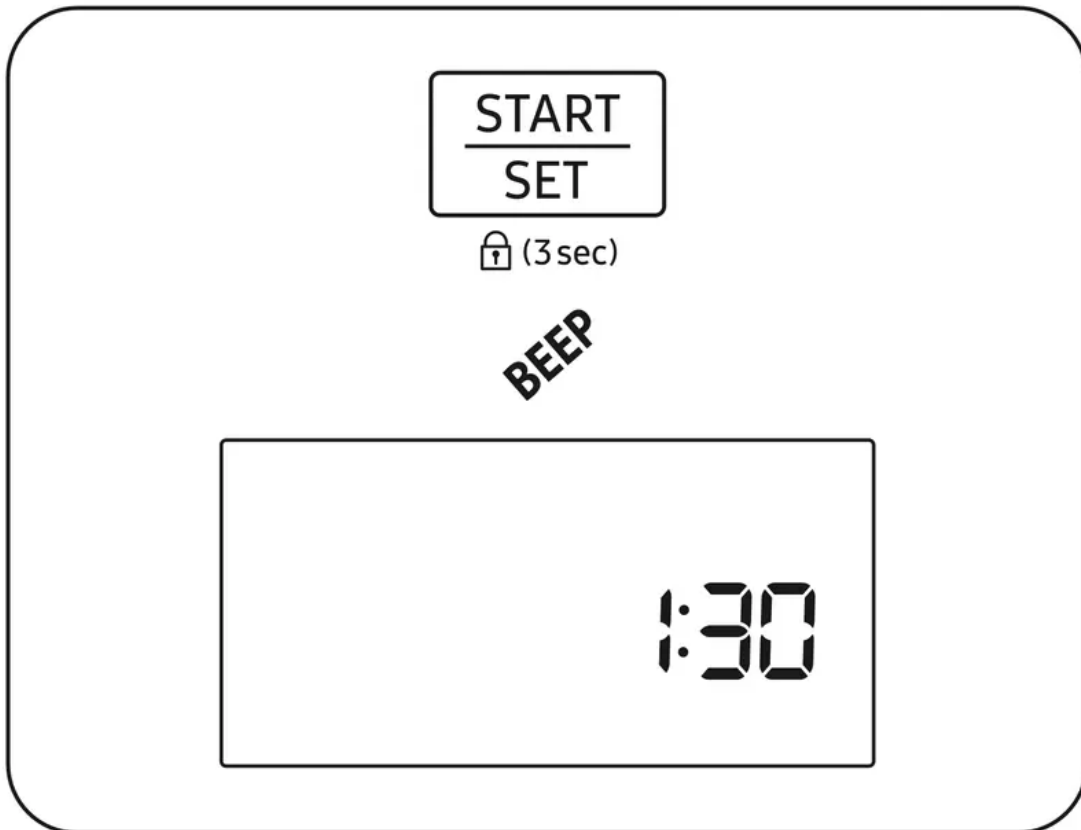

### Oven

Wear the glove during cleaning.

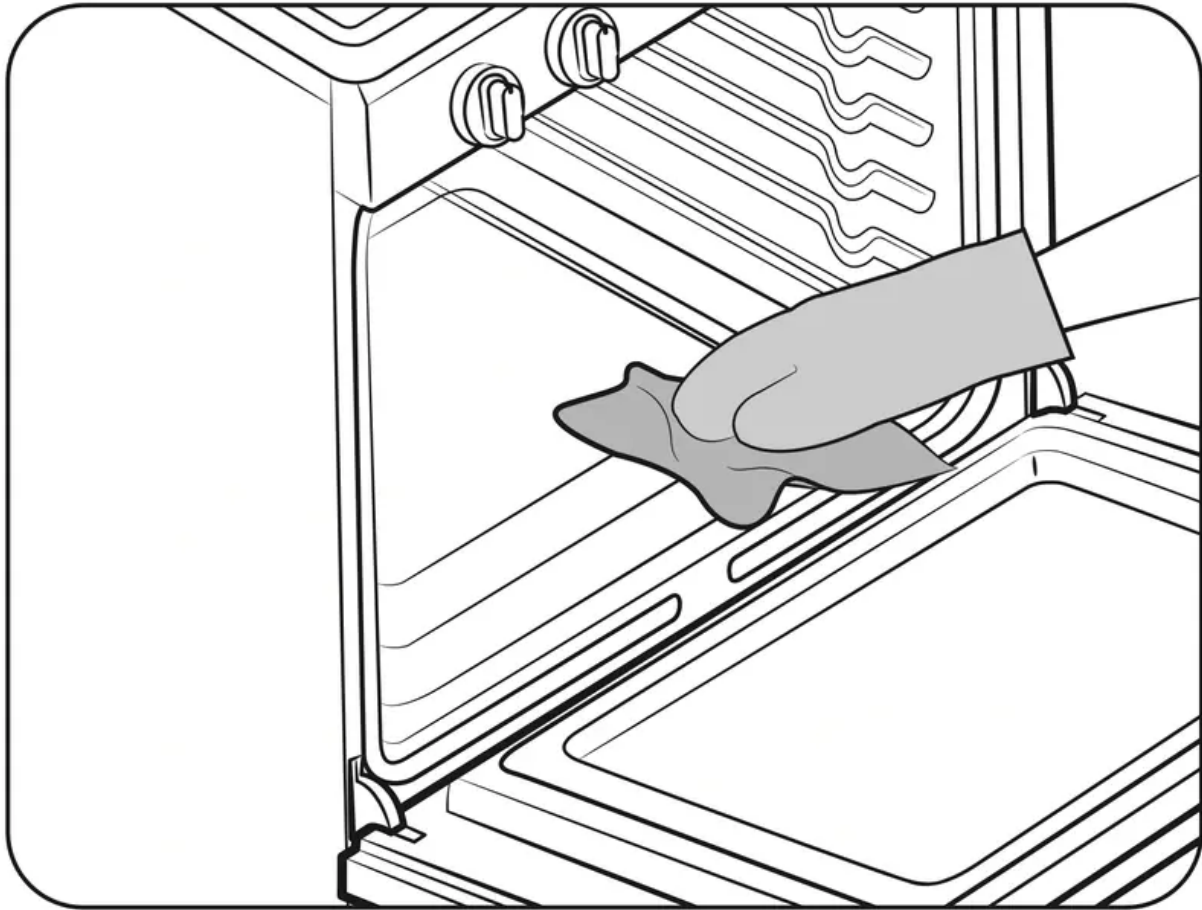


### **Stainless steel surfaces**


**WARNING:** Do not use a steel-wool pad or abrasive cleaners on stainless steel surfaces. Abrasive pads and cleaners will scratch the surface and damage the surface finish.

**NOTE:** To prevent any discolorations and/or grease stains, we recommend cleaning and removing any spills, spots, and grease from the range after each use.

**Stainless steel  
surfaces**

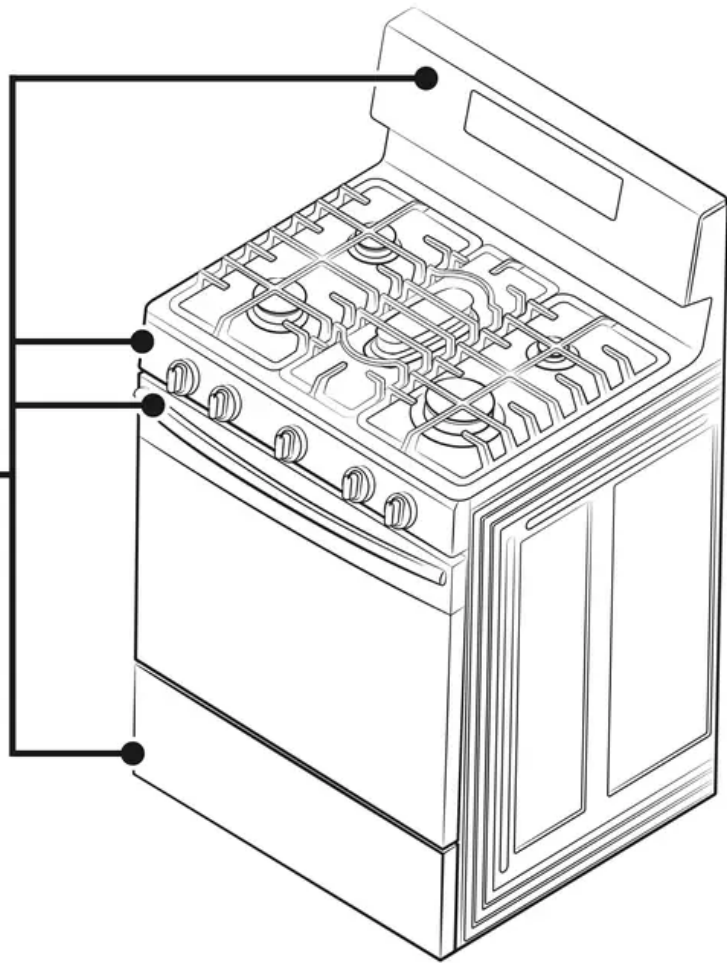


1. Wipe off any spills with a damp, soft cloth.
2. Apply an approved stainless steel cleaner to a damp, clean cloth or paper towel. Clean a small area carefully following the instructions on the cleaner. Stainless steel should always be cleaned with the grain in the stainless steel, if applicable.
3. Dry and buff with a clean, dry, soft cloth.
4. Repeat steps 2 and 3 as necessary.

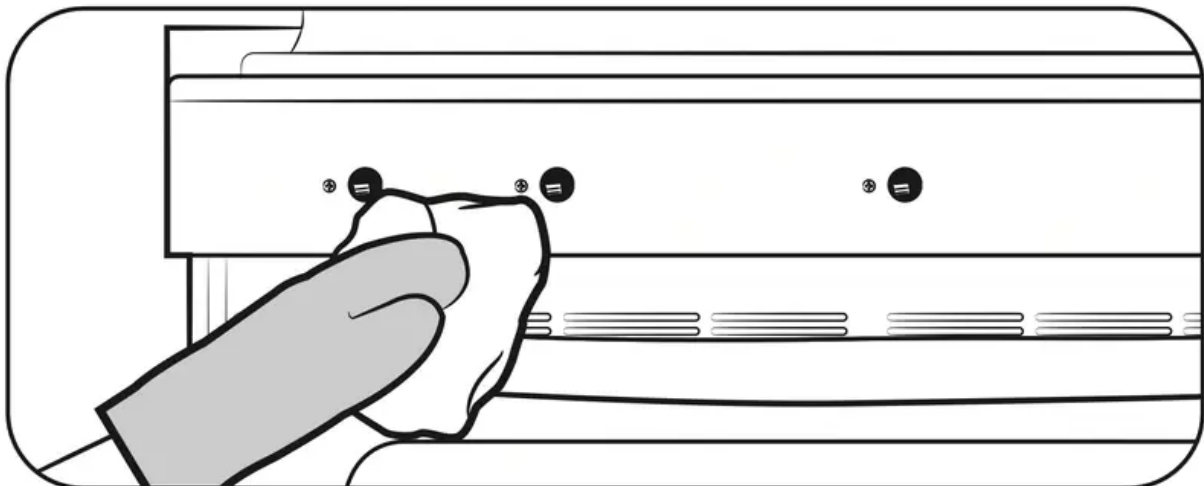

**WARNING:** Do not spray any type of cleaner into the manifold panel holes. Within these holes are ignition switches which carry the current that lights the surface burners. Spraying into them could damage the range.

### Oven racks

To keep racks shiny and looking like new, remove racks from the oven and clean by hand in hot, soapy water with a plastic or soap-filled scouring pad.

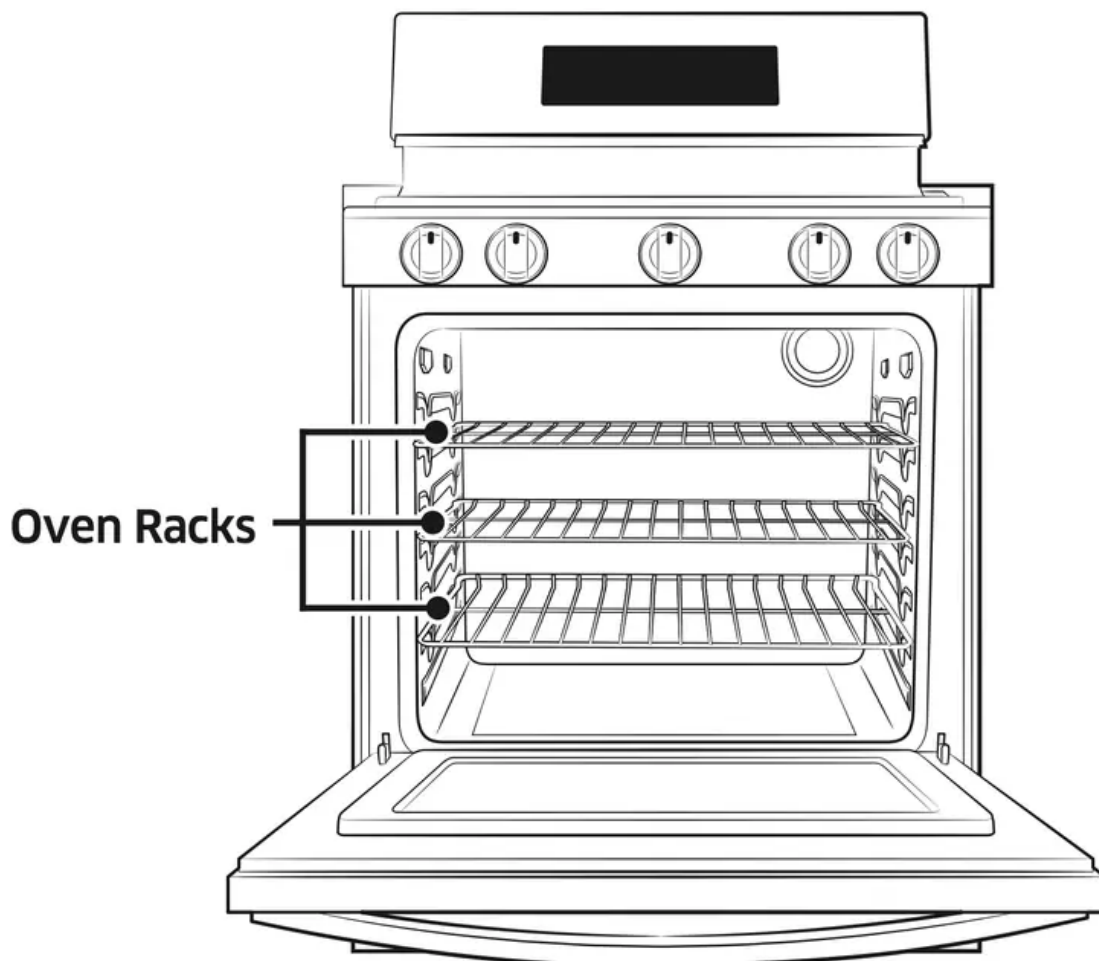

### WARNING


Do not leave the oven racks in the oven during a self-cleaning cycle.

The extreme heat in the self-cleaning cycle will permanently discolor the oven racks and make them difficult to slide.

If racks become difficult to slide, rub the side rails with wax paper or a cloth containing a small amount of cooking oil. This will help the racks slide more easily in the tracks.

### Oven door

**WARNING:** Do not allow moisture to enter the door or contact the door gasket during cleaning. Moisture entering the door assembly and or getting on the door gasket will damage the gasket.

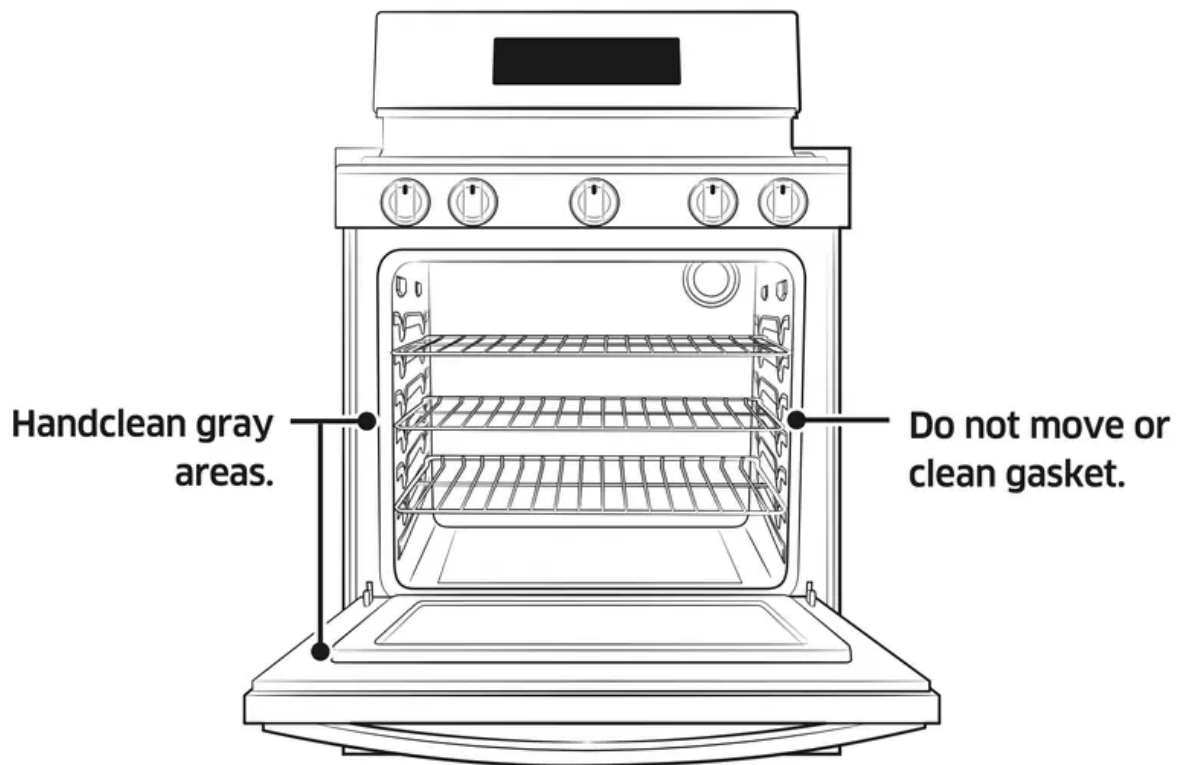

The oven door has multiple surfaces that require different cleaning techniques. The gasket on the inside surface of the oven door should never be cleaned or moved to clean other surfaces. The gasket is made of woven material which is essential for a good heat seal.

The inside door surface outside of the gasket should be cleaned by hand with hot, soapy water and a soapy plastic scouring pad. Rinse and dry thoroughly with a clean, soft cloth. Do not get the gasket wet or allow moisture to get inside the door assembly.

The inside door surface inside of the gasket and the inside door glass are cleaned during the oven's self-cleaning cycle.

The outside door surface is stainless steel and should be cleaned using the instructions on page 47.

The outside glass surface can be cleaned with glass cleaner or warm, soapy water with a thorough rinse. Do not let moisture get inside of the door assembly.


## Care and cleaning of the cooktop

### Surface burner controls

1. Make sure all surface burner knobs are in the OFF position.
2. Pull the control knobs straight off the surface burner control valve stems.


**CAUTION:** Do not clean the control knobs in a dishwasher. They are not dishwasher-safe.

3. Clean the control knobs in warm, soapy water. Rinse and completely dry all surfaces (including back and stem hole).

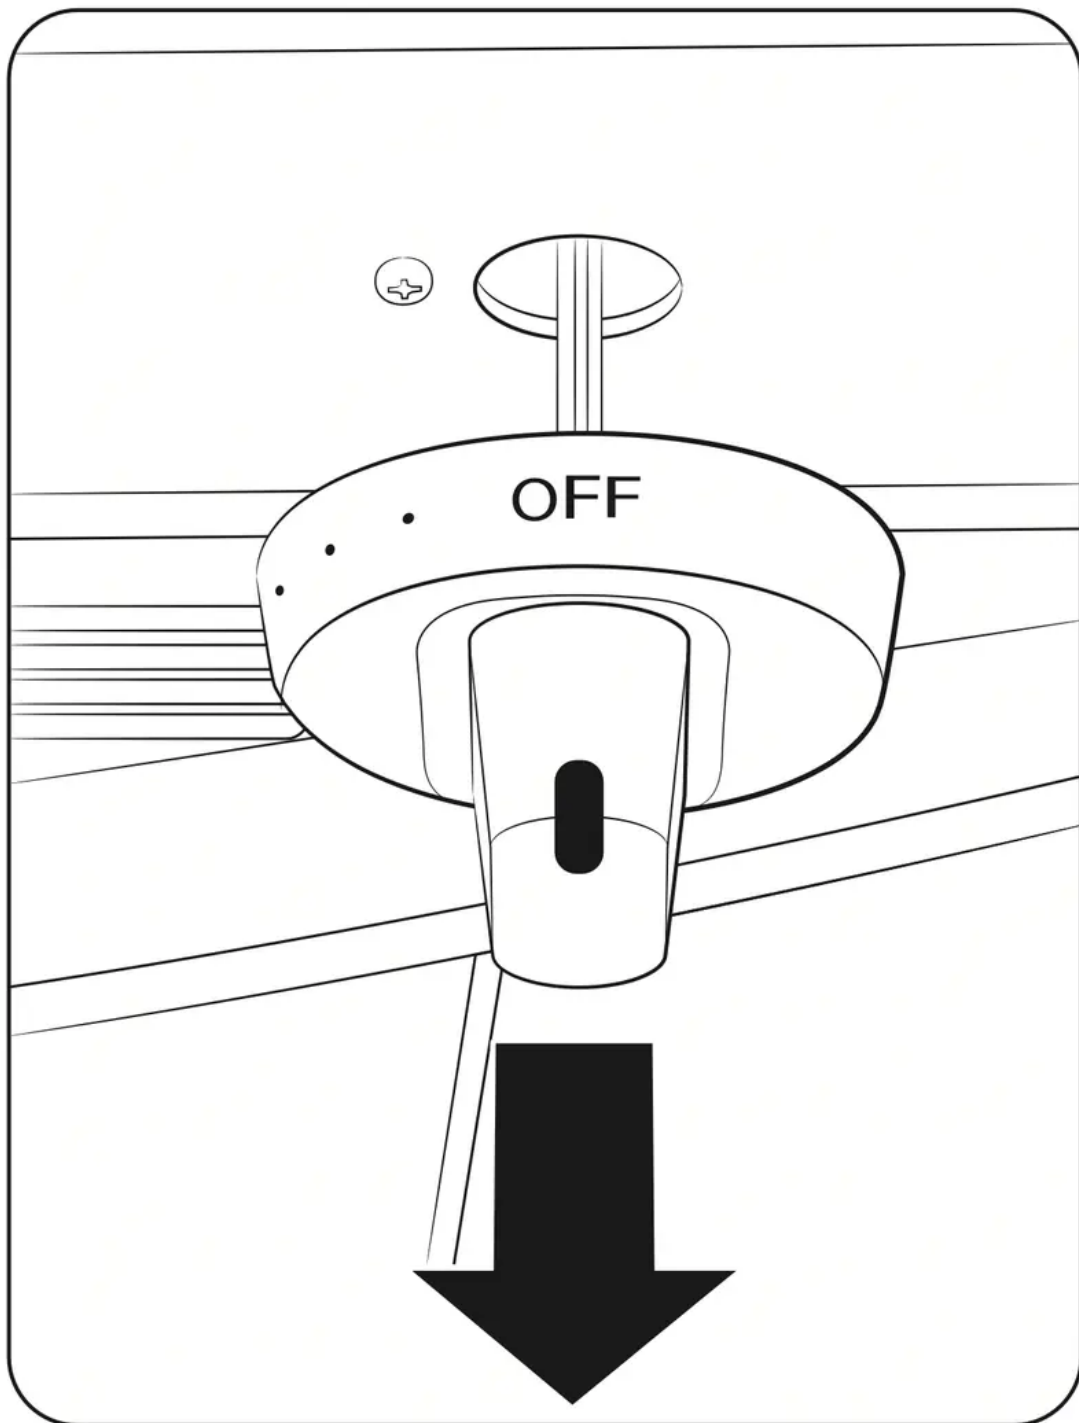


**WARNING:** Do not use spray cleaners on the surface burner control panel. Spray entering the valve holes could contact electrical components resulting in death, personal

injury, or product damage.

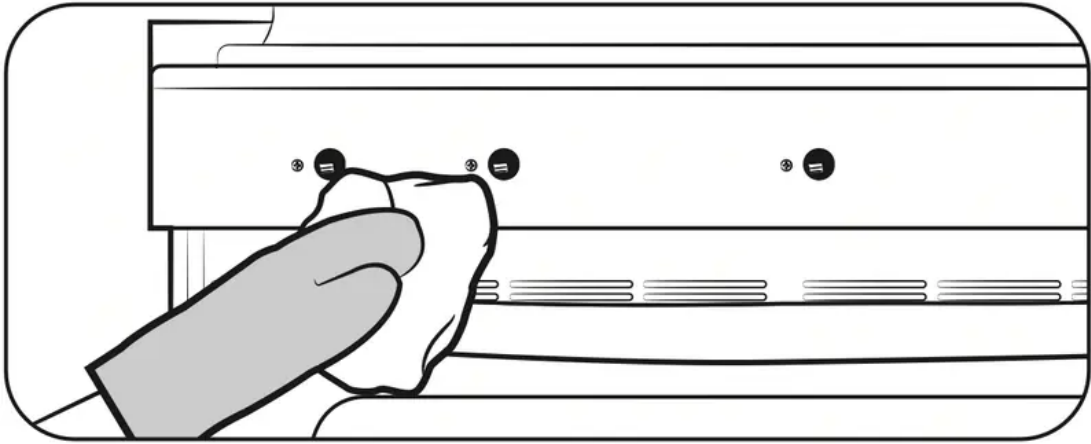


4. Clean stainless steel surfaces with stainless steel cleaner on a damp, soft cloth.  
See page 47.

5. Replace the control knobs in the OFF position by pushing them straight onto the control valve stems.

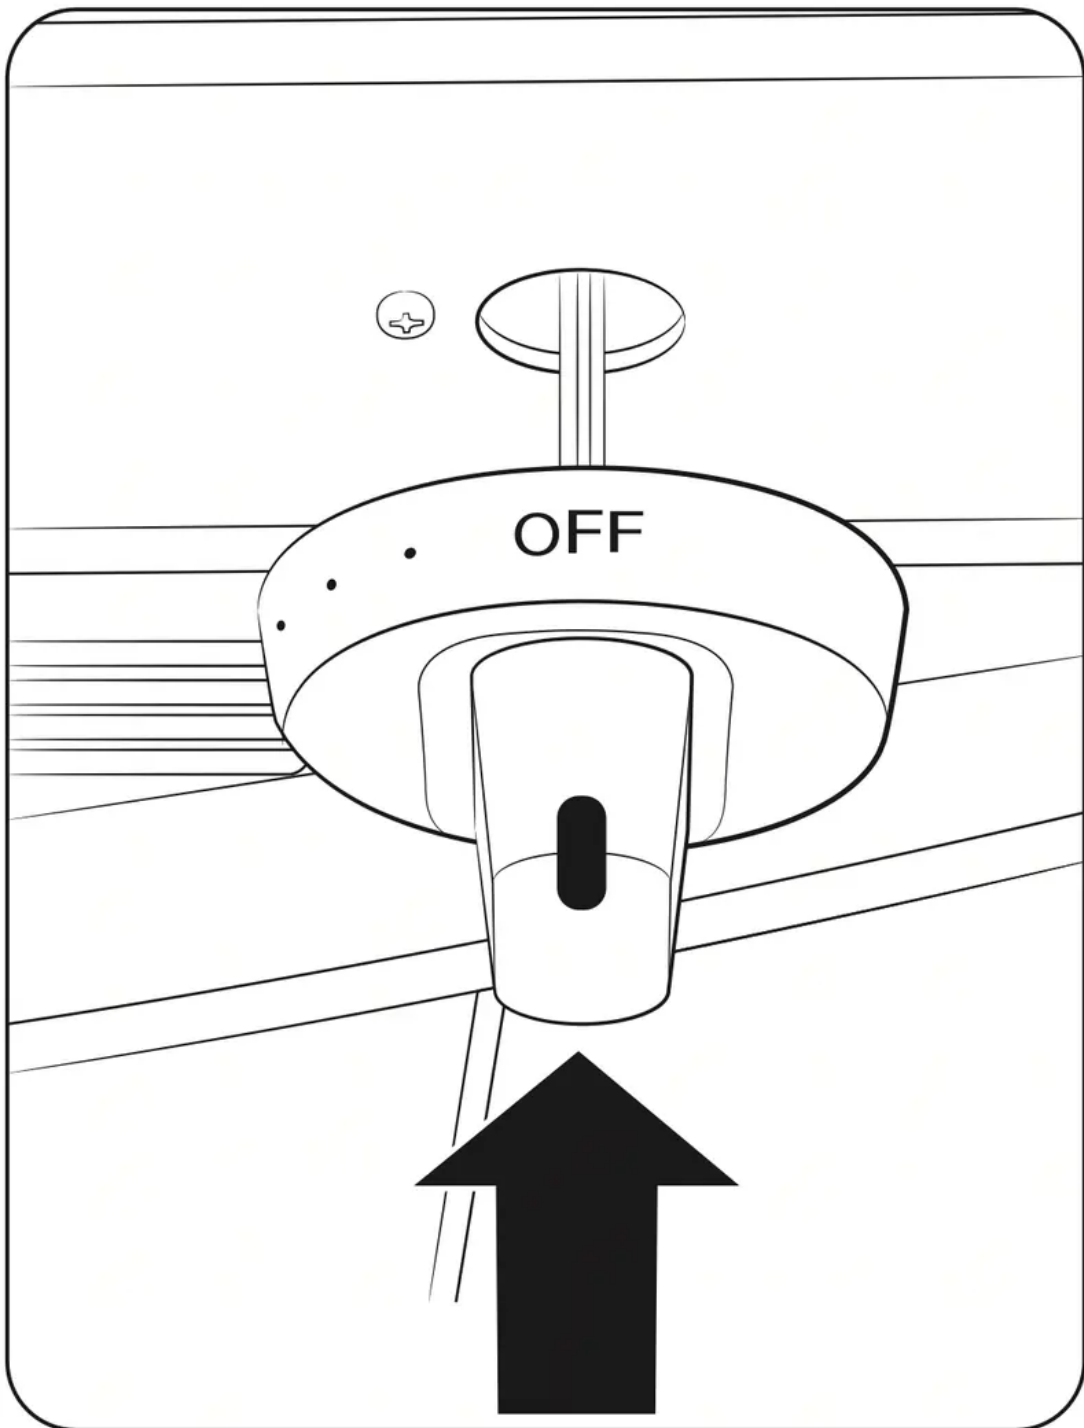


## Surface burner grates and assemblies

1. Turn off all controls and make sure all parts have cooled.

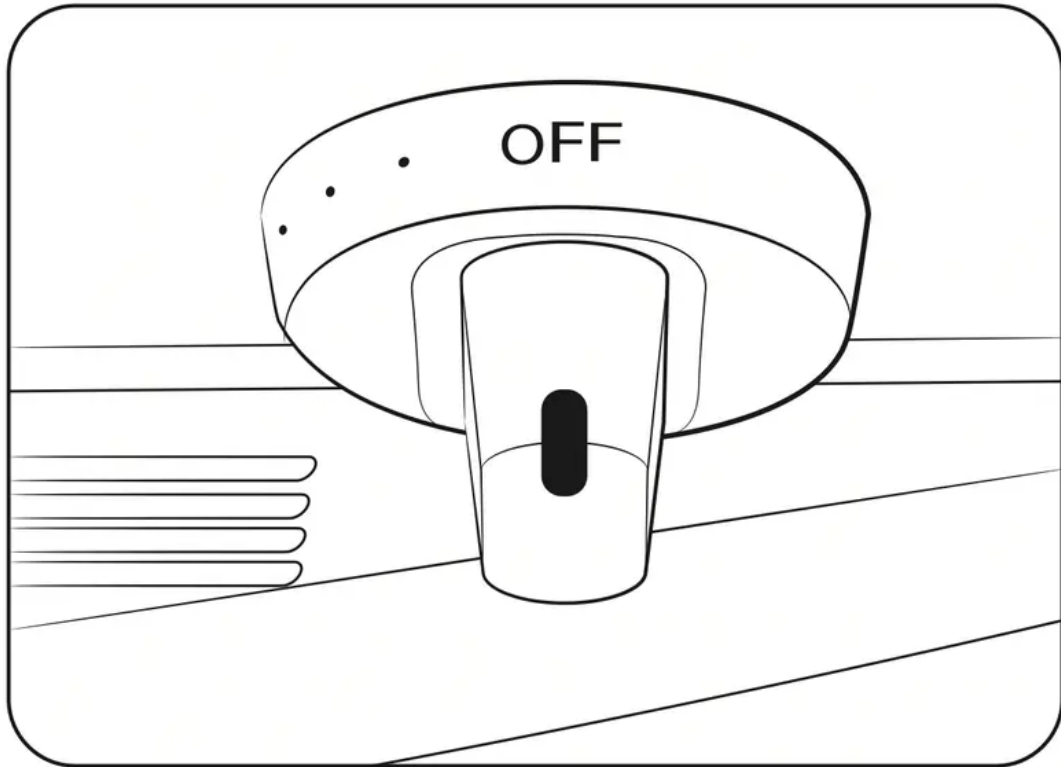


2. Lift off and remove the burner grates from the cooktop. Make note of the burner sizes and locations of all the surface burners.

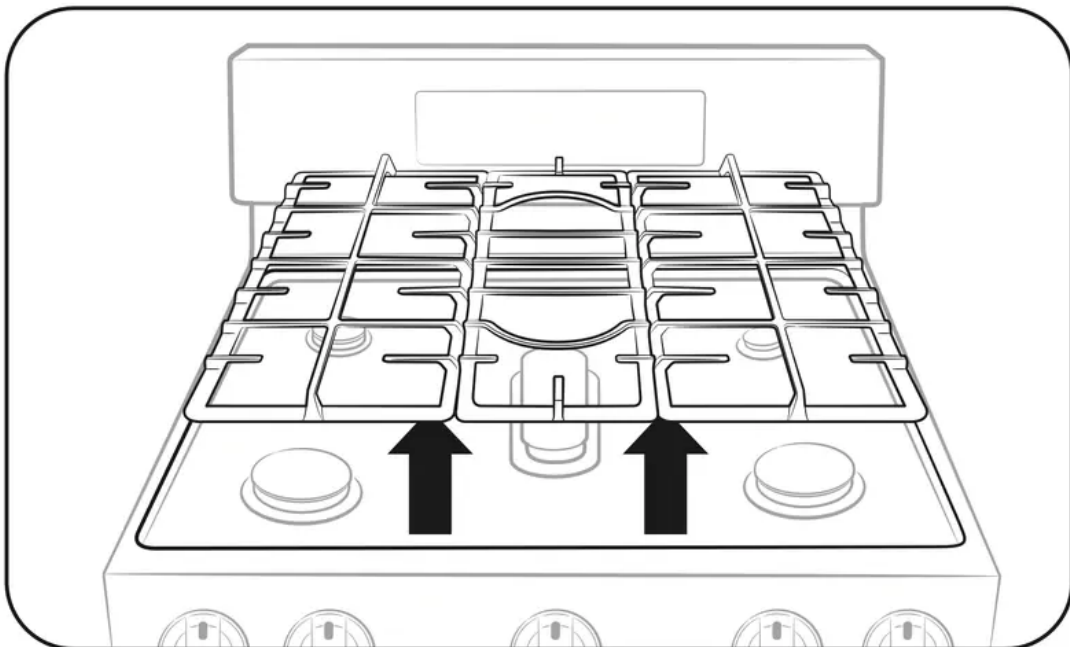

3. Lift off burner caps from top of the burner heads.
4. Lift the burner heads off the valve manifolds and starter electrodes.
5. Clean all removable burner parts in warm, soapy water. Do not use steelwool pads or abrasive cleaners on any burner part.

6. Rinse thoroughly and completely dry all parts before they are reassembled.

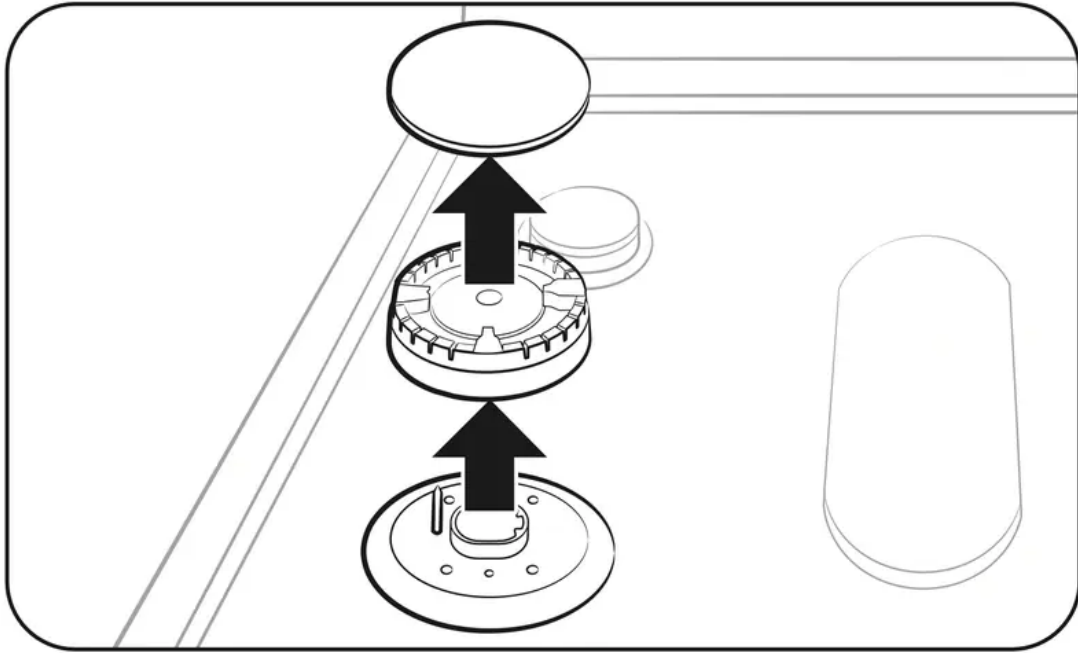

**NOTE:**

Starter electrodes are not removable and should only be wiped clean when the controls are in the OFF position.

Shake out any excess water and then let burner heads and caps dry thoroughly. Placing the center burner upside down will allow the water to drain out more easily.


Do not attempt to remove center oval burner cap from the head.

7. Set all burner heads on top of the manifold valves in the same location you removed them from.


The hole on the side of the burner heads goes over the electrodes.

The burner heads are correctly installed when they are flat on the top of the manifold valves.

8. Set all burner caps on top of the burner heads. These also need to be flat on top of the burner heads to ensure proper and safe operation.

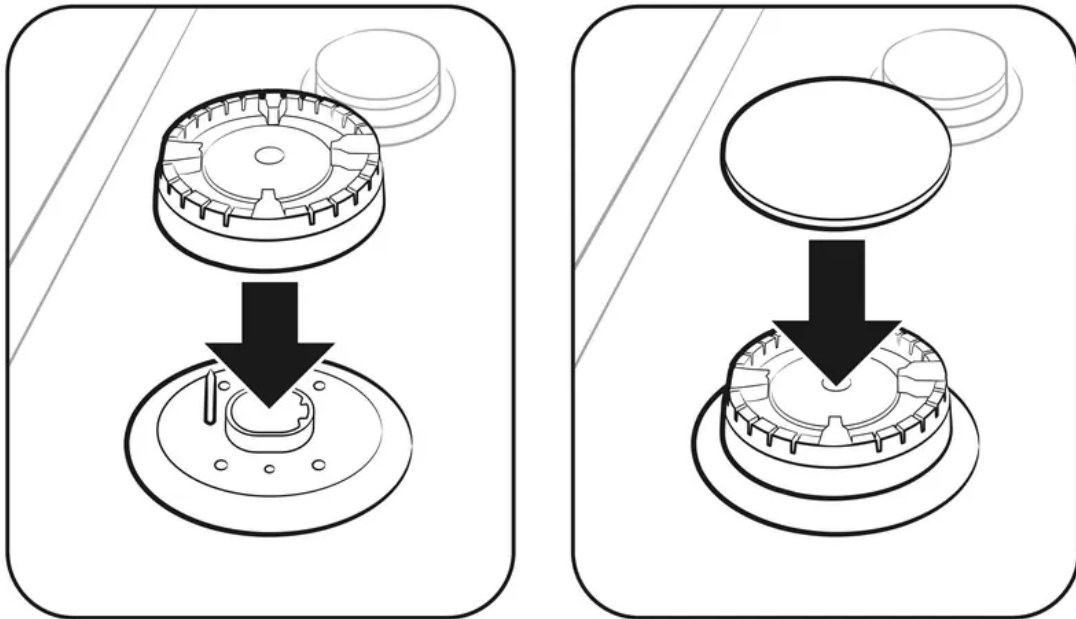


9. Replace burner grates on top of the range cooktop.

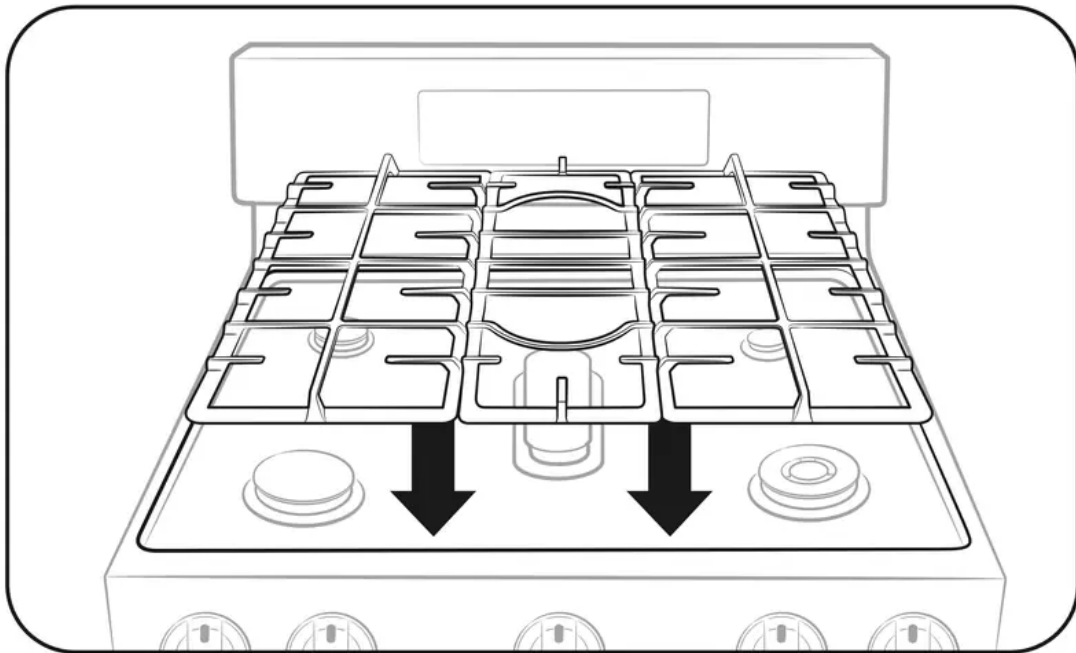

10. Push in and turn each surface burner control knob to the LITE position, let each burner light, and then set each control knob back to a burner setting to make sure each burner

operates properly.

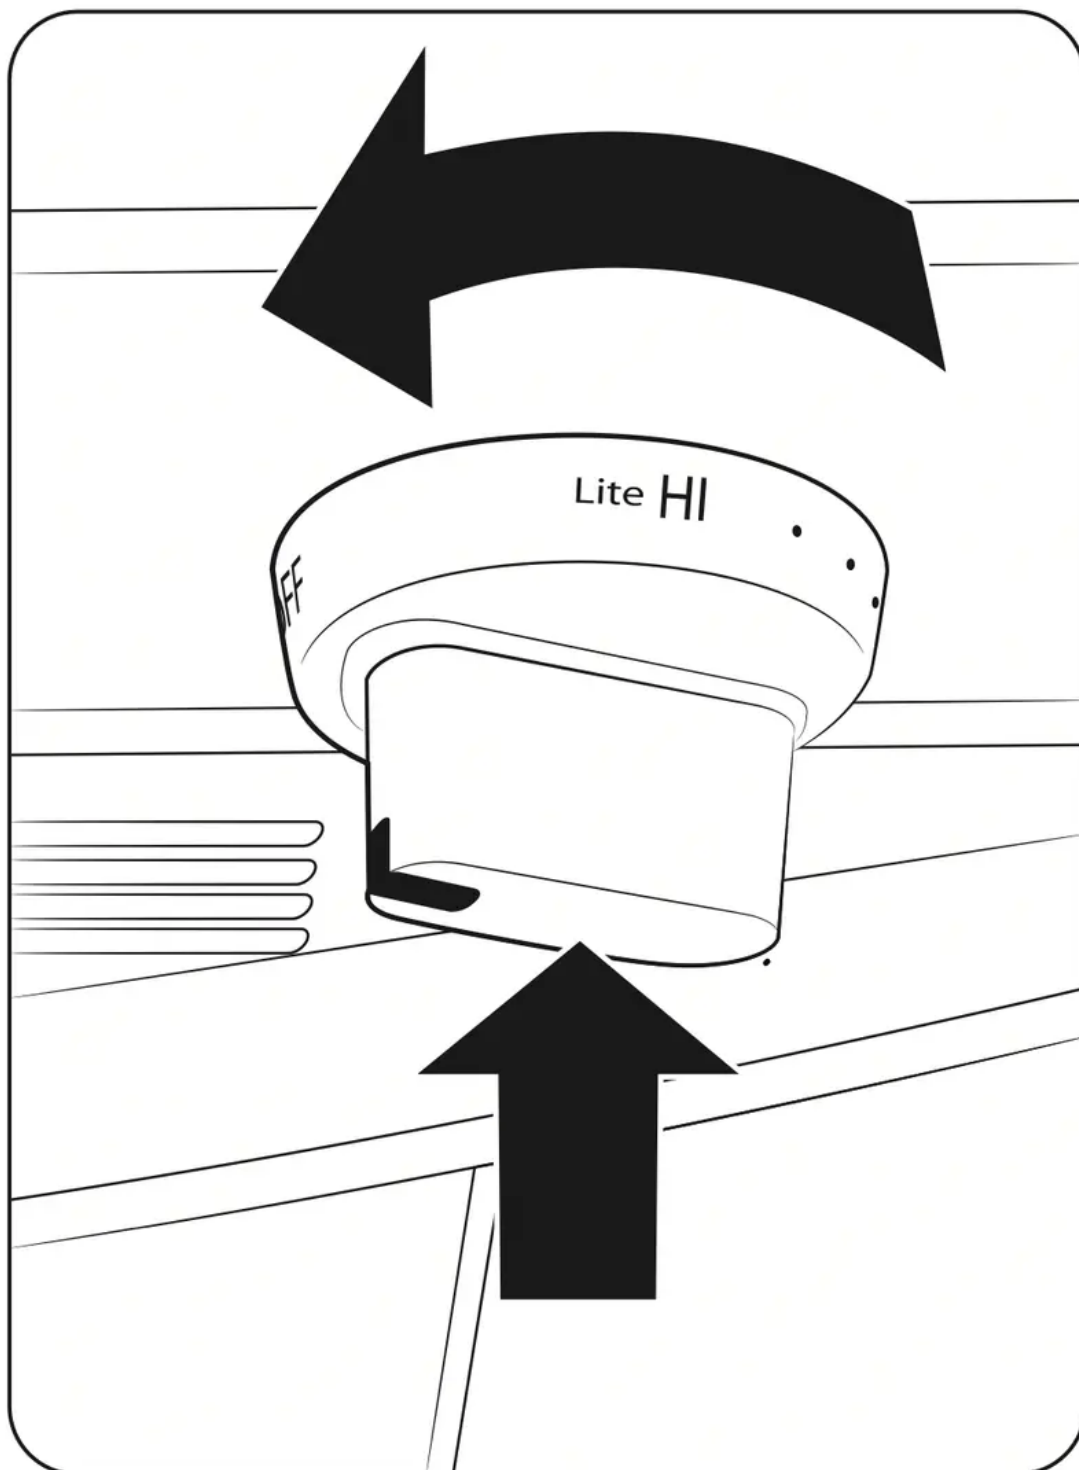


### **Cooktop surface**


The cooktop surface is a porcelain-enamel surface. To prevent this surface from becoming dull, wipe up and clean spills as they happen. Foods with a lot of acid (tomatoes, sauerkraut, fruit juices, etc.) or foods with high sugar content can cause dull spots if allowed to set.

**WARNING:** Do not use a steel-wool pad or abrasive cleaners on porcelain-enamel surfaces. Abrasive pads and cleaners will scratch and damage the surface.

1. Make sure all surface burners are OFF.

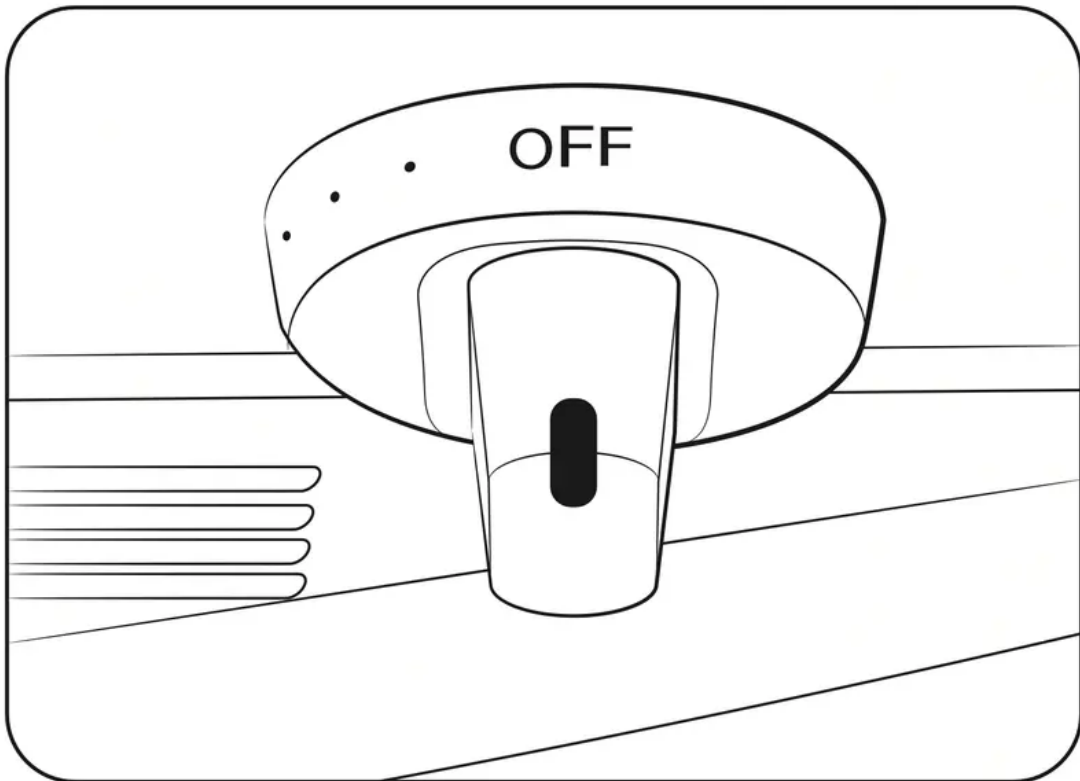


2. When surfaces have cooled, remove the burner grates.

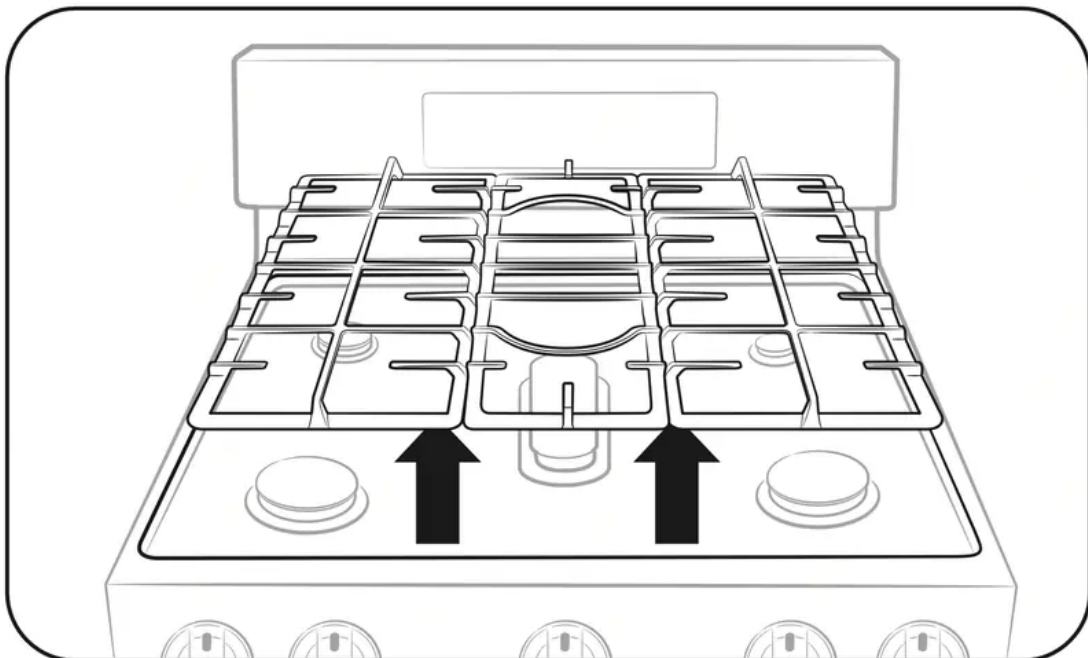

**WARNING:** Do not remove or lift the cooktop during cleaning. Doing so could damage the gas lines leading to the surface burner manifolds, causing poor and/or dangerous

operation.

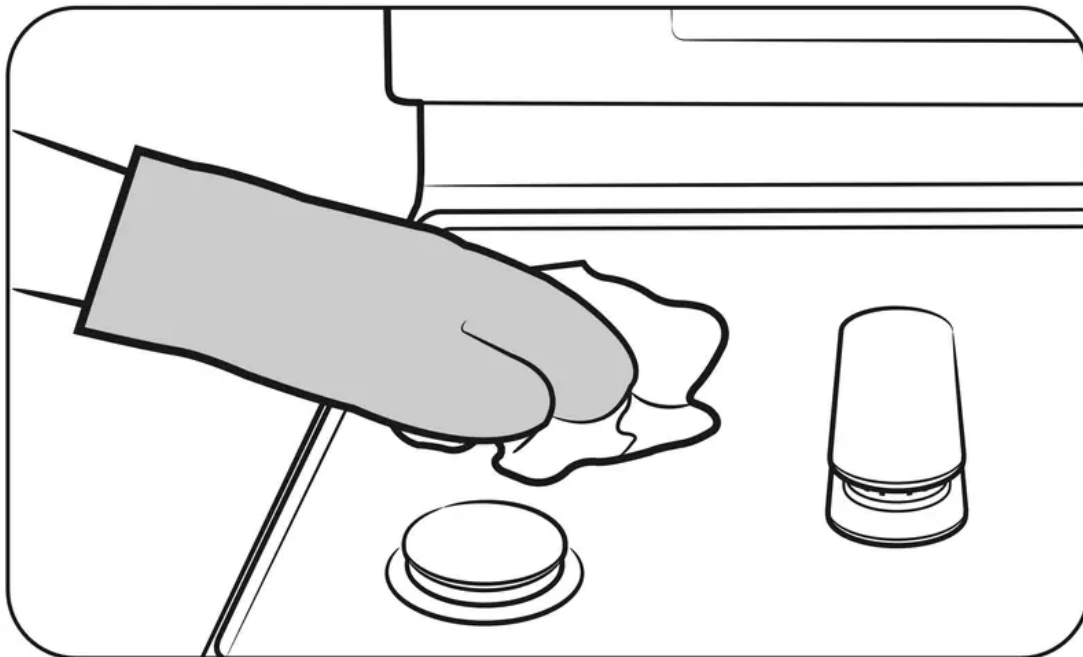

3. Clean the cooktop surface with warm, soapy water and a soft, damp cloth.  
If spill goes under a surface burner, remove the surface burner cap and head to access and clean the spill.
4. Rinse with clean water and dry and polish with a soft, dry cloth.
5. Reassemble burner components (if removed) and replace the burner grates.

## Changing the oven light


The oven light is a standard 40-watt appliance bulb. It will automatically come on when the oven door is opened. It can also be turned on and off when the oven door is closed by pressing the Oven light pad on the oven control panel.

**NOTE:** The oven light will not work during a self-cleaning cycle.

**WARNING:** Disconnect electrical power to the range before replacing the oven light. This will prevent any personal injury due to electric shock.

1. Make sure the oven and the light bulb are cool.
2. Open the oven door.  
**NOTE:** If the oven racks are in the way, they can be repositioned or removed before you change the oven light.
3. Turn the glass light cover in the rear upper-right corner counterclockwise to remove it.
4. Turn the bulb counterclockwise to remove it from its socket.
5. Replace the bulb with a new 40-watt appliance bulb. Turn the bulb clockwise until it is seated securely in the socket.
6. Replace the glass light cover by turning it clockwise until it is seated securely.

7. Close the oven door and reconnect the electrical power to the range.

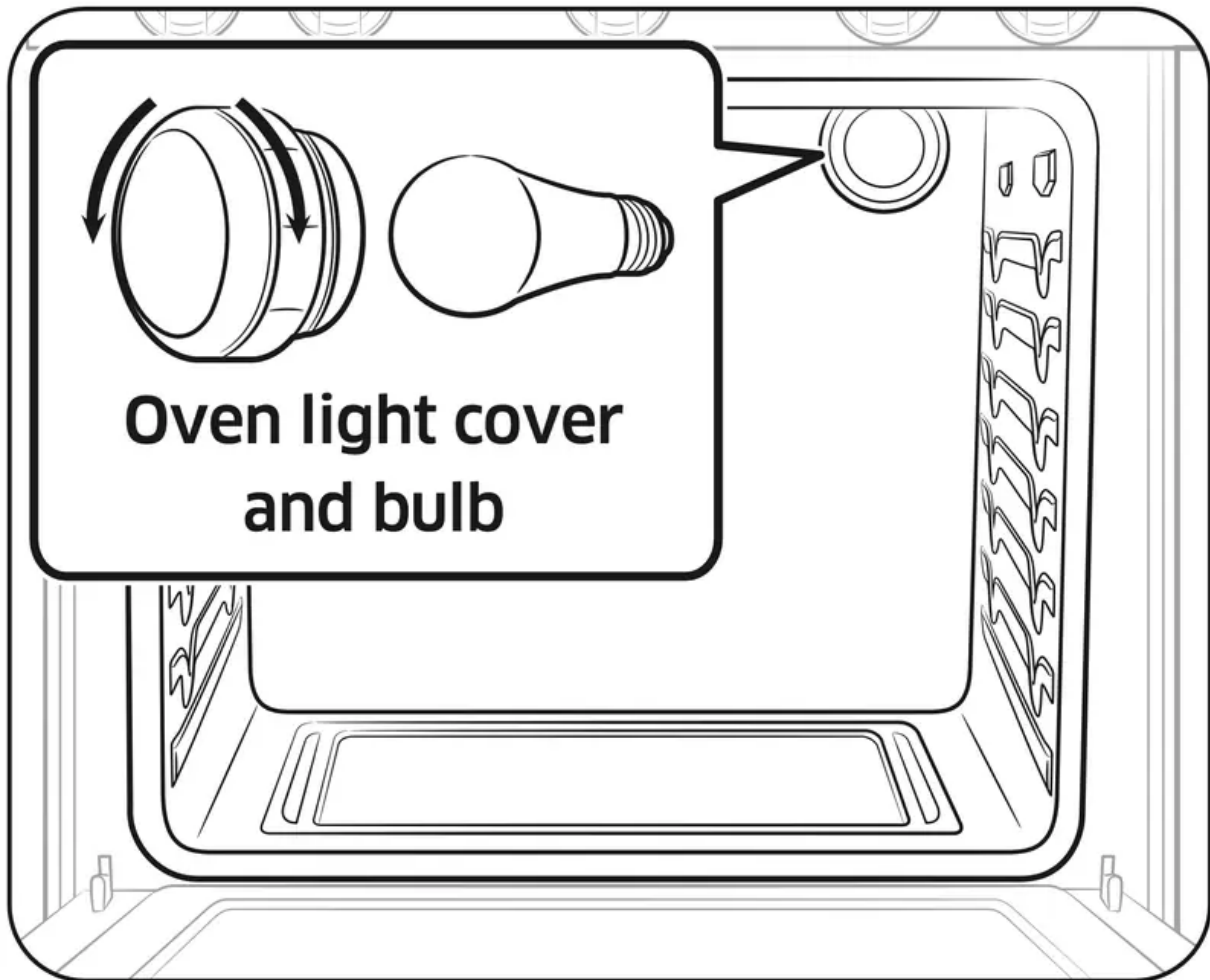


## Removing and replacing the oven door

### WARNING


- The oven door is very heavy. Do not lift by the handle and be careful not to drop the door during removal. Improper handling could result in personal injury.
- Disconnect the electrical power to the range before removing the oven door. This prevents the oven from accidentally being turned on while the door is removed.

## To remove the door


1. Completely open the oven door.

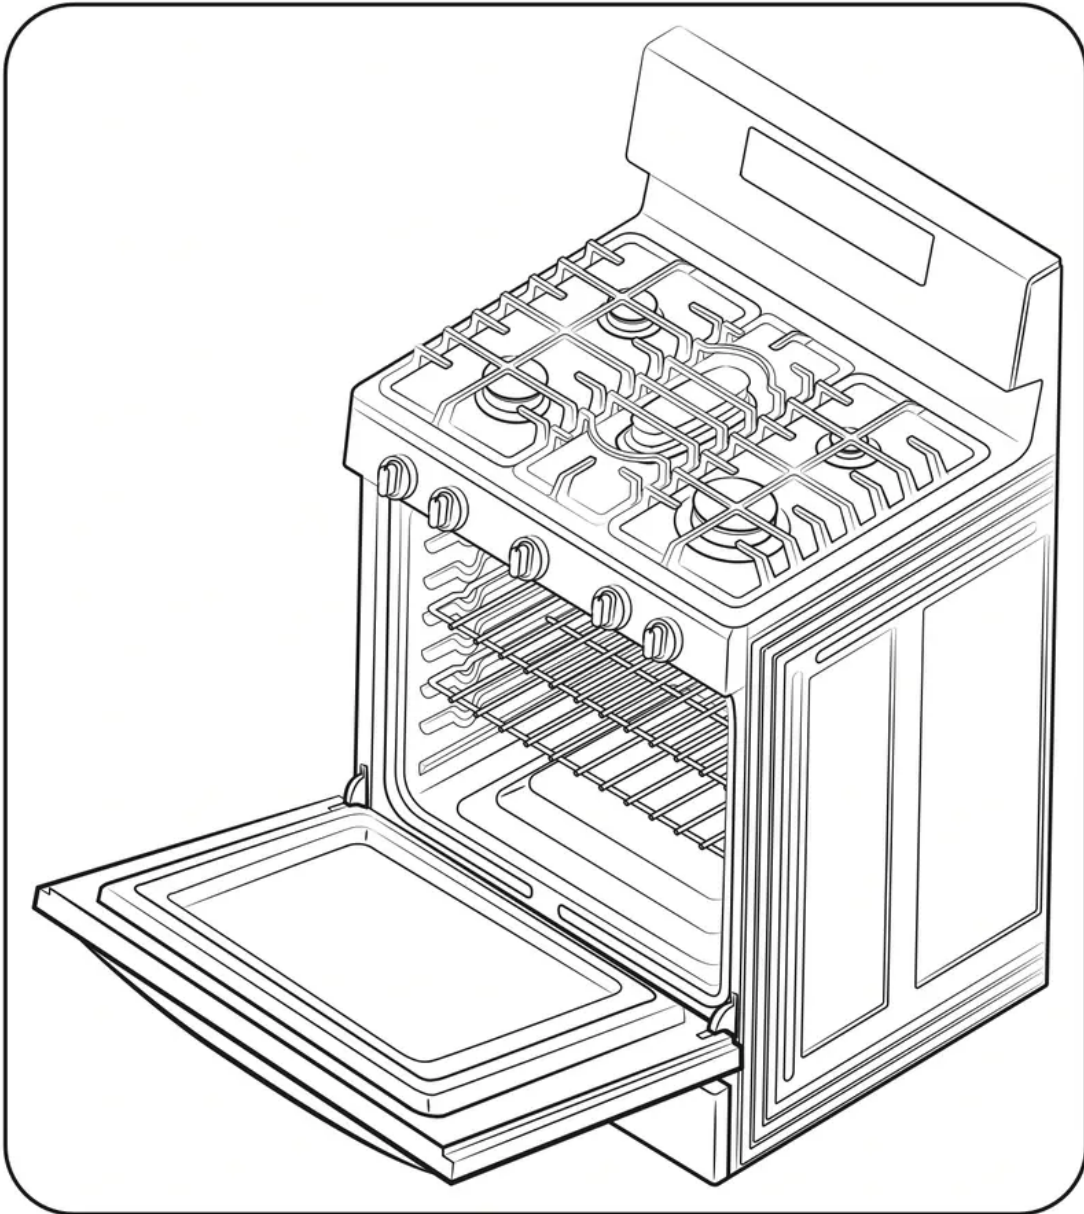

2. Unlock the two hinge locks. Pull each hinge lock down towards the door frame to unlock them so they look like the illustration to the left.

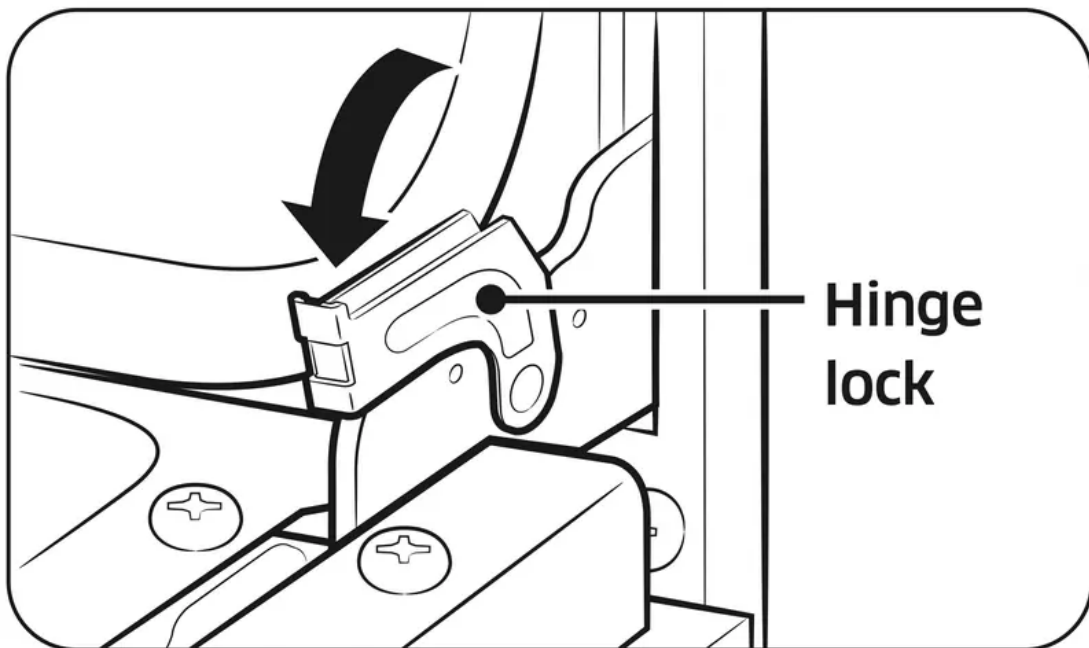


3. Close the door to the removal position, approximately 5 degrees from vertical.
4. Firmly grasp both sides of the oven door and lift the door up and out until the hinge arms clear the slots in the bottom of the oven door.
5. Carefully place the door in a safe location.

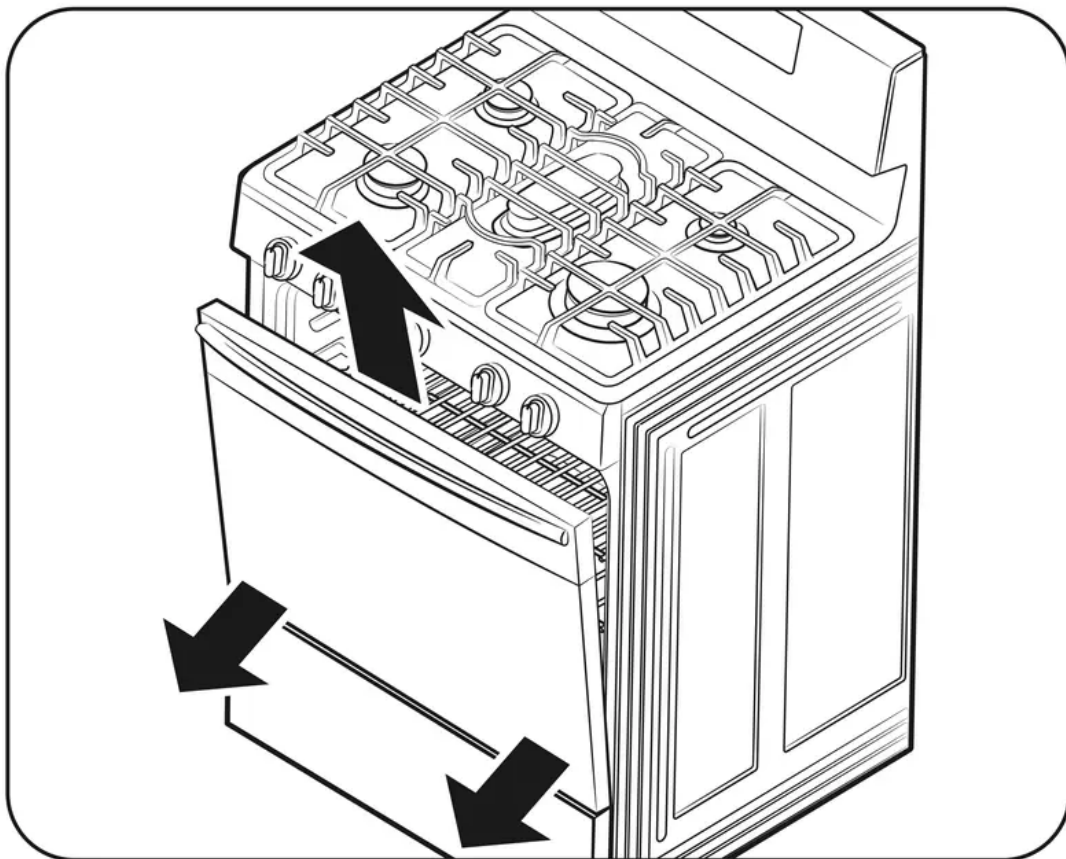


## To replace the door

1. Make sure hinge arms are unlocked and in the removal position.

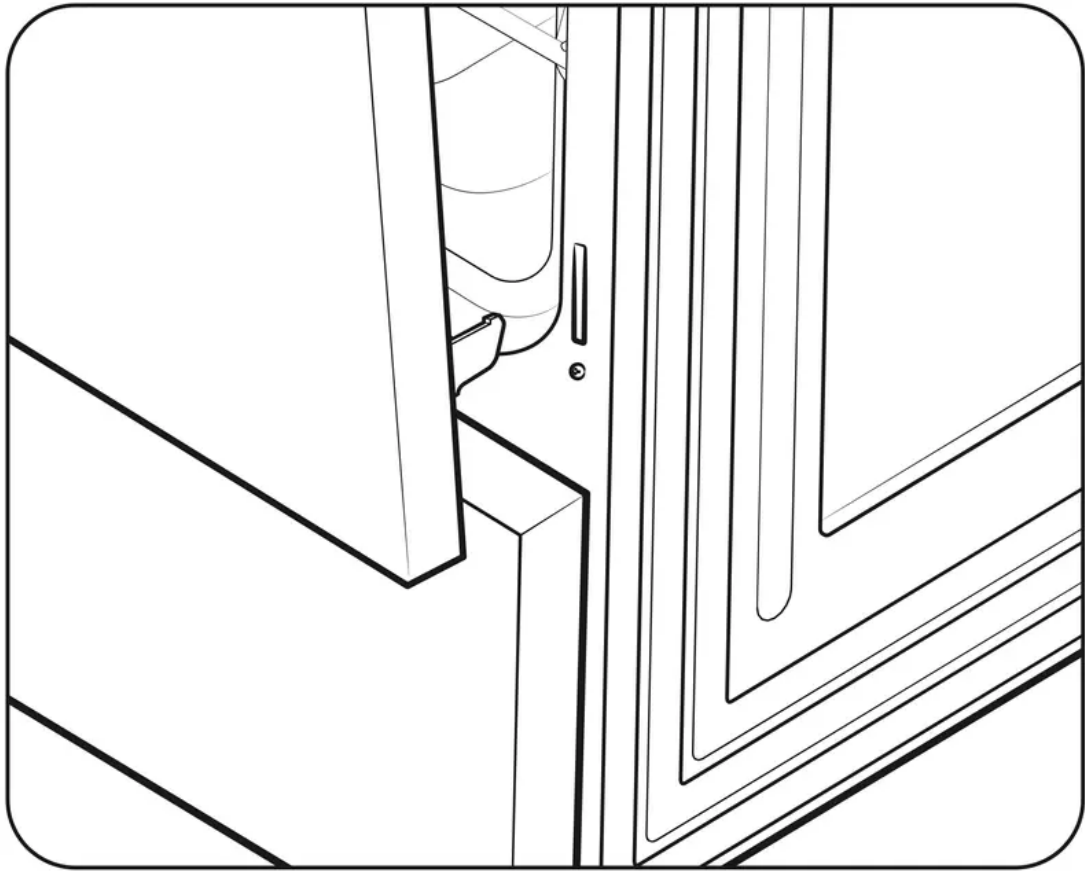


2. Firmly grasp both sides of the door.
3. While supporting the oven door, insert both door hinge arms into the slots in the bottom sides of the door frame. When the door is held at about 5 degrees, the hinge arms will

slide in and down.

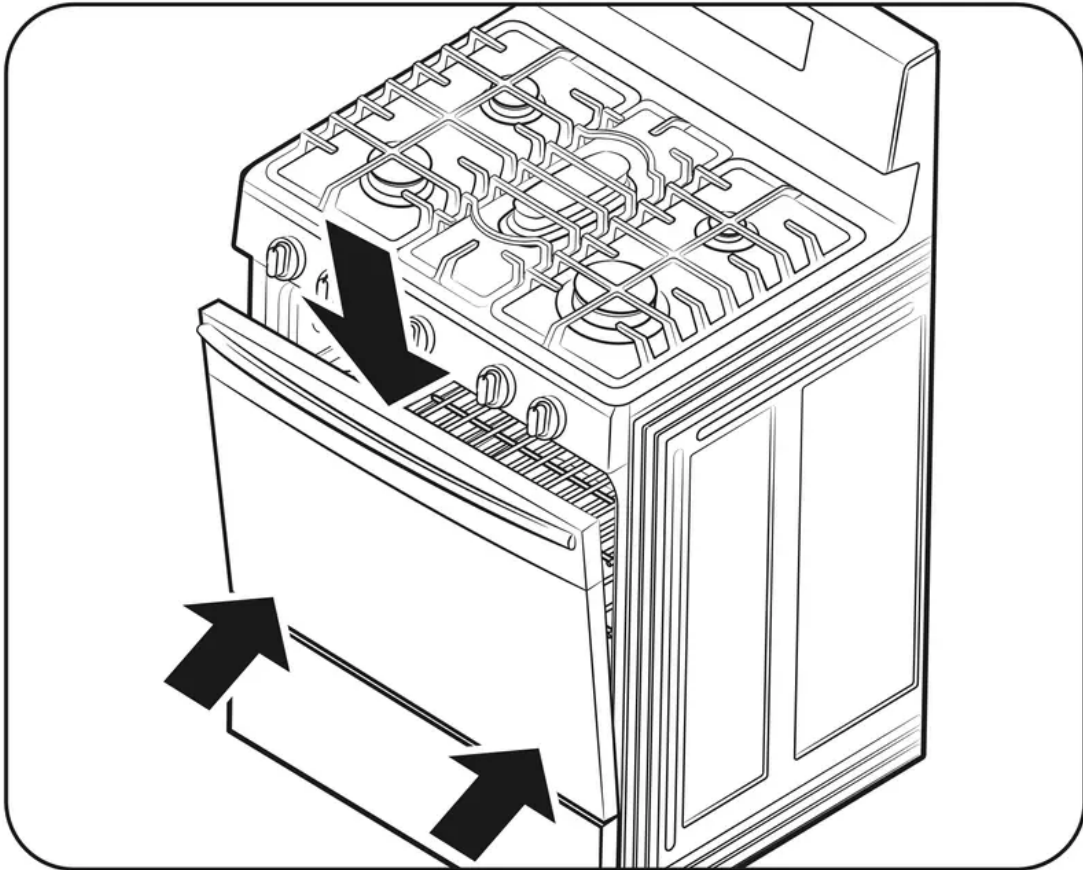


4. Completely open the oven door. If the door will not fully open, the hinge arms are not correctly inserted into the slots in the bottom of the door.
5. Lock both hinge locks. Push each lock up against the front frame of the oven cavity.
6. Close the door.
7. Reconnect power to the range.

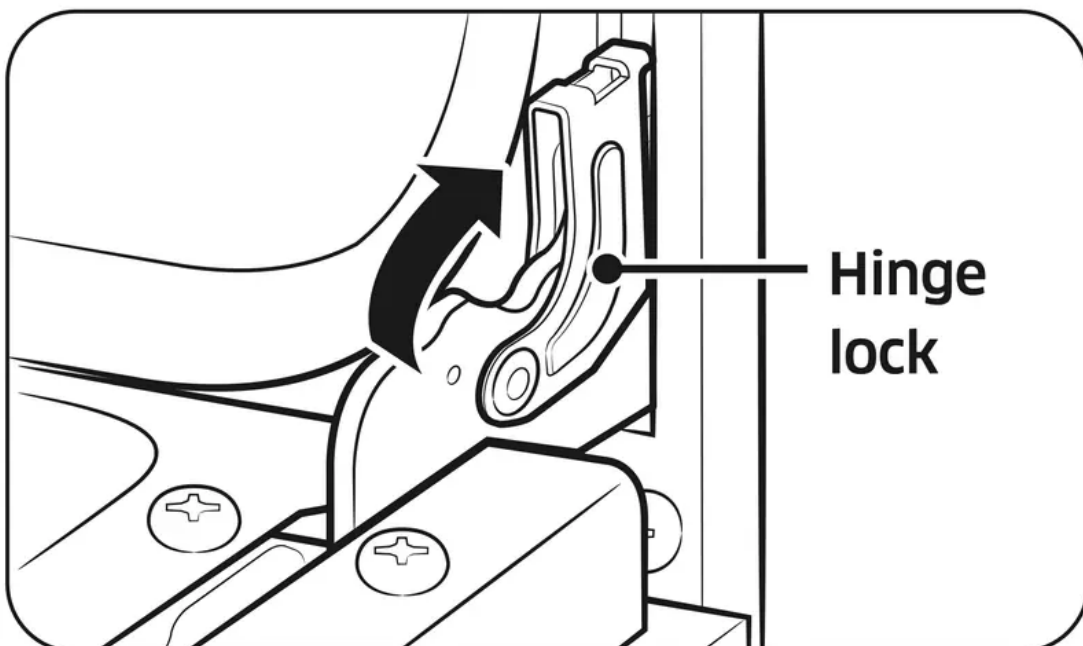


## Removing and replacing the storage drawer

### To remove the storage drawer

1. Pull out the drawer and remove any stored content.

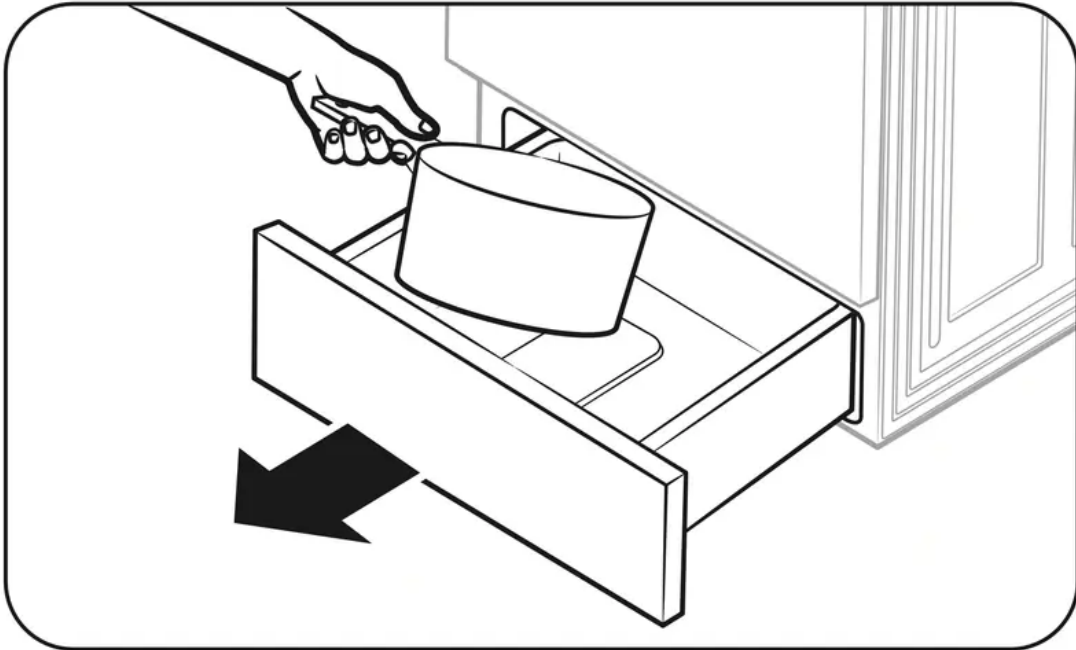


2. While supporting the drawer, pull it out until the top of the drawer sides come out of the two nylon drawer guides.  
Then, lift to remove the drawer.
3. Clean the drawer in warm, soapy water.  
Rinse and dry thoroughly.

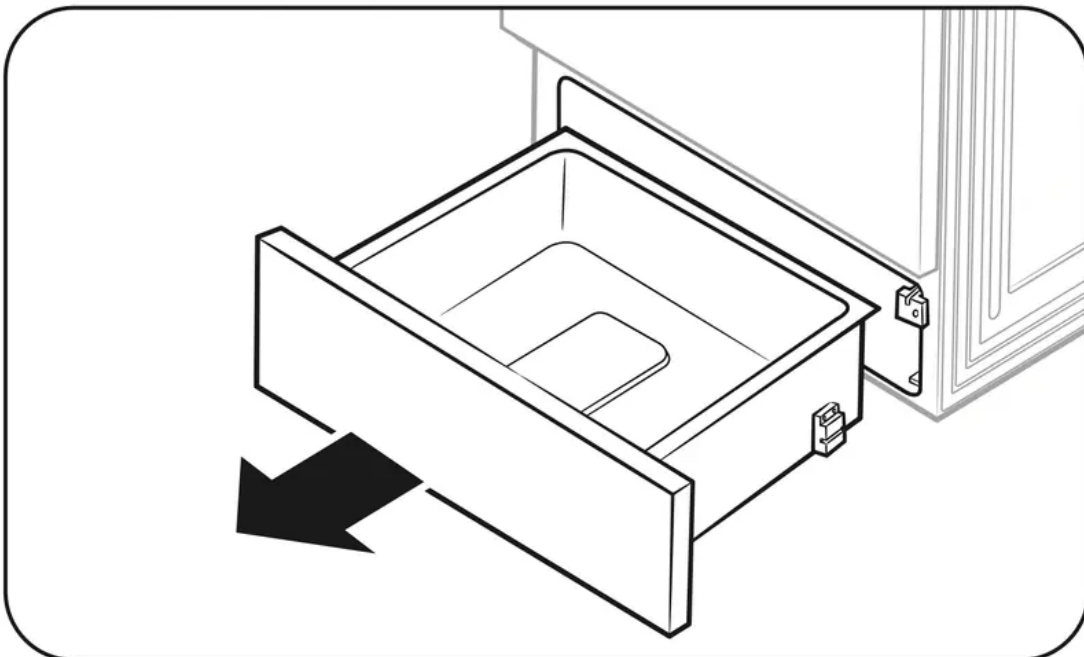


## To replace the storage drawer

1. Place the top of both drawer sides in the openings on the two nylon drawer guides and push in enough to support the drawer.

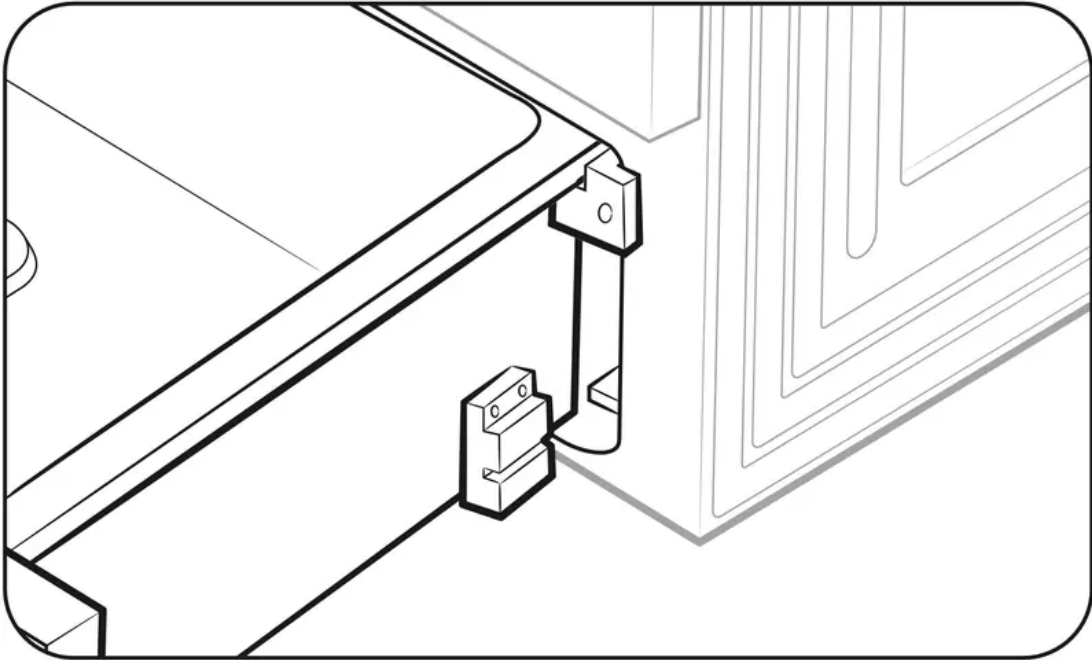

2. Replace any stored content and push in the drawer while slightly lifting the front to close it.

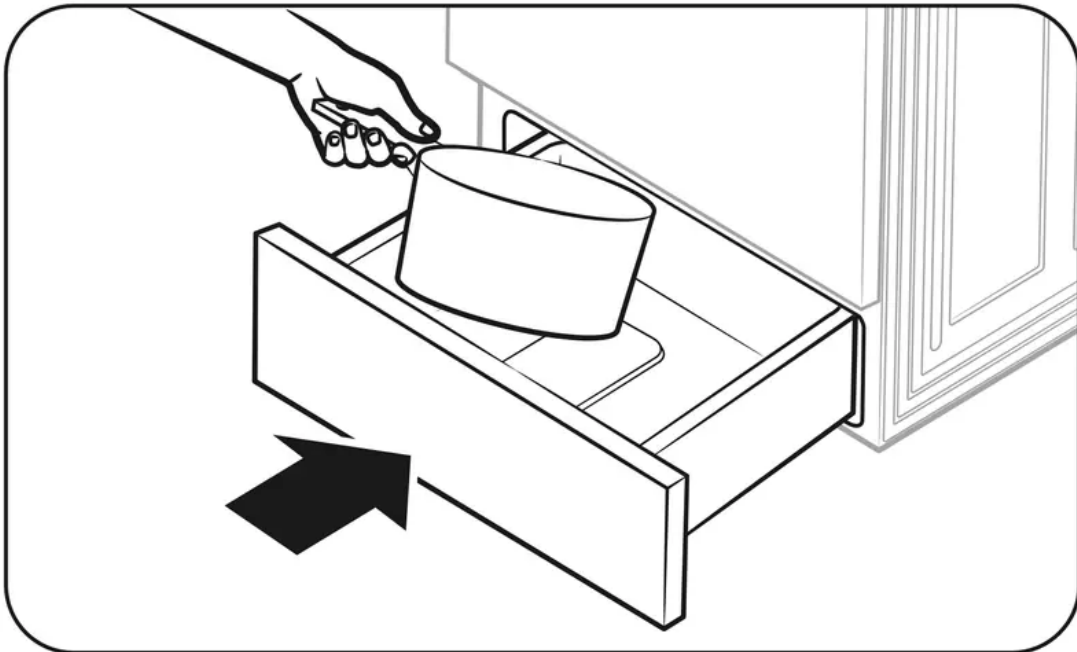

## Self-cleaning oven

The self-cleaning oven uses high temperatures (well above cooking temperatures) to burn off left over grease and residue completely or reduce them to a finely powdered ash that can be wiped away with a damp cloth.

## **WARNING**


Failure to follow these precautions could result in damage to the oven, fire, and/or personal injury.

- Do not leave small children unattended near the range during a self-cleaning cycle. The outside surfaces of the range can get extremely hot.
- Some birds are extremely sensitive to fumes from a self-cleaning oven. Relocate birds to a well-ventilated room away from the range.
- Do not line the oven, oven racks, or oven bottom with aluminum foil. Doing so will result in poor heat distribution, produce poor baking results, and cause permanent damage to the oven interior. The aluminum foil will melt onto and adhere to the interior oven surfaces.
- Do not force the oven door open during the self cleaning cycle. It will damage the automatic door-locking system. The door automatically locks when the self-cleaning cycle is started and stays locked until the cycle is cancelled and the oven temperature is below 392 °F.
- Be careful opening the oven door after a self-cleaning cycle. The oven will still be VERY HOT and hot air and steam might escape when the door is opened.

### **Before a self-cleaning cycle**

**NOTE:** Remove the racks. Leaving the oven racks in the oven during a self-cleaning cycle will discolor the oven racks and make them difficult to slide in and out of position.


- Make sure the door lock feature is turned off and the oven is cool. If they are not, the self-cleaning cycle will not start.

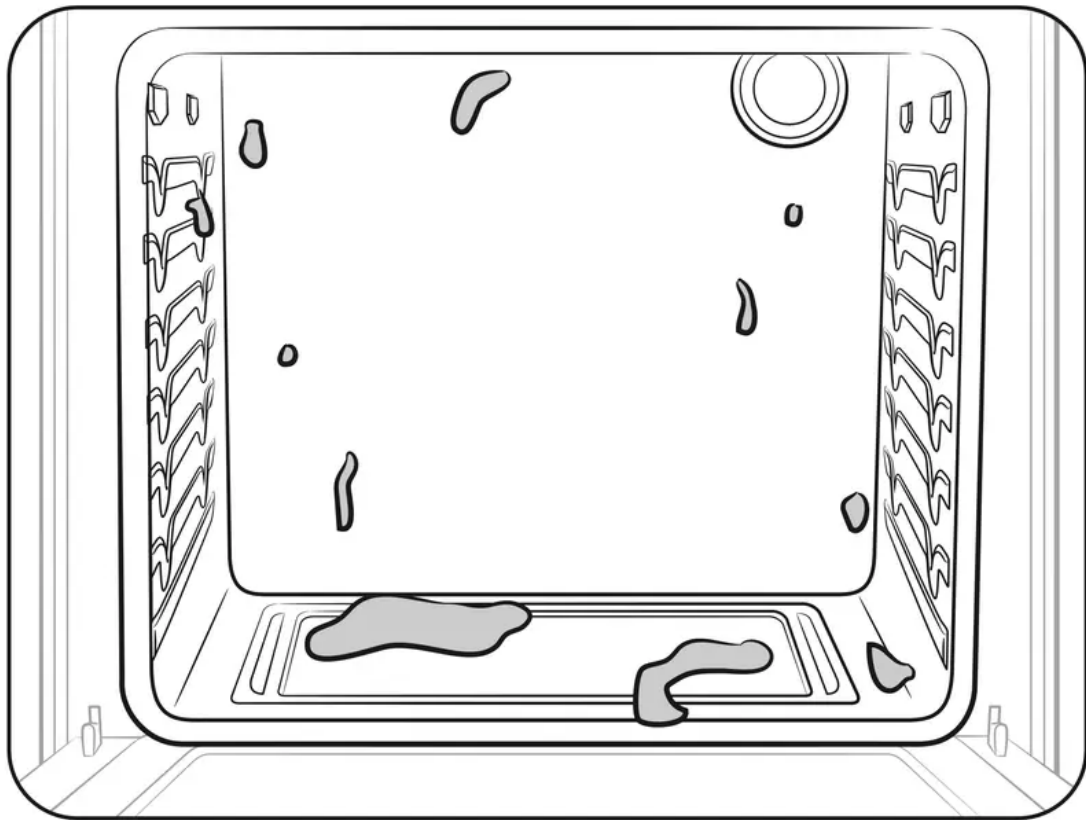


**WARNING:** Do NOT use the surface burners while the oven is operating in the self clean mode.

**NOTE:** Before a self-cleaning, check whether the door is locked.

- A blinking Lock icon indicates the oven door is in the process of being locked.

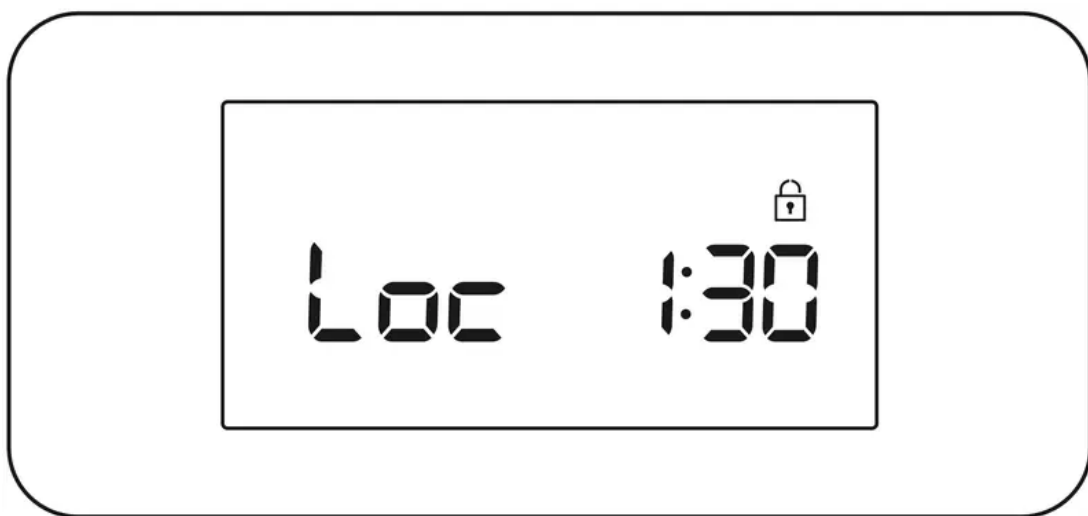

- When the Lock icon is on, the oven door is locked.

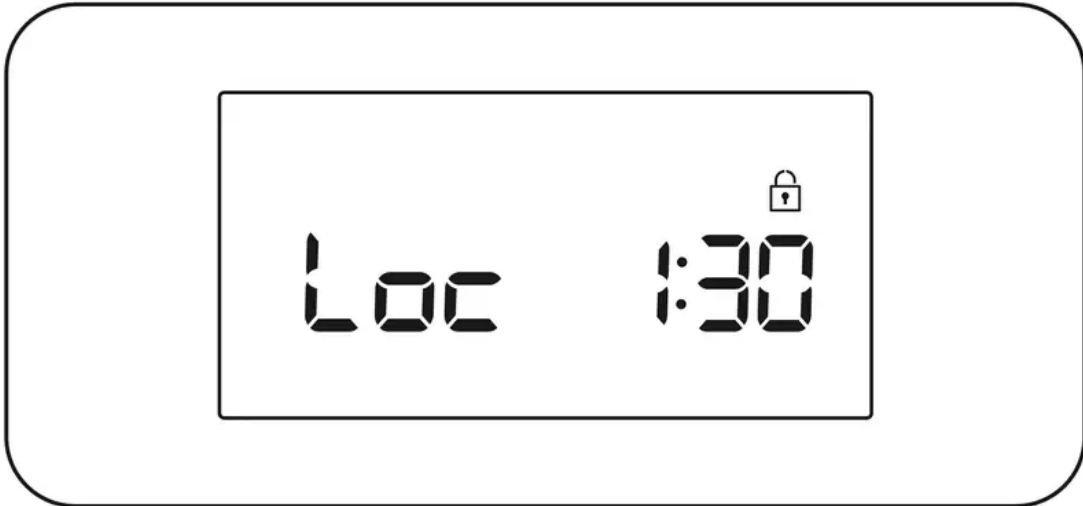


- When Loc is shown in the display, it indicates the door lock feature is on. Press and hold the START/SET pad for 3 seconds to unlock the oven controls.



### How to set the oven for self-cleaning

1. Make sure the oven door is completely closed.
2. Press the Self Clean pad on the oven control panel.  
Press the pad once for a 2-hour cleaning cycle, twice for a 3-hour cleaning cycle, or three times for a 4-hour cleaning cycle.  
Pressing the pad a fourth time will reselect the 2-hour default time.

The display will show Clean.

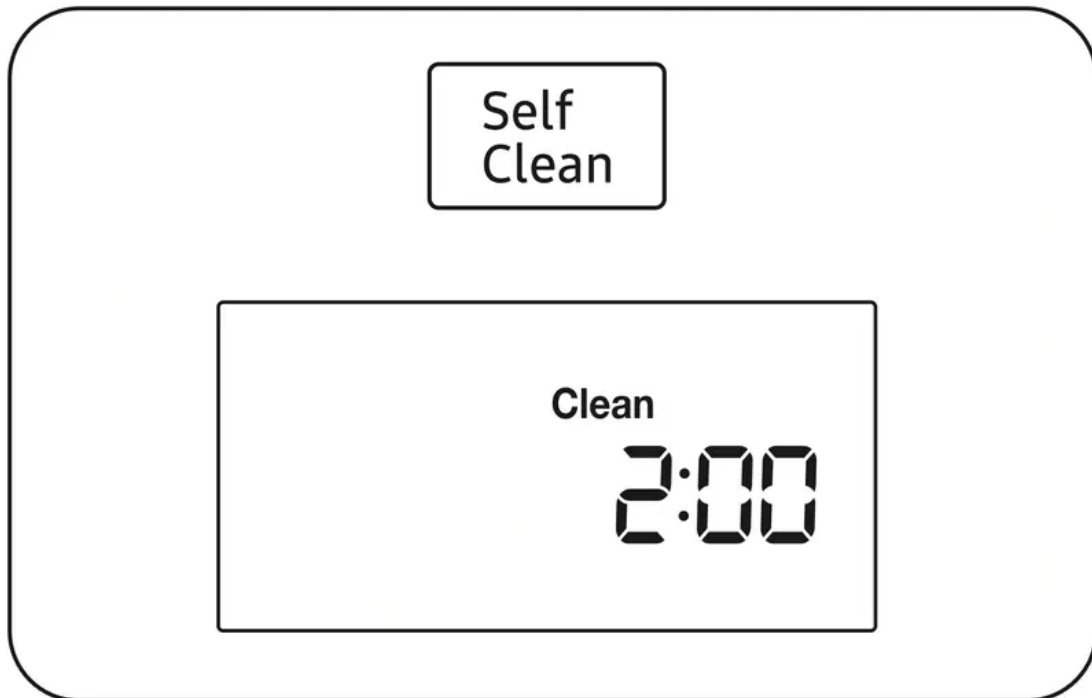


3. Press the START/SET pad to start the cycle.

The display will show Clean and the selected cleaning cycle time, and the Lock icon will blink until the door is locked. Then the Lock icon will stay on until the cycle is over and the oven temperature is below 392 °F (200 °C). The oven temperature will rise and hold the preset self-clean temperature for the duration of the selected cleaning cycle. The display will count down the cleaning cycle in minutes and hours.


When the time elapses, the oven will turn off and beep 6 times. End will show in the display and the Lock icon will blink. When the oven temperature falls below 392 °F (200

°C), the door unlocks and the Lock icon turns off.

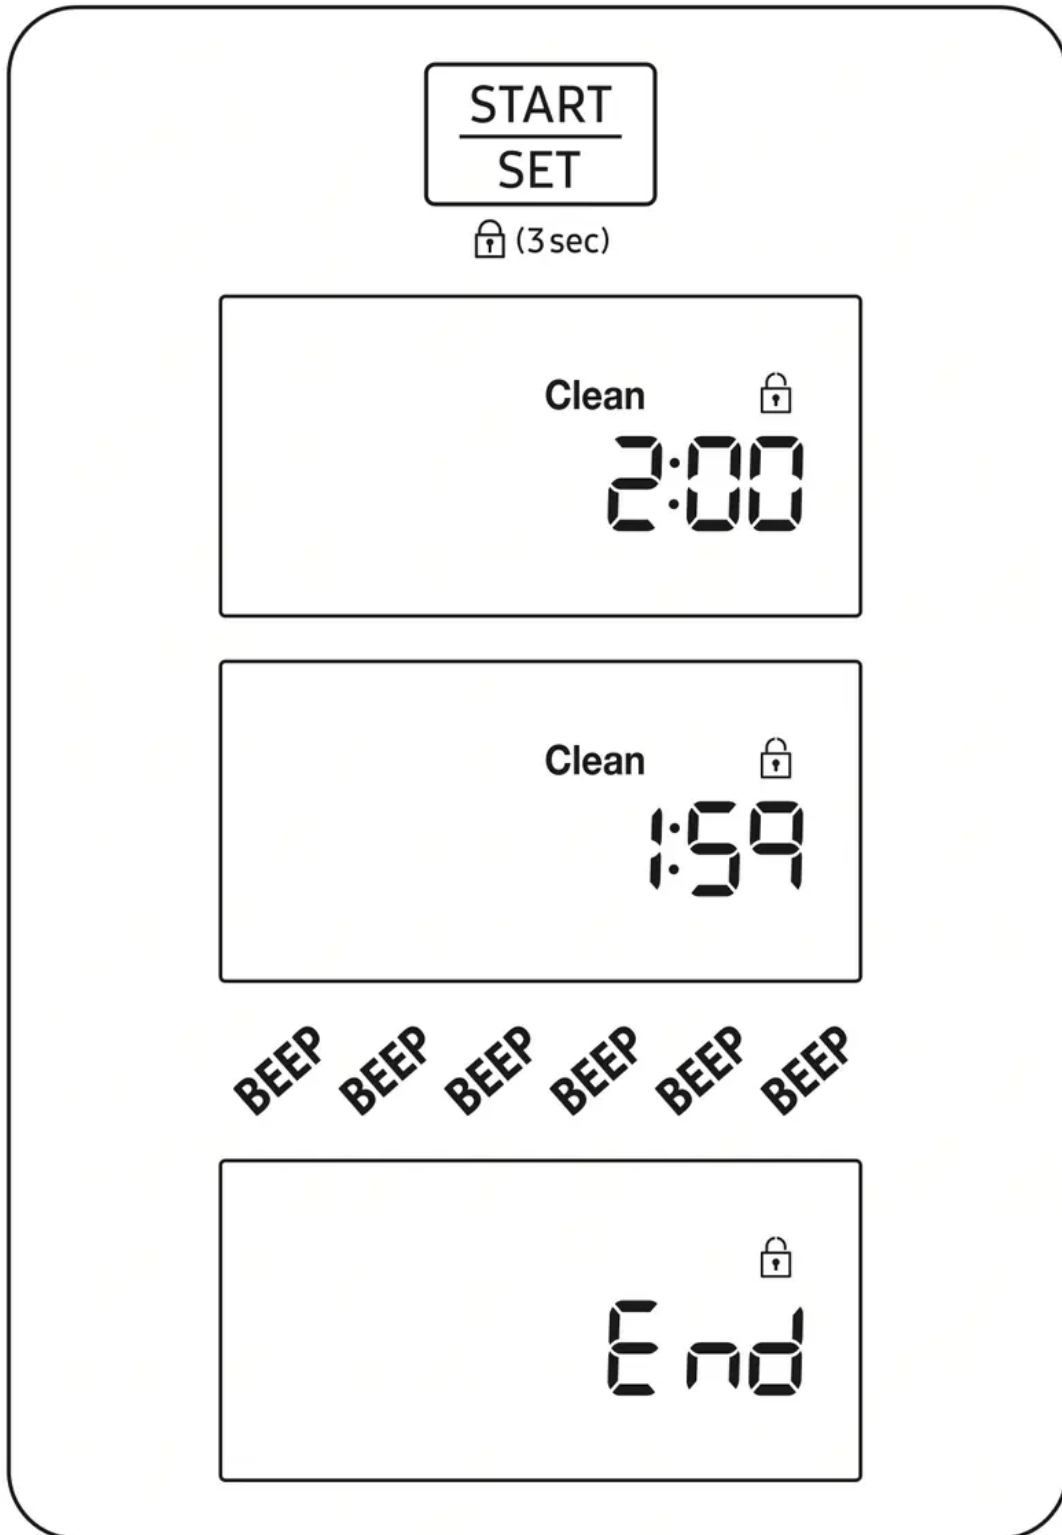

4. Press the OVEN OFF pad.

The display will go back to showing the time of day.

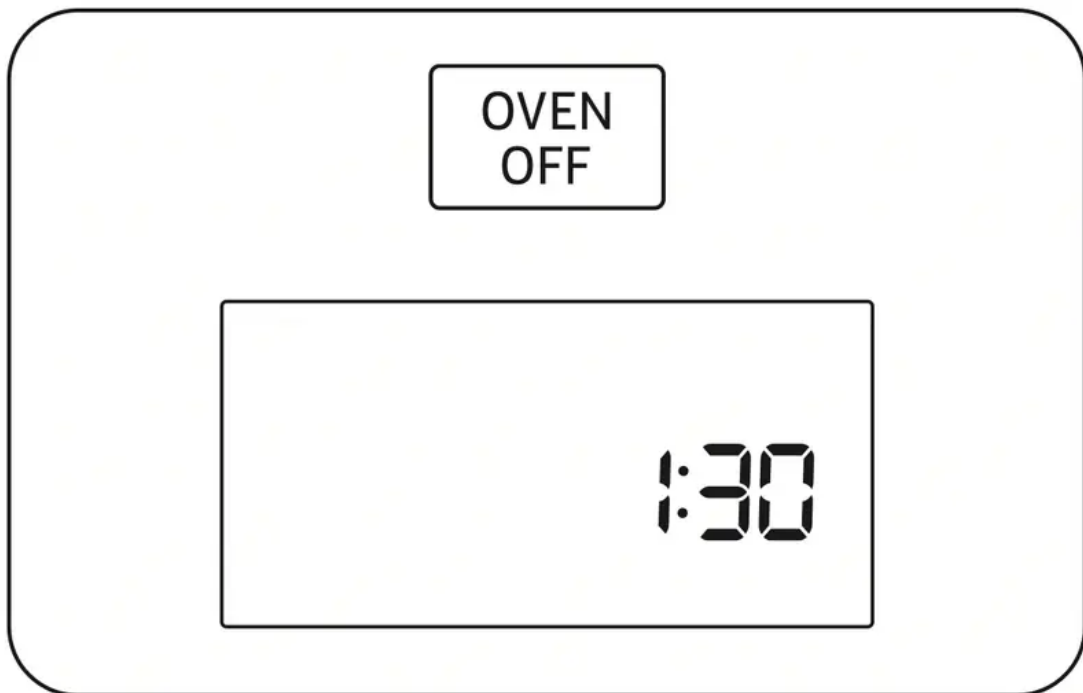


#### How to delay the start of self-cleaning

1. Make sure the oven door is completely closed.

2. Press the Self Clean on the oven control panel.


Press the pad once for a 2-hour cleaning cycle, twice for a 3-hour cleaning cycle, or three times for a 4-hour cleaning cycle.

The display will show Clean.

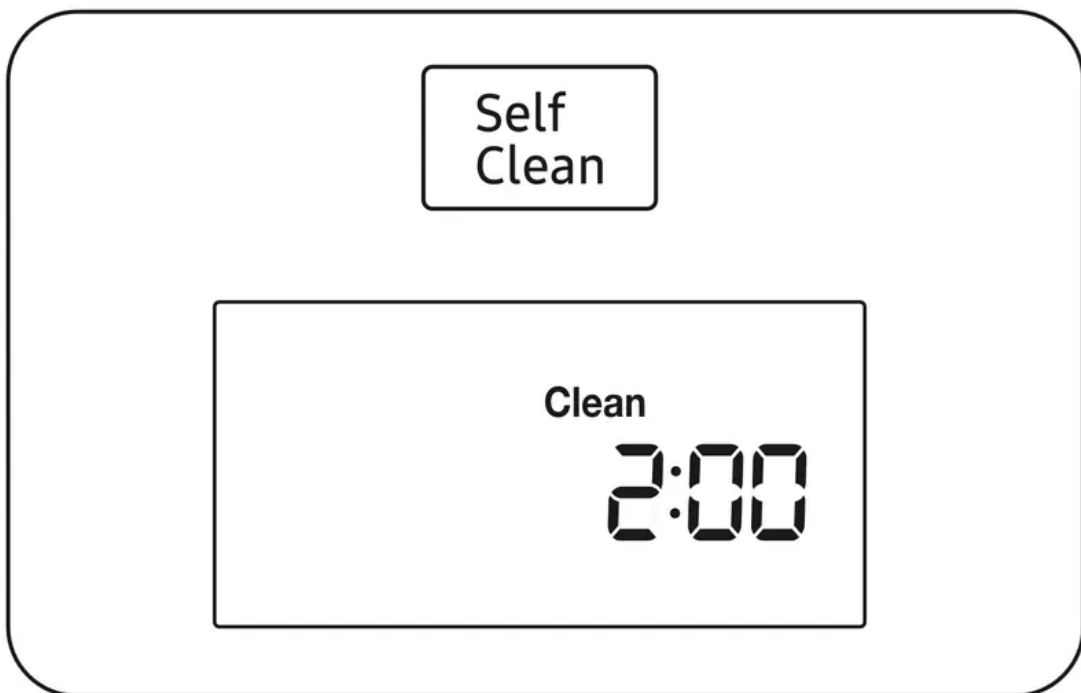


3. Press the Delay Start Pad.

The display will show Delay and -- --.

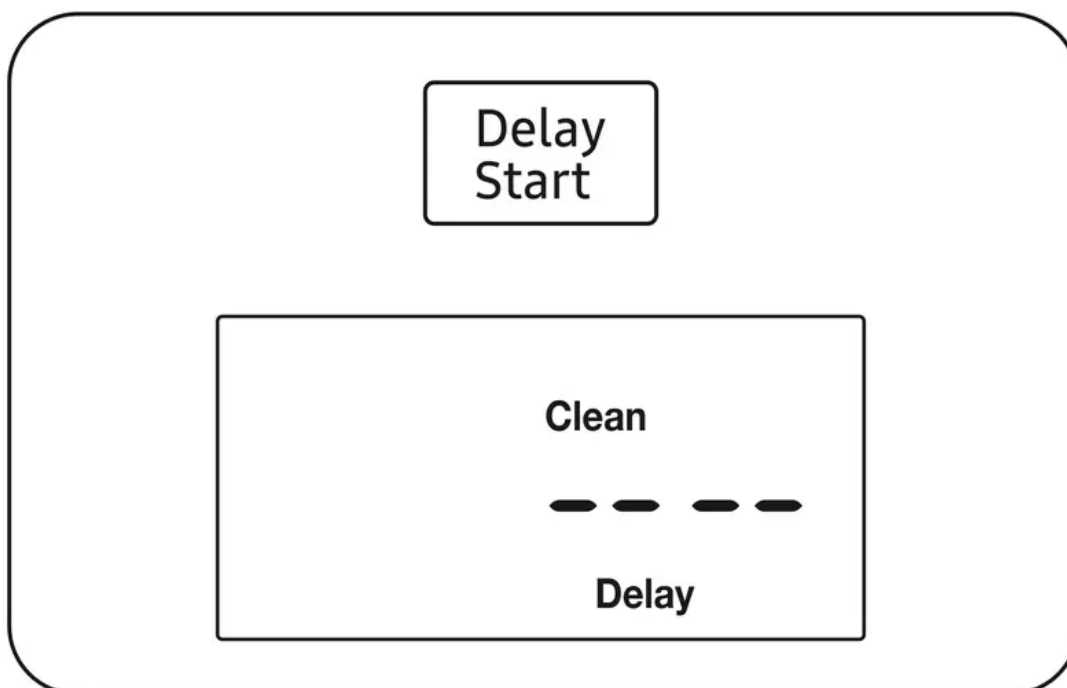

4. Press the number pads to set the time you want the oven to turn on, e.g., 4, 3, 0.

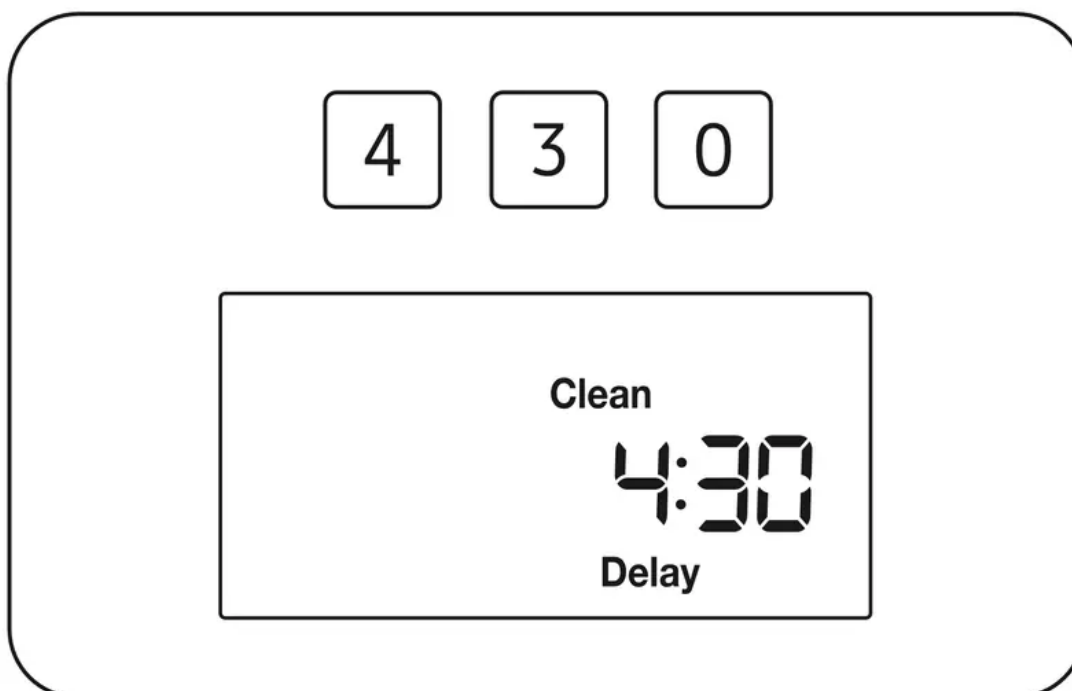


5. Press the START/SET Pad.

The display will show the Delay Start time and the Lock icon. The oven door lock will engage automatically.

When the start time is reached, the oven will turn on automatically and start the

programmed cleaning cycle.

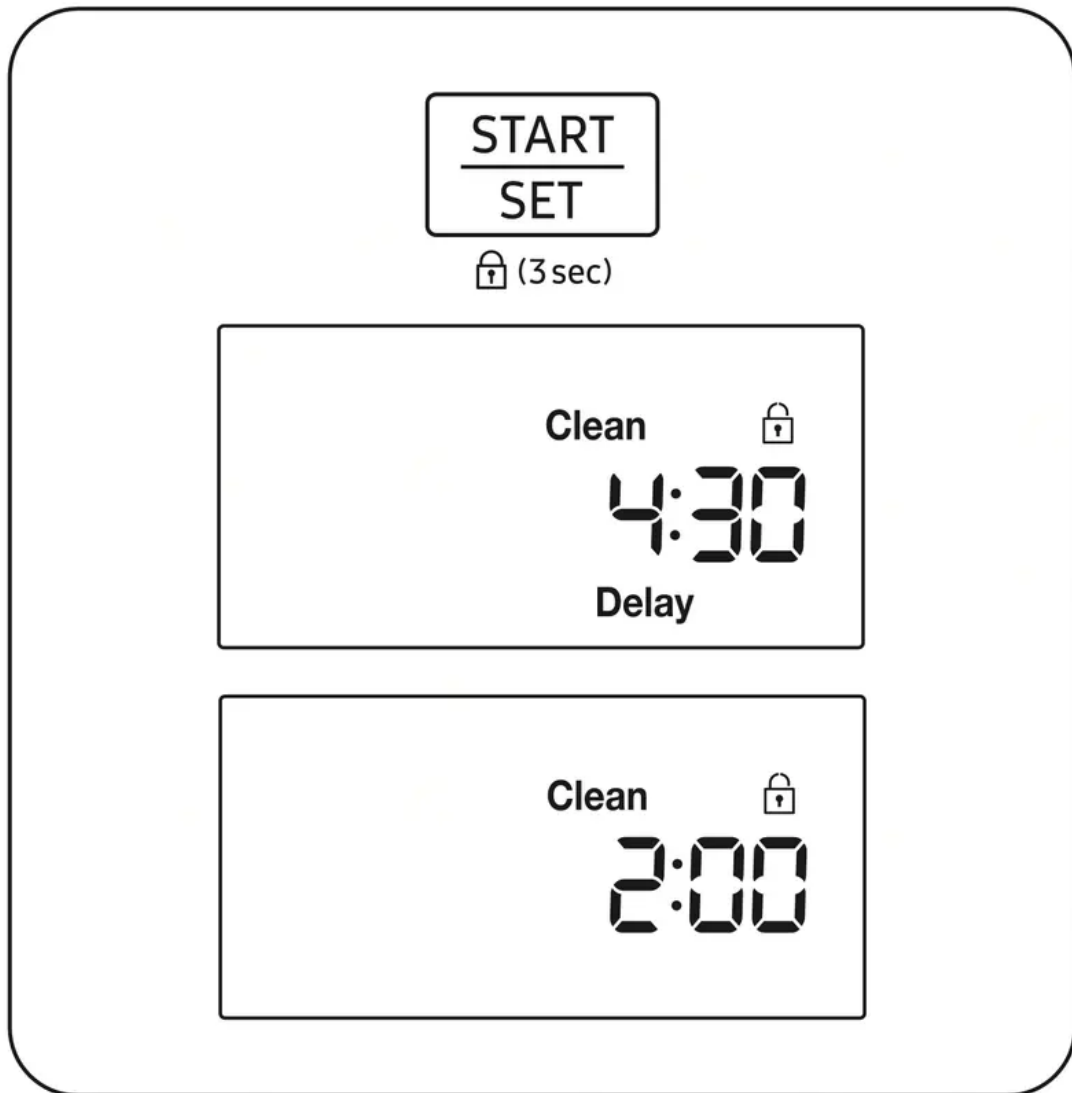


### How to cancel self-cleaning



You may find it necessary to stop or interrupt the self-cleaning cycle due to excessive smoke or fire in the oven.

- Press the OVEN OFF pad.

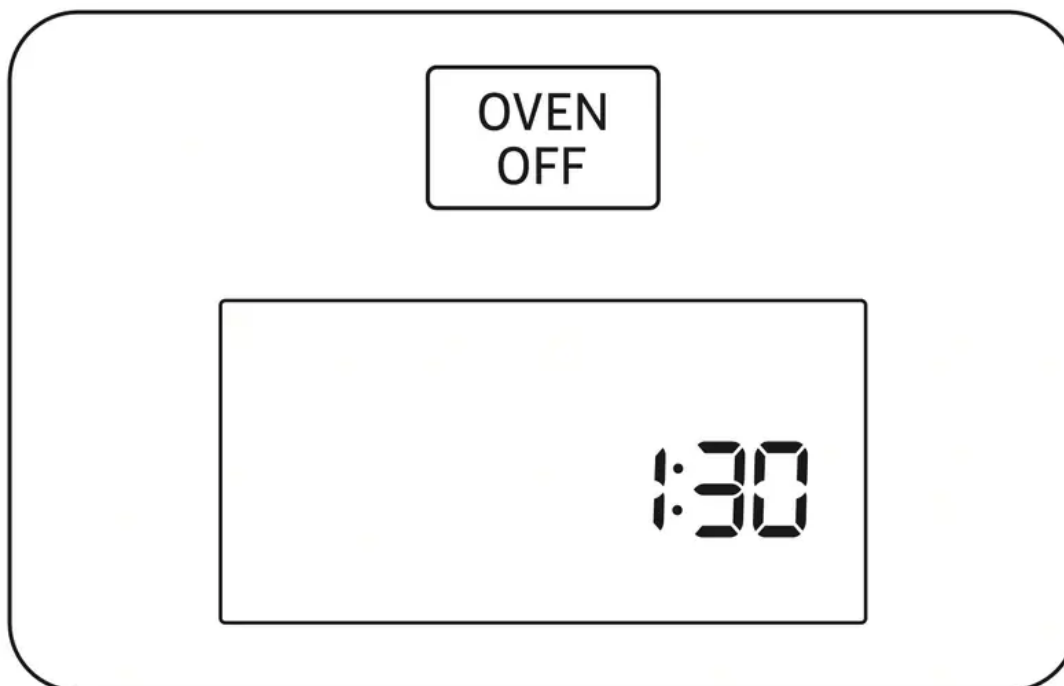

The oven will turn off. The Lock icon will blink under the current time of day on the display. When the oven temperature falls below 392 °F (200 °C), the oven door unlocks and the Lock icon turns off.

### After self-cleaning

#### CAUTION:

Be careful opening the oven door after a self-cleaning cycle. The oven is still very hot when the door unlocks. Escaping hot air and/or steam could burn you.

- The internal oven temperature must be below 392 °F (200 °C), for the automatic door lock to disengage. The door lock must be disengaged before another cooking function can be set.
- After the oven has cooled, wipe down the oven surfaces with a damp cloth to remove any ash residue.
- Stubborn spots can be cleaned with a soap-filled steel-wool pad. Lime deposits can be removed with a cloth soaked in vinegar. Rinse thoroughly after cleaning.
- If the oven is not clean after one cycle, repeat the cycle. If the oven is still hot, HOT will appear on the display until the oven is cool enough to start a new cycle.
- Self-cleaning does not operate within 2 hours after running the self-cleaning cycle.

# Troubleshooting

## Troubleshooting

Samsung works hard to ensure that you don't have problems with your new gas range. If you experience a problem, look first for a solution in the table below. If, after trying the suggested solution, you're still having trouble, call Samsung at 1-800-SAMSUNG (726-7864).



PROBLEM	POSSIBLE CAUSE	SOLUTION
<p><b>You smell gas.</b></p>	<p><b>There is a gas leak.</b></p> <p><b>The surface burner knob is not in the 'OFF' position, yet the burner itself is not ignited.</b></p>	<ul style="list-style-type: none"> <li>• Clear the room, building, or area of all occupants.</li> <li>• Immediately call your gas supplier from a neighbor's phone. Do not call from your phone. It is electrical and could cause a spark that could ignite the gas. Follow the gas supplier's instructions.</li> <li>• If you cannot reach your gas supplier, call the fire department.</li> </ul>
<p><b>The range is not level.</b></p>	<p><b>The appliance has been installed improperly.</b></p> <p><b>The leveling leg(s) is (are) damaged or uneven.</b></p>	<ul style="list-style-type: none"> <li>• Make sure the floor is level, strong, and stable. If the floor sags or slopes, contact a carpenter.</li> <li>• Check and level the range. (See the Installation Instructions.)</li> </ul>
	<p><b>The kitchen cabinets are not properly aligned and make the range appear to be not level.</b></p>	<ul style="list-style-type: none"> <li>• Ensure that cabinets are square and provide sufficient room for installation.</li> </ul>
<p><b>The oven control beeps and displays an error code.</b></p>	<p><b>You have a function error code. See the Information codes chart on page 64.</b></p>	<ul style="list-style-type: none"> <li>• Press the OVEN OFF pad and restart the oven. If the problem persists, disconnect all power to the range for at least 30 seconds and then reconnect the power. If this does not solve the problem, call for service.</li> </ul>
<p><b>All burners do not light.</b></p>	<p><b>The power cord is not plugged into the electrical outlet.</b></p>	<ul style="list-style-type: none"> <li>• Make sure the electrical plug is plugged into a live, properly grounded outlet.</li> </ul>
	<p><b>A fuse in your home may be blown or the</b></p>	<ul style="list-style-type: none"> <li>• Replace the fuse or reset the circuit breaker.</li> </ul>



PROBLEM	POSSIBLE CAUSE	SOLUTION
	<p><b>circuit breaker tripped.</b></p>	
	<p><b>The gas supply is not properly connected or turned on.</b></p>	<ul style="list-style-type: none"> <li>• See the Installation Instructions that came with your range.</li> </ul>
<p><b>Surface burners do not light.</b></p>	<p><b>The control knob is not set properly.</b></p>	<ul style="list-style-type: none"> <li>• Push in the control knob and turn it to the LITE position.</li> </ul>
	<p><b>The burner caps are not in place. The burner base is misaligned.</b></p>	<ul style="list-style-type: none"> <li>• Clean the electrodes.</li> <li>• Put the burner cap on the burner head. Align the burner base.</li> </ul>
<p><b>Surface burner clicks during operation.</b></p>	<p><b>The control knob has been left in the LITE position.</b></p>	<ul style="list-style-type: none"> <li>• After the burner lights, turn the control knob to a desired setting.</li> <li>• If the burner still clicks, contact a service technician.</li> </ul>
<p><b>The burners do not burn evenly.</b></p>	<p><b>Surface burner components and caps are not assembled correctly and level.</b></p>	<ul style="list-style-type: none"> <li>• See page 49.</li> </ul>
	<p><b>Surface burners are dirty.</b></p>	<ul style="list-style-type: none"> <li>• Clean surface burner components. (See pages 49 to 51.)</li> </ul>
<p><b>Very large or yellow surface burner flames.</b></p>	<p><b>Wrong orifice is assembled.</b></p>	<ul style="list-style-type: none"> <li>• Contact your installer. Check the burner orifice size and contact your installer if you have the wrong orifice. Check the LP gas conversion.</li> </ul>

PROBLEM	POSSIBLE CAUSE	SOLUTION
<b>Surface burners light but oven burners do not light.</b>	<b>The oven door lock is turned on.</b>	<ul style="list-style-type: none"> <li>• The display will show the Lock icon. Hold the oven door open and press the START/SET pad for 3 seconds. The oven will beep and the Lock icon will turn off.</li> </ul>
	<b>Gas Pressure Regulator shut off switch is in the 'off' position.</b>	<ul style="list-style-type: none"> <li>• Call a qualified service technician.</li> </ul>
<b>Display goes blank.</b>	<b>The electrical outlet Ground Fault Interrupter (GFI or GFCI) has been tripped and needs to be reset.</b>  <b>Your digital control has been damaged.</b>	<ul style="list-style-type: none"> <li>• Replace fuse or reset circuit breaker.</li> </ul>
<b>Very large or yellow oven burner flames.</b>	<b>The oven burner air adjustment shutters need to be adjusted.</b>	<ul style="list-style-type: none"> <li>• Call for a qualified service technician.</li> </ul>
	<b>Gas supply is not properly connected or turned on.</b>	<ul style="list-style-type: none"> <li>• See the Installation Instructions that came with your range.</li> </ul>
<b>Food does not bake or roast properly in the oven.</b>	<b>Wrong cooking mode is selected.</b>	<ul style="list-style-type: none"> <li>• See pages 26, 37.</li> </ul>
	<b>The oven racks have not been positioned properly for the foods being cooked.</b>	<ul style="list-style-type: none"> <li>• See page 29.</li> </ul>

PROBLEM	POSSIBLE CAUSE	SOLUTION
	<b>Incorrect cookware or cookware of improper size being used.</b>	<ul style="list-style-type: none"> <li>• See page 25.</li> </ul>
	<b>Oven thermostat needs adjustment.</b>	<ul style="list-style-type: none"> <li>• See page 32.</li> </ul>
	<b>There is aluminum foil on racks and/or oven bottom.</b>	<ul style="list-style-type: none"> <li>• Remove foil.</li> </ul>
	<b>Clock or timers not set correctly.</b>	<ul style="list-style-type: none"> <li>• See pages 27 and 28.</li> </ul>
<b>Food does not broil properly in the oven.</b>	<b>Oven controls not set properly.</b>	<ul style="list-style-type: none"> <li>• See page 36.</li> </ul>
	<b>Oven door was not closed during broiling.</b>	<ul style="list-style-type: none"> <li>• See page 27.</li> </ul>
	<b>The rack has not been properly positioned.</b>	<ul style="list-style-type: none"> <li>• See broiling guide on page 37.</li> </ul>
<b>Oven temperature is too hot or cold.</b>	<b>Oven thermostat needs adjustment.</b>	<ul style="list-style-type: none"> <li>• See page 32.</li> </ul>
<b>Oven burner will not shut off.</b>	<b>The oven door lock is turned on.</b>	<ul style="list-style-type: none"> <li>• The display will show the Lock icon. Hold the oven door open and press the START/ SET pad for 3 seconds. The oven will beep and the Lock icon will turn off.</li> </ul>

PROBLEM	POSSIBLE CAUSE	SOLUTION
	<p><b>The Sabbath function has been activated.</b></p>	<ul style="list-style-type: none"> <li>• SAb and the time of day will show in the display. All other controls and signals will be deactivated. To turn off the oven only, press the OVEN OFF pad.</li> <li>• To cancel the Sabbath function and reactivate the controls and signals, press and hold the Clock and Timer On/Off pad at the same time for 3 seconds.</li> </ul>
<p><b>Oven light(lamp) will not turn on.</b></p>	<p><b>The oven door lock is turned on.</b></p>	<ul style="list-style-type: none"> <li>• The display will show the Lock icon. Hold the oven door open and press the START/ SET pad for 3 seconds. The oven will beep and the Lock icon will turn off.</li> </ul>
	<p><b>The Sabbath function has been activated.</b></p>	<ul style="list-style-type: none"> <li>• SAb and the time of day will show in the display. All other controls and signals will be deactivated. To cancel the Sabbath function and reactivate the light switch and other controls, press and hold the Clock and Timer On/ Off pad at the same time for 3 seconds.</li> </ul>
	<p><b>Loose or burned-out bulb.</b></p>	<ul style="list-style-type: none"> <li>• See page 52.</li> </ul>
	<p><b>The switch operating the oven light needs to be replaced.</b></p>	<ul style="list-style-type: none"> <li>• Call for a qualified service technician.</li> </ul>
<p><b>Oven smokes excessively during broiling.</b></p>	<p><b>Meat or food not properly prepared before broiling.</b></p>	<ul style="list-style-type: none"> <li>• Cut away excess fat and/or fatty edges that may curl.</li> </ul>


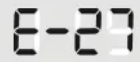
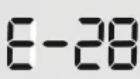

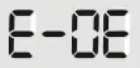
PROBLEM	POSSIBLE CAUSE	SOLUTION
	<b>Improperly positioned top oven rack.</b>	<ul style="list-style-type: none"> <li>• See broiling guide on page 37.</li> </ul>
	<b>Controls are not being set properly.</b>	<ul style="list-style-type: none"> <li>• See page 36.</li> </ul>
	<b>Greasy build up on oven surfaces.</b>	<ul style="list-style-type: none"> <li>• Regular cleaning is necessary when broiling frequently.</li> </ul>
<b>Oven will not Self-Clean.</b>	<b>The oven door lock is turned on.</b>	<ul style="list-style-type: none"> <li>• The display will show the Lock icon. Hold the oven door open and press the START/ SET pad for 3 seconds. The oven will beep and the Lock icon will turn off.</li> </ul>
	<b>The warming drawer is being used.</b>	<ul style="list-style-type: none"> <li>• Self-clean will not operate when the warming drawer is on.</li> </ul>
	<b>The oven is too hot.</b>	<ul style="list-style-type: none"> <li>• Let the oven cool down and reset the controls. The self-clean cycle will not lock the oven door if the oven temperature is too hot. The door must lock before the self-clean cycle can start.</li> </ul>
	<b>The self-cleaning oven controls are not properly set.</b>	<ul style="list-style-type: none"> <li>• Reset the self-cleaning oven controls. (See pages 56 and 57.)</li> </ul>
<b>Crackling or popping sound.</b>	<b>This is normal.</b>	<ul style="list-style-type: none"> <li>• This is the sound of the metal heating and cooling during any cooking or cleaning function.</li> </ul>
<b>Excessive smoking during a</b>		<ul style="list-style-type: none"> <li>• This is normal. The oven will always smoke more the first time it is cleaned.</li> </ul>

PROBLEM	POSSIBLE CAUSE	SOLUTION
<p><b>Self- Cleaning cycle.</b></p>	<p><b>This is the first time the oven has been cleaned.</b></p>	<ul style="list-style-type: none"> <li>• Wipe up all excessive soiling before starting the self-cleaning cycle.</li> <li>• If smoke persists, press the OVEN OFF pad. Open the windows to clear the smoke from the room. After the oven has cooled and unlocked, wipe up excessive soil and reset the oven for self-cleaning.</li> </ul>
<p><b>Oven door will not open after a Self-Cleaning cycle.</b></p>	<p><b>This is normal.</b></p>	<ul style="list-style-type: none"> <li>• The oven door will stay locked until the oven temperature drops below 392 °F.</li> </ul>
<p><b>Oven not clean after a Self-Cleaning cycle.</b></p>	<p><b>A fine dust or ash is normal.</b></p>	<ul style="list-style-type: none"> <li>• This can be wiped clean with a damp cloth.</li> <li>• Set the self-cleaning cycle for a longer cleaning time. The cycle was not long enough to burn off the dirt build up.</li> <li>• Extremely dirty ovens require hand-cleaning of excessive spill overs and food build up before starting a self-cleaning cycle. Multiple self-cleaning cycles may be necessary to completely clean the oven.</li> </ul>
<p><b>Steam or smoke coming from under the control panel.</b></p>	<p><b>This is normal.</b></p>	<ul style="list-style-type: none"> <li>• The oven vent is located there. More steam is visible when using the convection functions or when baking or roasting multiple items at the same time.</li> </ul>



PROBLEM	POSSIBLE CAUSE	SOLUTION
<b>Burning or oily odor emitting from the vent.</b>	<b>This is normal for a new oven and will disappear within 1/2 hour of the first bake cycle.</b>	<ul style="list-style-type: none"> <li>• To speed the process, set a self-cleaning cycle for a minimum of 3 hours. (See pages 56 and 57.)</li> </ul>
<b>Strong odor.</b>	<b>This is temporary.</b>	<ul style="list-style-type: none"> <li>• The insulation around the inside of the oven emits an odor the first few times the oven is used.</li> </ul>
<b>Oven racks are difficult to slide.</b>		<ul style="list-style-type: none"> <li>• Apply a small amount of vegetable oil to a paper towel and wipe edges of the oven racks with the paper towel. Racks become dull and hard to slide when they are left in the oven during a self-clean cycle.</li> </ul>
<b>Warming drawer or storage drawer does not slide smoothly or drags.</b>	<b>The drawer is not properly aligned with the full-extension roller guide rails or nylon drawer guides.</b>	<ul style="list-style-type: none"> <li>• Remove and replace the drawer. (See page 54.)</li> </ul>
	<b>The contents in the drawer are too heavy.</b>	<ul style="list-style-type: none"> <li>• Reduce the weight and/or redistribute the contents in the drawer.</li> </ul>

## Information codes

CODE SYMBOL	MEANING	SOLUTION
	Shorted Key.	<p>Press the OVEN OFF pad and restart the oven.</p> <p>If the problem persists, disconnect all power to the range for at least 30 seconds and then reconnect the power.</p> <p>If this does not solve the problem, call for service. See the instructions below this chart.</p>
	Oven sensor opened problem.	
	Oven sensor shorted problem.	
	Oven overheating.	
	Door locking error.	

For any codes not listed above, or if the suggested solution does not fix the problem, call 1-800-SAMSUNG (726-7864).

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.