












OVERVIEW



SPECIFICATIONS

ENV155

	120 Volts, 60 Hertz, 1350 Watts (USA/CA)
	~ 10.1 lb (~ 4.6 kg)
	37.1 fl oz.* (1.1 l*) 33.8 fl oz.* (1.0 l*) 2nd is wrong
	If water tank on the side/Si le réservoir d'eau est sur le côté
	If water tank at the back/Si le réservoir d'eau est à l'arrière
	8.7 in / 220 mm*
	9.1 in / 232 mm*
	12.7 in / 323 mm*
	13.2 in / 335 mm*
	5.6 in / 142mm
	16.2 in / 412 mm*
	16.7 in / 423 mm*
	12.8 in / 325 mm
	16.9 in / 429 mm

* Depending on the model

MACHINE HANDLING

WATER TANK





1. The wafer tank arm can be rotated and positioned at the back, to the left or to the right hand side of the machine.



2. Remove the wafer tank by tilting it slightly backwards, then gently pulling it up. Put the water tank in position by placing it vertically onto its arm, until there is a 'click' sound.

CAPSULE CONTAINER




1. Remove the wafer tank, then remove the capsule container by sliding it sideways.



2. Place the capsule container in the back of the machine by sliding it sideways into position. It is held in place by a magnet.

Place the wafer tank back.

CUP SUPPORT

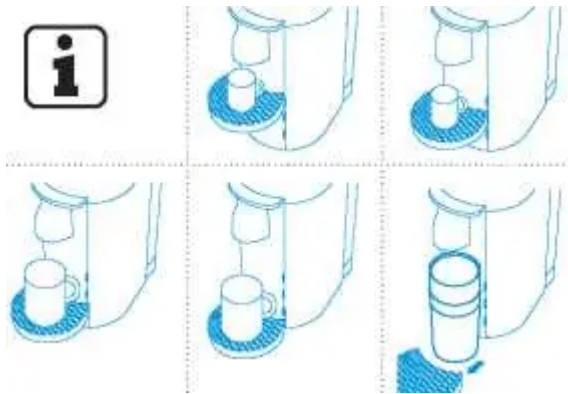

1. The cup support has 4 positions and can be temporarily removed to accommodate various cup sizes.



2. To place the cup support, slide cup support straight into the holes and gently push down until the hooks are well in place. To remove it, gently lift straight up and then pull the cup support out.

POWER CABLE



1. The power cable can be adjusted under the machine. Insert the remaining cable in the guide on the left or on the right side socket, depending on the position chosen for the water tank. Ensure machine is in the upright position.

FIRST USE OR AFTER A LONG PERIOD OF NON-USE



1. Rinse and clean the wafer tank and lid before filling it with only fresh potable water. Place the wafer tank in place.



2. Ensure the capsule container and the cup support are in place. For your safety, operate the machine only with cup support and capsule container in position.



3. Plug the machine into the outlet.



4. Turn the machine "ON" by pushing the button. GREEN light will blink while the machine is heating up.



5. Steady GREEN lights will indicate the machine is ready.



6. Place a container of at least 12.5 fl oz./0.4 l under the coffee outlet



7. Open the machine head by pressing the lever up to eject the capsule and then push the lever down to close it.



8. Push the button 3 times in 2 seconds to start cleaning and let the cleaning procedure complete automatically. ORANGE lights will blink during the operation. It will take less than 2 minutes before a flow comes out. The procedure consists of 3 cycles of pumping water in, internal cleaning and water flowing from the outlet to complete.



9. This procedure may take up to 5 minutes. The procedure can be stopped at any time by pushing the button. The button will go to steady GREEN. To restart the cleaning process, follow the instructions starting at point 8. To brew a coffee, insert a capsule, push the lever down to close the machine and push the button

COFFEE PREPARATION

1. Fill the water tank with fresh potable water.



2. Turn the machine "ON" by pushing the button.



3. GREEN lights will blink while the machine is heating up.



4. Steady GREEN light indicates the machine is ready



5. Place a cup of sufficient capacity under the coffee outlet. For Alto coffee, please remove the cup support. Risk of scalding may occur due to overflowing



6. Open the machine head by pushing the lever up. The machine head will open automatically, with an electrical mechanism.



7. Insert a capsule with the dome shape facing downward



NOTE: To avoid damaging the machine, use only fresh, unused capsules. Ensure previous capsule has been ejected before inserting a fresh one

8. Push the lever down to close the machine head.



9. Push the button to start the brewing process . Green light will rotate slowly during the barcode reading and pre-wetting phase.



NOTE: You can do this even when the machine is still heating up. The coffee will then flow automatically when the machine is ready. The machine will automatically recognize the inserted capsule and select the coffee preparation parameters and cup length defined by Nespresso coffee experts to extract the coffee blend at its best.

10. During the coffee preparation phase coffee will start to flow. GREEN light will rotate quickly during brewing. Steady GREEN light indicates that coffee brewing is ready



11. To stop the coffee flow early, push the button. Steady GREEN light indicates that coffee brewing is ready



12. To manually top off your coffee, push the button and push again to stop when desired volume is reached.



13. For a cold brew coffee, ensure you have ice cold water in the water tank or add water and ice into the water tank. Place the dedicated cold brew coffee capsule of your choice in the machine and push the button. Due to a slower infusion process, the beverage will take longer to prepare

than hot coffee to ensure all aromas are extracted according to the process defined by our coffee experts.



14. To eject the capsule, open the machine head by pushing the lever up. The machine head will open automatically with an electrical mechanism.



ENERGY SAVING CONCEPT

The machine can be turned 'OFF' at any time, by closing the machine head and then pushing the lever down for 3 seconds. Automatic "OFF" Mode: The machine will turn off automatically after 9 minutes of non-use.



PROGRAMMING THE WATER VOLUME

1. The programming is specific to each capsule size, Espresso, Coffee or Alto. Cup sizes can be reprogrammed from 0.3 fl oz./10 ml to 17 fl oz./500 ml



2. Open the machine head by pressing the lever up; Insert the capsule blend you want to program; Close the head by pushing the lever down.

3. Push and hold the button until desired volume is reached.



4. Water volume level is now stored for the capsule size used for the programming.

NOTE: Once a customer-specific volume is programmed by the user, every time that capsule size is inserted in the machine, the preparation will stop at the user-programmed cup size. It is possible to restore cup size volumes, refer to "Reset to factory settings" section.

SPECIAL FUNCTIONS

CLEANING

1. Rinse and clean the water tank and lid before filling it with fresh potable water. Place the water tank in place



2. Rinse the cup support. Place a container of at least 13.5 fl oz./0.4 l under the coffee outlet



3. Open the machine head by pushing the lever up and let the used capsule be ejected, then close the machine. Empty and rinse the capsule container



4. Push the button 3 times in 2 seconds to start the cleaning cycle. ORANGE light will blink during the cycle. It will take less than 2 minutes before a flow comes out. The cleaning procedure will run automatically for 5 minutes. The procedure consists of 3 cycles of pumping water in, internal cleaning and water flowing from the outlet to complete



5. The procedure can be stopped at any time by pushing the button. The button will go to steady GREEN light when ready for brewing. To restart the cleaning process, follow the instructions starting at point 4. To brew a coffee, insert a capsule, push the lever down to close the machine and push the button.

RESET TO FACTORY SETTINGS

1. Turn the machine "OFF" by pushing the lever down for 3 seconds.



2. To enter Factory settings mode, push the button and the lever down at the same time for 3 seconds. ORANGE steady light indicates entry into the Special Functions menu



3. Choose function by pressing the lever down:

- 3 times for "Reset to factory settings"



4. Push the button to confirm. ORANGE light will blink 3 times in 3 seconds to confirm reset is done and then go to steady GREEN. The machine is now ready to use



NOTE: It is possible at any time to exit the Special Functions menu by pushing the button and pressing the lever down at the same time for 3 seconds. GREEN steady light indicates the machine is ready

EMPTYING THE SYSTEM

BEFORE A PERIOD OF NON-USE, FOR FROST PROTECTION OR BEFORE A REPAIR

1. Empty the water tank and put it in place.



2. Open the machine head and let the used capsule be ejected. Close the machine. Empty the capsule container



3. Turn the machine "OFF" by pushing the lever down for 3 seconds



4. Place a container under the coffee outlet. To enter "Emptying the system" mode push the button and the lever down at the same time for 3 seconds. ORANGE steady light indicates entry into the Special functions menu



5. Choose function by pressing the lever down

- 2 times for "Emptying the system"



6. Push the button. The ORANGE lights will blink during the entire procedure. The machine turns "OFF" automatically when machine is empty.



CAUTION: Caution should be exercised as the machine evacuates remaining liquids using heat. Small quantities of steam may emit from the machine.



DESCALING

NOTE: Duration: Approximately 20 minutes.

1. Turn the machine "ON" by pushing the button



2. Open the machine head by pushing the lever up and let the used capsule be ejected. Close the machine by pushing the lever down.



3. Turn the machine "OFF" by pushing the lever down for 3 seconds.



4. Empty the cup support and the used capsule container



5. Fill the water tank with 1 unit of Nespresso descaling liquid and add minimum 17 fl oz. / 0.5 l of water



6. To enter Descaling mode, push the button and the lever down at the same time for 3 seconds. ORANGE steady light indicates entry into the Special Functions menu.



7. Choose function by pressing the lever down:

- 1 time for "Descaling"



8. Place a recipient (minimum volume: 20 fl oz./0.6 l) under the coffee outlet



9. To start descaling, push the button. The machine will stop automatically when complete. ORANGE light will blink during the entire descaling process.



10. Empty, clean and rinse the water tank and cup support thoroughly.



11. Fill the water tank with fresh potable water and put it back in place on the machine



12. When ready, push the button to rinse the machine. Machine will stop automatically when complete. ORANGE light blinking once every 2 seconds confirms the descaling process is completed. The procedure can be stopped at any time by pushing the button.



13. To exit descaling mode, press the button and the lever down at the same time for 3 seconds.



14. GREEN steady light when ready.

15. Descaling is completed. Allow the machine to dry for 10 minutes before using it.

16. The machine is now ready for use

NOTE: This machine is equipped with a descaling alert: GREEN and RED steady light. Machine can only be operated to make coffee a few more times once the alert appears before descaling becomes mandatory. If the machine is completely scaled, the descaling program may not function and the machine will stop and blink. Pause the program in this case for several minutes, allowing the descaling agent to penetrate the scale build-up, then push the button again to restart the descaling

BUTTON INDICATORS/BLINKING SUMMARY

NO LIGHT / PAS DE LUMIERE:		0"	1"	2"
No light on the button/ La Lumière est éteinte	Machine OFF → see point 1* Machine éteinte → voir point 1*			
GREEN LIGHT - NORMAL USE / LUMIERE VERTE - UTILISATION NORMALE:				
Steady light/ Lumière stable	Ready mode/ Prête à utiliser			
Regular blinking: Once/second/ Clignotement régulier: une fois/seconde	Heating up/ Chauffage			
Slow rotation/ Tourne lentement	Capsule bar code reading/ Lecture du code barre de la capsule			
Fast rotation/ Rotation Rapide	Coffee preparation/ Préparation du café			
Blink three times/ Trois clignotements	Programming is confirmed/ Programmation enregistrée			
RED LIGHT - WARNING OR ERROR/ LUMIERE ROUGE - AVERTISSEMENT OU ERREUR:				
Steady light/ Lumière stable	Device error → see point 17* Erreur interne → Voir le point 17*			
Pulse down: Fade to OFF then ON/ Pulsation: s'éteint puis s'allume	Cooling down after overheating → see point 18* En refroidissement → Voir le point 18*			
Regular blinking: Once/second/ Clignotement régulier: une fois/seconde	Error → see point 14* Erreur → Voir le point 14*			
Blink two times and then back to steady GREEN/ Deux clignotements suivis d'une lumière VERTE et stable	Water tank is empty or capsule missing → see point 15* Réservoir d'eau vide ou capsule manquante → see point 15*			
Blink two times and then back to steady ORANGE/ Deux clignotements puis lumière ORANGE stable	Error in special function → see point 20* Erreur en Fonction Spéciale → Voir le point 20*			
*See pages 26-27 *Voir pages 28-29				
NO LIGHT / PAS DE LUMIERE:		0"	1"	2"
No light on the button/ La Lumière est éteinte	Machine OFF → see point 1* Machine éteinte → voir point 1*			
GREEN LIGHT - NORMAL USE / LUMIERE VERTE - UTILISATION NORMALE:				
Steady light/ Lumière stable	Ready mode/ Prête à utiliser			
Regular blinking: Once/second/ Clignotement régulier: une fois/seconde	Heating up/ Chauffage			
Slow rotation/ Tourne lentement	Capsule bar code reading/ Lecture du code barre de la capsule			
Fast rotation/ Rotation Rapide	Coffee preparation/ Préparation du café			
Blink three times/ Trois clignotements	Programming is confirmed/ Programmation enregistrée			
RED LIGHT - WARNING OR ERROR/ LUMIERE ROUGE - AVERTISSEMENT OU ERREUR:				
Steady light/ Lumière stable	Device error → see point 17* Erreur interne → Voir le point 17*			
Pulse down: Fade to OFF then ON/ Pulsation: s'éteint puis s'allume	Cooling down after overheating → see point 18* En refroidissement → Voir le point 18*			
Regular blinking: Once/second/ Clignotement régulier: une fois/seconde	Error → see point 14* Erreur → Voir le point 14*			
Blink two times and then back to steady GREEN/ Deux clignotements suivis d'une lumière VERTE et stable	Water tank is empty or capsule missing → see point 15* Réservoir d'eau vide ou capsule manquante → see point 15*			
Blink two times and then back to steady ORANGE/ Deux clignotements puis lumière ORANGE stable	Error in special function → see point 20* Erreur en Fonction Spéciale → Voir le point 20*			
*See pages 26-27 *Voir pages 28-29				

TROUBLESHOOTING

1. No light on the button.

- The machine has turned “OFF” automatically; push the button to turn the machine “ON”.
- Check the plug, voltage, and fuse.

2. No coffee.

- Check that the light on the button is GREEN.
- Check that the water tank is filled and is well positioned.

→ Check that a fresh capsule is inserted in correct position, that the machine head is closed and push the button to start.

→ Descale if necessary.

→ Open the machine head and let the capsule be ejected. Then perform a cleaning as per cleaning section.

3. Coffee is not hot enough.

→ Preheat cup with hot water from the tap.

→ Descale if necessary.

4. Unusual coffee flow.

→ Check that the water tank is well positioned.

→ Open the machine head and let the capsule be ejected. Then perform a cleaning as per cleaning section.

→ Descale if necessary.


5. Water leakage.

→ Check that the water tank is well positioned.

→ Empty and clean the capsule container.

→ If problem persists, call the Nespresso Club.

6. Capsule is not ejecting correctly.

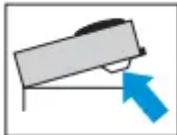

→ Open the machine head. Remove the power cord from the grid. Clean the metallic clamps with precaution. Be careful of the sharp edges in the machine head.

→ If problem persists, call the Nespresso Club.

7. Coffee leakage.

→ Open the machine head and let the capsule be ejected. Then perform a cleaning.

→ Empty and clean the cup support.

→ Descale if necessary.

→ If problem persists, call the Nespresso Club.

8. Machine turns to “OFF” mode.




→ To save energy the machine will turn off after 9 minutes of non-use.

→ See paragraph on “Energy Saving Concept”.

9. Coffee grounds in the cup.









→ Start the cleaning procedure. See paragraph on “Cleaning”.



GREEN LIGHT

 <p>10. The machine does not start and has GREEN steady lights.</p>	<p>→Check the machine head is properly closed.</p> <p>→If you want to brew an Alto, Coffee or Espresso, check that capsule is inserted in correct position, that the machine head is closed and push the button to start.</p>
 <p>11. GREEN light blinking continuously and machine not running.</p>	<p>→The machine is heating up and it will take maximum one minute ready.</p>
 <p>12. GREEN light turning while machine is running.</p>	<p>→This indicates the machine is working properly.</p>

RED LIGHT



 <p>13. Half GREEN and Half RED steady light</p>	<p>→Descaling needed: Machine can be operated when alert appears a few times after this alert before descaling becomes necessary.</p> <p>→See paragraph on "Descaling"</p>
 <p>14. RED light blinking continuously and the machine head stops moving.</p>	<p>→Remove any obstacle, empty the capsule container if necessary, then open or close the machine head depending on position.</p>
 <p>15. The machine does not start and RED light blinking 2 times and goes back to Steady GREEN.</p>	<p>→Fill the water tank and push button to start.</p> <p>→Open the machine head to eject capsule.</p> <p>→Check that a fresh capsule is inserted in correct position, machine head is closed and push the button to start</p>
 <p>16. The machine does not start and RED light blinking 3 times every 2 seconds and goes back to Steady RED.</p>	<p>→Press the lever up and wait until the machine head stops, release the lever if applicable, empty the capsule container if necessary, press the lever down to close the machine head.</p>
 <p>17. RED steady light and the machine is NOT running.</p>	<p>→ Turn the machine OFF, unplug the power cord, wait for 15 minutes for the machine to cool down.</p> <p>→Plug the power cord and turn the machine ON by pressing the button down. Machine is heating up and will go to steady GREEN when ready.</p> <p>→If problem persists, call the <i>Nespresso Club</i>.</p>
 <p>18. RED light fading out</p>	<p>→Machine is cooling down and will go to steady green when ready.</p>
 <p>19. RED light flashing twice and goes back to ORANGE blinking.</p>	<p>→Special function running: open the machine head and let the capsule be ejected. Then restart the function by pressing the button.</p> <p>→If in the "Emptying the system" mode, remove the water tank.</p>
 <p>20. RED light flashing twice and goes back to steady ORANGE.</p>	<p>→Special Functions menu: Choose desired special function by pressing the lever down.</p>

ORANGE LIGHT	
 <p>21. ORANGE light blinking continuously.</p>	<p>→Special function is running.</p> <p>→Refer to applicable section; Descaling/ Cleaning/ Emptying the system/ Reset to factory settings.</p>
 <p>22. Flashing ORANGE lights</p>	<p>→Special function is in selection mode. Refer to applicable paragraph; Descaling/ Cleaning/ Emptying the system/ Reset to factory settings.</p>

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.