



OPERATING INSTRUCTIONS




- Before inserting the plug into an electrical outlet, make sure that the electrical supply in your area matches that on the rating label on the unit.
 - When plugged in, turn on the Main power switch at the back of the unit.
 - When in Standby mode, only the switch  on both control panel and remote control will respond to your instruction. Press  to access the rest of the control panel or remote control
- a) Touch POWER to switch from fan, Low Power (750W) and High Power (1500W)

b) The timer repeatedly presses the "Timer" button to set the time for the heater to automatically turn off (from 0 hours to 8 hours)

c) + , - : adjust room temperature .Temperature setting from 50-95°F degree. "+" to increase the desired temperature and "-" to decrease the desired temperature.

d) Oscillation : Press " SWING "to activate oscillation. Press it again to cancel.

e) Press  to turn off the heater, the unit will keep working 30 seconds of cool air and then turn off.

Warning: The heater will remain hot for some time after it is turned off, please do not touch the grids and other hot areas.

 
REMOTE CONTROL

 
 
 
The remote control uses on button cell battery, type CR2025(3V).To remove the battery carriage , please use your thumb to squeeze the release tab to the right and then pull the carriage out. Place the battery into the carriage and slide the carriage back into the remote. See Fig.1. We recommend to use the Lithium-ion battery for longer use.

NOTE: Follow battery disposal instruction on battery packaging, or contact your local safety council for safely disposal of batteries.

Before using the remote control, you must remove the insulating film as shown in the figure below.

1. All functions performed with remote control work identically to the heater control panel.
2. Point the remote control at the air outlirt of the heater.

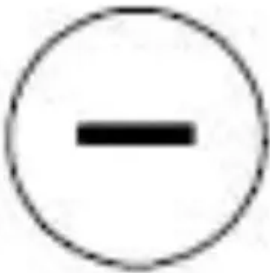

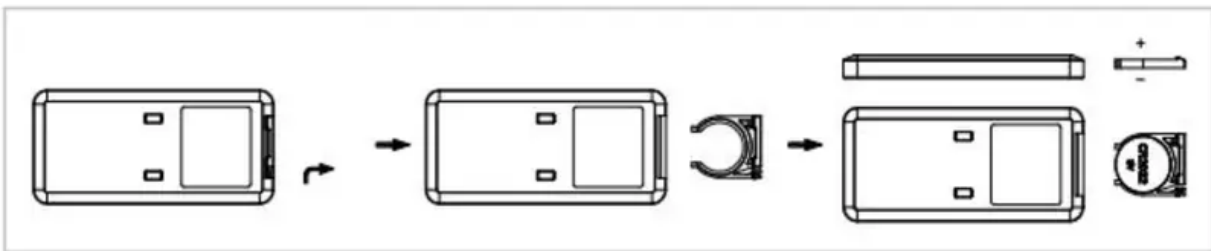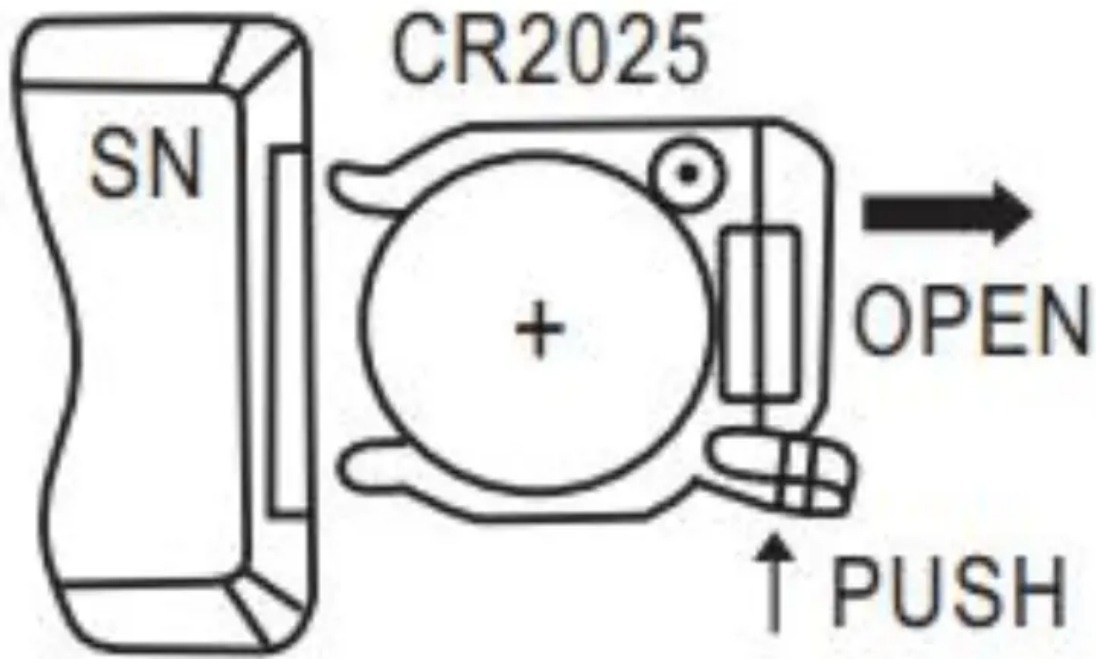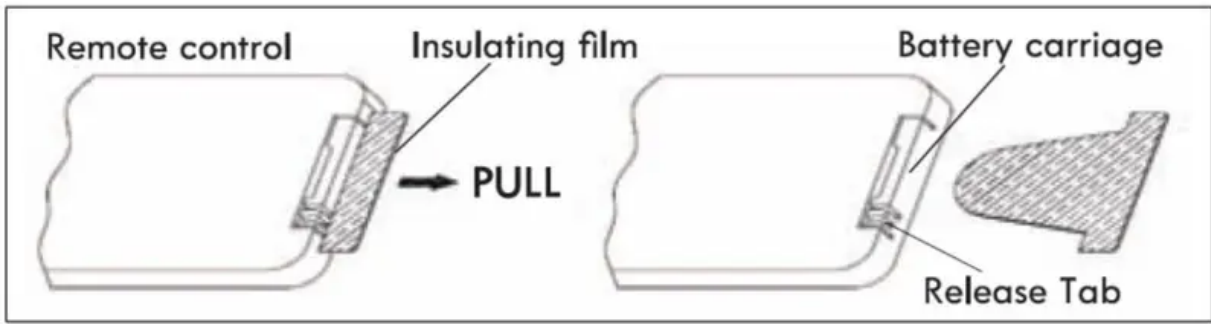

OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheat, e.g. due to the total or partial obstruction of the grids. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the grids. Then switch it back on as described above. The appliance should be operated normally. Please contact the nearest customer service if the problem persists.

TIP-OVER PROTECTION

This heater is protected with a safety switch that turns off the appliance automatically when the heater falls over, or is at an excessive angle from the horizontal. This helps prevent accidents, and the heater will back to the standby mode when it is put back upright, press the buttons on control panel or remote control to reset the heater.

STORAGE

Store the heater in a cool, dry location when it not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

BASIC TROUBLESHOOTING

If the heater does not operate, please check the following before seeking repair advice:

1. Check it if the power cord is plugged into an electrical outlet, if not, plug in.
2. Check it if the heater has worked for long or the ambient temperature is high, if yes, unplug the heater and wait for about 30 minutes. When the internal components of heater reach a safe temperature or the ambient temperature gets low, the heater will be back to normal operation.

IMPORTANT INSTRUCTIONS

To ensure the best performance of your heater, please read and save the following instructions.

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECUATIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSON, INCLUDING THE FOLLOWING:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use grip handle when needed.
- Keeping the combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and back. DO NOT place towels or other objects above the heater.
- Extreme caution is necessary when heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when it is not in use.
- DO NOT operate the heater if the cord is damaged or if the heater is on the malfunctions that has dropped/stained in any manner. Please return the heater authorized service facility for further examination, electrical or mechanical adjustment and repair.

- Do not use this heater outdoors.
- This heater is not to be used in bathrooms, laundry areas or other similar indoor locations. Never locate heater in areas where it may fall into a bathtub or other water container.
- DO NOT run cord under the carpet. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from the traffic area and where it will not be tripped over.
- To disconnect heater, turn control to OFF then remove plug from outlet.
- To disconnect heater, please turn controls to OFF ,and then remove plug from the outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock or fire or damage to the heater.
- To prevent the possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use this heater on any soft surfaces, like the bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
- Use this heater only as directed in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle.
- Please hold firmly the plug when remove from the outlet and DO NOT unplug by pulling the cord.
- If the heater does not operate: See specific instructions in basic troubleshooting explained in this manual.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.