
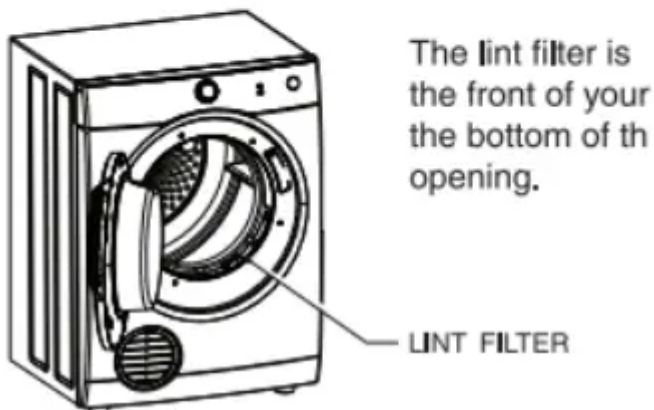


Cleaning The Lint Filter


LINT BUILD-UP IS A FIRE HAZARD

A clean lint filter reduces drying times, saves energy and avoids overheating. Overheating may also damage your clothes.

What happens if I forget to clean the lint filter?

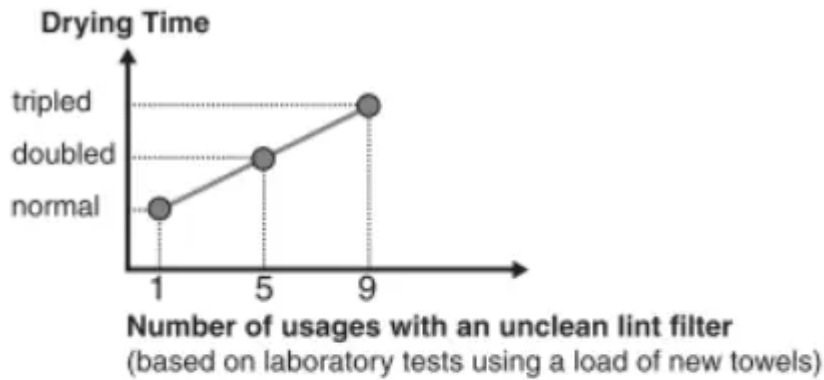

You must clean this lint filter after every load.

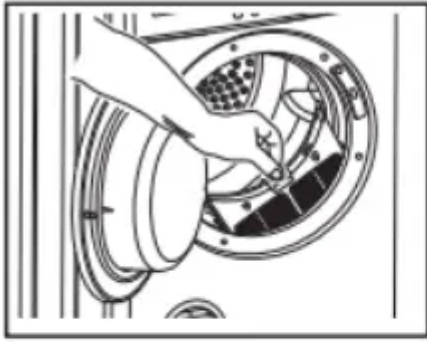

To remove the lint filter open the door and press the two pads together. Pull the lint filter out of the pocket.

Open apart the lint filter and wipe or peel off the lint.



Ensure the lint filter “Clicks” when replacing.

- Never operate your dryer without the lint filter.
- Do not allow lint to build around your dryer.
- A torn or damaged lint filter must be replaced immediately.
- Overloading can increase lint build-up because the airflow is reduced.

Drying Guide

Your load, when dry must not exceed the rated capacity

5.5 kg for the SDV556HQWA Dryer

6.5 kg for the SDV656HQWA Dryer

Always check your labels for the drying symbol which this international Care Labelling Code now uses.



May be tumble dried



Normal drying (high temperature)



Do not tumble dry



Delicate drying (low temperature)

- Permanent press and synthetics - take out as soon as the dryer stops to reduce wrinkles.
- Woollen articles - not recommended. Pull them to their original shape, then dry them flat.
- Woven and loop knit materials - may shrink, by varying amount, depending on their quality. Do not use the “Extra” setting for these fabrics, Always stretch them out immediately after drying.
- Fibre or leather materials - always check the manufacturer’s instructions.


- Baby clothes and night gowns - acrylic clothing or sleepwear use only on the “Iron” setting.
- Rubber and plastics - Do not dry any items made from or containing rubber or plastics, such as aprons, bibs, babies’ water proof napkins, curtains, tablecloths, shower caps, clothes fitted with foam rubber pads, pillows, galoshes, or rubber coated tennis shoes.
- Fibreglass - not recommended, glass particles left in the dryer could be picked up by your clothes the next time you use the dryer and irritate your skin.

INSTALLATION INSTRUCTIONS


You can choose to put your dryer:

- On the floor.
- On a work bench.
- On a wall, upside down or upright, using the included mounting kit.
- Ontop of a front load washing machine using a stacking kit available as an optional extra (not available for all washing machine models).

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer in such away that a full opening of the tumble dryer door is restricted.

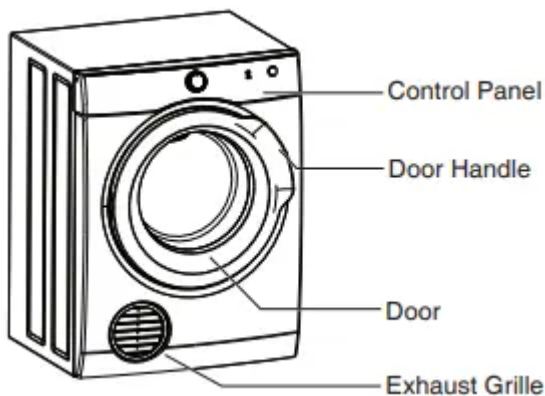

The exhaust grille has a range of positions, which allows you to select the optimum exhaust air angle. Simply hold the grille and rotate it until it hits the built-in stop.

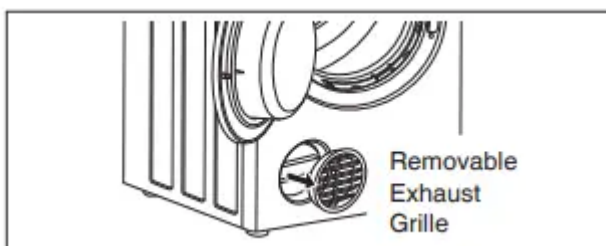

Do not Install your dryer In a cupboard or small un-vented laundry unless you are using a venting kit.

There are 2 VENTING OPTIONS

- front
- rear-using a venting kit (optional extra)


Venting Kit (Optional Extra)

DVKOO05K- Through the wall


DVKO06 - Universal flexible hose

Important: Use only kits approved by Electrolux Home Products Pty. Ltd. with your dryer. Contact the Electrolux Home Products Pty. Ltd. Spare Parts Centre for the list of approved kits. The exhaust duct must not exceed 2 metres in length at 100mm diameter. If connecting the dryer to a common ducting system, safety advice should be requested from the manufacturer.

If you choose to use the optional vent kit, the exhaust grille at the front of the dryer will need to be replaced with the outlet cover from the back of the dryer. Gently prise open the grille, using a thin bladed tool. Next, remove the cover from the back and clip it into the grille space at the front. The exhaust grille is not required when using a vent kit.

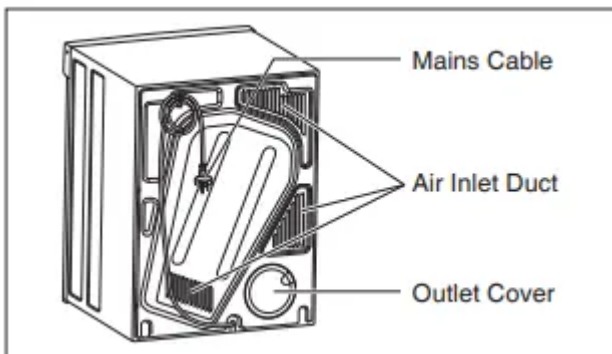

You can position the vent kit at the back of the dryer to remove air upwards or sideways.

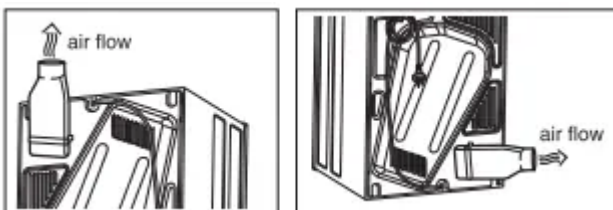


Inlet and outlet points need clear airflow to prevent overheating, so ensure there is adequate ventilation. (i.e. open window or external door.)

If a venting kit is used and the exhaust is discharged out of the room, there must be adequate ventilation to avoid the back flow of gases in to the room from appliances burning other fuels, including open fires, when operating the tumble dryer. This is not applicable where a venting hose is directed to an open window. The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

USE

The Control Panel

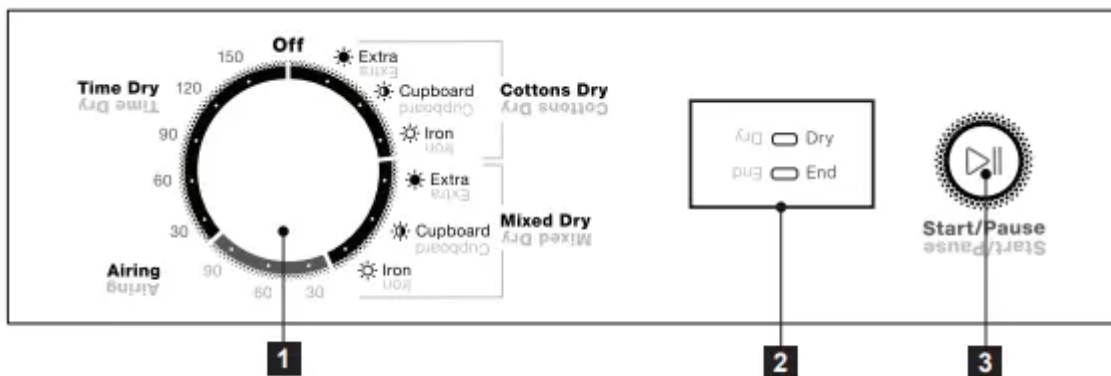















1 PROGRAM SELECTOR KNOB

- Turn the Program Selector knob to choose a drying program. The table “Program Guide” shown on page 7 will help you in selecting the right program.

NOTES : The Program Selector knob is not a timer. Once you select a drying program, the Program Selector knob will stay at that position for the whole drying cycle.

2 INDICATORS

STATES	STATUS INDICATOR
Initial Power on. <ul style="list-style-type: none"> • After appliance is powered on. • Allows user to select a drying program 	<ul style="list-style-type: none"> • Dry LED blinks  Dry • End LED Off  End
Machine Switched Off	<ul style="list-style-type: none"> • All LED Off  Dry  End
Drying Phase <ul style="list-style-type: none"> • Drying cycle starts. • Buzzer will sound after main drying and cooling phases ends, at the start of anticrease. • Anticrease in progress 	Drying & Cooling <ul style="list-style-type: none"> • Dry LED On  Dry • End LED Off  End Anticrease <ul style="list-style-type: none"> • Dry LED Off  Dry • End LED blinks  End
Paused <ul style="list-style-type: none"> • Drying cycle paused • Cannot change drying program 	<ul style="list-style-type: none"> • Dry LED blinks  Dry • End LED Off  End
End State <ul style="list-style-type: none"> • Drying cycle and Anticrease completed 	<ul style="list-style-type: none"> • Dry LED Off  Dry • End LED Off  End
Alarm/ Error <ul style="list-style-type: none"> • See description on page 10 	<ul style="list-style-type: none"> • Dry LED blinks  Dry • End LED blinks  End

3 START/PAUSE BUTTON


- This button allows you to start or pause the dryer to check the contents or perhaps add more clothes.

NOTES : The dryer will not start unless the door is closed. (If door is not closed you will hear 6 beeps followed by DRY LED blinking 4 times.)

- If selector knob is turned while dryer is running or paused mid cycle 3 beeps is heard to indicate operation is not allowed. Cycle will not continue if selector knob is not returned to original selected program.

Enable/Disable Buzzer

- To Enable/Disable the Buzzer select "Airing 60" then press and hold Start/ Pause button for 3 seconds (buzzer is enabled by default).

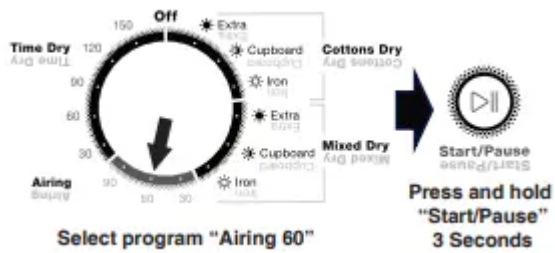

Operating Sequence

Step 1

Load your dryer loosely until it is no more than TWO THIRD FULL. Clothes must tumble freely in a dryer. Don't cram them in. Wet clothes fluff up when dry.

Overloading will :


- Reduce efficiency
- Increase drying time
- Increases the risk of creasing



Step 2


SWITCH ON

The dryer will not operate unless the door is completely close.

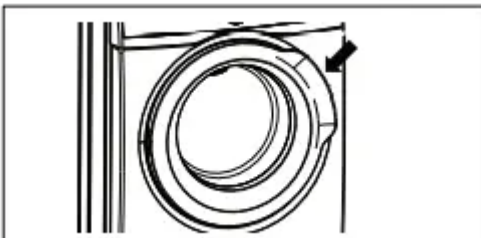

Step 3

Turn the Program Selector knob to choose the drying program you want.

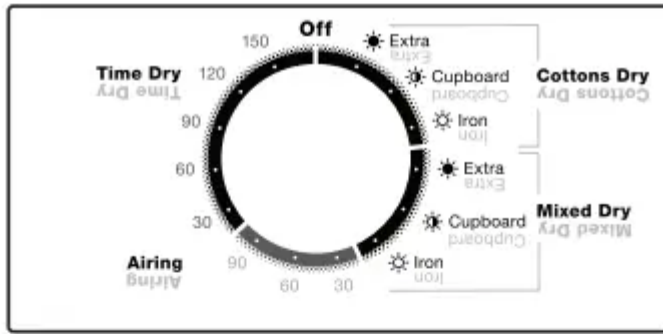

Program Guide

Program	Load Size info	Textile type info
Extra Cottons Dry	Full	Cotton Towel, Jeans For thick fabrics
Cupboard Cottons Dry	Full	Bath towels, Cotton underwear. For fabric that do not need to be ironed
Iron Cottons Dry	Full	Cotton Polo shirt, Cotton T-Shirt For fabric that do need ironed
Extra Mixed Dry	Half	Mixed load consisting of cotton and synthetic. For thick fabrics.
Cupboard Mixed Dry	Half	Mixed load consisting of cotton and synthetic. For fabrics that do need to be ironed
Iron Mixed Dry	Half	Mixed load consisting of cotton and synthetic. For fabrics that do need to be ironed Cotton fabric.
Airing 30	1-1.5kg	This setting does not heat. ONLY circulate the air in the dryer to shake out dust and refresh Clothes 30 minute.
Airing 60	3.0 kg	This setting does not heat. ONLY circulate the air in the dryer to shake out dust and refresh Clothes 60 minute.
Airing 90	4.0 kg	This setting does not heat. ONLY circulate the air in the dryer to shake out dust and refresh Clothes 90 minute.
Time dry 30	1-1.5 kg	Cotton fabric For user selectable 30 minutes drying times.
Time dry 60	3.0 kg	Cotton fabric For user selectable 60 minutes drying times.
Time dry 90	4.0 kg	Cotton fabric For user selectable 90 minutes drying times.
Time dry 120	5.0 kg	Cotton fabric For user selectable 120 minutes drying times.
Time dry 150	6.0 kg	Cotton fabric For user selectable 150 minutes drying times.

- For best results we recommend to sort out your laundry
 - Do not select the “Extra Dry” option for delicate fabrics such polyester as shrinking may occur.
 - To obtain the best drying results with small loads it is recommended to use “Time drying” program.

Reversing Action

The drum is designed to rotate in both direction, clockwise and anti-clockwise. This reduces tangling and gives more even drying in a shorter time.

Step 4

Turn the Program Selector knob to “OFF” When you have finished using the dryer to turn off the power, then switch off at the power point. It is recommended to power off the appliance when not in use.

Step 5

Clean Lint Filter

After every load clean the lint filter to reduce drying time and avoid overheating.

Checking the Load

To check the dryness or add clothes during the cycle, simply open the door. The dryer will beep several times indicating the door is open.

If further drying is required, close the door and then press the Start/Pause button to continue.

For the best drying performance, only add or remove clothes at the beginning of the drying cycle.

Hints

- Never tumble dry the following : Delicate items such as net curtains, woollen, silk, fabric with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdown, sleeping bags, feather quilts and any item containing rubber foam or materials similar to foam rubber.
- Do not place in your dryer undergarments such as bras and corsets that contain metal reinforcements. Your dryer may be damaged if metal part were to come loose from the garment.
- Place such items in a bag designed for this purpose.
- Check and empty pockets. Clip, pens, nails and pins can damage both the dryer and your clothes. Other items such as matches or cigarette lighters will cause a fire.
- Close all press studs, hooks, eyes and zips that may catch on something else. Tie all belts and apron string to prevent tangling.
- Drying time will depend on fabric type and construction, load size and wetness. Save time and money and always spin the load as dry as possible your washing machine.
- Always clean the lint filter-this will reduce drying time and save you money.
- The laundry must be thoroughly spun before tumble drying.
- Easy-care items eg shirt, should be briefly pre-spun before drying (depending on their crease resistance approximately 30 seconds).
- To avoid static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- Do not over-dry laundry, this avoids creasing and saves energy.

- Clothes or towels containing sand or grit should be washed first.
- For best results, sort the load according to fabric. Such as heavy items which may take longer to dry, eg. towels, flannelette sheets, etc. than ones which dry quickly, eg. poly/cot ton shirts and sheets.
- Avoid drying dark clothes with light coloured items such as towels as lint will show on the dark clothes.
- Note : Some fabrics will collect lint from other clothes and items. Separate the lint “gives” and the lint “collectors” to minimise this problem.
- Clothes that give lint include towels, nappies, chenille. Clothes that collect lint include corduroy, synthetics and permanent press garments.
- If individual items are still damp after drying, set a 30 minutes post drying time. This will be necessary particularly for multilayered items (eg. collars, pockets, etc).
- Due to variations in dryer load fabric texture and thickness it is possible that not all items will be dried evenly. If you experience uneven dryness on Cupboard program please use either Extra Dry or Timer Program but be mindful of the type of fabric being dried to avoid overdrying certain types of fabric.
- Always follow drying instructions attached to the items intended to be dried in a clothes dryer.
- Drying time will also be affected by voltage fluctuations, room temperature and humidity. Clothes will dry more slowly on a cool or humid day.
- To help you, here is a list of the average weights of some common laundry items.

Sheet	700 - 1000g
Tablecloth	400 - 500g
Kitchen towel	70 - 120g
Table napkin	50 - 100g
Towelling hand towel	150 - 250g
Bathrobe	1000 - 1500g
Men's shirt	200 - 300g
Pillowcase	100 - 200g
Men's pyjamas	400 - 500g
Ladies nightdress	200 - 250g
Bath towel	300 - 400g

TROUBLESHOOTING

Check the points listed here before you call for help, and make sure that you have followed the Important safety Instructions on pages 3 and 4.

The dryer will not start:

- Plug is not firmly in socket, or power not turned on.
- You have blown a fuse. Check the power point with another appliance.
- You have not closed the dryer door or pushed in the door safety switch button.

Your clothes are still wet:





- The selected drying time was insufficient. Select a longer time setting.
- Longer time may be needed when the room temperature is 10 °C or less.
- Check that the lint filter is not blocked.
- Check to see that you have read all the instructions carefully.
- Contact the Service Center if you are still having problems. Write down the model and serial numbers and the date of purchase before you ring. The Service Center will need this information.

Possible Failures

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please check possible cause of malfunction and solution listed below.

Once the problem has been eliminated, press the Start/Pause button to restart the program. If after all checks, the problem persists, contact your local Service Centre.

Alarm Code Indicator:

	Dry LED blinks 4 times End LED off	The appliance door is open or not closed correctly. Please check the door!
	Dry LED blinks 11 times End LED off	The main supply is unstable. Wait until the main supply is stable.
	Dry LED blinks 9 times and then off	Communication error between electronic boards of the appliance. Switch off and switch on again.
	End LED blinks 1 time	

Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND

APPLIANCE: SIMPSON DRYER

This document sets out the terms and conditions of the product warranties for Simpson Appliances. It is an important document. Please keep it with your proof of purchase documents in a

safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.

1. In this warranty:

(a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;

(b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;

(c) 'ASC' means Electrolux's authorised serviced centres;

(d) 'Simpson' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;

(e) 'Warranty Period' means the period in clause 3 of this warranty;

(f) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.

2. Application: This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any nonexcludable statutory guarantees in Australia and New Zealand.

3. Warranty Period: Subject to these terms and conditions, this warranty continues for in Australia for a period of 24 months and in New Zealand for a period of 24 months, following the date of original purchase of the Appliance.

4. Repair or replace warranty: During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy for a valid warranty claim is repair or replacement. Electrolux or its ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.

5. Travel and transportation costs: Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.

6. Proof of purchase is required before you can make a claim under this warranty.

7. Exclusions: You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:

(a) light globes, batteries, or similar perishable parts;

(b) parts and Appliances not supplied by Electrolux; cosmetic damage which does not affect the operation of the Appliance;

(d) damage to the Appliance caused by:

(i) negligence or accident;

(ii) misuse or abuse, including failure to properly maintain or service;

(iii) improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;

(iv) normal wear and tear;

(v) power surges, electrical storm damage or incorrect power supply;

(vi) incomplete or improper installation;

(vii) incorrect, improper or inappropriate operation;

(viii) insect or vermin infestation;

(ix) failure to comply with any additional instructions supplied with the Appliance;

In addition, Electrolux is not liable under this warranty if:

(a) the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;

(b) the Appliance is without authority from Electrolux in writing;

(c) the Appliance's serial number or warranty seal has been removed or defaced

8. How to claim under this warranty: To enquire about claiming under this warranty, please follow these steps:

(a) carefully check the operating instructions, user manual and the terms of this warranty;

(b) have the model and serial number of the Appliance available;

(c) have the proof of purchase (e.g. an invoice) available;

(d) telephone the numbers shown below.

9. Australia: For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

10. New Zealand: For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

11. You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)