 


## PARTS

### NAME OF PARTS

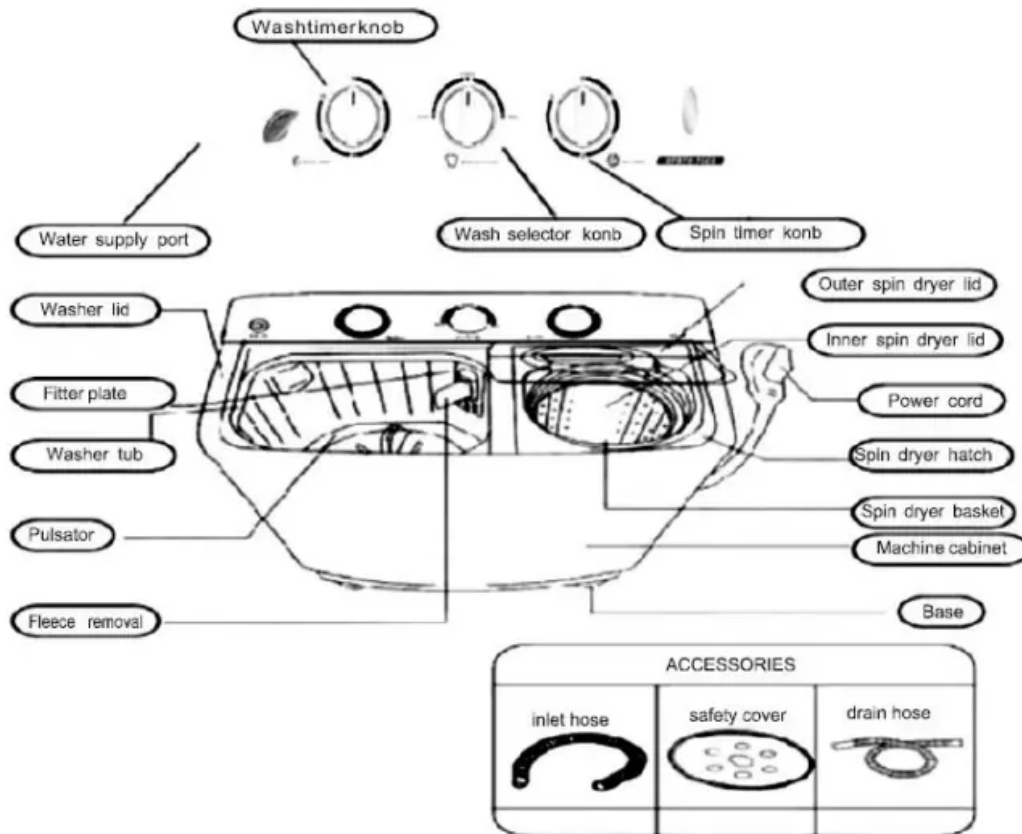

### FUNCTION AND FEATURE

PERFECT DESIGN AND FULL MODELS WITH THE PLASTIC AND ALUMINUM ALLOY BODY AND NEVER RUSTY WITHIN WASHING, DOUBLE WATER STREAM AND THE HAND WHEEL DESIGN GET THE CLOTHING MORE CLEAR. WASHING WITH THREE WATER STREAM, DISHING FIRE WAVE FORM NEW STREAM, GET THE CLOTHING OUT OF TWINING, HIGHLY CLEAN WITH LOWER FRAY.

DISSOLVE WASH POWDER QUIUKLY AND THE HIGH CLEAN MORE THAN THE COMMON DOUBLE-TUBE WASHING MACHINE.

WITH HIGH FUNCTION AND QUIET SOUND, HAND WHEEL AND NEVER FRAY

# INSTALL

 
## Install It In The Firmly And Smooth Place

- Washing machine should be installed in the firmly and smooth ground, 2° bevel is allowed.
- The position of the washing machine should be 5cm from the wall.



## Connect the intake pipe method

- Put the intake pipe correctly.
- Put the affusion spigot into the affusion hole.

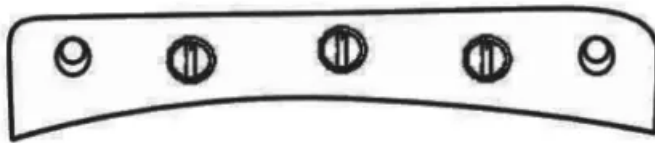

## Before washing

1. Take out the coin, nails or other things from the garments



2. Never put the garments which with the chemical reagent together with the cloths



 
3. Turn out the inside cloth during washing the garments with the floss.



4. Put the good garments into the pocket during washing



### Washing operation method

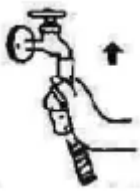

Connect the intake pipe with the water spigot



Nut the wire into the plug

 


Put down the drain pipe




Put the garments into the washing tube then put into the wash powder

- Choose the water level according to the quantity of the garments, high, middle and low.
- For the water level of the double water stream, it's the best position of the middle and high.

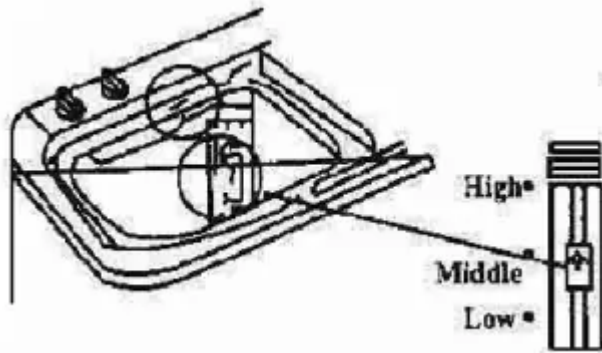

● Choose the washing method  (Turn "current transform" switch")

Turn the current transform switch according to the quantity and the material of the garments, then choose the washing current in "normal, gently"


● Choose the washing time 

Turn the washing timer in sequence when the water reach the level, then the washing machine begin to work.

<b>Choose the wash method</b>	<b>Gently</b>	<b>Normal</b>
<b>Garment types</b>	<b>Silk or floss clothing</b>	<b>Linen or very dirty garments</b>
<b>Washing time</b>	<b>3-5min</b>	<b>5-9min 9-15min</b>
<b>Water level</b>		<b>Quantities of the wash powder</b>
<b>High</b>		<b>40-57g</b>
<b>Middle</b>		<b>30-48g</b>
<b>Low</b>		<b>25-40g</b>

● Drain 

When finish washing turn the current transform to the drain position and then begin to drain.

● Choose the drying time 

- When finish drain,move the garments into the drying tube then cover the lid on the garments
- Cover the drying inside lid and the drying cover.
- Turn the drying timer in sequence and the washing machine begin to work

Sort of the garments	Drying time
Shirt (synthetic fibre)	1-2min
Underwear	3-5min
Work clothes	5min

**Second washing**

- Perform the washing procedure for two times,wash,drying and then wash and drying
- After drain then begin to the second washing meanwhile save the electric and the water

 
**Second washing while affusion**

Perform the washing procedure for two times,open the water spigot and then affusion the water into the washing tube.

**Drain notice**



- Press well the plastic cover on the garments strike the machine while drying.
- Never drying while drain,should finish drain and then move the garments into the drying tube to avoid to damage the machine
- Press well the plastic cover of the spin drier to avoid the garments fly out of the tube.
- Never put the hands into the drying tube while working especially for the children.

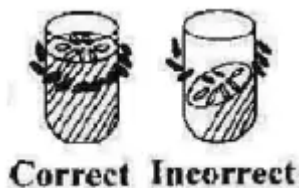

## After finish washing

Pull down the plug, close the water spigot and then hang up the drain pipe. Clean the drying tube and open the plastic cover to make tube dry.

## Clean the filtrate netting

Please clean the filtrate netting after finish working every time



Pull down the filtrate netting and press down as the picture



Clean the filtrate netting into the water



First put the bottom into the hole and then press it

## Notice



Don't install it in the bath-room and other inclined ground



Don't pour the water on the switch.



Never brush the machine use gasoline, alcohol and other organic solvent.



When you use warm water, the temperature should not exceed 50 centigrade

- PLEASE PULL DOWN THE PLUG AFTER FINISH WASHING.
- DRAIN PIPE'S LENGTH ALWAYS LOW THAN 2M, IT'S HEIGHT MUST MORE THAN 15CM.
- DON'T PRESS THE DRAIN OUTLET INTO THE SEWER.
- IF YOU WANT TO CHANGE THE WIRE, PLEASE CHANGE IT IN THE LOCAL COMPANY.
- IF THE BOTTON WITH THE INTAKE, THE FOOTCLOTH SHOULDN'T BACKUP THE INTAKE.
- THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.
- IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT

PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.

- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED

**Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

