

Product view



CAUTION: Do not add anything except cool water or you will cause damage to the heating element and void your warranty.

CAUTION: To reduce risk of injury from steam, never point product at people, animals, or electrical outlets.

Operations

Filling with water

1. Push down on the safety cap while turning counter clockwise.
2. Fill measuring cup to the max fill line.
3. Slowly pour water into steamer.
4. Replace the safety cap by pushing down while turning clockwise.

NOTE: You may substitute distilled or demineralized water for tap water.

If your tap water contains a high level of mineral content (hard water) the use of distilled or demineralized water is recommended.

Do not add anything except cool water or you will cause damage to the heating element and void your warranty.

NOTE: Empty tank after each use.

1.



2.



3.



4.



Power cord

Unwrap power cord before operating unit.

Indicator light

The red indicator light will go on when the unit is first plugged in. When the steamer is ready to use, the light will turn off.

Steam trigger

Push to release steam.

Remove protective packaging from nozzle and extension hose prior to use.

CAUTION: Always unplug your Steam Shot before filling/refilling. Press trigger until Steamer depressurizes. Wait 5 minutes before removing cap. Be sure to use an oven mitt in case the cap is still hot.

CAUTION: Before disconnecting a tool from the steam cleaner, make certain that steam is no longer coming from the nozzle. Use an oven mitt to remove tools, or wait until they cool before removing.

Tools and accessories

The accessory nozzle can be attached directly to the steamer or the end of the extension hose.

The accessory nozzle and extension hose attach in the same manner. Align the arrow on the tool with the (I) mark on the Steam Shot and turn clockwise until the arrow aligns with the (II) mark on the steamer.

a. Extension hose

For cleaning hard to reach areas. Attach to unit and use with the accessory nozzle attached.



b. Accessory nozzle

Attach to unit or hose. Use alone or with a tool attached.



c. Detail brush tool

Attach to end of the accessory nozzle for scrubbing stubborn soil. Color coded for specific use.



d. Flat scraping tool

Attach to the end of accessory nozzle for removing wallpaper, gum and extra sticky messes.

d.



e. Angle concentrator tool (select models only)

Attach to end of the accessory nozzle.

e.



f. Grout brush tool

Attach to end of the accessory nozzle for scrubbing small cracks and crevices.

f.



g. Fabric steamer tool

Attach to end of the accessory nozzle for refreshing and removing wrinkles on clothing or drapes. Attach cloth over tool.

g.



h. Window squeegee tool

Hooks onto the fabric steamer tool (without cloth) for glass and window cleaning.

h.



Accessories included vary by model. See page 11 to purchase additional accessories.

Steam cleaning all living areas

Stubborn soil that resists traditional hot water, cleaning solutions and vigorous scrubbing can often be effectively removed with high temperature steam. Baked-on grease on the stovetop, dried fruit juice in the refrigerator, stubborn soap scum on sliding shower doors, gum on countertops—steam makes all these far easier to clean. Use your Steam Shot to soften and remove stubborn dirt, grime, dry, hardened food, and other household soil from hard surfaces. You can also use your steam cleaner to clean pet cages.*

Note: Always remove pets before cleaning.

1. Fill with cool tap water or distilled/demineralized water.
2. Connect the plug to an appropriate outlet.
3. When red indicator light turns off, the steamer is ready to use. Press trigger to release stream.
4. Wipe surface with a clean, dry cloth.

CAUTION: Keep face and all exposed skin away from steam. Failure to do so may result in personal injury.

CAUTION: Thermal shock can shatter glass. Before cleaning cold glass surface, carefully warm the surface by directing the steam jet on the glass from a distance of no less than 4 - 6”.

Steaming/freshening clothes

Use your Steam Shot to remove wrinkles from clothes, and “freshen” clothing that has been stored. Test for color fastness in a hidden area. If color is affected do not use.

1. Hang clothing from a shower rod or clothes hook using a sturdy clothes hanger.
2. Fill with cool tap water or distilled/ demineralized water.
3. Connect plug to an appropriate outlet.
4. Attach the fabric steamer tool with pad attached.
5. Press trigger to release steam.
6. Move over fabric taking care not to concentrate steam in a single area.

Other uses

Your Steam Shot is a very versatile tool. Use it to:

- Give your houseplants a refreshing cool cloud mist by using at 12” or more away from plants.
- Soften gum or adhesives for easier removal.
- Soften glazing putty on windows for easier removal.
- Clean grills.

- Clean coolers.
- Clean sink garbage disposals.
- Clean exhaust fan reusable filters (always remove from fixture before cleaning).

CAUTION: Never tilt the steamer more than 45° during use as boiling water could spill with the steam.

CAUTION: Never attempt this procedure on the clothing you are wearing. Burns could result.

CAUTION: Do not add anything except cool water or you will cause damage to the heating element and void your warranty.

Troubleshooting

WARNING: To reduce the risk of fire, electric shock or injury unplug from outlet before servicing.

Reduce steam or no steam Possible Cause

1. Blocked steam nozzle.
2. Water tank may be empty.

Remedies

1. Unplug from outlet. After unit has cooled, clear blockage by inserting and removing a paper clip into the brass spray tip.
2. Unplug, allow to cool for 5 minutes and refill with water.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

Read all instructions before using your Steam Shot.

WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not direct steam at people, animals, or at electrical outlets
- Do not expose to rain
- Store indoors
- Unplug from outlet when not in use and before conducting maintenance or troubleshooting
- Do not leave steam cleaner unattended
- Do not leave the steam cleaner connected to an electrical outlet when not in use
- Do not attempt to use without water in the tank
- Do not use with damaged cord or plug

- Do not use steam cleaner if it has been dropped, damaged, left outdoors or dropped into water
- Do not handle steam cleaner with wet hands
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces
- Do not unplug by pulling on cord
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow
- Do not use appliance in an enclosed space filled with vapor given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors
- Do not allow to be used as a toy
- Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials
- Do not immerse
- Not for space heating purposes
- Do not service Steam Cleaner while it is plugged in
- Avoid contact with hot surfaces
- Release pressure before removing safety cap
- Let cool for 5 minutes before refilling
- Do not use for any purpose other than described in this User's Guide
- Use only manufacturer's recommended attachments use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury
- Fill with cool water only — do not add anything except cool water or you will cause damage to the heating element and void your warranty
- Unplug by grasping the plug, not the cord
- Pay close attention when working around children

SAVE THESE INSTRUCTIONS FOR FUTURE USE THIS APPLIANCE HAS A POLARIZED PLUG.

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

This model is for household use only.

Replacement parts - BISSELL Steam Shot

Item	Part No.	Part Name
1	203-2407	Accessory Nozzle
2	203-2419	Extension Hose
3	203-2405	3 Color Coded Detail Brushes
4	203-2420	2-Fabric Steamer Cloths
5	203-2421	Measuring Cup
6	203-2401	Grout Brush
7	203-2402	Flat Scraping Tool
8	203-2403	Brass Bristle Detail Brush
9	203-2406	Angle Concentrator Tool
10	203-2408	Window Squeegee
11	203-2423	2-Microfiber Cloths
12	203-2437	Storage Bag



Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.