


User Manual for Toaster

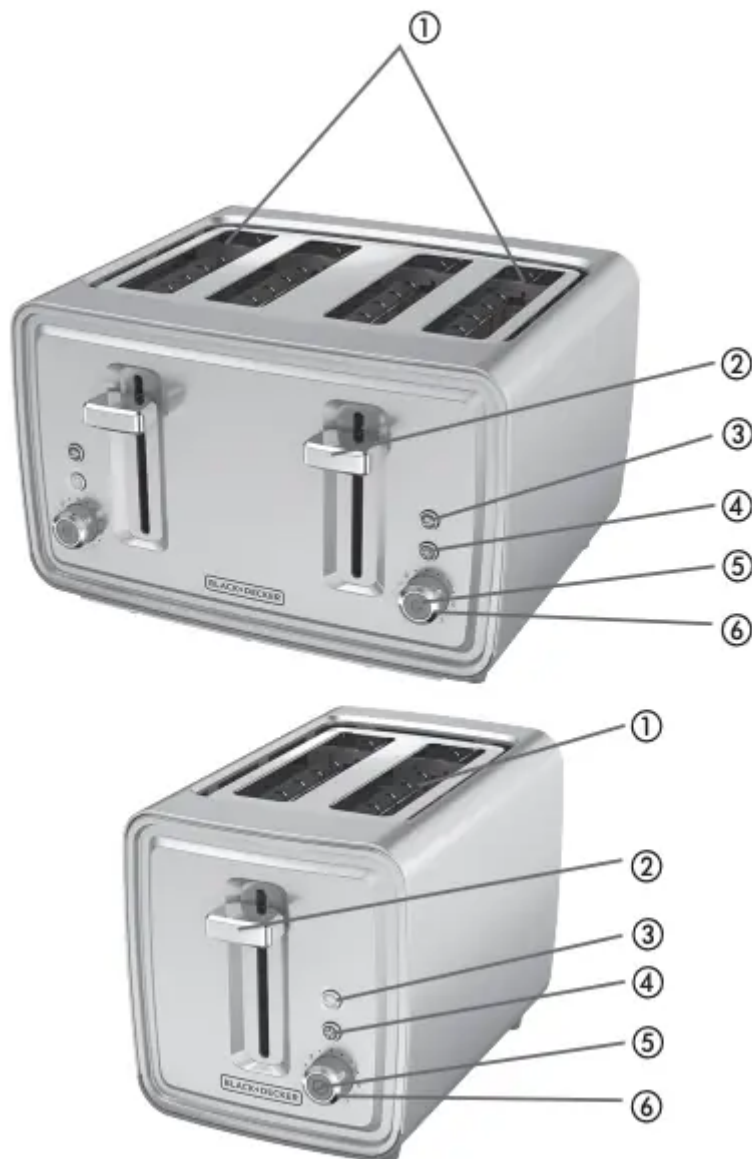

POLARIZED PLUG (120V MODELS ONLY)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

ELECTRICAL CORD

- a) A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- b) Extension cords are available and may be used if care is exercised in their use.

- c) If an extension cord is used:
 - 1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and
 - 3) The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

How to Use

This product is for household use only.

GETTING STARTED


- Unpack the unit. Remove all packing material, any stickers, and the plastic band around the power plug.
- Please go to www.prodprotect.com/applica to register your warranty.
- Wipe the toaster with a damp cloth and dry thoroughly.
- Insert slide-out crumb trays in place.
- Plug the power cord into a standard wall outlet.

TOASTING



Models TR4900SSD and TR4900SBD only—Your toaster features two sets of independent slots, each with individual buttons for: toast shade selection, bagel, frozen, and cancel. Be sure to adjust each side individually so that you can toast two different kinds of foods at once using different settings (for example, waffles on one side, bagels on the other).

- 1. Adjust the toast shade selector to the desired setting (1 to 7). For first use, set the dial to setting 4. Adjust as desired to suit your taste.


Tip: Toast thin slices on lower settings.

- 2. Place bread slices or other foods in the slots and press down the toast lever until it locks in place.
- The bread guides will automatically adjust to hold thick or thin slices in place.
- When toasting is done, the toast pops up and the unit shuts off.
- To interrupt toasting at any time, press the CANCEL  button.



BAGEL FUNCTION


- 1. Insert cut bagel into the slots with cut side toward the inside of the toaster.
- 2. Adjust the toast shade selector to the desired setting (1 to 7).
- 3. Press down the toast lever until it locks in place then press the  BAGEL button. The button illuminates until toasting is complete or you press the  CANCEL button.


Important: You must press down the toast lever before selecting a function. If not, the function will not be activated.

- To interrupt toasting at any time, press the  CANCEL button.

FROZEN FUNCTION

1. Place food into the toaster slots.
2. Adjust the toast shade selector to the desired setting (1 to 7).
3. Press down the toast lever until it locks into place, then press the  FROZEN button. The button illuminates until toasting is complete or you press the  CANCEL button.

Important: If you select the wrong button, you must press the  CANCEL button and then select the button you want after you press down the toast lever.

4. To interrupt toasting at any time, press the  CANCEL button.

TROUBLESHOOTING

- If food becomes jammed, the built-in auto off function automatically shuts off the power.
- Unplug the cord and move the toast lever up and down a few times to raise jammed food.
- Do not touch the metal area around the slots as it may be hot.
- Never use metal utensils to free food.

Note: (Models TR4900SSD and TR4900SBD Only) Since the two sets of controls function independently, the auto power-off function stops toasting only on the side where the food jam occurs.

Care and Cleaning

This product contains no user-serviceable parts. Refer service to qualified service personnel.

CLEANING

Always unplug the cord from the electrical outlet and allow the toaster to cool before cleaning. Do not immerse the toaster in water. Clean crumb trays regularly to prevent crumbs from piling up.

CRUMB TRAYS

1. Grasp the handles at the back of the toaster and slide out the crumb tray(s).

Note: Models TR2900SSD and TR2900SBD have only one crumb tray.

2. Dispose of crumbs and wash the tray with water and mild dish detergent. The trays are not dishwasher safe. Remove stubborn spots using a nylon mesh pad.

3. Dry trays thoroughly before sliding back into the toaster.

CLEANING OUTSIDE SURFACES

Unit gets hot. Allow the toaster to cool completely before cleaning.

- Wipe the exterior with a damp cloth or sponge and dry with a paper towel.
- Do not use strong cleaners or abrasives that may scratch surfaces and never spray cleaners directly onto the toaster.

STORAGE

Use the cord wrap on the bottom of the toaster to minimize clutter on your counter and for easy storage

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult blackanddeckerappliances.com

TWO-YEAR LIMITED WARRANTY

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands, Inc.'s liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at prodprotect.appl.ca, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

2/4 SLICE TOASTERS

Product may vary slightly from what is illustrated.

- 1. Extra-wide slots with automatic adjusting guides
- 2. Toast lever
- 3. BAGEL button
- 4. FROZEN button
- 5. CANCEL button
- 6. Toast shade selector dial
- 7. Removable slide-out crumb trays (not shown)

Model TR2900SSD, Model TR2900SBD, (Part#TR2900-01)

Model TR4900SSD, Model TR4900SBD, viewing from the back side of the unit:

Left (Part# TR4900-01), Right (Part# TR4900-02)

- 8. Cord wrap (under unit)

Note: indicates consumer replaceable/removable parts. Product may vary slightly from what is illustrated.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)