 


## Dishwasher Components

 
Model	Wash Cycles							Additional Features					
	Heavy Wash	Auto Wash	Normal Wash	Delicate Wash	Express Wash	Half Load	Rinse & Hold	Adjustable Upper Rack	Child Lock	Delay Start	Flip Tines	Sanitize Option	Silverware Basket
SHE3AR7#UC* SHE3ARB#UC*	X	X	X	X	X	X		X	X	X	X	X	Long
SHE3ARF#UC*	X	X	X	X	X		X	X	X	X	X	X	Double-Flex™
SHX3AR7#UC*	X	X	X	X	X	X		X		X	X	X	Double-Flex™

\* “##” can be any number


**SHE3AR7#UC\*/SHE3ARB#UC\***

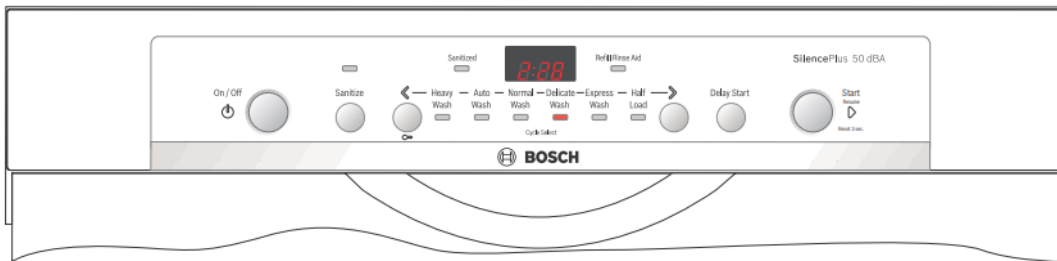

**SHE3ARF#UC\***

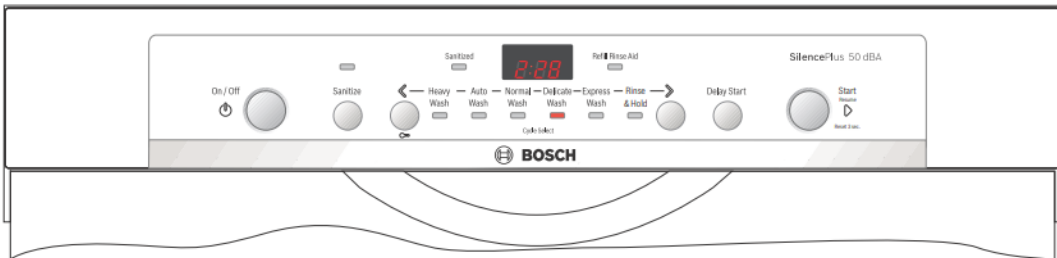


**SHX3AR7#UC\***

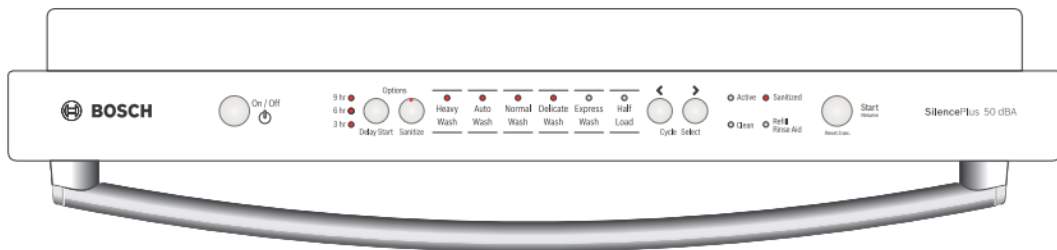 

\* “##” can be any number



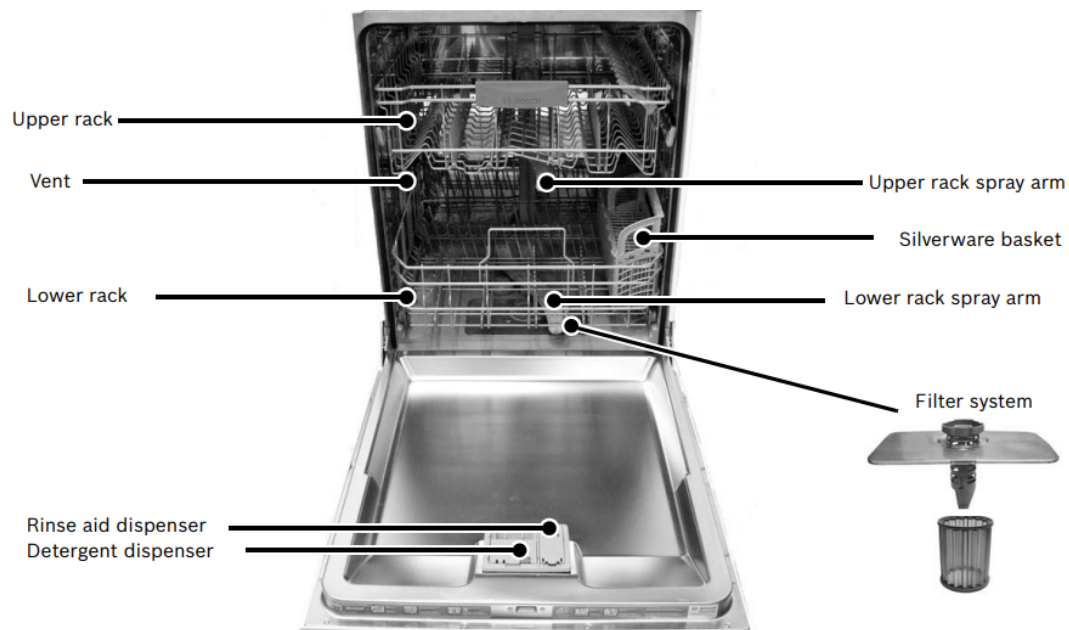 

## Dishwasher Features

**Self-Latching Door:** The self-latching feature will hold the door wherever you place it and then automatically latch when open 20 degrees or less.

**Delay Start:** Delays the start time of your dishwasher by 3, 6, or 9 hours.

**EcoSense Wash Management System:** Checks water condition and decides if a second fresh water fill is necessary.

**Extra Dry Heat:** Raises the temperature of the rinse and increases the drying time resulting in improved drying.

**Flow-Through Heater™:** Quickly and efficiently heats water to a sanitizing temperature.

**Noise Reduction System:** Uses Suspension Motor™, a two-pump motor system, and insulation to make this dishwasher part of the quietest dishwasher line in North America.

**Nylon Coated Racks:** Eliminates cuts and nicks and have a five year warranty.

**OptiDry®:** This feature senses when the unit is low on rinse agent and automatically increases the drying time.

**Sanitize:** An option to meet sanitized conditions and improve drying results. This option can only be used with certain wash cycles. See page 12.

**Triple Filtration System:** Uses multiple filters to ensure distribution of clean water and protect the main pump and the drain pump from foreign material.

**Model dependent features:**

**Adjustable Rack:** The upper rack can be raised or lowered manually to accommodate tall items in the upper and lower racks.

**Flip Tines:** Increase the rack flexibility to accommodate larger/taller items.

## **Dishware Materials**

**NOTE:** Before using your dishwasher for the first time, check the information in this section. Some items are not dishwasher safe and should be hand washed; others require special loading.

### **Recommended:**

**Aluminum:** Colored anodized aluminum may fade over time. Minerals in your water may cause the aluminum to darken or spot. This can usually be removed with a soap-filled steel wool pad.

**China, Crystal, Stoneware:** Some hand-painted utensils may discolor, fade or spot. Hand wash these utensils.

Position fragile glassware so that it will not topple over or come in contact with other utensils during the wash cycle.

**Glass:** Milk glasses may discolor or become yellow.

**Non-stick Coatings:** Apply a light coating of vegetable oil to non-stick surfaces after drying.

**Plastics:** Make sure the plasticware is dishwasher safe.

**Stainless Steel, Sterling Silver and Silver Plates:** Load these so they do not come in contact with other metals.

### **Not Recommended:**

**Acrylic:** Crazeing or small cracks throughout the acrylic, may occur.

**Adhesive-Joined Pieces:** Adhesives that join materials such as plastic, wood, bone, steel copper, tin, etc. may loosen.

**Bone-Handled Utensils:** Handles may separate.

**Iron:** Iron will rust. Hand wash and dry immediately.

**Non-Dishware Items:** Your dishwasher is intended for use in cleaning ONLY standard household dishware and kitchenware.

**Pewter, Brass, Bronze:** These items will tarnish. Hand wash and dry immediately.

**Tin:** Tin will stain. Hand wash and dry immediately.

**Wood:** Wooden bowls, wooden utensils and utensils with wooden handles can crack, warp and lose their finish.

# Using Your Dishwasher

## Loading the Dishwasher

Do not pre-wash items with loosely attached soiling. Remove all food particles, bones, toothpicks and excessive grease. Items having burned-on, baked-on or starchy soils may require some pretreatment. Refer to the Dishware Materials section for more information about dishware suitability.

Load only dishwasher safe items into the dishwasher. Load dishes in the dishwasher racks so the insides of bowls, pots and pans are facing the spray arms. Avoid nesting and contact points between dishes. Separate items of dissimilar metals.

### **WARNING**

The sharp points and edges of knives and other sharp utensils can cause serious injuries. Load knives and other sharp utensils with edges down. Do not allow children to handle or play near knives and sharp utensils.

### **NOTICE**

To avoid dishwasher damage, do not load the dishwasher with paper products, plastic bags, packing materials or anything other than normal, dishwasher safe dishware and kitchenware. Loading the

### **Upper Rack**

Ensure items do not protrude through the bottom of the racks and block the spray arms.

NOTE: When pushing the upper rack into the dishwasher, push it until it stops against the back of the tub so the upper rack spray arm connects to the water supply at the back of the tub. Do not push racks in using the door.

### **Loading the Lower Rack**

Place large items in the lower rack. Load pots, pans and bowls upside down. Do not block vent with tall baking sheets. Load these items on the left side of the dishwasher.

### **Unloading the Dishwasher**

When unloading the dishwasher it is best to unload the lower rack first. Next, unload the silverware basket followed by the upper rack.

## **Suggested Loading Pattern**

Upper Rack

 


Lower Rack



### Additional Loading Pattern

Upper Rack

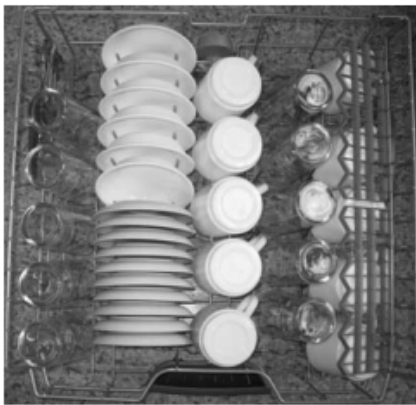

Lower Rack



### Loading the Silverware Basket

Place knives and sharp utensils with their HANDLES UP and forks and spoons with their handles down. If large or oddly-shaped items are loaded in the silverware basket, be sure they do not nest together.

#### WARNING

The sharp points and edges of knives and other sharp utensils can cause serious injury. Load knives and other sharp utensils with edges down. Do not allow children to handle or play near knives and sharp utensils.

#### The Double-Flex™ Silverware Basket (select models)

 
This basket splits along its length, resulting in two halves that may be placed in a variety of positions in the lower rack, greatly increasing the lower rack's loading versatility. The basket snaps together either back to back or end to end as shown.

#### To split the Double-Flex™ Silverware Basket

Grasp the basket and slide the two halves in opposite directions as shown at right and then pull the two halves apart.


#### Double-Flex™ Basket Placement Options



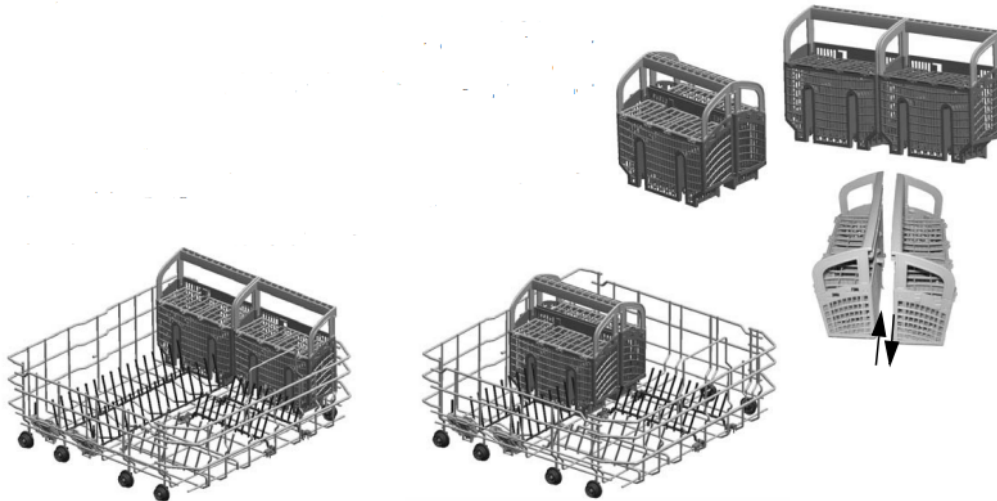

### The Long Silverware Basket (select models)


 
The long silverware basket fits along the side of the lower rack. **Long Basket Placement Option**

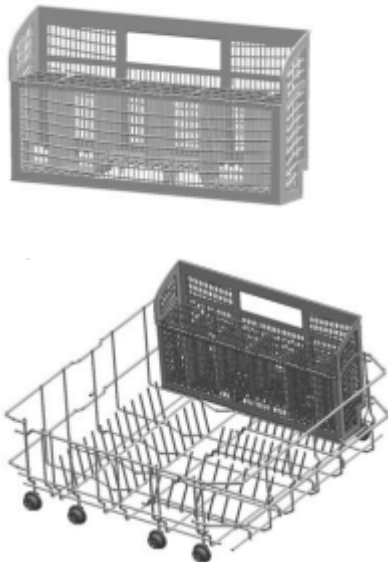


The basket lid may also be snapped to the handle in order to leave the basket open.

### Loading pattern for Long Silverware Basket

  - 1- salad fork
- 2- teaspoon
- 3- dinner fork
- 4- knife
- 5 - tablespoon
- 6 - serving spoon
- 7 - serving fork

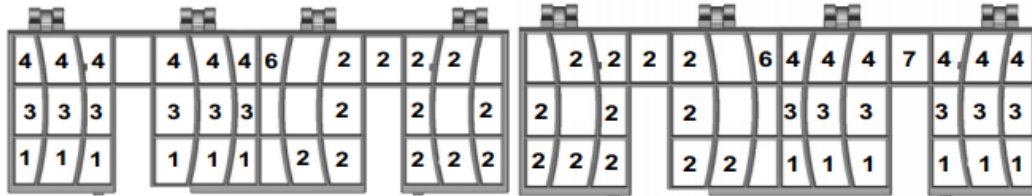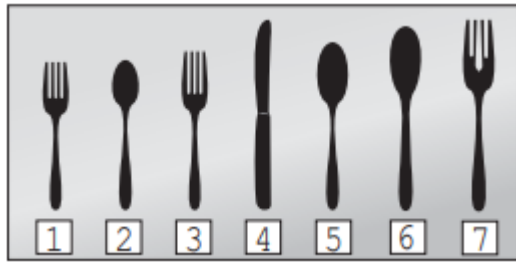

**Loading pattern for Double-Flex™ Silverware Basket**

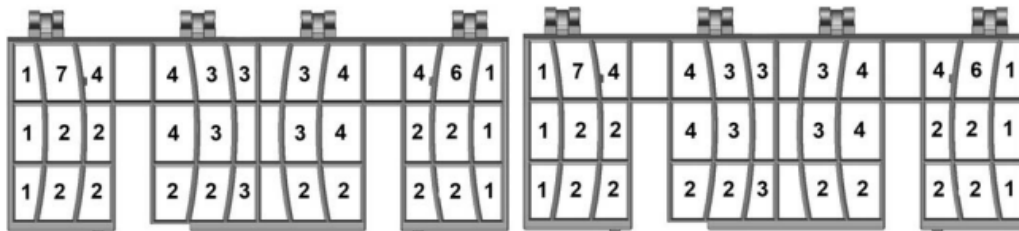 

**Rack Accessories**

**Flip Tines (model dependent)**

The racks consist of tines that can be folded down depending on what you may need to load in the rack. To fold down, grasp the folding tine and release from notch. Push folding tine downward to desired position as shown in Figure 1.

**Figure 1**



**Adjustable Upper Rack (model dependent)**

Remove the empty upper rack by pulling it out of the dishwasher until it can be lifted upward as show in Figure 2. Pull the rack up and out until the rollers are completely free of the roller guides.

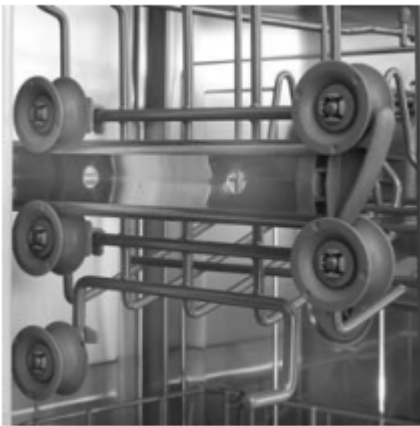 


**Figure 2**



Re-insert the rack with the other set of rollers on the roller guides as shown in Figure 3

**Figure 3**



Rack Accessories

Adding Detergent and Rinse Agent

Dishwasher Cycles and Options

Wash Cycle Information

## Operating the Dishwasher

### Care and Maintenance

### Troubleshooting

#### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](#)

