

Extra-Wide Convection Oven

Product may vary slightly from what is illustrated.

- 1. Easy-view glass door
- 2. Temperature/cooking function knob (Part# TO3250-01)
- 3. Bake/Broil 60-minute timer knob (Part# TO3250-02)
- 4. Light-to-dark Toast/Timer knob (Part# TO3250-03)
- 5. Power indicator light
- 6. Crumb tray (Part# TO3250-04)
- 7. Bake pan/drip tray (Part# TO3250-05)
- 8. Rack (Part# TO3250-06)

Note: indicates consumer replaceable/ removable parts

There are three ways to turn the toaster oven ON:

- Turn the Timer knob to “Stay On”.
- Turn the Toast shade knob past medium shade BLACK DECKER TO3250XSB Extra Wide Convection -ICONand then to desired toast shade.
- Turn the Timer knob past 10 and then to the desired time.

To turn OFF turn the Timer and Toast shade knobs to the Off position.

At the end of this product's life, you can mail it to Spectrum Brands at 507 Stokely Drive, Deforest, WI 53532 marked “Product Takeback: Please Recycle!”

BLACK+DECKER and the BLACK+DECKER logos are trademarks of The Black & Decker Corporation, used under license by Spectrum Brands, Inc. for its manufacturing and sale of this product. All rights reserved.

Please Read and Save this Use and Care Book.

IMPORTANT SAFEGUARDS.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against electrical shock do not immerse the cord, plugs, or appliances in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner. Contact consumer support at the toll-free number listed in the warranty section.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Use extreme caution when removing the tray or disposing of hot grease.
- To disconnect, turn the timer control to Off then remove the plug from the wall outlet.
- Do not use appliances other than intended use.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls, and the like, when in operation. Do not store any items on top of the unit when in operation.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any material, other than the manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover the crumb tray or any part of this oven with metal foil. This will cause overheating of the oven.
- To turn OFF turn the Timer and Toast shade knobs to the Off position.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience

and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent the removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

- a) A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- b) Extension cords are available and may be used if care is exercised in their use.
- c) If an extension cord is used:
 1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
 2. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and
 3. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power cord is damaged, please call our Customer Service line listed in these instructions.

HOW TO USE

This product is for household use only.

CAUTION

THIS OVEN GETS HOT. WHEN IN USE, ALWAYS USE OVEN MITTS OR POT HOLDERS WHEN TOUCHING ANY OUTER OR INNER SURFACE OF THE OVEN.

Caution: Do not leave the oven unattended when in operation. Food ignition may occur. If this happens, unplug the unit but DO NOT open the door. To reduce the risk of fire, keep the oven interior completely clean and free of food residues, oil, grease, and any other combustible materials.

Caution: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls, and the like when in operation or after, when still hot.

Do not place any of the following materials in the oven, on top of the oven, or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic, or the like.

GETTING STARTED

- Remove all packing material, any stickers, and the elastic band around the power plug.
- Please go to to register your warranty.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used, allowing enough space from the back of the unit anthe wall to allow heat to flow without damage to cabinets and walls.
- Plug the unit into an electrical outlet.

IMPORTANT INFORMATION ABOUT YOUR OVEN

- This oven gets hot. When in use, always use oven mitts or pot holders when touching any outer or inner surface of the oven.
- During the first few minutes of use, you may notice smoke and a slight odor. This is normal and should cause no concern.
- Temperatures in the oven will be lower than your set point. This is due to the advanced heating elements used in this oven. Temperature dial settings have been calibrated to provide expected results for most recipes taking into account the advanced heating elements.
- You must set the timer or select Stay On for the oven to function.
- Be sure food or baking dish does not come within 1½ inches of the top heating elements.
- Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.

- You can cook your food 2 ways:
 - Use the bake pan/drip tray placed on the slide rack.
 - Place the bake pan/drip tray under the slide rack/broil rack.

TOASTING

- 1. It is not necessary to preheat the oven for toasting. For optimal results use middle rack position
- 2. Set temperature selector knob to TOAST position. Place items to be toasted directly on slide rack in the middle rack position and close the door
- 3. Turn toast shade selector knob to medium shade BLACK DECKER TO3250XSB Extra Wide Convection -ICON and then to desired toast shade. The low indicator light will come on and remain on until the toasting cycle is complete.

Note: You must set the toast shade selector knob as desired for the oven to begin toasting.

- 4. When the toast cycle is complete, there will be an audible signal. The oven and the power indicator light will turn off.
- 5. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
- 6. Unplug the appliance when not in use.

BAKING

For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting. For optimal results use the middle or lower rack position.

1. Set temperature selector knob to the desired temperature.
2. Turn the TIMER selector knob to 20 and then turn to the desired baking time. Select Stay On to bake longer than 60 minutes or to control cooking time yourself. The power indicator light comes on and remains on during the entire baking time.

Note: You must set the times for the oven to FUNCTION.

3. Once the oven has preheated, open the oven door and insert food. Close oven door.
4. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the power indicator light does out. If not using the oven timer, turn the oven off once the cooking cycle is complete.
5. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.
6. Unplug the appliance when not in use.

BROILING

When broiling, preheat the oven for 10 minutes. For optimal results use the top rack position. Be sure food or baking dish does not come within 1 1/2 inches of the top heating element.

1. Set temperature selector knob to BROIL.
2. Set the timer selector knob to 20 then turn back or forward to desired broiling time. Select Stay On to bake longer than 60 minutes or to control cooking time yourself. The power indicator light comes on and remains on during the entire broiling time.
Note: You must set the timer for the oven to function.
3. Once the oven is preheated, open the oven door and insert food. Close oven door.
4. If using the oven timer, there will be an audible signal once the broiling cycle is complete. The oven turns off and the power indicator light does out. If not using the oven timer, turn the oven off once the cooking cycle is complete.
5. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.
6. Unplug the appliance when not in use.

CARE AND CLEANING

This product contains no user-serviceable parts. Refer service to qualified service personnel.

CLEANING

Important: Before cleaning any part, be sure the oven is off, unplugged, and cool.

1. Clean the glass door with a sponge, soft cloth or nylon pad, and sudsy water. Do not use a spray glass cleaner.
2. To remove the slide rack, open the door, pull the rack forward and out. Wash the slide rack in soapy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.
3. Wash the baking pan in sudsy water. To minimize scratching, use a polyester or nylon pad.

EXTERNAL CRUMB TRAY

External crumb tray is inserted and removed from the exterior of the oven, beneath the oven door.

1. Grasp handle and pull out tray.
2. Dispose of crumbs and wipe tray with a damp cloth; dry thoroughly before placing back in the oven.

EXTERIOR SURFACES

Wipe the top and exterior walls with a damp cloth or sponge. Dry thoroughly.

COOKING CONTAINERS

Metal, ovenproof glass, or ceramic bakeware without glass lids can be used in your oven. Follow manufacturer's instructions. Be sure the top edge of the container is at least 1½" (3.81 cm) away from the upper heating elements.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.