

POLARIZED PLUG (120V MODELS ONLY)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel or in Latin America by an authorized service center.

ELECTRICAL CORD

1. A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
2. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
3. If a long detachable power-supply cord or extension cord is used,
 1. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
 2. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel or in Latin America by an authorized service center. HOW TO USE

HOW TO USE

This product is for household use only.

GETTING STARTED

- Unpack the unit and remove any packing materials or labels.
- Please go to www.prodprotect.com/applica to register your warranty.
- Wipe the toaster with a damp cloth and dry thoroughly.

- Insert slide-out crumb trays in place.
- Plug the power cord into a standard wall outlet.

TOASTING

Model T4569 only: Your toaster features two sets of independent slots each with individual toast shade selectors, bagel and cancel buttons. Be sure to adjust each toast shade selector individually so that you can toast two different kinds of foods (for example, waffles on one side, bagels on the other) at once using different settings.

1. Adjust the toast shade selector to the desired setting (1 to 6). For first use, set the dial to setting 4. Adjust as desired to suit your taste.
 - **Tip:** Toast thin slices on lower settings.
2. Place bread slices or other foods in the slots and press down the toast lever until it locks in place.
 - The bread guides will automatically adjust to hold thick or thin slices in place.
 - When toasting is done, the toast lever goes up and the unit shuts off.
3. When selecting BAGEL or FROZEN function, you must press the toast lever before selecting one of these settings.
4. If food becomes jammed, the built-in auto off function automatically shuts off the power.
 - **Note:** (Models T4569 Only) Since the two sets of controls function independently, the auto power-off function stops toasting only on the side where the food jam occurs.
5. Unplug the cord and move the toast lever up and down a few times to raise jammed food.
 - Do not touch the metal area around the slots as it may be hot.
 - Never use metal utensils to free food.
6. To interrupt toasting at any time, press the CANCEL button

BAGEL FUNCTION

1. Insert cut bagel into the slots with cut side toward the inside of the toaster.
2. Adjust the toast shade selector to the desired setting (1 to 6).
3. Press down the toast lever until it locks in place then press the BAGEL button.
 - **Important:** You must press down the toast lever before selecting a function. If not, the function will not be activated.

4. If food becomes jammed, the built-in auto off function automatically shuts off the power.
 - **Note:** (Models T4569 Only) Since the two sets of controls function independently, the auto poweroff function stops toasting only on the side where the food jam occurs.
5. Unplug the cord and move the toast lever up and down a few times to raise jammed food.
 - Do not touch the metal area around the slots as it may be hot.
 - Never use metal utensils to free food.
6. To interrupt toasting at any time, press the CANCEL button.

FROZEN FUNCTION

1. Place food in the slots and press down the toast lever until it locks into the down position. The CANCEL button illuminates until toasting is done or you press the button.
2. Press the FROZEN button. The button illuminates until toasting is done or you press the CANCEL button. When toasting is done, the toast lever goes up and the unit shuts off.
 - **Important:** If you select the wrong button, you must press the CANCEL button and then select the button you want after you press down the toast lever.

HELPFUL TIPS

- If food becomes jammed, unplug the cord and move the toast lever up and down a few times to raise jammed food.
- To interrupt toasting at any time, press the CANCEL button.

CARE AND CLEANING

This product contains no user-serviceable parts. Refer service to qualified service personnel.

CLEANING

Always unplug the cord from the electrical outlet and allow the toaster to cool before cleaning. Do not immerse the toaster in water.

CRUMB TRAYS

1. Grasp the handles at the back of the toaster and slide out the crumb tray(s).
 - **Note:** Model T2569 has only one crumb tray.
2. Dispose of crumbs and wash the tray with water and mild dish detergent. The trays are not dishwasher safe. You can remove stubborn spots using a nylon mesh pad.
3. Dry trays thoroughly before sliding back into the toaster.

CLEANING OUTSIDE SURFACES

Unit gets hot. Allow the toaster to cool completely before cleaning.

Wipe the exterior with a damp cloth or sponge and dry with a paper towel.

Do not use strong cleaners or abrasives that may scratch surfaces and never spray cleaners directly onto the toaster.

STORAGE

Use the cord wrap on the bottom of the toaster to minimize clutter on your counter and for easy storage.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center.

TWO-YEAR LIMITED WARRANTY (Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applica, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit

- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Support.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, push CANCEL, then remove plug from wall outlet.
- Do not use this appliance for other than intended use.
- Oversized foods, metal foil packages, or utensils must not be inserted in a toaster, as they may create a fire or risk of electric shock.
- A fire may occur if the toaster is covered or touching flammable material, including curtains, draperies, walls and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Warning: To prevent electrical shock, unplug before cleaning.
- Warning: To reduce the risk of fire or electric shock, operate with crumb tray closed.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.