 
 


User Manual

Basic Functions

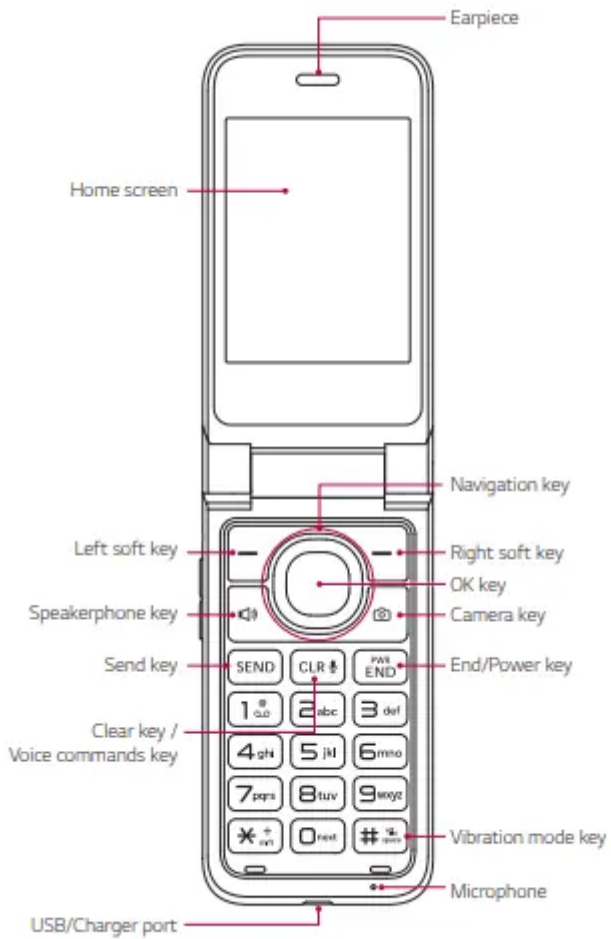


Parts overview

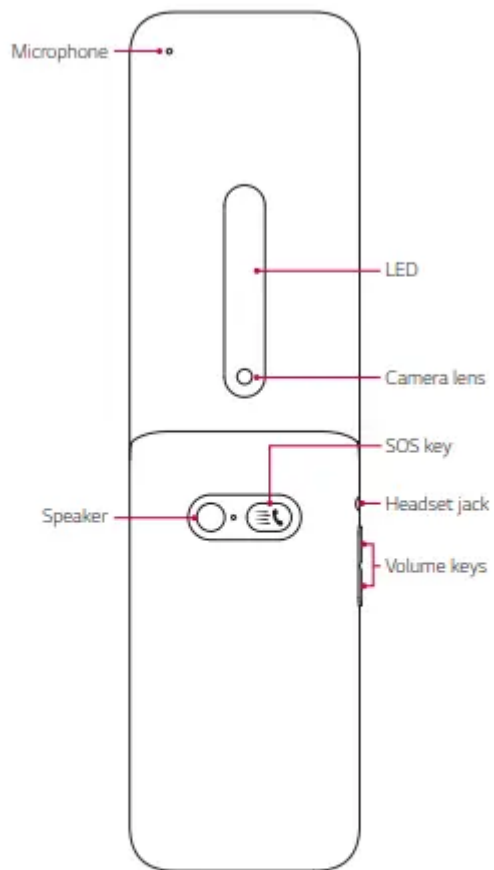



Home screen	Displays messages, indicator icons and active functions.
Left soft key	Allows you to select the command at the lower left area of the display screen.

 


Headset jack	Allows you to plug in an optional 3.5mm headset for convenient, hands-free conversations, or other compatible listening devices.
Speakerphone key	Allows you to enable or disable the speakerphone mode (Speakerphone available when you are on call or listening to FM radio).
Send key	Allows you to make and answer calls. Press from the Home screen to access your call history (All calls, Missed calls, Dialed calls and Received calls).
Microphone	Allows you to transmit your voice to a caller or for voice-activated functions (e.g, Voice commands).
Clear key / Voice commands key	<ul style="list-style-type: none"> • Deletes single spaces or characters with a quick press, or press and hold to delete entire words in text entry screens. Press to back out of menus, one level at a time. • Press for quick access to Voice Commands from the Home screen. • Press and hold to open the Voice recorder app.
USB/Charger port	Connects the phone to the charger adapter or other compatible accessories.
Earpiece	Lets you hear the caller and automated prompts.
OK key / Navigation key	Use OK key  to select options and menus. Use Navigation key  to scroll through menu items and highlight a specific field or object, then press OK key  to select it.
Right soft key	Allows you to select the command at the lower right area of the display screen.
End/Power key	Allows you to turn the power on/off and to end a call. Also exits menus and returns to the Home screen.
Vibrate mode key	Allows you to set Vibrate mode from the Home screen, press and hold for about 3 seconds.
LED	Indicates incoming calls, new notifications, charging status, etc.
Camera lens	Allows you to take pictures. Keep it clean for optimal performance.
Camera key	Allows you to access the Camera app. In the camera mode, press once the Camera key to take a picture, and press and hold to switch to the video mode.
Speaker	Use to listen to the audio from the selected function (e.g, music, videos, sound clips, etc.).
SOS key	Click 3 times to call the registered phone number.
Volume keys	Use to adjust the volumes.

Home screen

 The Home screen is your starting point to access all of the features on your phone using simple key presses.


 
 
Status Bar



Shows phone status information, including the time, signal strength, battery status, and notification icons.

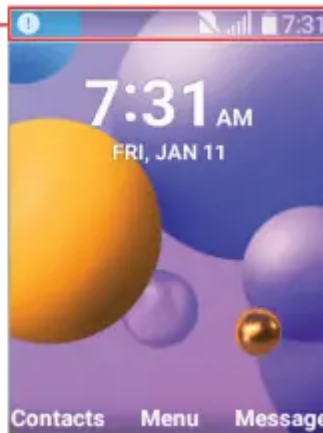

Customizing the Home screen

You can customize your Home screen wallpaper and clock format using the Settings app. From the

 Home screen, press OK key  [Menu], press 9 key  [Settings], then press 4 key  [Display].





- Wallpaper: Press 3 key  [Wallpaper] to select a background image from pre-loaded images or your own pictures.
- Clock Format: Press 8 key  [Clock] to set the clock format.

Phone's status icons




The Status Bar appears at the top of every screen. It displays icons indicating that you've received notifications (on the left) and icons indicating the phone's status (on the right), along with the current time.

The following icons may appear in the Status Bar.













Call icons

	In call		Missed call
	Microphone muted		VoLTE


Sound icons









	Silent mode		Vibrate mode
	Music playing		

Network icons






	4G LTE connected		Emergency Alert
	Wi-Fi connected		Signal strength
	No signal		Roaming
	No SIM card		Airplane mode
	GPS on		Downloading
	Uploading		Download successful

Connectivity icons

 • **Bluetooth®** headset icons are compatible with Bluetooth headset devices approved by LG.

	Bluetooth connected		USB connected
	Bluetooth headset battery full		Bluetooth on
	Headset connected		Bluetooth headset battery low
	Internal storage full		Headset with microphone connected





Email and Messaging icons

	New email		New voicemail
	Email not sent		New text message
	New multimedia message		

Alarm and Calendar icons

	Alarm set		Upcoming events
---	-----------	---	-----------------





Battery icons

	Full battery		Charging battery
	Low battery		Not Charging

Other icons

	More notifications		Screenshot saved
---	--------------------	---	------------------


Call logs icons

	Incoming call		Outgoing call
	Missed call		Rejected call

Getting started with your phone


Step 1. Remove the back cover

 With the phone facing down, insert your fingernail into the cutout located on the bottom of the back cover and gently lift the cover.

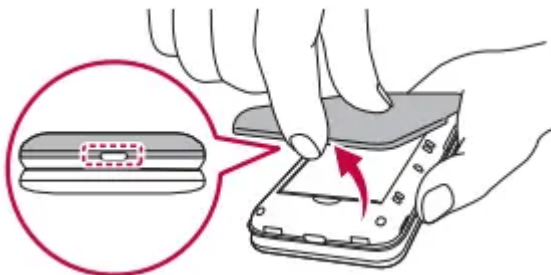


Step 2. Insert the battery

 Insert the battery, making sure the gold contacts line up. Press down gently to secure.

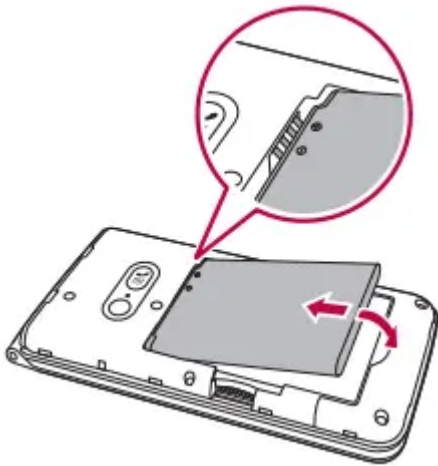

Step 3. Replace the back cover

 
Place the back cover over the back of the phone and then press down along the edges to secure.

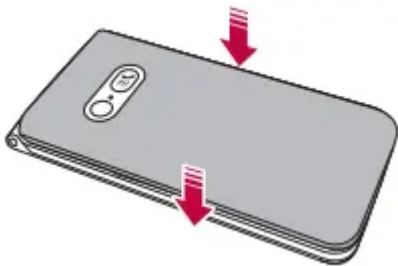

Step 4. Charge the phone

Before turning on your phone, charge it fully.

 Insert the small end of the USB cable into the phone. Insert the larger end into the charger and plug the charger into an outlet

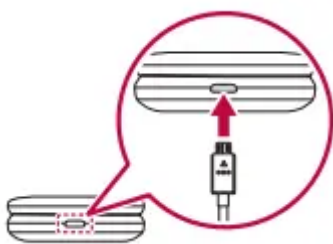

Removing the battery


1. Turn the phone off.
2. With the phone facing down, insert your fingernail into the cutout located on the bottom of the back cover and gently lift the cover.
3. Use the fingertip opening near the bottom of the battery compartment to lift the battery out.



Charging with USB

You can use your computer to charge your phone. To be able to charge with the USB cable, you may need to have the necessary USB Driver installed on your PC first. Connect one end of the USB cable to the Accessory/Charger Port on your phone and the other end to the USB port on your PC.

Quick access to convenient features



Vibration mode

You can set the phone to vibrate instead of ringing ( is displayed).




To set Vibration Mode, press and hold Vibration Mode key . To return to the standard mode, press and hold Vibration Mode key  again.

Sounds off





Quickly deactivate your phone's sounds when you're in a place where phone sounds would be disruptive.

From the Home screen, press and hold Volume down key . To return to the standard sound mode, press and hold Volume up key .

Quick volume adjustment

Quickly adjust ringer and earpiece volumes by pressing Volume key  on the left side of the phone. Press Volume up key  to increase the volume and Volume down key  to decrease the volume

Capturing a screenshot

Press and hold Volume down key  and End/Power key  at the same time for 2 seconds to capture a screenshot of the current screen. To view the captured image, press OK key  [Menu], then press 3 key  [Gallery].


Caller ID


Caller ID displays the number and/or name and picture (if applicable) of the person calling when your phone rings


Entering and editing information


Text input


The following key functions are available to help with text entry:


 Left soft key: Press to change the text input mode.


 Shift: Press to change capitalization (initial cap, caps lock, lowercase).

 Next: Press to display other matching words in the database in T9 word mode.

 Space: Press to insert a space.

 Right soft key: Press to select one of the following options: Attach/ Save as draft/ Quick reply/ Add subject/ Priority/ Discard.

 Clear key / Voice commands key: Press to delete a single space or character. Press and hold to delete entire words or sentences.

 Punctuation: Press to insert punctuation symbols when using Abc text input mode.

Text input modes

In a text field, press Left soft key  to select a text input mode:


T9 Word/ Abc/ ABC/ 123/ T9 Palabra/ Symbols/ Emojis/ Copy/Paste/ T9 dictionary

Appendix

Q&A

Please check to see if any problems you have encountered with the phone are described in this section before taking the phone in for a service or calling customer service.

Q How do I view the list of outgoing calls, incoming calls, and missed calls?

A Press Send key .

Q Why won't the LCD turn on?

A Remove the battery, and place it back. Then turn on the power. If there is no change, fully charge the battery and try again.

Q Why is the connection inconsistent or not audible in certain areas?

A When the frequency environment is unstable in a certain area, connection may be inconsistent and inaudible. Relocate to another area and try again.

Q Why does the phone heat up?

A The phone may get hot when there is a very long call duration, when games are played, or even when surfing the Internet for a long time. This has no effect upon the life of the product or performance.

Q Why is the connection inconsistent or abruptly disconnects even when established?

A When frequency is unstable or weak, or if there are too many users, a connection may be cut off even after it was established.

Please try again later or attempt again after relocating to other areas.

Q Why does the battery run out so quickly during normal use?

A This may be due to the user environment, a large number of calls, or a weak signal.

Q Why is no number dialed when an contact list entry is recalled?

A Check that the number has been stored correctly by using the contact list Search feature. Re store them, if necessary.

Anti-Theft Guide

You can set up your device to prevent other people from using it if it's been reset to factory settings without your permission. For example, if your device is lost, stolen, or wiped, only someone with your Google account or screen lock information can use the device.

All you need to make sure your device is protected is:

- Set a screen lock: If your device is lost or stolen but you have a screen lock set, the device can't be erased using the Settings menu unless your screen is unlocked.
- Add your Google account on your device: If your device is wiped but you have your Google account on it, the device can't finish the setup process until your Google account information is entered again.

After your device is protected, you'll need to either unlock your screen or enter your Google account password if you need to do a factory reset. This ensures that you or someone you trust is doing the rese

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.