



Overview Of The Television

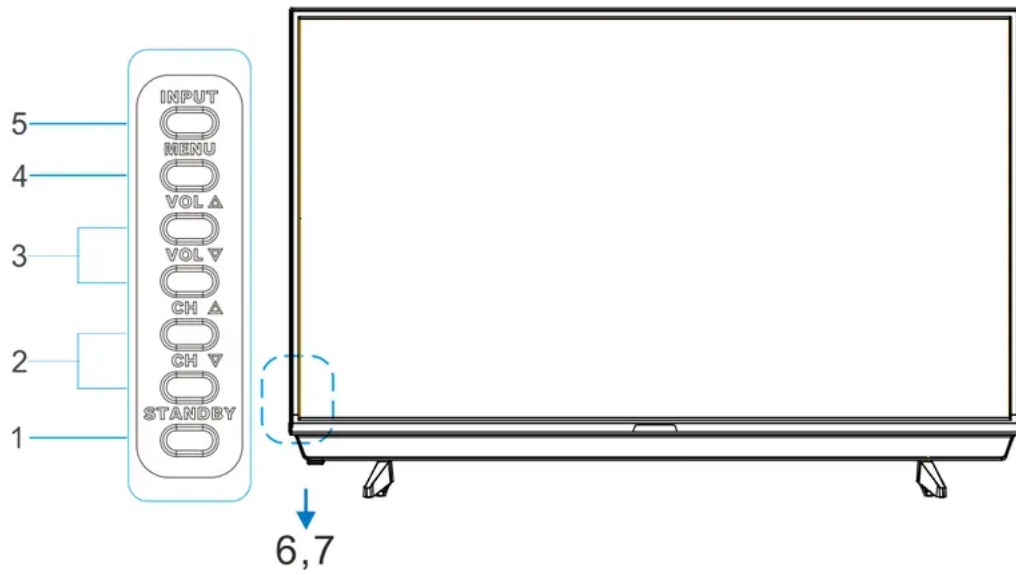

| ITEM | BUTTON NAME | FUNCTION DESCRIPTION |
|------|-----------------|--|
| 1 | STANDBY | Press to switch the TV on during Standby mode or vice versa. |
| 2 | ◀ CHANNEL ▶ | Press to scan through channels. |
| 3 | ◀ VOLUME ▶ | Press to increase or decrease the sound level. |
| 4 | MENU | Press to bring up the main menu to the screen. |
| 5 | INPUT | Press to select the input source. |
| 6 | POWER INDICATOR | Shows red in Standby mode and shows green when your TV is switched on. |
| 7 | REMOTE SENSOR | Infrared sensor for the remote control. |

Please Note:

The receiving range for the remote control signal is 6 metres from the front Of the remote sensor, with a window of 30 degrees to the left or right, and 20 degrees above or below.

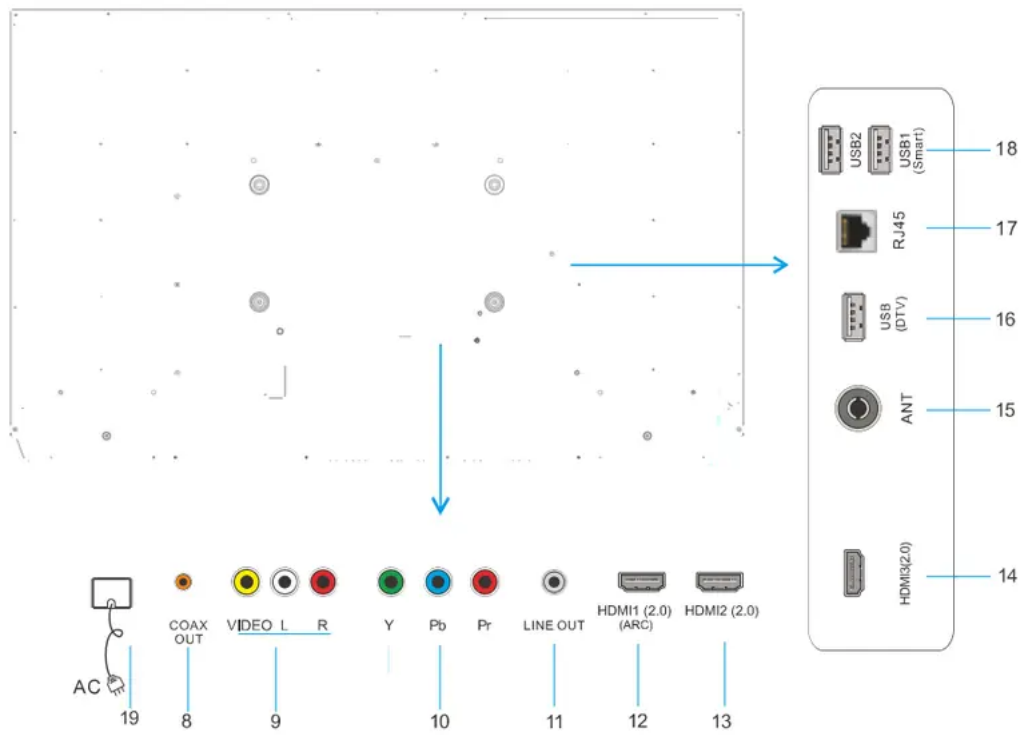

| ITEM | JACK NAME | FUNCTION DESCRIPTION |
|----------|-------------|--|
| 8 | COAXOUTPUT | Coaxial Digital Audio output. |
| g | L/R INPUT | Connect to the L/R Audio outputs on your external video source device(With AV/YPbPr input) |
| | VIDEO INPUT | Connect to the video output jack of your external video source device (eg. DVD player) |
| 10 | YPbPr INPUT | Connect to the Component (YPbPr) outputs on your external video source device(Used in HD TV SOURCE) |
| 11 | LINE OUT | Connect external amplifiers here. Please note that connecting external amplifiers will mute the sound from the TV's built-in speakers. |
| 12/13/14 | HDMI INPUT | Connect to the HDMI output jack of up to 3 external video sources (eg. DVD player/ games console/ bluray player) |
| 15 | ANT | Connect antenna or cable 75ohm coaxial to receive TV signal. |
| 16 | USB | Plug in* your USB memory device (eg. USB stick) to play compatible files that are stored on it or for PVR recording. Important: This USB port does not play 4KUHD content. |
| 17 | RJ45 | Ethernet port for wired internet connection. |
| 18 | USB1/2 | These ports can only be used for smart module functionalities (eg. connecting mouse or key board). They cannot be used for connecting USB devices for PVR recording or playing media files |

| | | |
|----|----|--|
| | | under DTV source. Important: USB 1/2 ports are capable of playing 4K UHD content @30fps. |
| 19 | AC | Connect to a compatible mains power outlet with the supplied power cord. |


Please Note:

Some USB memory devices, such as external hard drives and some portable hard drives, require their own power supply to operate. See also the Technical Specifications section for compatible file types and storage limits.

Remote Control Operation


Installing Batteries

1. Open the battery compartment cover.
2. Load two AAA alkaline batteries (included) into the compartment.
3. Replace the cover.

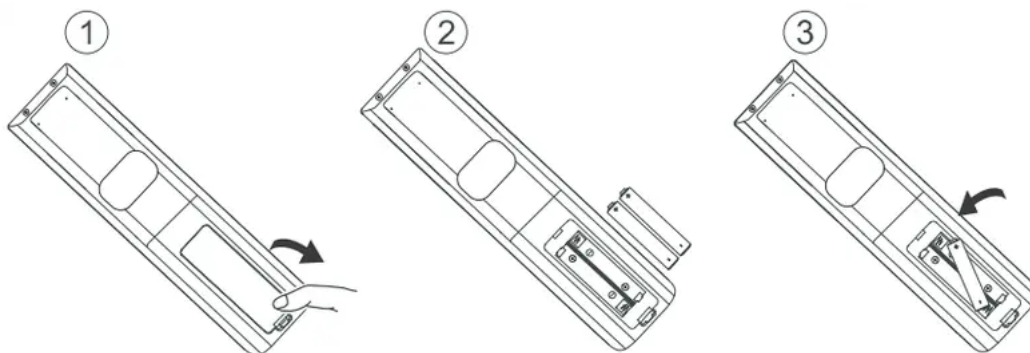

Precautions

Make sure that there is no obstacle between the remote control and television set.

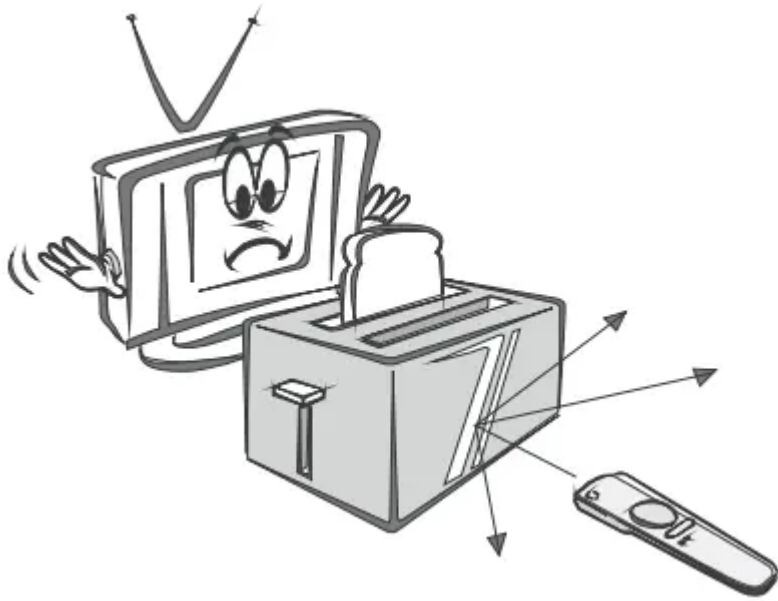


Keep the remote control away from heat sources or humid areas to ensure effective performance of the remote control.




As strong light may interfere with the signals, change your position to operate the remote control if the television cannot be turned on or off as you expect.



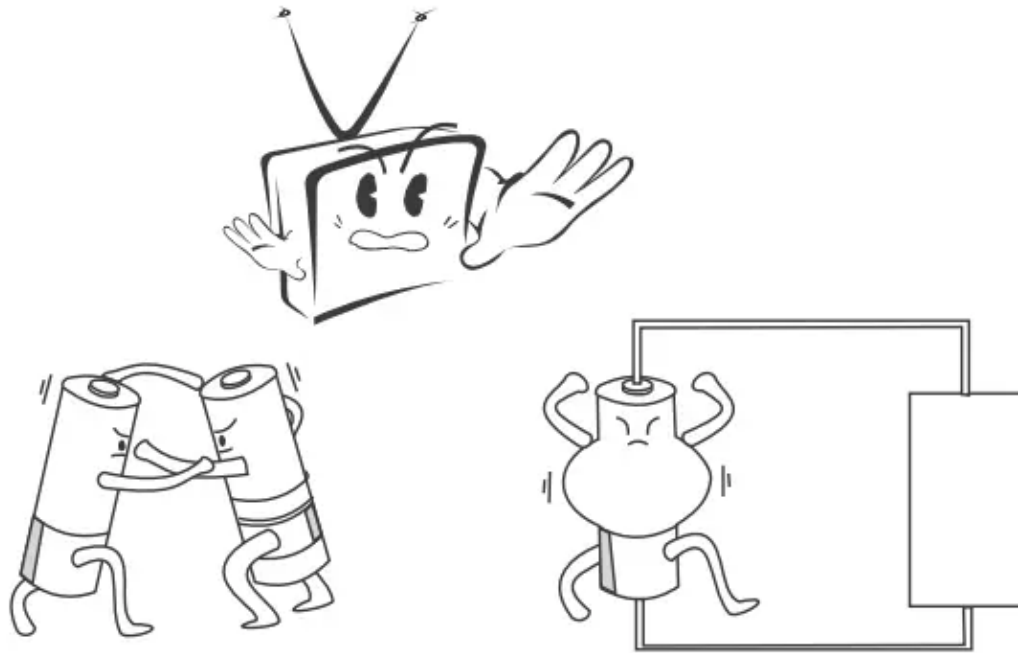

Make sure that two AAA 1.5V alkaline batteries are loaded. The batteries must be installed properly.



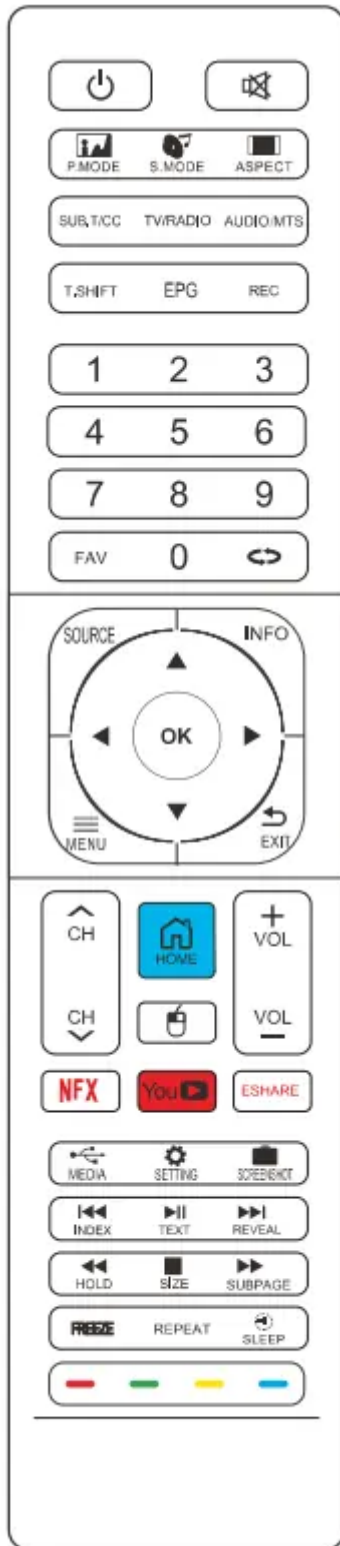


Remote Control



1. **POWER**  : Press to turn TV set on or switch to Standby mode.

 


2. **MUTE**  : Press to mute sound, press again to restore sound.


3. **P.MODE**  : Press to set the picture mode.
4. **S.MODE**  : Press to set the sound mode.
5. **ASPECT**  : Press to select the aspect ratio.
6. **SUB.T/CC** Press to select subtitle.
7. **TV/RADIO**: Press to switch the channel between TV and RADIO.
8. **AUDIO/MTS**: Press to select Audio.
9. **T.SHIFT**: Press to activate 'Timeshift' function in Digital TV mode for delayed viewing.


Please note: USB memory device is required for this function.



10. **EPG**: Press to show the Electronic Program Guide menu.
11. **REC**: Recording functions for DTV (Digital TV) channels.

Please note: USB device is required for recording.


12. **0-9**: Press 0-9 buttons to select a TV channel.
13.  : Press to return to the previous channel viewed.
14. **FAV**: Press to enter "Favorite list" menu.
15. **SOURCE**: Press to select various input sources.
16. **INFO**: Press to display the source and channel information.
17. **OK**: Press to confirm selections.
18. **MENU**  : Press to bring up the main menu to the screen.
19. **EXIT**  : Press to exit the OSD menu (On-screen display)


20. **HOMED**  : Press to display the homepage interface.
21. **VOL +/-**: Press to increase or decrease the volume.
22. **CH+/-**: Press to go to the next higher or lower channel.


23.  : Press to turn on/ turn off mouse function.


24. **NFX**: Press to select NETFLIX in Smart TV mode.
25. **YOU**  : Press to select YOUTUBE in Smart TV mode.
26. **ESHARE**: Press to select ESHARE in Smart TV mode.
27. **MEDIA**  : Press to select MEDIA menu in DTV mode.


28. **SETTING**  : Press to select SETTING.


29. SCREENSHOT  : Press to select the camera for a screenshot (only in Smart TV mode).


30. INDEX  : Press to display the index of the text.* Press to go to the previous chapter.

31. REVEAL  : Press to reveal or hide hidden text.* Press to go to the next chapter.

32. SUBPAGE  : Press to open the subpage of the text * Press to play a program in fast forward mode.


33. HOLD  : Press to hold the text.* Press to play a program in rewind mode.

34. TEXT  : Press to show/hide text * Press to play/pause.

35. SIZE  : Press to change text size in TEXT mode* Press to stop playback.

36. FREEZE: Press to freeze the screen in DTV mode.

37. REPEAT: Press to repeat play (for USB files).

38. SLEEP  : Press to set the sleep time.

39. Colour Buttons:



Text edit keys .* Program

edit as per the On-screen Display Menu.

* Teletext functions are not available in Australia.

OSD Menu Operation

Selecting An Input Source



* Press SOURCE button to display the input source list,

* Press ▼ / ▲ button to select an input source:

DTV: Digital TV

ATV: Analogue TV AV: 'VIDEO' composite input jack

Component: 'YPbPr' component video jacks

HDMI1, HDMI2, HDMI3: HDMI inputs

Smart TV: Smart TV channel

Media: Media port for file playback from a compatible USB memory device

* Press ENTER button to enter the input source.

* Press EXIT button to quit.

TV Mode Operation

Channel

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select CHANNEL in the main menu



1. Press ▼/▲ button to select the option that you want to adjust in the **CHANNEL** menu.
2. Press **OK** button to adjust.
3. After you have completed the adjustment, press **OK** button to save and return to the previous menu.

Auto Tuning

Press ◀ / ▶ button to select Auto Tuning, then press **OK/▶** button to enter.



Country

Press ◀ / ▶ button to select Country .then press OK button to enter.

Tuner Type

Press ◀/▶ button to select Tuner Type, then press OK button to enter.
(Available Systems:ATV,DTV,DTV+ATV)

ATV Manual Tuning



Current CH

Set the channel number.

Colour System

Select the colour system

(Available Systems: AUTO,PAL,SECAM).

Sound System

Select the sound system.

Fine-Tune

Adjust the frequency of the channel.

Search

Start searching channel.

DTV Manual Tuning

Press ▼ / ▲ button to select DTV Manual Tuning, then press **OK** button to enter.



Program Edit

Press ▼ / ▲ button to select Program Edit, then press **OK** button to enter sub-menu.





The four coloured keys are shortcuts for programming the channel.

First press ▼ / ▲ to highlight the channel you want to select, then:

Press the **Red** button to delete the program in the list.

Press the **Green** button to rename the program in the list.

Press the **Yellow** button to move the channel in program list.

Press the **Blue** button to skip the selected channel.

(your TV set will skip the channel automatically when using CH+/- to view the channels).

Press **FAV.** button to add or remove the channel from your favourite list.

Note: Rename is only available for analogue channels.

Schedule List

Press ▼ / ▲ button to select Schedule List, then press **OK** button to enter.

Signal Information

Press ▼ / ▲ button to select Signal Information, then press **OK** button to enter.

Picture

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select PICTURE in the main menu.



1. Press ▼/▲ button to select an option to adjust in the PICTURE menu.
2. Press OK button to adjust.
3. After you have completed the adjustment, press MENU button to save and return to the previous menu.

Picture Mode

Press ▼/▲ button to select Picture Mode, then press OK button to enter sub-menu.

You can change the value of contrast, brightness, colour, sharpness and tint when the picture is in **PERSONAL** mode.

Please note: You can press **PMODE** button on the remote control to change the picture mode directly.



Contrast/ Brightness/ Colour/Tint /Sharpness

Press ▼/▲ button to select an option, then press ◀ / ▶ button to adjust.

Contrast: Press to adjust the highlight intensity of the picture.

Brightness: Press to adjust the brightness of the picture.

Colour: Press to adjust the saturation of the colour according to your own preference.

Tint: Press to shift the colour of the picture to compensate for any errors in transmission.

Sharpness: Press to adjust the detail in the picture.

Colour Temperature

Press ▼/▲ button to select **Colour Temperature** .then press OK button to enter sub-menu.

Press ◀ / ▶ button to select (Available Colour Temperatures: Cool, Normal, Warm).



Cool: Produces a blue-hued image.

Normal: Produces a vivid image.

Warm: Produces a red-hued image.

Noise Reduction

To filter out and reduce the image noise and improve picture quality.

Press ▼/▲ button to select **Noise Reduction**, then press OK button to enter sub-menu.



Off: Select to turn off video noise detection.

Low: Detect and reduce low video noise.

Middle: Detect and reduce moderate video noise.

High: Detect and reduce enhanced video noise.

Default: Set as default.

HDMI Mode

Press ▼/▲ button to select **HDMI Mode**, then press ◀ / ▶ button to select Auto, Video or PC.

Sound Menu

Press MENU button to display the main menu.

Press ◀ / ▶ button to select SOUND in the main menu.



1. Press ▼ / ▲ button to select the option that you want to adjust in the **SOUND** menu.
2. Press **OK** button to adjust.
3. After you have completed the adjustment, press OK button to save and return to the previous menu.



Sound Mode

Press ▼ / ▲ button to select Sound Mode, then press OK button to enter sub-menu.

Press ▼/▲ button to select.

You can change the value of Treble and Bass when the sound is in PERSONAL MODE.

Please note: You can press **SMODE** button on the remote control to change the sound mode directly.

Movie: Enhances treble and bass for a rich sound experience.

Sports: Enhances vocals for sports.

Music: Preserves the original sound. Good for musical programs.

Standard: Produces a balanced sound in all environments.

Person: Select to customise sound settings.

Balance

Press ▼/▲ button to select Balance and press ◀ / ▶ button to adjust.

Auto Volume Level

Press ▼/▲ button to select Auto Volume, then press ◀ / ▶ button to select On or Off.

SPDIF Mode

Press ▼/▲ button to select SPDIF Mode, then press ◀ / ▶ button to select Off / PCM /Auto. **AD Switch**

Press ▼/▲ button to select AD Switch, then press ◀ / ▶ button to select On or Off.

Please Note:


Balance: This item adjusts the speaker's output enabling you to hear the sound perfectly well in whichever position you are seated.

Auto Volume: This item is used to automatically reduce the difference between channel and programme volume.

Media Operation

Please note: Before you operate the Media menu, plug in the USB device, then press SOURCE button to set the Input Source to Media.


Press ▼/▲ button to select MEDIA in the source menu, then press OK button to enter.

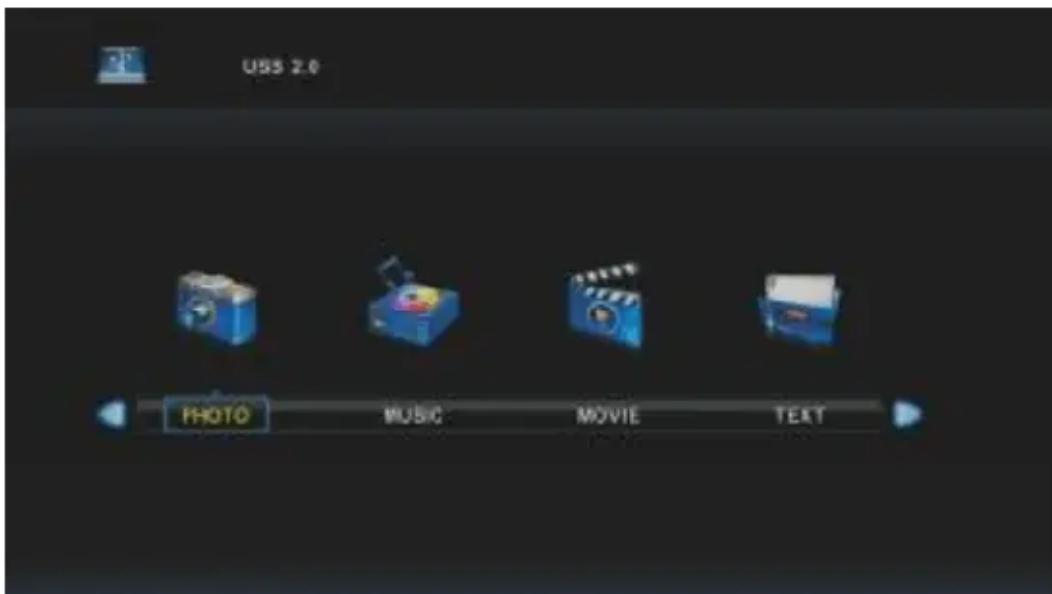

Press ◀ / ▶ button to select the option you want to adjust in the main Media menu, then press OK button to enter.

Photo Menu

Press ◀ / ▶ button to select PHOTO in the main menu, then press OK button to enter.
Press Exit button to return to the previous menu and Exit button again to quit.

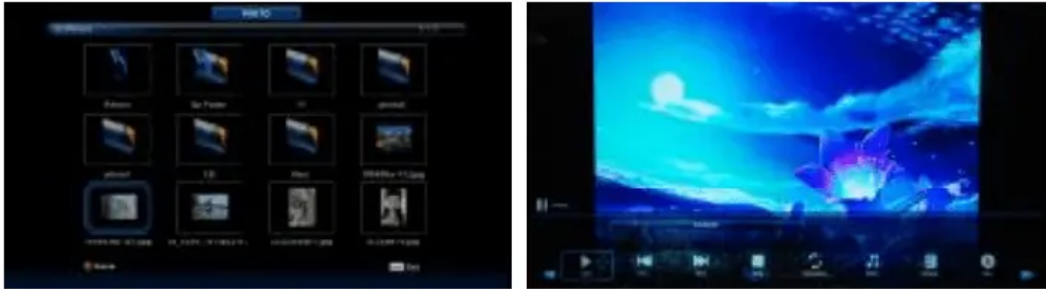


Press ◀ / ▶ button to select the file you want to watch in the file selection menu, then press media button to display the picture.

When highlighting the option selected, the file information will appear on the right and the picture will be previewed in the centre.

Music Menu

Press ◀ / ▶ button to select MUSIC In the main menu, then press **OK** button to enter.

Press **Exit** button to return to the previous menu and **Exit** button again to quit.

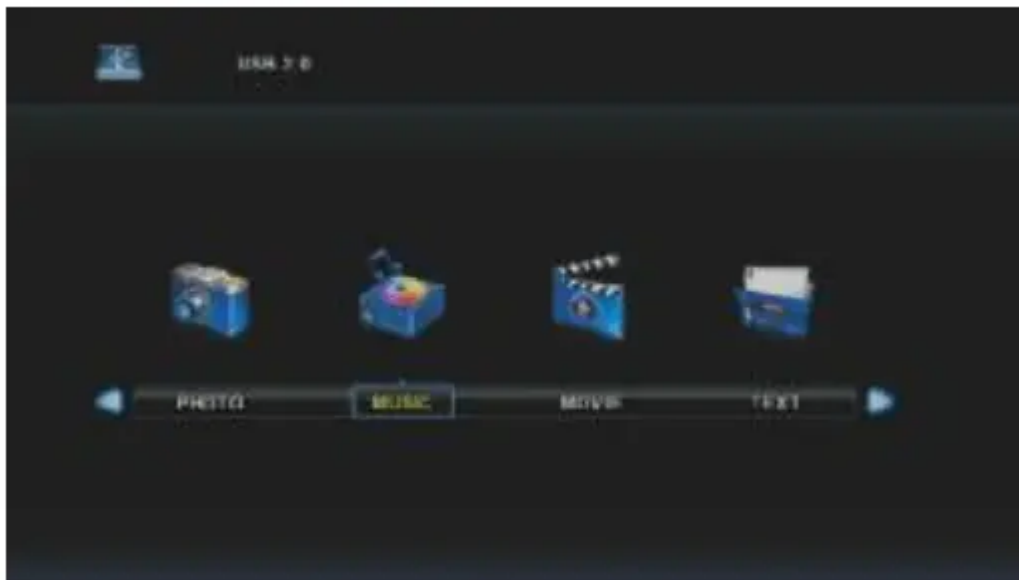



Press ◀ / ▶ button to select the drive disc you want to listen to, then press **OK** button to enter. Press ◀ / ▶ button to return to the previous menu.



Movie Menu

Press ◀ / ▶ button to select MOVIE in the main menu, then press **OK** button to enter. Press **Exit** button to return to the previous menu and **Exit** button again to quit.



Press ◀ / ▶ button to select a disc drive to watch, then press **OK** button to enter.

Press media button to play the selected movie.

Press display button to select the menu at the bottom of the screen, then press **OK** button to operate.

Press **Exit** button to go back to the previous menu and **Exit** button again to quit the entire menu.



Text Menu


Press ◀ / ▶ button to select TEXT in the main menu, then press **OK** button to enter.

Press **Exit** button to return to the previous menu and **Exit** button again to quit.



Press ◀ / ▶ button to select a disc drive to watch, then press OK button to enter.

Press ◀ / ▶ button to select on the next page.

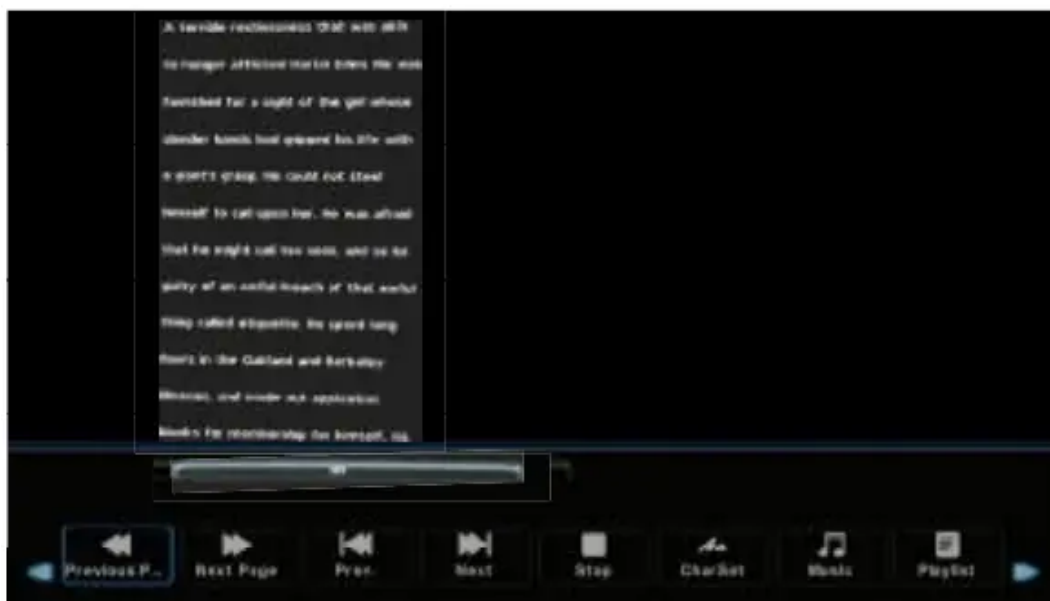

Smart TV Operation

Welcome Page

When the Smart TV input is selected for the first time, a Welcome Page will be shown. It will help you to configure the device.



Please note:

If you want to skip this Wizard, press “HOME” key.

If you have completed the Wizard once, it will not automatically open again.

If you want to change any of these settings again, select 'Welcome' from 'All Apps' to run through the options again.

Setup Page

Select language:



Select network type:



Please note:

If you do not want to choose your network, you can skip this step by pressing “Skip”. You will also find the network settings in “Settings”.

Select Wireless network (Wi-Fi):




Please note:


If you choose 'Wi-Fi', select a Wi-Fi Access Point.

If you choose 'Ethernet', the screen will show Ethernet connection status.


Select Ethernet network(LAN):

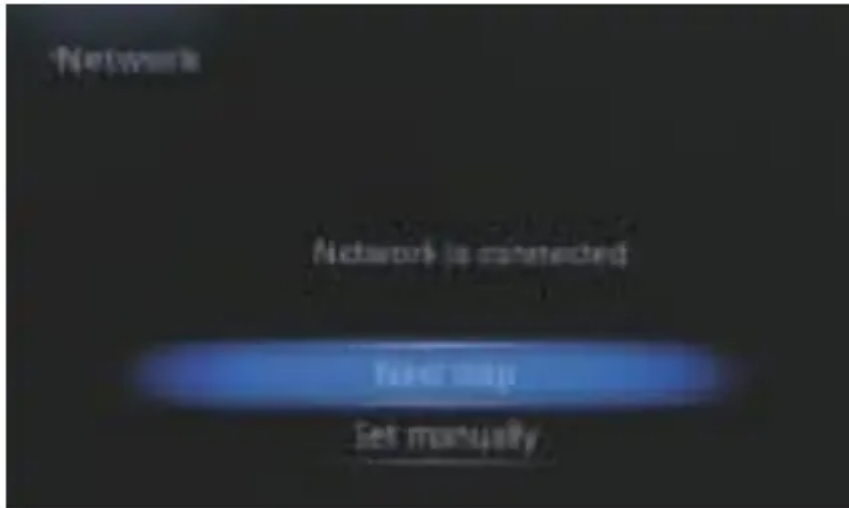

Configure Ethernet manually:

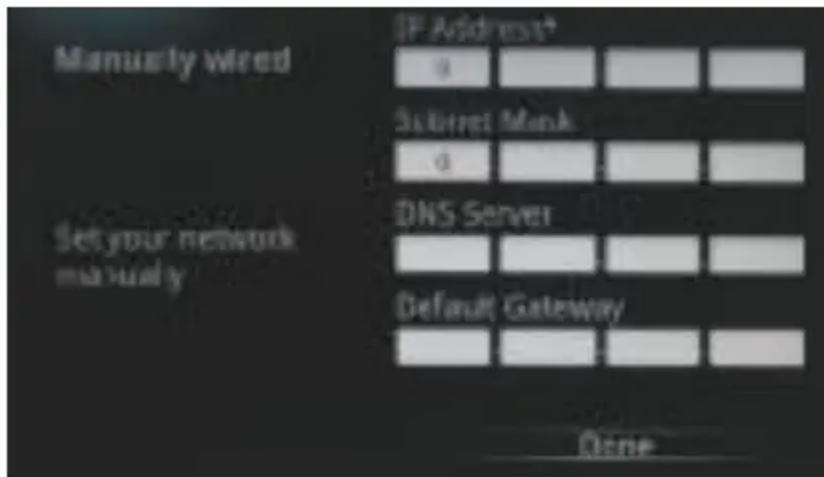

Set up the correct time zone:

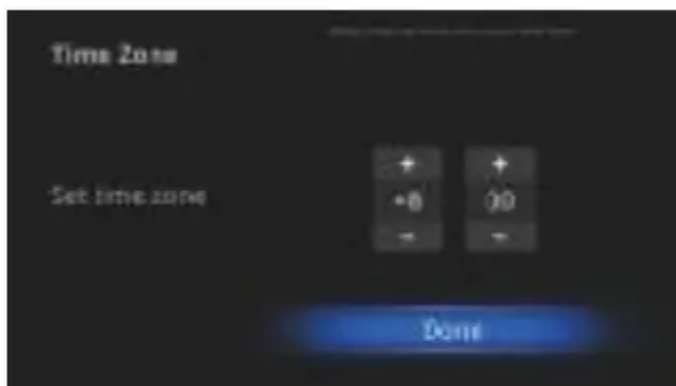


Please note:


If the network is not connected, set the date and time manually.

Set the date /time manually:




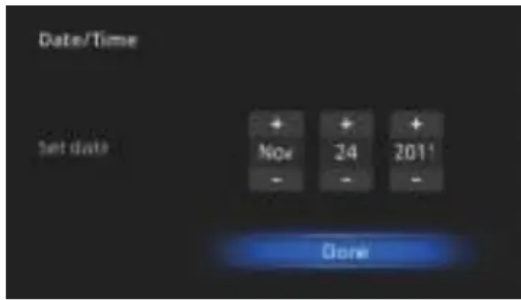

Configuration:

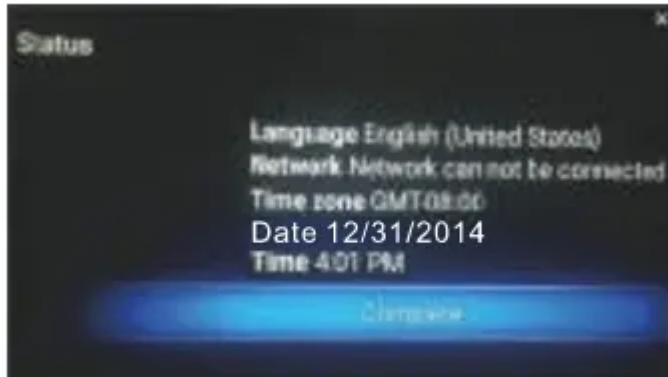

Adjust the screen size using the arrow buttons on the remote control:

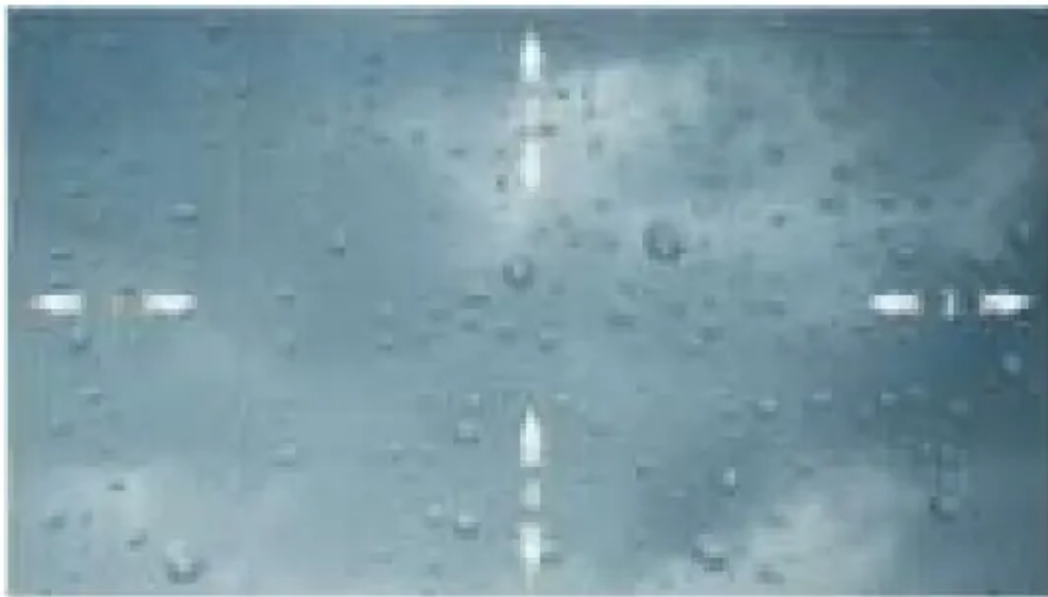

1. Select the numbers one by one.
2. For each number, use the left/ right or up/ down arrows to move the screen until a white line is displayed on the edge. Then move back one step. This will ensure that the text/ images will be displayed in full.
3. Press 'Exit' button on the remote control to confirm your selection.


Please note:







Users can set the Language, Network, Time Zone,
Date / Time and adjust screen size at this stage.

Main Launcher

 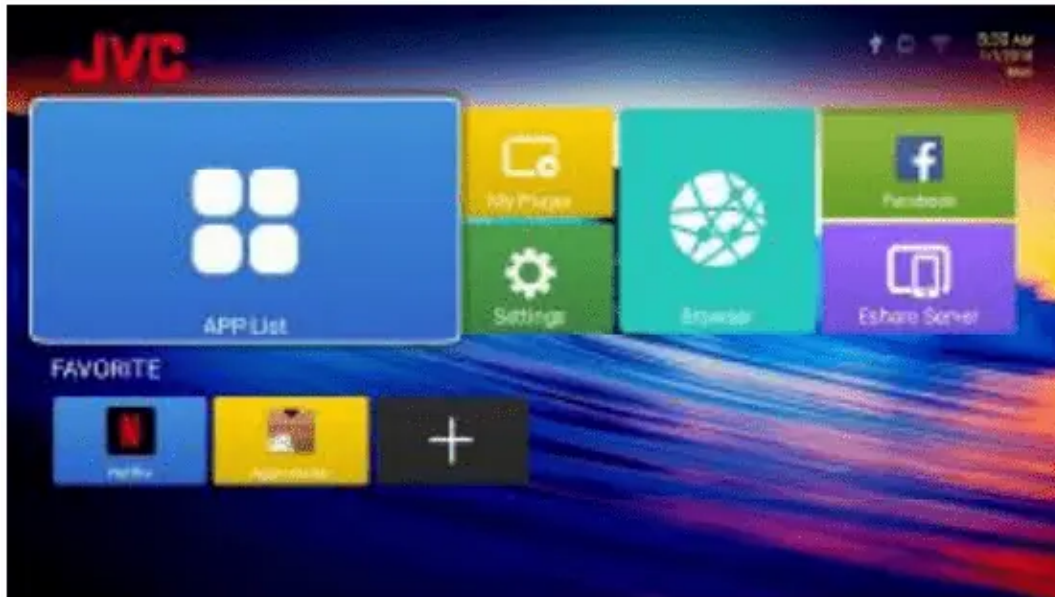
In Android mode, press the "Home" button on the remote control to enter the Main Launcher.




Press the arrow buttons ◀/▶ ▲/▼ to select the desired icon and press "Enter" to enter the sub-screen.



| FUNCTION | DESCRIPTION |
|---|--|
|  | <p>Main Launcher contains:</p> <ul style="list-style-type: none"> -Time Information (which can be set via "Settings"). - Function status (which shows Wi-Fi and USB connections - If It Is white then it is working, if it is grey it is in standby mode). |
|  | <p>In the All App menu, you can view and select more apps.</p> |
|  | <p>The Browser tab contains bookmarks and a search bar. It allows to browse the Internet.</p> <p>You can search for information and watch online TV etc.</p> |
|  | <p>Add your favorite APPS to this directory.</p> |
|  | <p>The Settings screen contains most of the customizing and configuration options, such as language, aspect ratio and network settings.</p> |
|  | <p>Create necessary APP shortcuts to the Main Launcher.</p> |

Settings

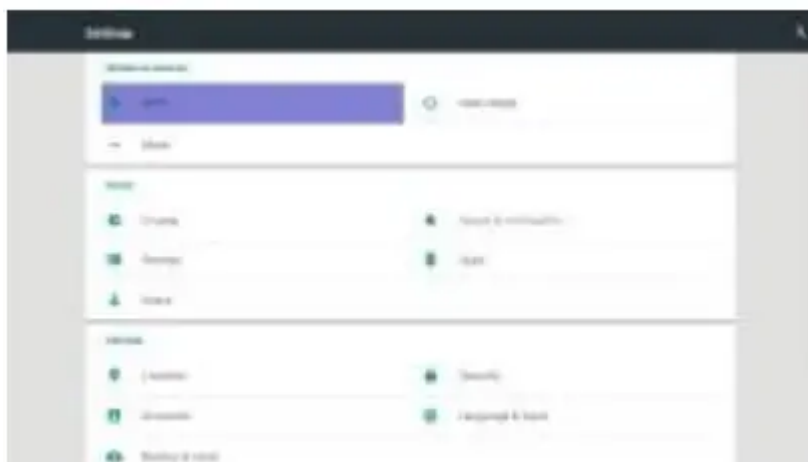

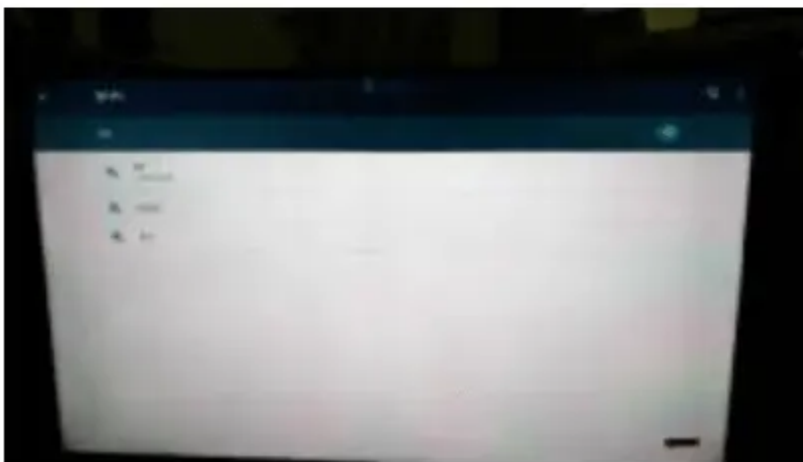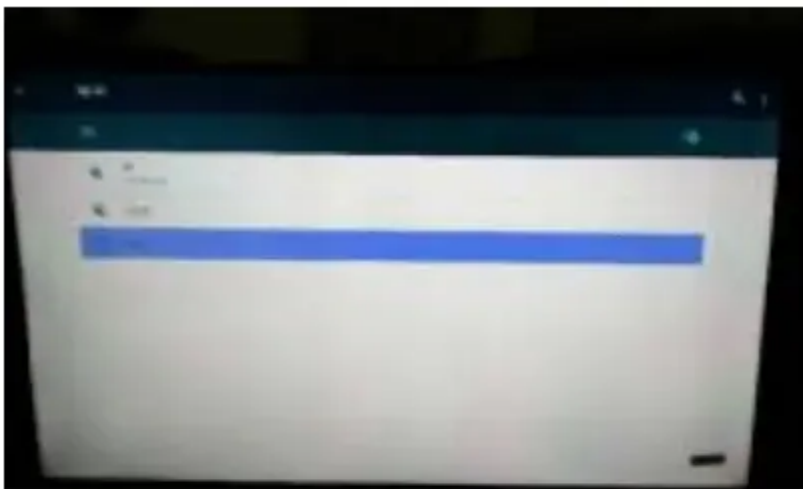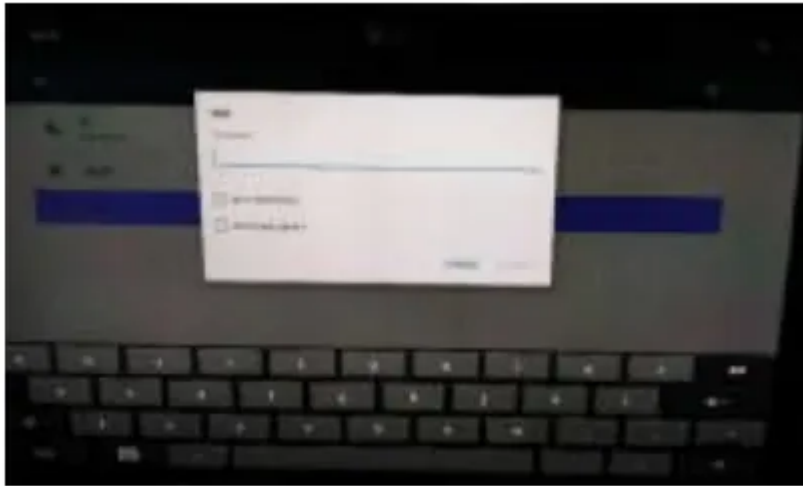

Main Launcher Applications

Install from USB Flash Drive

1. Open the 'File Browser'.
2. Choose your USB flash drive or any other mass storage folder.
3. Select the desired application from the folder.

4. Press the Install button.
5. You can find the application in the tab “Apps” after installation.

Download & Install from Browser

1. Open the Browser.
2. Press search key and input your website address.
3. Download the APK file from the downloaded link
(if you experience problems with downloading, please make sure there is enough space in your internal storage).

Install from App Installer

1. Open the App Installer.
2. Find the application's icon and enter it.
3. Press the install button.
4. You can find the application in the tab “Apps” after installation.

Install from Google Store

1. Open the Google store application.
2. Enter your Google account name and password into the Google store.
3. Download and install.

Unlocking Features for Pre-Loaded Android Apps

1. Load your existing Gmail account onto your TV Set or create a new account to access the Android Play Store.
2. Now that you have access to the Android App on your TV, you can browse and load Apps.
3. In some instances when you try to access the Youtube or Netflix Apps, you are automatically requested to update Google Play Service.
4. If you are not prompted to update Google Play Service, you can either search for same in the Play Store App or via the Internet Browser. Update and this will unlock the full Android access.
5. Once you have updated this process, you can access all Apps with ease.

Using the remote control as a mouse:

1. Press the “ (5 ” button to turn on the mouse function.
2. Use left, right, up and down arrow buttons to move the arrow around the screen.
3. Use 'OK' button as mouse click (to select).

4. Press the “ (5 "button again to turn off mouse function.

Alternatively, you can connect a standard USB mouse to the TV.

SCREENSHOT

Press to select the camera for a screenshot (only in Smart TV mode). You can find the screenshot file in Internal Memory/Public Memory/Pictures/Screenshots.

Troubleshooting

| PROBLEM | SOLUTION |
|--|---|
| <p>TV will not turn on</p> | <ul style="list-style-type: none"> • If your TV has a main power switch (O/I switch), make sure it is set to ON - refer to the Overview diagram for position. Note: The main power switch, if available on your TV, is separate from the standby button, • Make sure the standby button is also turned on. • Make sure the power cord is plugged in. • The batteries in the remote control may be dead. Replace the batteries if necessary. |
| <p>I don't receive all the available channels or am having reception problems</p> | <p>Your antenna may not be sensitive enough or positioned properly, especially if you are using an indoor antenna. We recommend connection to a professionally installed external antenna. Some indoor antennas may work depending on your location to the broadcasting tower, however they usually won't tune all available channels and can produce intermittent reception.</p> |
| <p>My Foxtel box (or other device) is causing problems with the TV</p> | <ul style="list-style-type: none"> • Try turning your TV on before turning your Foxtel box on. |
| <p>No picture, no sound</p> | <ul style="list-style-type: none"> • Check the interface cable between TV and antenna/cable TV. • Press the power button on the remote. • Press the SOURCE button on the remote, then press the SOURCE button repeatedly to select the TV sources. |
| <p>Poor picture, sound OK</p> | <ul style="list-style-type: none"> • Check the interface cable between TV and antenna/cable TV. • Try another channel. The station may have broadcast difficulties. • Adjust the brightness/contrast options in the Video menu. |



| | |
|---|---|
| <p>Picture OK, Poor sound</p> | <ul style="list-style-type: none"> • Sound may be muted. Press the MUTE button on the remote, • Press the TV button on the remote, then press the VOL+ button to increase the volume. |
| <p>Audio noise</p> | <ul style="list-style-type: none"> • Move any infrared equipment away from the TV. |
| <p>I've lost or damaged my remote control</p> | <ul style="list-style-type: none"> • Please call customer service to buy a new one. Please note that universal remote controls will not work with this television. |
| <p>When I connect my computer, the outer edges get cropped out</p> | <ul style="list-style-type: none"> • Using the TV's menu, select "Aspect Ratio" and change the value to either "Underscan" or "Point to Point". Once complete, set your computer's video output to 1080p for best performance. |

Smart Features Troubleshooting



| PROBLEM | POSSIBLE CAUSES | SOLUTIONS |
|---|--|---|
| Cannot access any links on the browser | <ol style="list-style-type: none"> 1. Errors in network parameter configuration. 2. Network connection is improper. 3. Network service is not activated. 4. Wi-Fi not connected properly | <ol style="list-style-type: none"> 1. Contact the network administrator to obtain IP address and other parameters. 2. Check if network cable is connected properly. 3. Contact network service provider. 4. Connect to your Wi-Fi network |
| Cannot download or Install apps | <ol style="list-style-type: none"> 1. Problem with your network connection 2. Trying to install incompatible apps | <ol style="list-style-type: none"> 1. Check your network connection (wired or wireless). 2. Not all apps are compatible with this TV. Some third-party apps may not work properly or may have limited functionality. |
| Text/ images getting cut off at the edges | <ol style="list-style-type: none"> 1. Screen size not adjusted correctly. | <ol style="list-style-type: none"> 1. Adjust screen size from 'Welcome' option in 'All Apps'. See 'Smart TV Install Wizard' section for instructions. |

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

