

## Parts & Features



## Using your mini maker griddle

Before first use, remove all packaging material and thoroughly clean your Mini Maker Griddle.



Never touch the Cooking Surface or Cover while appliance is in use.



DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury.



Always lift and lower the Cover by the Cover Handle. Lift from the side.

1. Place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Indicator Light will illuminate, signaling that the Mini Maker Griddle is heating up.



2. Once the Cooking Surface reaches the optimal cooking temperature, the Indicator Light will automatically shut off. Now, you're ready to get cooking!



3. Carefully lift the Cover by the Cover Handle and spray both Cooking Surfaces with a small amount of cooking spray



4. Place food onto the Cooking Surface and close the Cover.



5. Once food is cooked to your preference, carefully remove it from the Cooking Surface with a heat-resistant nylon or silicone cooking utensil. Do not use metal utensils to remove or place food on the Cooking Surface as this will damage the nonstick surface.



6. When you have finished cooking, unplug your Mini Maker Griddle and allow it to cool before moving or cleaning.



## Cleaning & maintenance

Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids. Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Maker Griddle. In order to keep your Mini Maker Griddle in pristine working order, thoroughly clean the appliance after each use. This will prevent the build-up of food or oil.

- Unplug Mini Maker Griddle and allow it to cool completely.
- Using a damp, soapy cloth, wipe down the Cooking Surface and Cover. Thoroughly rinse the cloth and wipe again.
- Thoroughly dry Mini Maker Griddle before storing.
- If there is food burned onto the Cooking Surface, pour on a small amount of cooking oil and let sit for 5 to 10 minutes. Scrub the surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Thoroughly rinse the cloth and wipe again. If any food remains, pour on more cooking oil and let it sit for a few hours, then scrub and wipe clean.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Maker Griddle and its non-stick Cooking Surface.

## TROUBLESHOOTING

While our products are durable, you may encounter one or more of the problems listed below. If the issue is either not solved by the solutions recommended below, or not included on this page, please contact our Customer Support Team at 1-800-898-6970 or [support@storebound.com](mailto:support@storebound.com).

1. The light on the Mini Maker Griddle keeps shutting off.
  - This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the

Cooking Surface does not get too hot or cold. When this occurs, the Indicator Light turns on and off.

2. How do I know when the Mini Maker Griddle is heated and ready to use?
  - When the Griddle reaches the optimal temperature, the Indicator Light shuts off and that means you're ready to get cooking!
3. There is no On/Off Button. How do I turn the Mini Maker Griddle off and on?
  - To turn on, simply plug in the power cord. When you're done cooking, turn off the Mini Maker Griddle by unplugging it.
4. When using my Mini Maker Griddle, the Cover gets very hot. Is this normal?
  - Yes, this is completely normal. When using your Mini Maker Griddle, always lift and lower the Cover by the Cover Handle. To prevent personal injury, do NOT lift the Cover so that your arm is over the Cooking Surface as it is hot, and may cause injury. Lift from the side.
5. I am cooking meat on the Mini Maker Griddle and there is juice on the Cooking Surface. What do I do?
  - Carefully dab the Cooking Surface around the meat with a paper towel or napkin. If there is a lot of juice, remove the food from the surface with heatresistant plastic or silicone tongs and set aside. Then, wrap a paper towel around the tongs and use this to wipe the Cooking Surface and soak up the juices. When finished, return the food to the Mini Maker Griddle and continue cooking.
6. After using my Mini Maker Griddle a few times, food is starting to stick to the surface. What is happening?
  - There is probably a build-up of burnt food residue on the Cooking Surface. This is normal, especially when cooking with sugar. Allow the appliance to cool fully, pour on a small amount of cooking oil, and let sit for 5–10 minutes. Scrub the Cooking Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Rinse the cloth and wipe again. If food remains, pour on more cooking oil and let sit for a few hours, then scrub and wipe clean.
7. The Indicator Light will not turn on and the Cooking Surface is failing to heat.
  - Ensure that the power cord is plugged into the power outlet.
  - Check to make sure that the power outlet is operating correctly.
  - Determine if a power failure has occurred in your home, apartment, or building.

## IMPORTANT SAFEGUARDS

**IMPORTANT SAFEGUARDS:** PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- FOR HOUSEHOLD USE.
- Read all instructions carefully.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly and dried before using.
- Do not use appliance for other than intended use. Do not use outdoors.
- **WARNING:** Hot surfaces! Never touch the Cooking Surface or Cover while appliance is in use. Always lift and lower the Cover by the Cover Handle.
- Do NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Mini Maker Griddle is NOT dishwasher safe.
- Never use abrasive cleaning agents to clean your appliance as this may damage the appliance and its nonstick Cooking Surface.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or is damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- DO NOT use the Mini Maker Griddle near water or other liquids, with wet hands, or while standing on a wet surface.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM – 7PM PST Monday – Friday or by email at [support@storebound.com](mailto:support@storebound.com).
- Do not use metal utensils on the Cooking Surface as this will damage the non-stick surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.

- Be cautious when moving an appliance containing hot oils or other hot liquids.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Allow Mini Maker Griddle to cool completely before moving, cleaning, or storing.
- Close supervision is necessary when any appliance is used by or near children.
- Do not let the cord touch hot surfaces or hang over the edges of tables or counters.
- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Mini Maker Griddle can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- An extension cord may be used if care is exercised in its use.
- If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
- If the appliance is grounded, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the edges of counter tops or tabletops where it can be pulled on by children, or tripped over unintentionally

### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.