


PARTS AND FEATURES

PARTS AND ACCESSORIES

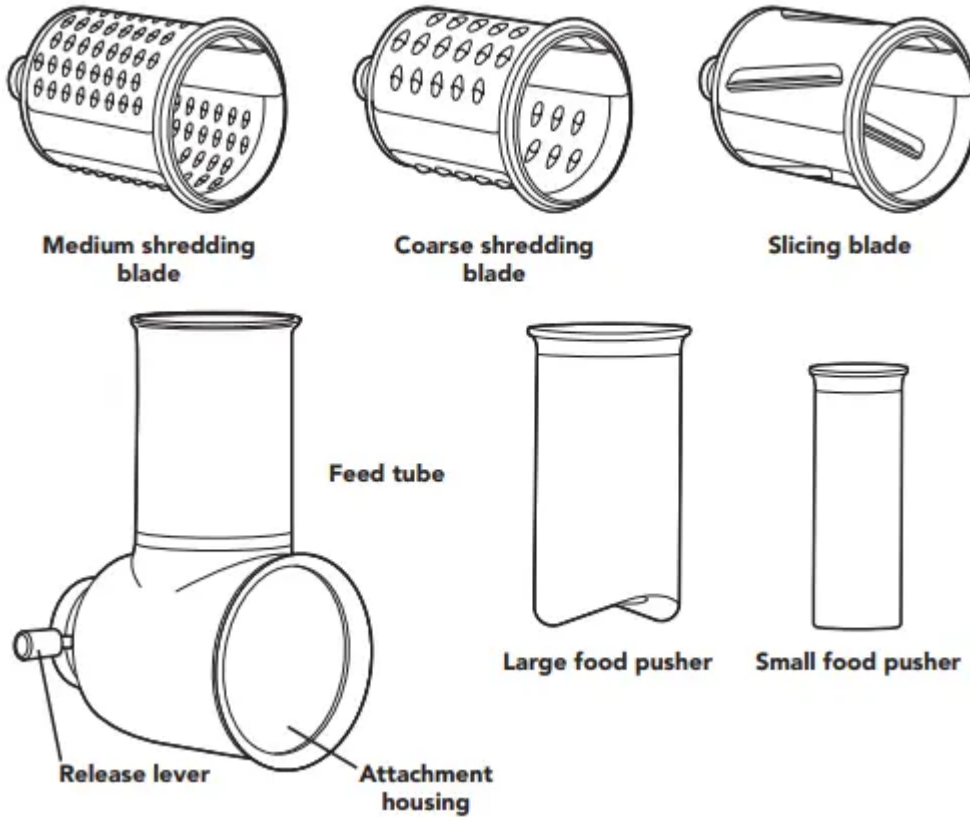

USING THE STAND MIXER ATTACHMENT

FRESH PREP SLICER/SHREDDER ATTACHMENT BLADE CHART


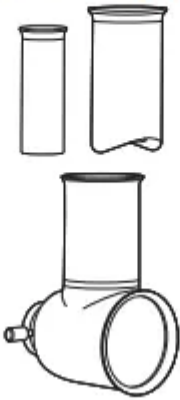


⚠ WARNING




Rotating Blade Hazard
Always use food pusher.
Keep fingers out of openings.
Keep away from children.
Failure to do so can result in amputation or cuts.




NOTE: For best results, feed only one item at a time into the feed tube (ex. carrot). Do not feed items into the feed tube by hand; always use the food pushers. If food remains in the Fresh Prep Slicer/Shredder attachment after running, stop the Fresh Prep Slicer/Shredder attachment, remove the remaining items, and place back into the feed tube to shred or slice again.

USE THESE PARTS	WITH THESE PARTS	SUGGESTED FOODS	SPEED
MEDIUM SHREDDING BLADE 	HOUSING and SMALL or LARGE FOOD PUSHER 	CAULIFLOWER BEETS CARROTS CHEESE	4
COARSE SHREDDING BLADE 		ZUCCHINI POTATOES CHEESE	
SLICING BLADE 		CARROTS CUCUMBER ZUCCHINI POTATOES CABBAGE (shred)	


ASSEMBLING THE FRESH PREP SLICER/SHREDDER ATTACHMENT

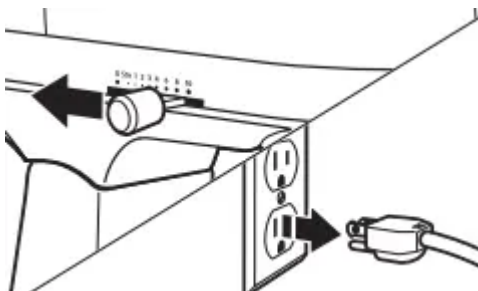

1 Turn the Stand Mixer off and unplug

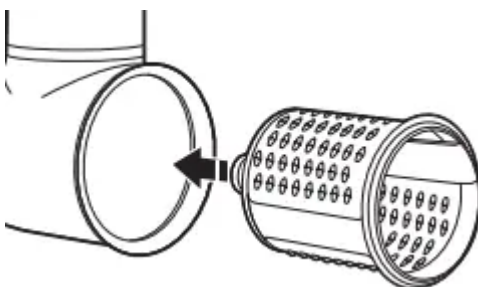


2 Slide the blade you want to use into the housing. You will hear a click when the blade snaps into place properly on the drive shaft

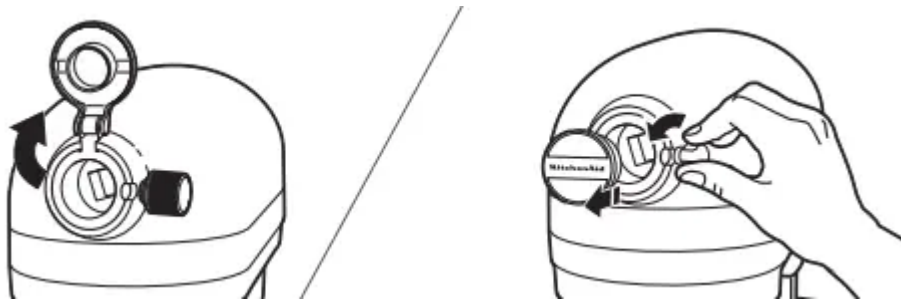


3 For Stand Mixers with a hinged attachment hub cover: Flip up to open.

For Stand Mixers with a removable attachment hub cover: Turn the attachment knob counterclockwise to remove attachment hub cover.

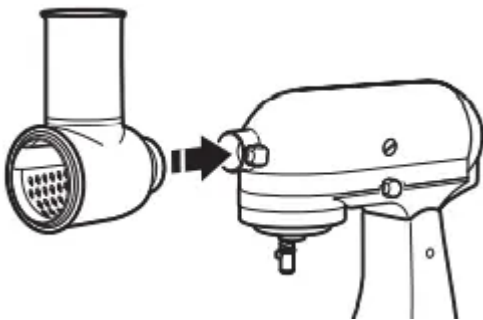

4 Insert the attachment shaft housing into the attachment hub, making certain the power shaft fits into the square hub socket. If necessary, rotate the attachment back and forth. The pin on the attachment housing fits into the notch of the hub rim when in the proper position.

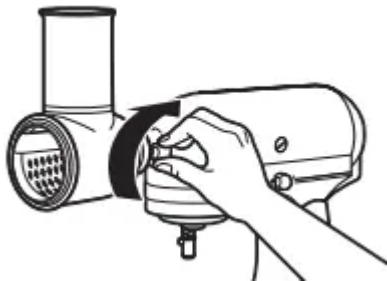

5 Tighten the Stand Mixer attachment hub knob until the attachment is completely secured to the Stand Mixer. Make sure that hub knob is properly seated in the retention hole in the attachment.

USING THE FRESH PREP SLICER/SHREDDER ATTACHMENT

NOTE: For best results, feed only one item at a time into the feed tube (ex. carrot).


Do not feed items into the feed tube by hand; always use the food pushers. If food remains in the Fresh Prep Slicer/Shredder attachment after running, turn the Stand Mixer to “0” (Off), remove the remaining items, and place back into the feed tube to shred or slice again.




1 Place a large bowl under the Fresh Prep Slicer/Shredder attachment to catch food as it comes out.



2 Cut food so that it fits within the feed tube.

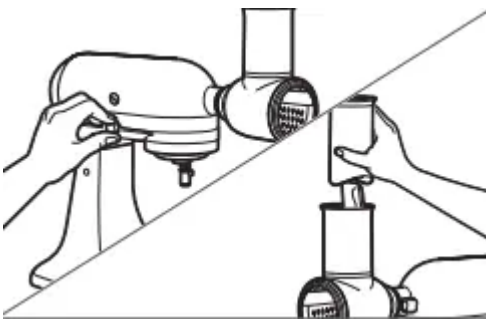

3 Turn the Stand Mixer to Speed 4, then use the appropriate food pusher to feed the food item into the feed tube.

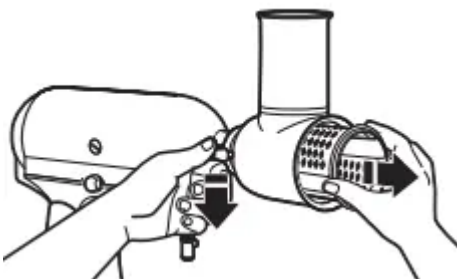


4 Push down on the release lever and pull out the blade, in order to change to a new blade.


CARE AND CLEANING

CLEANING THE FRESH PREP SLICER/SHREDDER ATTACHMENT

IMPORTANT: The housing of the Fresh Prep Slicer/Shredder attachment must be hand washed only using warm, soapy water. The Fresh Prep Slicer/Shredder attachment blades and accessories are dishwasher safe, top rack only.

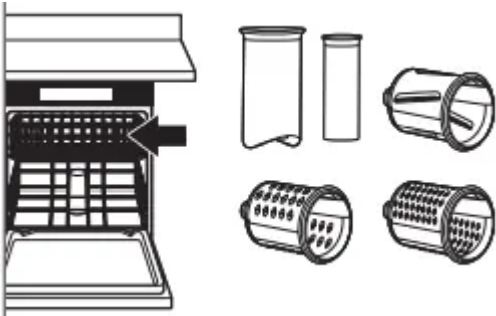

1 After using the Fresh Prep Slicer/ Shredder attachment, remove all blades and accessory items. Wash the blades and accessories in the dishwasher, top rack only.

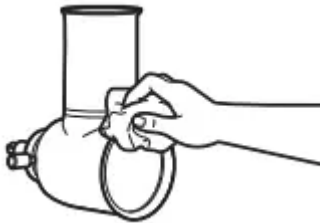

2 Clean the housing of the Fresh Prep Slicer/Shredder attachment by hand only. Wash with a soft, damp cloth. Dry thoroughly with a soft dry cloth. Do not wash in the dishwasher.

TROUBLESHOOTING

If your Stand Mixer should malfunction or fail to operate while using the Fresh Prep Slicer/ Shredder attachment, please check the following:

- Did you follow the preparation suggestions in the “Fresh Prep Slicer/ Shredder attachment blade chart”?
- Did you choose a blade recommended for the type of food you are slicing/ shredding?
- Is the Stand Mixer plugged in? Refer to the “Instructions” manual that came with your Stand Mixer to find possible solutions.
- Is the fuse in the circuit to the Stand Mixer in working order? Refer to the “Instructions” manual that came with your Stand Mixer to find possible solutions.

If the problem is not due to one of the above items, see the “Arranging for Service” section in the “Warranty”.

Do not return the Fresh Prep Slicer/ Shredder attachment or the Stand Mixer to the retailer, as they do not provide service.

WARRANTY AND SERVICE

KITCHENAID® FRESH PREP SLICER/SHREDDER ATTACHMENT WARRANTY FOR THE 50 UNITED STATES, THE DISTRICT OF COLUMBIA, PUERTO RICO, AND CANADA

This warranty extends to the purchaser and any succeeding owner for Fresh Prep Slicer/Shredder attachments operated in the 50 United States, the District of Columbia, Puerto Rico, and Canada.

Length of Warranty: One Year Full Warranty from date of purchase.



KitchenAid Will Pay for Your Choice of:

Hassle-Free Replacement of your Fresh Prep Slicer/ Shredder attachment. See the next page for details on how to arrange for service, or call the Customer eXperience Center toll-free at 1-800-541-6390.

OR

The replacement parts and repair labor costs to correct defects in materials and workmanship. Service must be provided by an Authorized KitchenAid Service Center.

KitchenAid Will Not Pay for:

- A. Repairs when your Fresh Prep Slicer/Shredder attachment is used in other than normal single family home use.
- B. Damage resulting from accident, alteration, misuse or abuse.
- C. Any shipping or handling costs to deliver your Fresh Prep Slicer/Shredder attachment to an Authorized Service Center.
- D. Replacement parts or repair labor costs for Fresh Prep Slicer/Shredder attachments operated outside the 50 United States, District of Columbia, Puerto Rico, and Canada.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

IMPLIED WARRANTIES, INCLUDING TO THE EXTENT APPLICABLE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED TO THE EXTENT LEGALLY PERMISSIBLE. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO ONE YEAR, OR THE SHORTEST PERIOD ALLOWED BY LAW. SOME STATES AND PROVINCES DO NOT ALLOW LIMITATIONS OR EXCLUSIONS ON HOW LONG AN IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

IF THIS PRODUCT FAILS TO WORK AS WARRANTED, CUSTOMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE REPAIR OR REPLACEMENT ACCORDING TO THE TERMS OF THIS

LIMITED WARRANTY. KITCHENAID AND KITCHENAID CANADA DO NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province

HASSLE-FREE REPLACEMENT WARRANTY – 50 UNITED STATES, DISTRICT OF COLUMBIA, AND PUERTO RICO

We're so confident the quality of our products meets the exacting standards of KitchenAid that, if your Fresh Prep Slicer/Shredder attachment should fail within the first year of ownership, KitchenAid will arrange to deliver an identical or comparable replacement to your door free of charge and arrange to have your original Fresh Prep Slicer/ Shredder attachment returned to us. Your replacement unit will also be covered by our one year limited warranty.

If your Fresh Prep Slicer/Shredder attachment should fail within the first year of ownership, simply call our toll-free Customer eXperience Center at 1-800-541-6390 Monday through Friday. Please have your original sales receipt available when you call. Proof of purchase will be required to initiate the claim. Give the consultant your complete shipping address. (No P.O. Box numbers, please.)

When you receive your replacement Fresh Prep Slicer/Shredder attachment, use the carton, packing materials, and prepaid shipping label to pack up your original Fresh Prep Slicer/Shredder attachment and send it back to KitchenAid.

HASSLE-FREE REPLACEMENT WARRANTY – CANADA

We're so confident the quality of our products meets the exacting standards of the KitchenAid brand that, if your Fresh Prep Slicer/Shredder attachment should fail within the first year of ownership, we will replace your Fresh Prep Slicer/ Shredder attachment with an identical or comparable replacement. Your replacement unit will also be covered by our one year limited warranty.

If your Fresh Prep Slicer/Shredder attachment should fail within the first year of ownership, simply call our toll-free Customer eXperience Center at 1-800-807-6777 Monday through Friday. Please have your original sales receipt available when you call. Proof of purchase will be required to initiate the claim. Give the consultant your complete shipping address.

When you receive your replacement Fresh Prep Slicer/Shredder attachment, use the carton, packing materials, and prepaid shipping label to pack up your original Fresh Prep Slicer/Shredder attachment and send it back to KitchenAid

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

