

GETTING TO KNOW YOUR COFFEE MAKER

GETTING TO KNOW YOUR COFFEE MAKER

USE WITH THESE FILTERS:



1. Cover
2. Vortex Showerhead
3. Water reservoir
4. Removable filter basket (Part # CM1331-01) (not shown)
5. Digital display



6. Control panel
7. Sneak-A-Cup™ interrupt feature
8. 12 cup perfect-pour carafe with lid (Part # CM1331-02)
9. Nonstick “Keep hot” carafe plate
10. Built-in cord storage (not shown)
11. Water level markings

HOW TO USE

This product is for household use only.

GETTING STARTED

- Remove all packing material, any stickers, and the plastic band around the power plug.
- Go to prodprotect/blackanddecker to register your product.
- Wash removable parts as instructed in CARE AND CLEANING.
- Pour fresh cold water up to 12-cup level mark into the water reservoir.
- Place basket-style paper filter into removable filter basket. Place basket into filter basket holder. Make sure the word “Back” is towards the back of the unit.
- Plug cord into standard electrical outlet.
- Brew water through appliance without adding coffee grounds.
- We recommend filtered water.
- Discard water from the carafe and paper filter from filter basket.
- Turn off appliance; unplug and allow to cool down.

 
SETTING THE CLOCK



1. Plug appliance into standard electrical outlet.
2. The digital clock display flashes "12:00".
3. To change the time: Press HOUR button until the correct time appears on the display. When the time passes noon the light next to the PM illuminates to let you know you are in PM time. If the PM light is not illuminated, it is AM time.
4. Press the MIN button to select the minutes. The ":" will remain blinking. Pressing and holding the HOUR or MIN button will activate a rapid time advance.

Note: If the appliance is unplugged or power is interrupted even momentarily, the time may need to be reset.

BREW STRENGTH SELECTION



You may choose between regular or strongly flavored coffee to suit your personal taste. If you press the STRONG button; the light goes on and the brewing process slows to extract the maximum flavor from the coffee grounds. Regular strength is indicated by the STRONG light being off.

KEEP WARM



You may select how long you wish for the heated carafe plate keep coffee warm after brewing. The default is 120 minutes.

1. Press KEEP WARM button until your preference is shown. The button cycles through 30, 60, 90, 120 minutes or OFF.
2. Coffee Maker will turn off once keep warm timer has expired.

BREWING COFFEE



1. Open cover.
2. Fill water reservoir with desired amount of water. The 12 Cup line represents a full carafe of coffee. Do not fill reservoir past this 12 Cup (maximum) line.



Note: Use spring water or filtered water. Distilled water lacks the minerals necessary to bind to elements of coffee.

3. Place an 8-12 cup basket-style paper filter into the removable filter basket.
4. Add desired amount of ground coffee. Close cover.
5. Make sure carafe lid is properly attached to the empty carafe. Close the lid.

Note: Coffee may overflow if carafe lid is not properly placed.

6. Place empty carafe on the carafe plate.

7. If not already plugged in, plug power cord into an outlet.
8. If regular brew strength is desired, your coffeemaker is set to brew coffee.
9. If strong coffee is desired, press the STRONG button once to select the strong brew. The light next to the STRONG button illuminates.
10. Press the Start/Power button  , and brewing begins. The  button illuminates.
11. Once coffee grounds have cooled, carefully open cover and discard used grounds. Close cover.
12. The coffeemaker will keep brewed coffee hot for how long is selected with the Keep Warm feature. Then the coffeemaker automatically turns off.

To turn off the coffeemaker at any time press the Start/Power button  . The Start/ Power button  light goes off. Unplug appliance when not in use.

SNEAK-A-CUP™ FEATURE




Remove the carafe and brewing will pause. The carafe must be placed back on the carafe plate in 30 seconds to prevent overflow. Brewing will begin again.

AUTO BREW

1. Make sure clock has been set to correct time of day.
2. Follow steps 1 through 9 under BREWING COFFEE.
3. Press the BREW LATER button.
4. The digital clock will flash 12:00.

Note: If the coffeemaker has not been unplugged, the last programmed brewing time will appear on the digital display.

5. To change the time: press HOUR button until the desired correct time appears on the display. Press the MIN button to select the minutes.
6. Delayed brewing is activated after 3 seconds with no button press. The light in the BREW LATER button will illuminate.
7. To check the preset auto time, press BREW LATER button. The delayed brewing time will flash for three seconds. Then the clock time will display again.
8. To change the delayed brew time, follow steps 1-5.

Note: To brew immediately and cancel AUTO BREW, press the  button. If you don't want to brew then, immediately press the  button again to turn off the coffeemaker. The  button light goes off.

 
CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

- Be sure the unit is unplugged and has cooled.
- Open the cover.
- To remove the filter basket, grip the handle and lift straight up. Discard the paper filter and the coffee grounds.
- Wash the filter basket, carafe and carafe lid in the top rack of the dishwasher or wash by hand with hot water and soap.
- Wipe the appliance's exterior surface, control panel and carafe plate with a soft damp cloth. Do not use abrasive cleansers or scouring pads. Never immerse the coffeemaker in water.
- To clean the inside of the cover, open the cover and leave in the open position. Wipe surfaces with a damp cloth.

AUTO CLEAN™ SYSTEM



De-scaling With Auto Clean™

Over time, calcium deposits or “scale” may build up in your brewer. Scale is non-toxic but if left unattended can hinder brewer performance and cause premature failure. Regularly de-scaling your brewer helps to maintain quality coffee as well as the lifespan of the heating element, and other internal parts that come in contact with water throughout the brew process. To make the de-scaling process as effortless as possible, an Auto Clean system has been programmed into your coffeemaker.


When should I use Auto Clean?

After every 60 brews, “CL” will be displayed and blink. This notifies you it is time to run the Auto Clean system. “CL” will be displayed until you run the Auto Clean system. If you would like to clean your coffeemaker prior to 60 brew cycles, you may do so by following the steps below.

Please note: If the unit is unplugged, the counter that keeps track of reminding you to clean your coffeemaker will reset to 0. If you have unplugged the coffeemaker, or if there have been power outages, we recommend cleaning the unit once a month.

How do I use Auto Clean?

Follow the simple steps below. Your coffeemaker will take care of the rest.

1. Combine 6 cups of white vinegar and 4 cups of cold water in carafe. We recommend filtered water.
2. Pour into water reservoir.
3. Place an 8 to 12 cup basket style paper filter in the removable filter basket. Insert filter basket into filter basket holder and close cover.
4. Make sure the lid of the carafe is in place and place empty carafe on the carafe plate.
5. Plug power cord into an outlet.
6. Press CLEAN to activate cleaning cycle; "CL" is displayed and the Start/Power button  illuminates. The word, "CLEAN" scrolls across the display.
7. Part of the mixture will brew through. The remaining mixture will be held in the coffeemaker for 30 minutes before completing its brew through.

Note: The entire cleaning cycle will take 45–60 minutes to complete.

8. When the coffeemaker completes the AUTO CLEAN cycle, it shuts off automatically.
9. Brew fresh water through appliance following instructions given in GETTING STARTED before brewing coffee again.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Coffeemaker does not turn on.	Coffeemaker is not plugged in.	Make sure appliance is plugged into a working outlet.
Coffeemaker is leaking	Water reservoir may have been overfilled.	Make sure you don't fill the water reservoir beyond the 12-cup line.
	Cover may not be correctly placed on carafe.	Make sure cover is correctly placed and tightened on carafe
	Carafe may not be correctly placed on the carafe plate	Make sure carafe is placed securely onto the carafe plate
The filter basket overflows.	The carafe has been removed for longer than 30 seconds when using the Sneak-ACup™ feature.	Make sure to replace the carafe within 30 seconds during the brewing cycle.
	Excessive amount of coffee is used.	Reduce the amount of coffee used.
	Brewing with softened water.	Always brew with cold, filtered water.
Coffee sediment in brewed cup of coffee.	The paper filter and/or the filter basket are not properly placed.	Insert basket-shaped paper filter into filter basket and insert basket properly into holder.
The coffeemaker brews slowly.	The coffeemaker needs cleaning.	Follow the instructions in the "Auto Clean" section.

If additional assistance is needed, please contact our consumer service team at 1-800-465-6070.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

