



## Normal Sounds

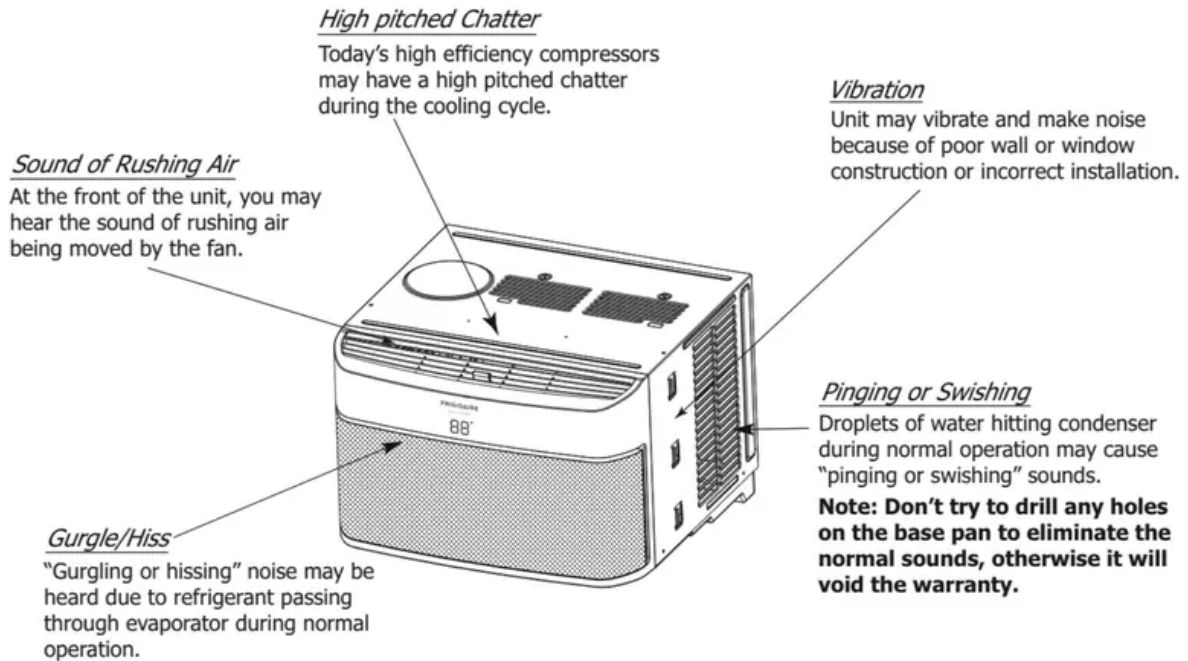

## Air Conditioner Feature

### Electronic Control


Before you begin, thoroughly familiarize yourself with the control panel and remote control and all its functions (as shown below). The unit can be controlled by the touch pad alone, with the remote control, or with the Frigidaire app\*.

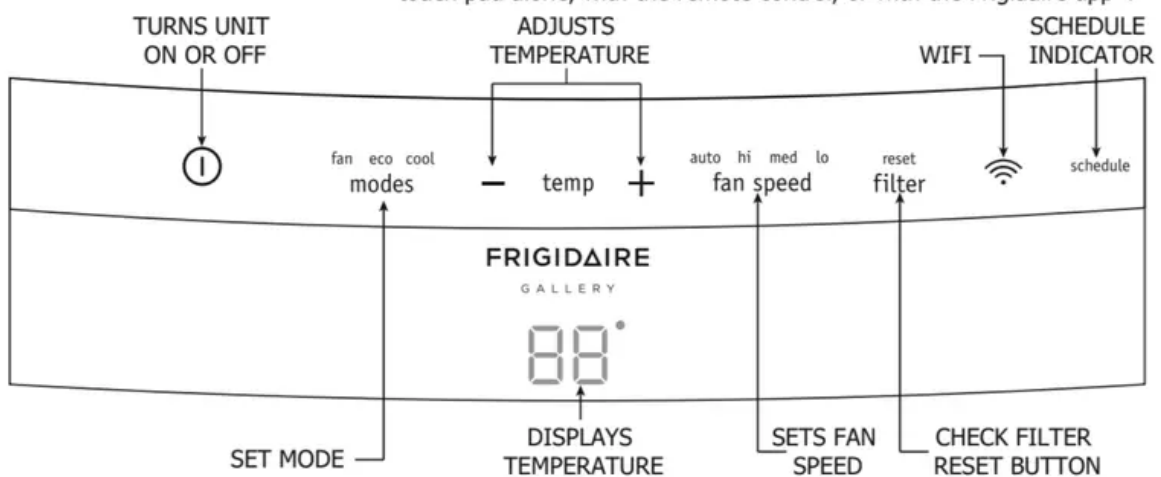

\*Refer to the Quick Start Guide that came with your Smart Air Conditioner for detailed instructions on setting up your air conditioner for connected operation from your smart phone or tablet.




**Note:** The display and indicator lights will turn off if the unit does not receive any control signal in 60 second. Press any button then the display will resume.

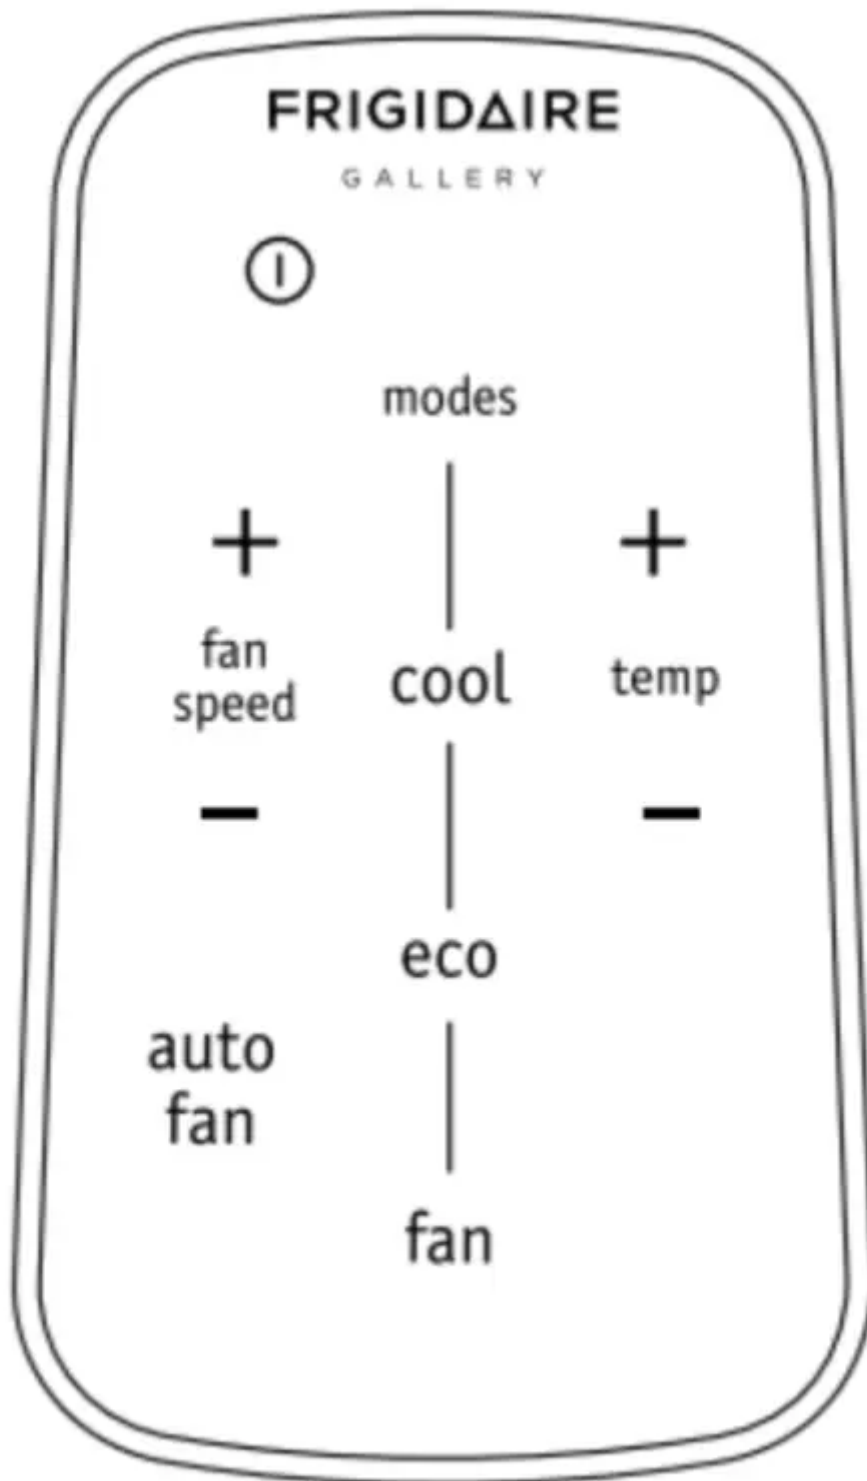

# REMOTE CONTROL

TO REPLACE BATTERY

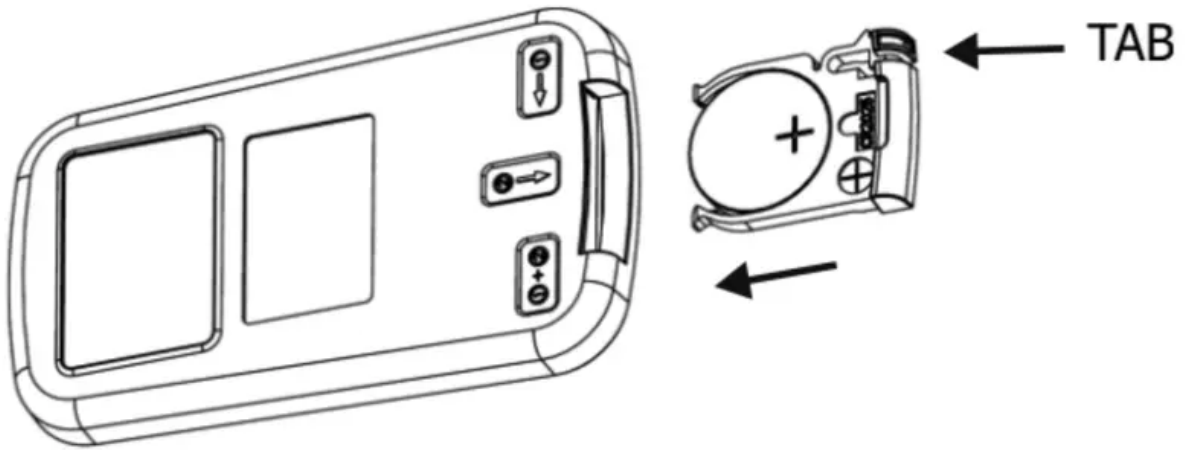


**Battery Size:** CR2025

Turn Remote Control upside down. Squeeze tab and pull to remove battery tray. Place battery in tray with POSITIVE(“+”) side facing UP, according to diagram. Re-insert battery tray.

## Operating Instructions


**NOTE:** The following instructions represent the touch pad. The same instructions can be used for the remote control.

**TO TURN UNIT ON:**

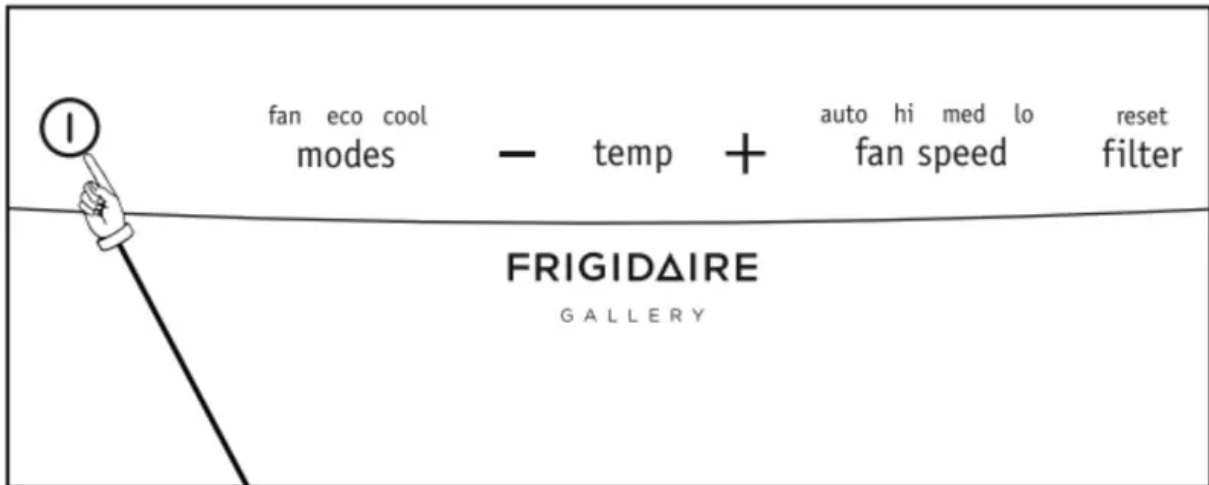


**DO THIS:**  
PRESS ON/OFF BUTTON

**YOU WILL SEE:**

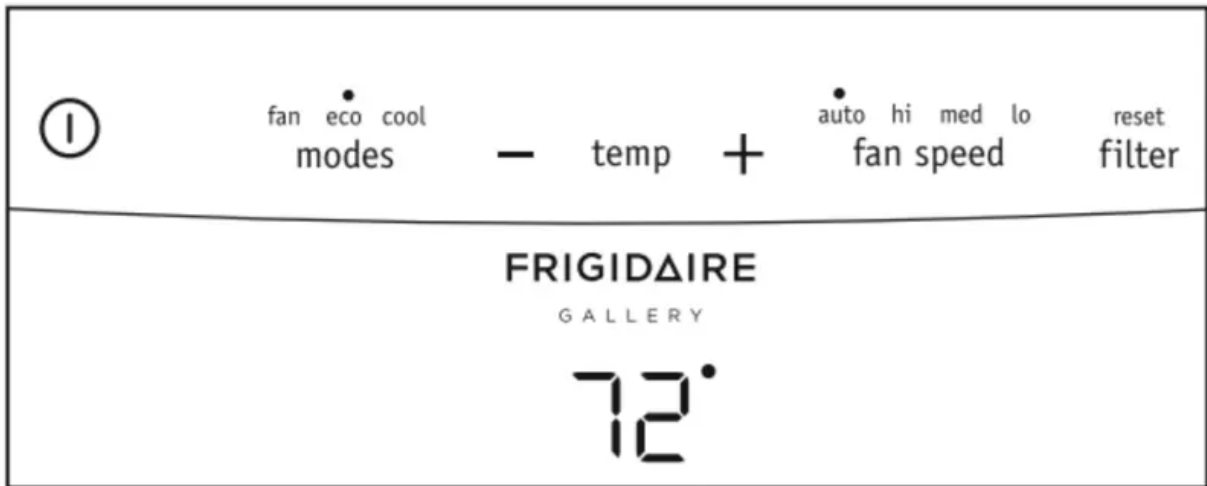

**Note:** The unit will run in eco (energy saver) mode when used for the first time. We recommend leaving the unit in eco mode to help save energy and money. For more information please see section on 'Eco Mode'.


**TO CHANGE TEMPERATURE SETTING:**

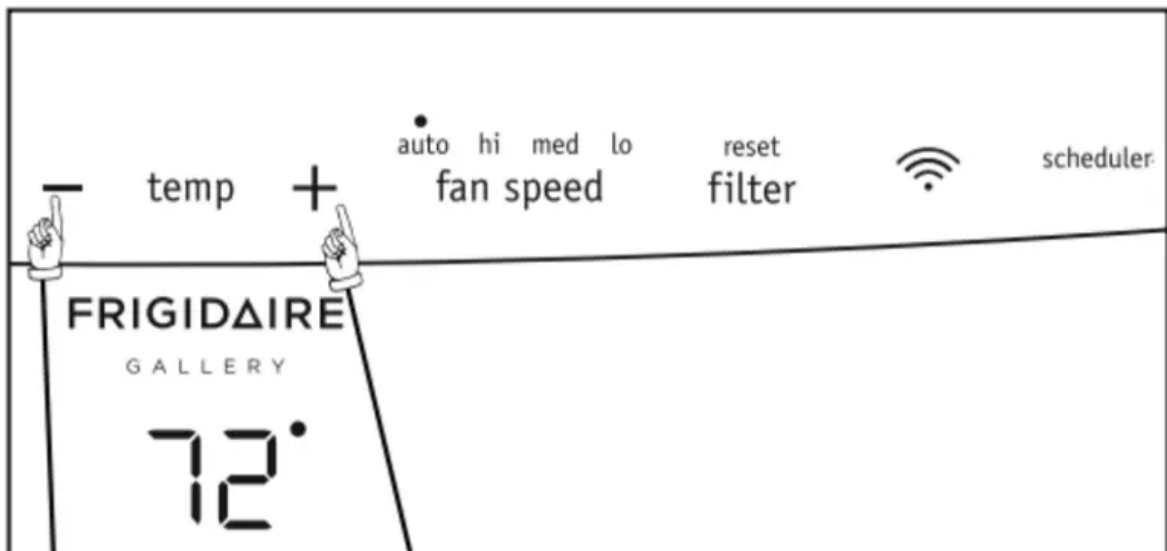

**DO THIS:**  
PRESS + TO RAISE  
PRESS - TO LOWER


**YOU WILL SEE:**



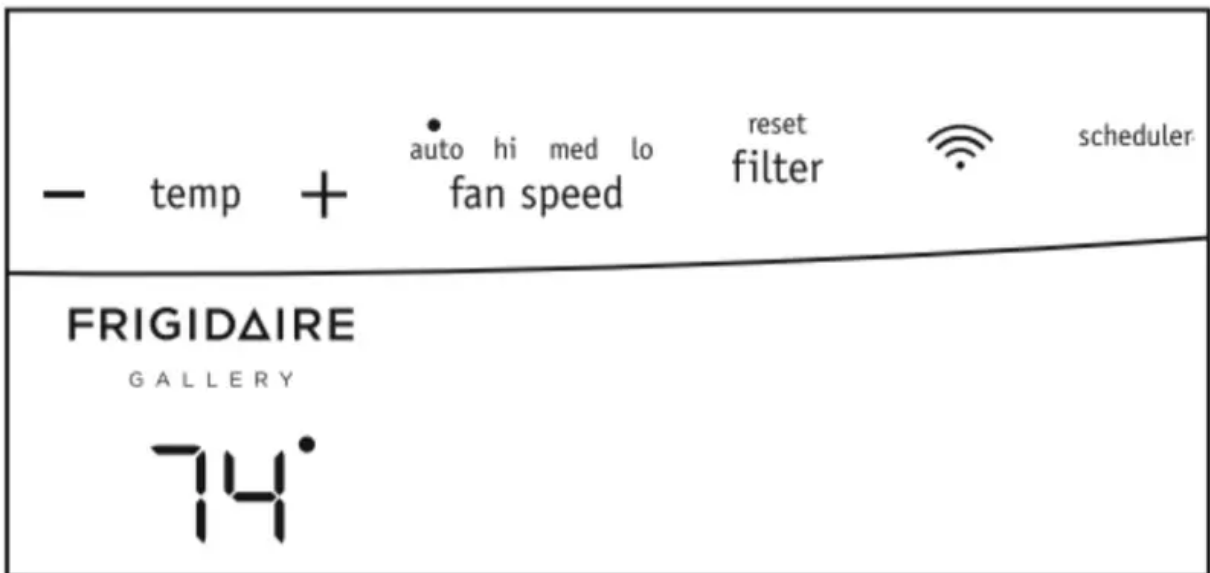

**Note:** The display will show the actual room temperature during normal operation, press either up (+) or down (-) button once to show the set temperature, press either the button again to adjust the set temperature to the desired setting. The unit will beep twice if the temperature up (+) or down (-) button is pressed continuously when the set temperature reaches the upper/lower limits 90°F or 60°F.


**TO ADJUST FAN SPEEDS:**

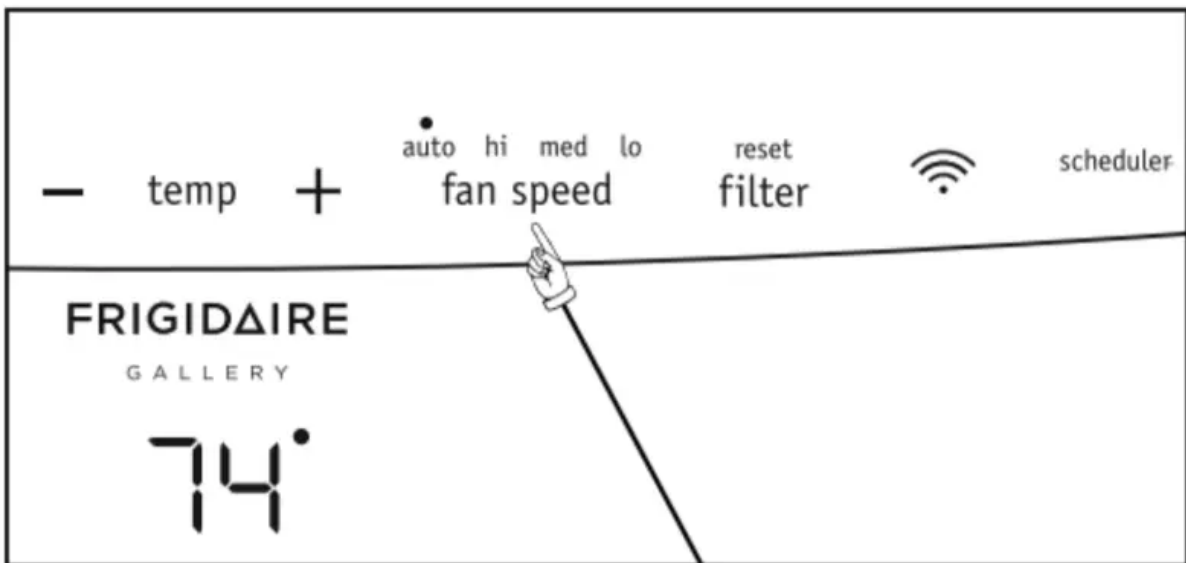


**DO THIS:**  
PRESS TO SELECT



YOU WILL SEE:

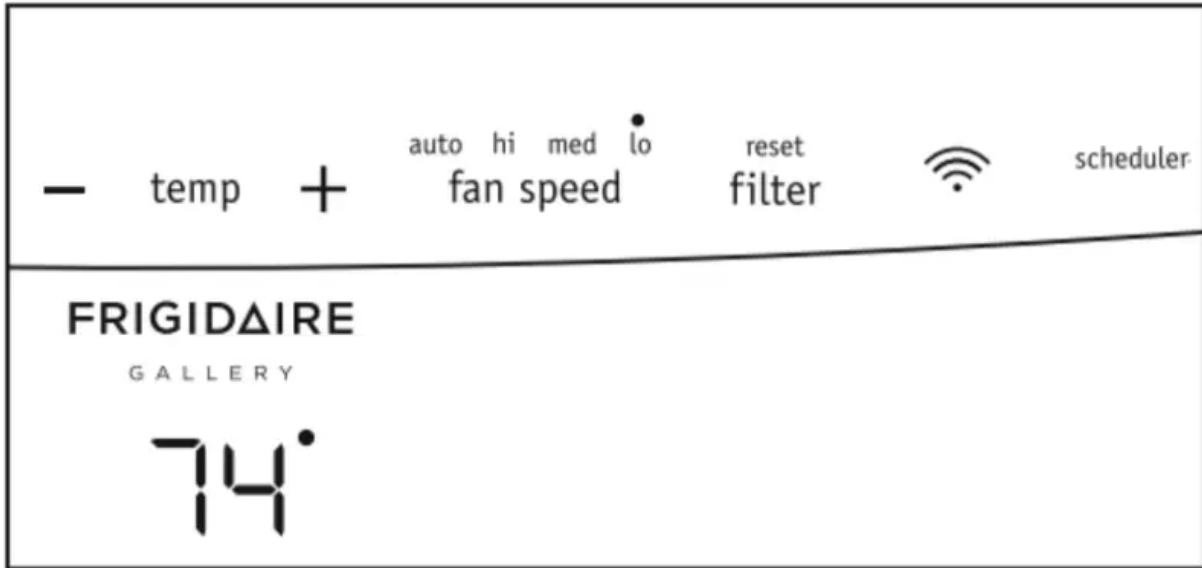


TO USE AUTO FAN FEATURE:

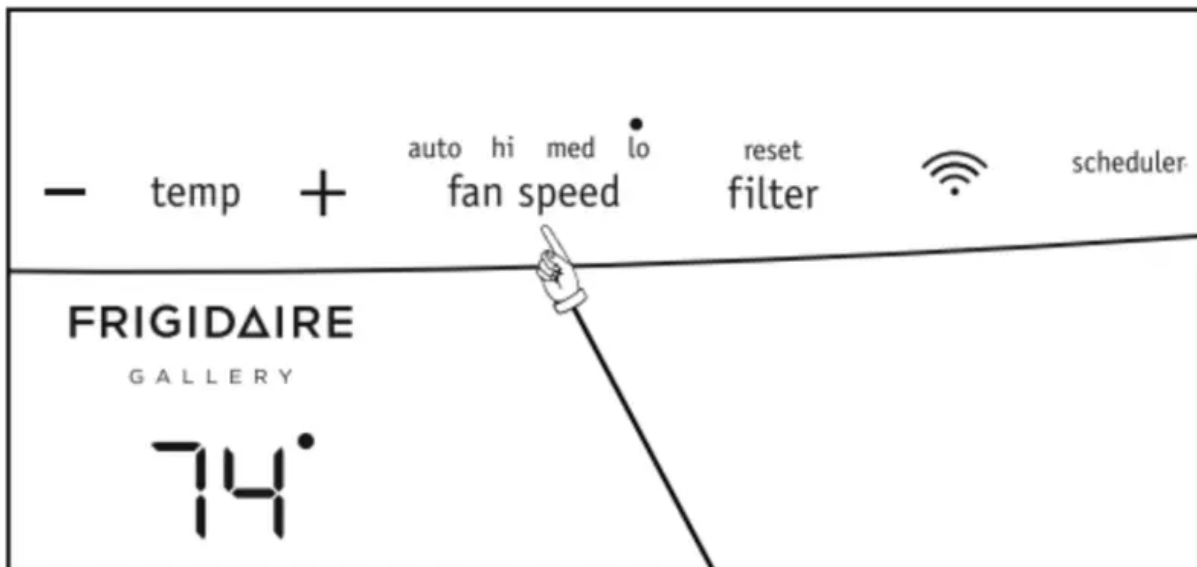

**DO THIS:**  
PRESS FAN BUTTON,  
CHOOSE AUTO

YOU WILL SEE:




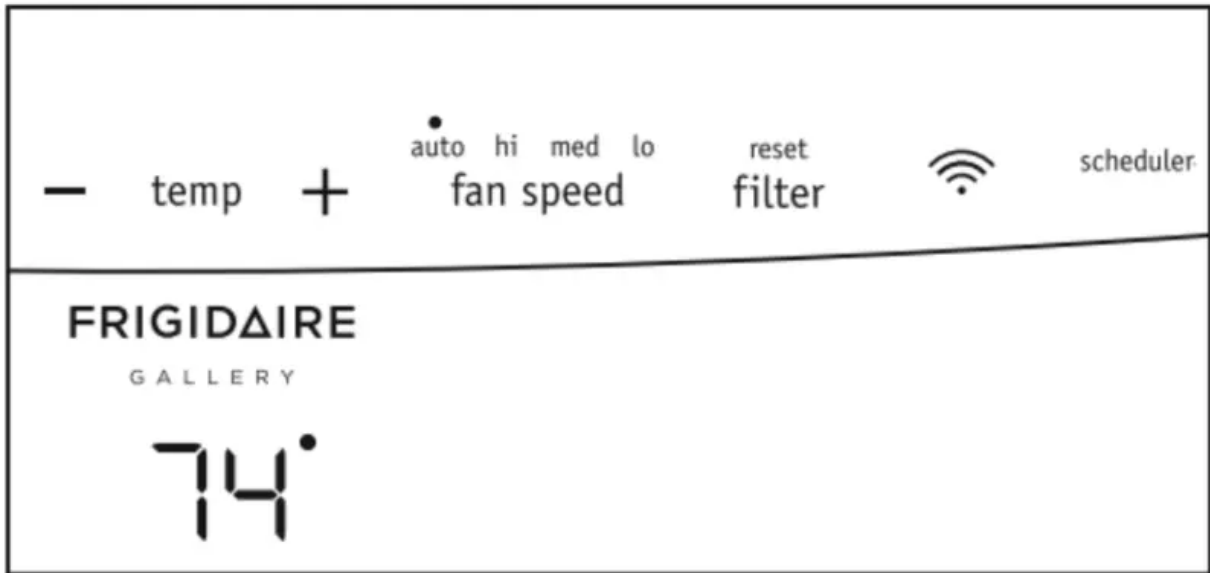

**Note:** Fan starts at High Speed and adjusts to a slower speeds the room temperature dictates. For example, if the room doesn't get too warm, it will stay at the slowest speed. If the room temperature rises quickly, such as a door being opened, it will automatically go to the highest speed. The fan speeds will re-adjust back to the slowest speed as the room returns to the original set temperature. Press either the fan slower or fan faster button to adjust the fan speed manually.


**TO OPERATE ON FAN:**



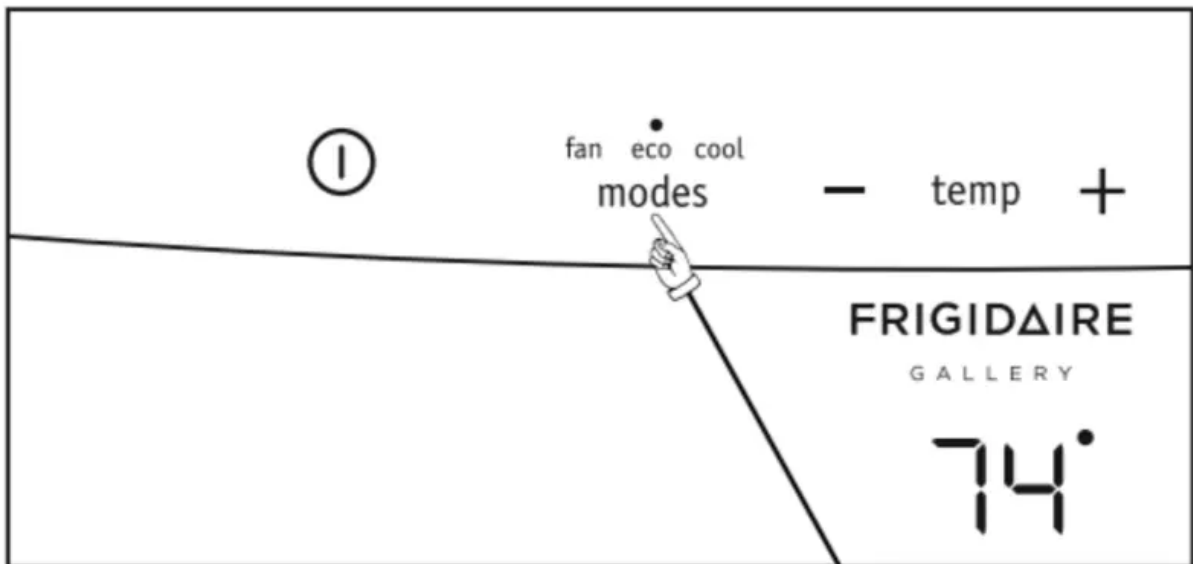

**DO THIS:**  
PRESS  
MODE BUTTON  
CHOOSE FAN


YOU WILL SEE:

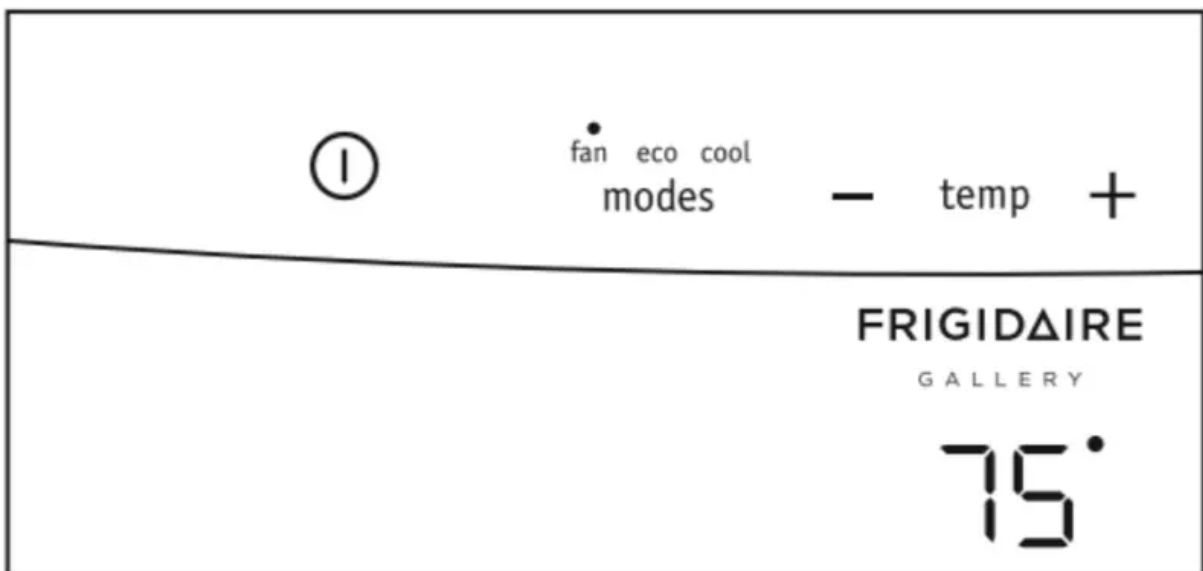

**Note:** Use this function only when cooling is not desired, such as for room air circulation or to exhaust stale air on some models. You can choose any fan speed you prefer. (Except “Auto Fan”).


During this function, display will only show the actual room temperature and the set temperature can not be changed.

**COOL FEATURE:**

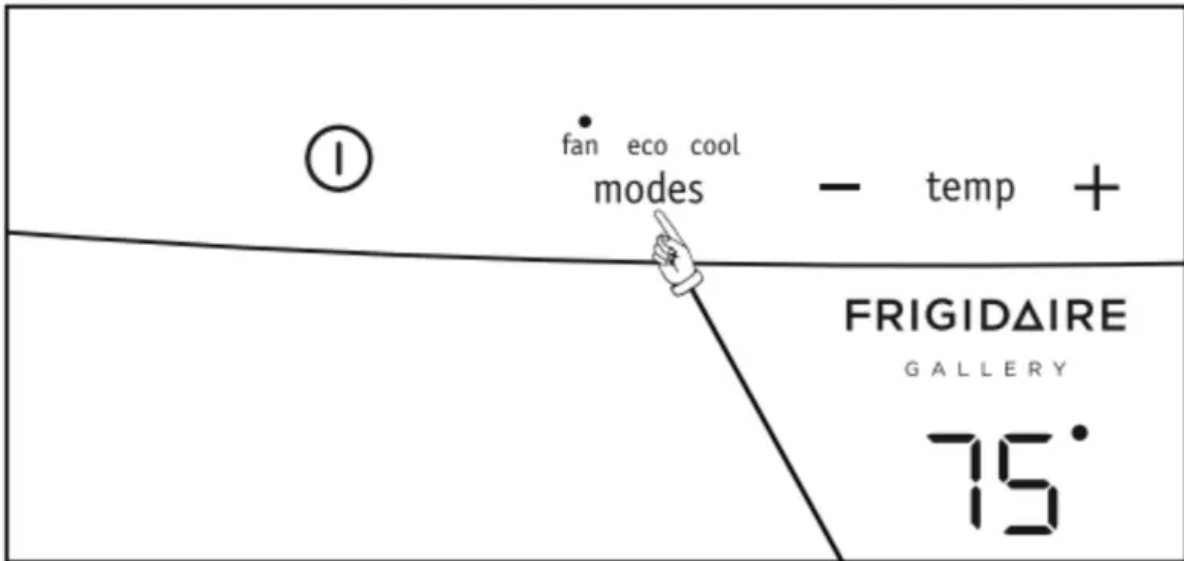


**DO THIS:**  
PRESS  
MODE BUTTON  
CHOOSE COOL

**YOU WILL SEE:**

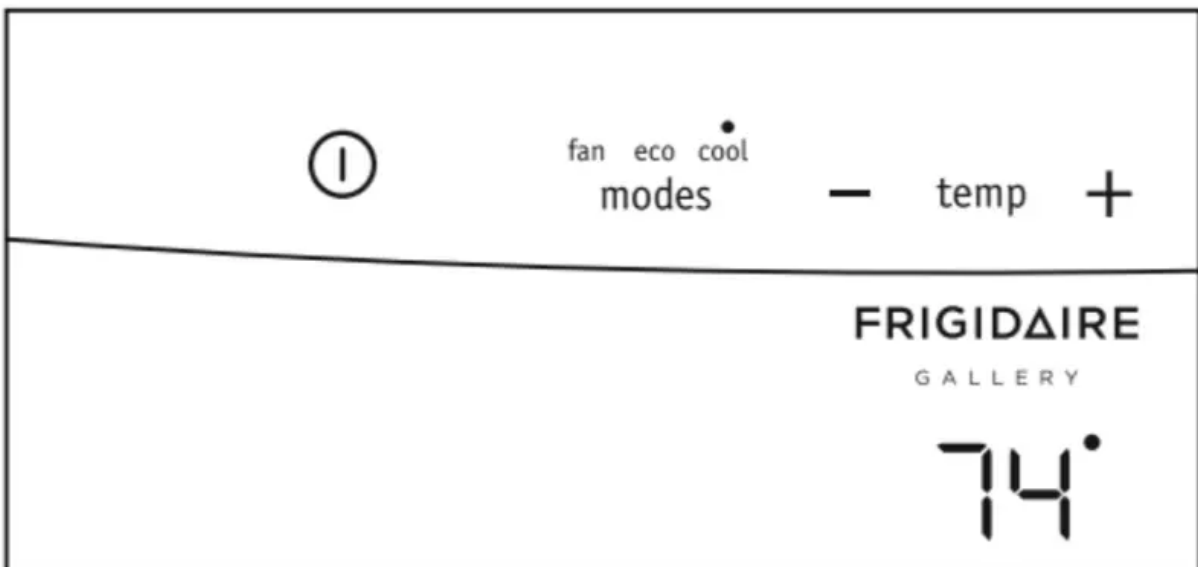


**Note:** In this mode, the fan remains on all the time with the compressor cycling on and off when room temperature is reached.

**ECO (ENERGY SAVER) MODE:**

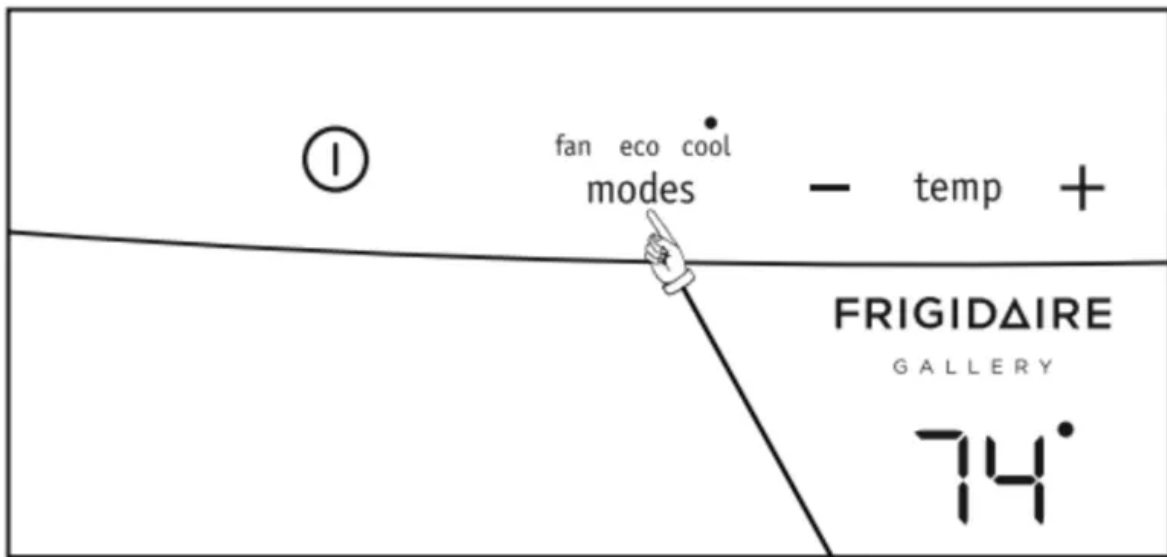

**DO THIS:**  
PRESS  
MODE BUTTON  
CHOOSE COOL

**YOU WILL SEE:**

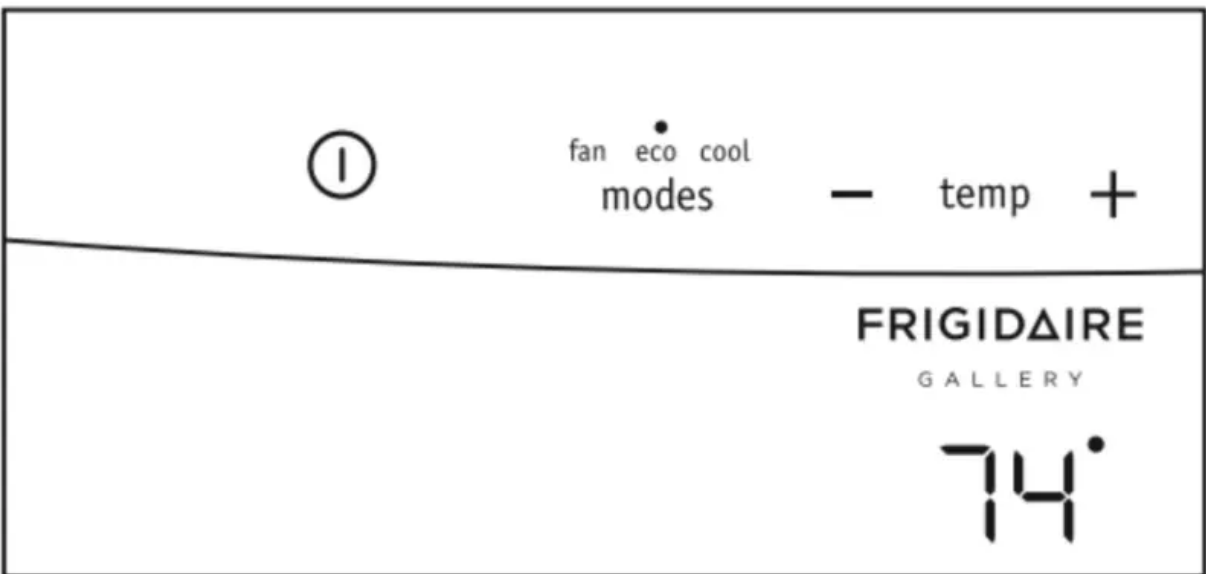


The unit is factory set to run in eco (energy saver) mode.

We recommend leaving the unit in eco mode to help save energy and money. However, if you would like to switch out of eco mode, touch the button until another mode is selected.

In eco mode, the fan will continue to run for 1 minute after the compressor shuts off. The fan then cycles on for 20 seconds at 10 minute intervals until the room temperature is above the set temperature, at which time the compressor turns back on.


**NOTE:** Please note, that if the unit is changed to 'cool' or 'fan' mode then shut off, the unit will turn back on in eco mode. This is mandatory per government regulations. If the unit is changed to 'cool' or 'fan' mode and a power failure occurs, once the power is restored the unit will return to 'cool' or 'fan' mode.

**CHECK FILTER FEATURE:**

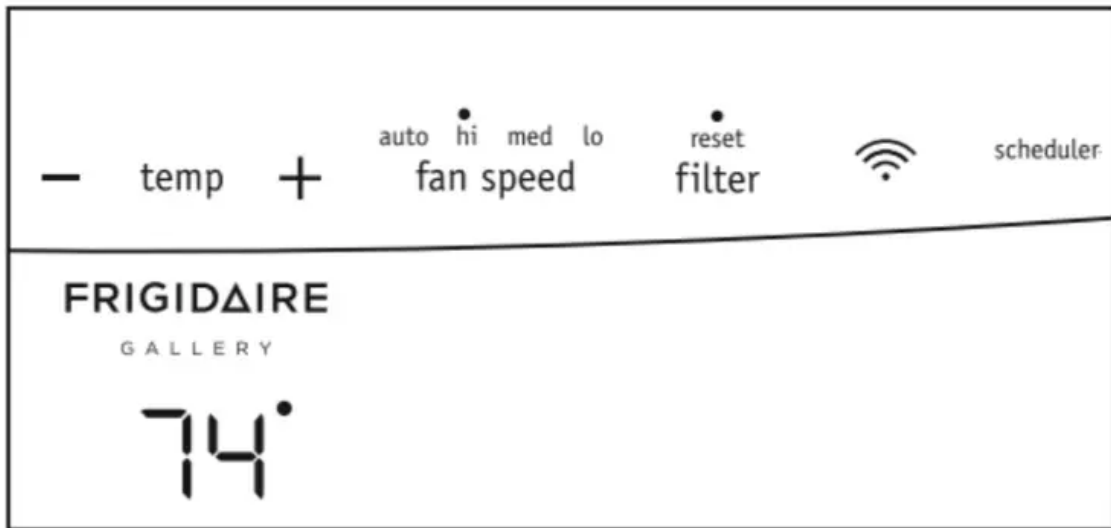

**YOU WILL SEE:**




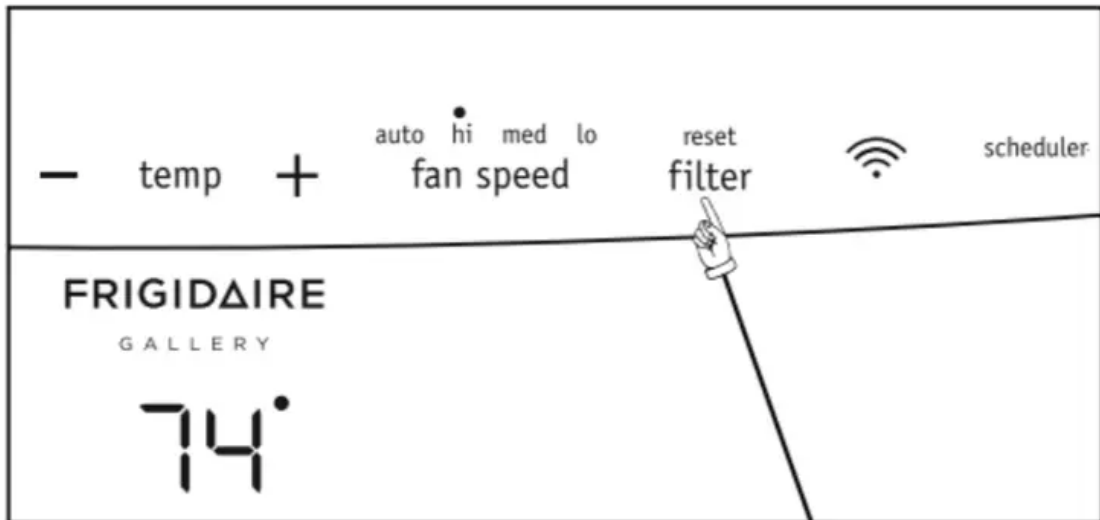

**DO THIS:**  
HOLD RESET FILTER  
BUTTON 3 SECONDS

**Note:** This feature is a reminder to clean the Air Filter (See Care and Cleaning) for more efficient operation. The LED (light) will illuminate after 250 hours of operation. To reset after cleaning the filter, hold the "reset filter" button 3 seconds and the light will go off.


**FAULT CODES:**

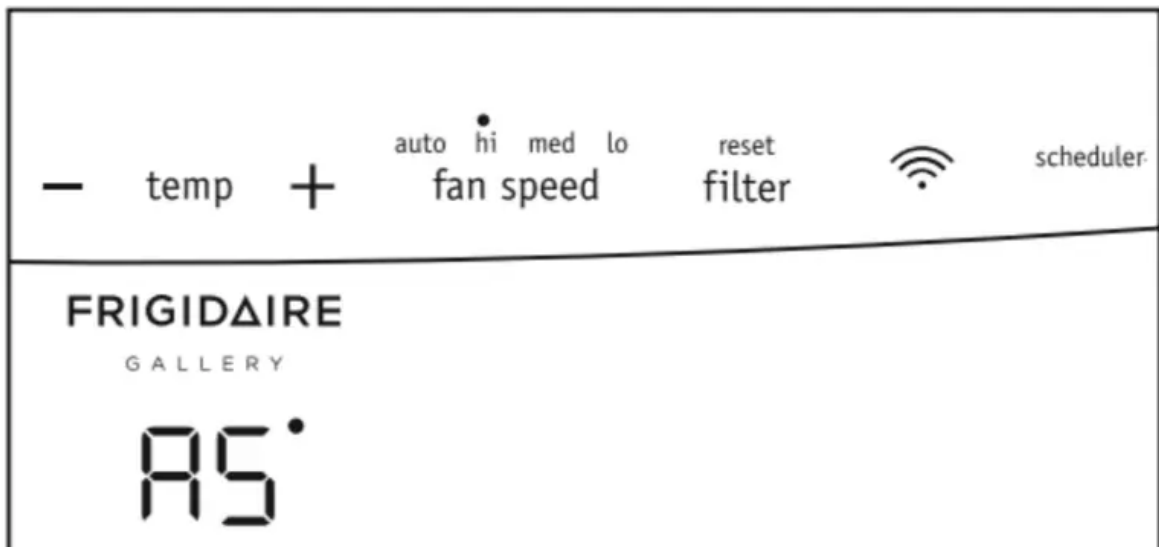

If the display reads "AS" , a sensor has failed. Contact your Authorized Frigidaire Service Center.


**DIMMING DISPLAY:**



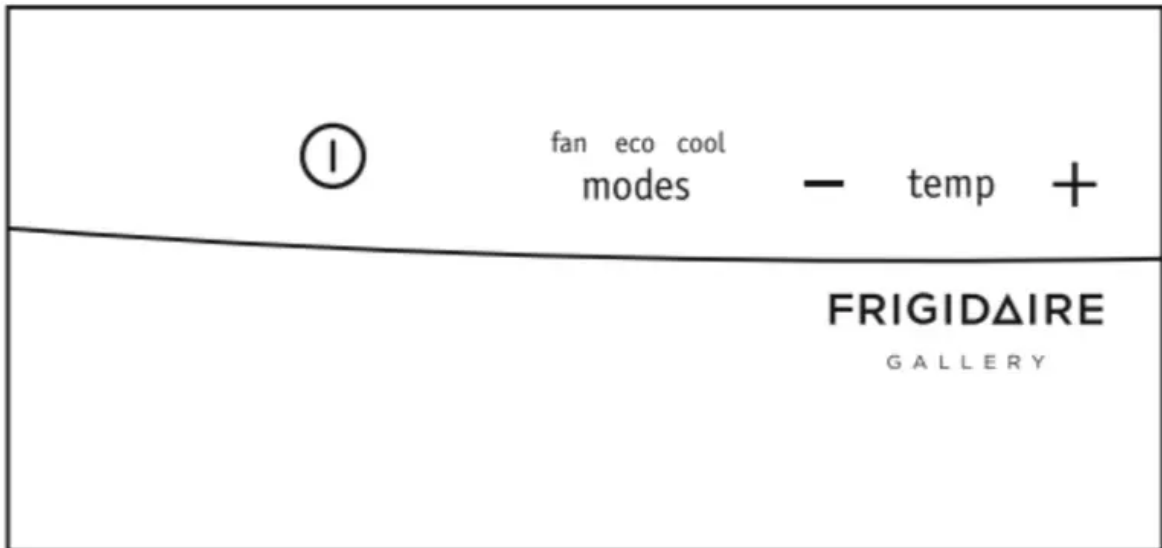

After 60 seconds of control inactivity the display and indicator lights will turn off. Press any button on the control panel or remote control and the display will resume. Please note that if the unit is in eco mode and the set temperature has been reached the unit may appear off. However, the unit is on and will continue to sample the air every 10 minutes. To confirm, press any button on the control panel or remote control to illuminate the display to show unit in eco mode.


**TO CHANGE TEMPERATURE DISPLAY:**

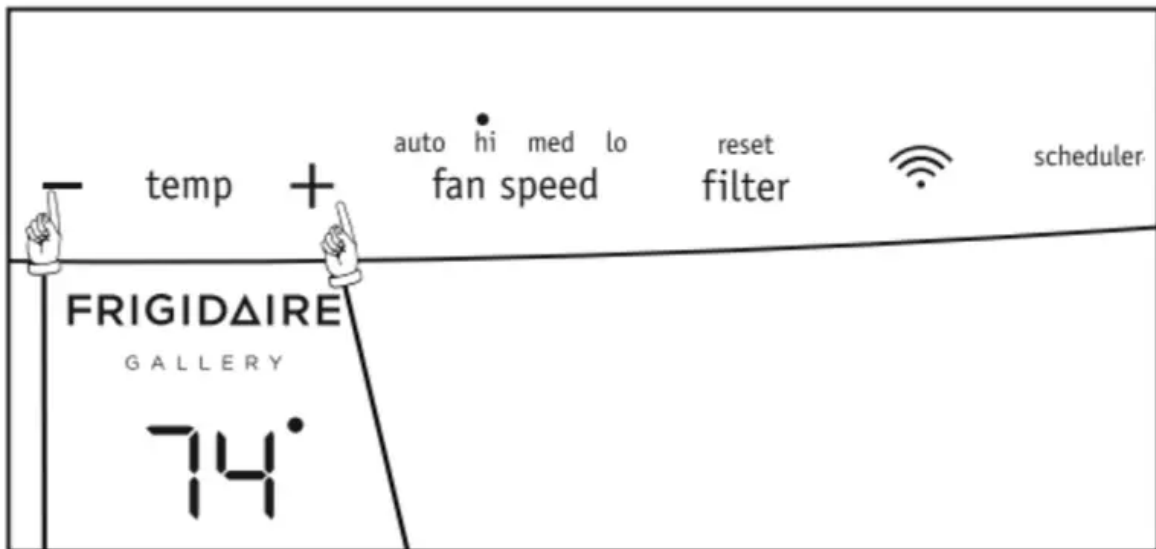

**DO THIS:**  
 PRESS AND HOLD THE  
 UP/DOWN BUTTONS  
 SIMULTANEOUSLY FOR 3 SECONDS




YOU WILL SEE:

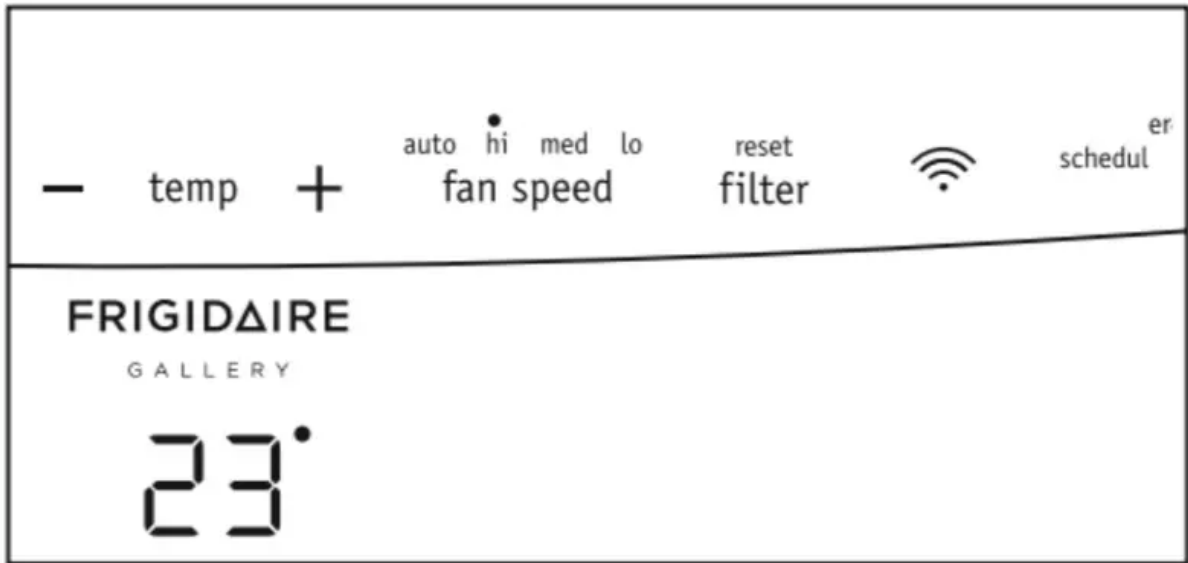

**Note:** The control is capable of displaying temperature in degrees Fahrenheit or degrees Celsius.


TO TURN UNIT OFF:

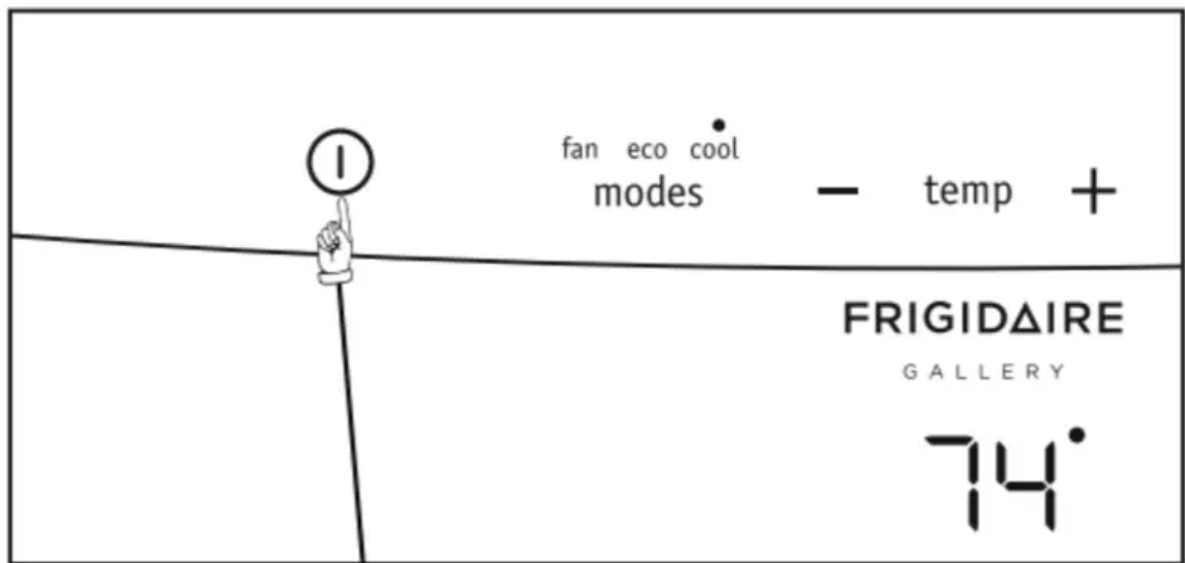

**DO THIS:**  
PRESS  
ON/OFF BUTTON

YOU WILL SEE:



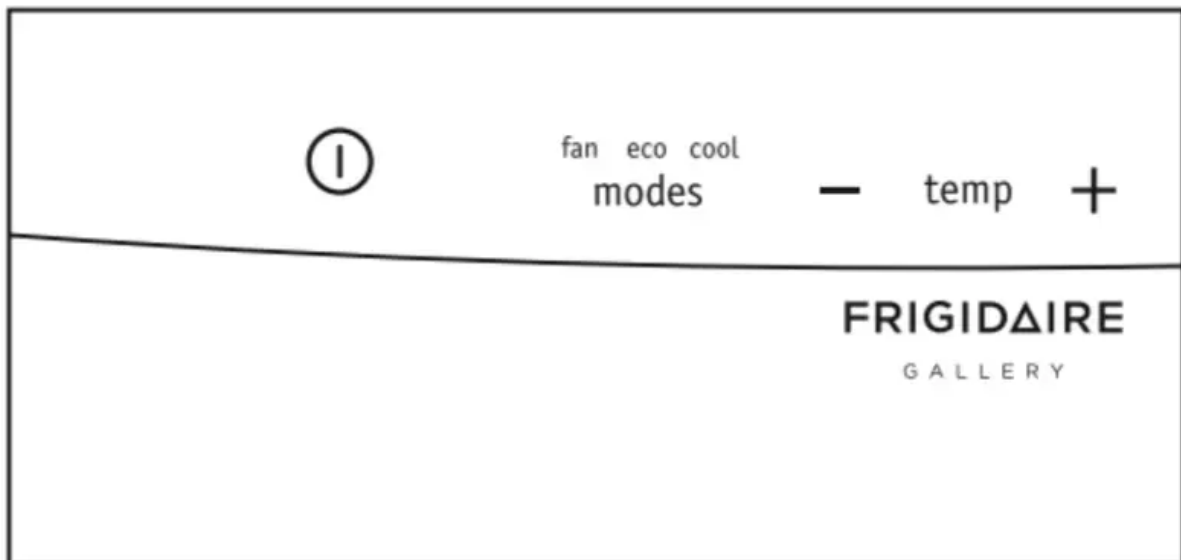

**Note:** After the unit is turned off, the light on the display will gradually fade away in 3 seconds. The unit will always return to “eco” mode and “auto” fan speed setting when it is turned on again.

#### **ADDITIONAL THINGS YOU SHOULD KNOW**

Now that you have mastered the operating procedure, here are more features in your control that you should become familiar with.

Now that you have mastered the operating procedure, here are more features in your control that you should become familiar with.


- The "Cool" circuit has an automatic 3 minute time delayed start if the unit is turned off and on quickly. This prevents overheating of the compressor and possible circuit breaker tripping. The fan will continue to run during this time.
- There is a 2-Second delay for the compressor shutting down when selecting FAN ONLY. This is to cover the possibility of having to roll through to select another mode.
- The control will maintain the set temperature within 2 degrees Fahrenheit, between 60F and 90F degrees.
- After a power outage, the unit will memorize the last setting and return the unit to the same setting once power is restored.

#### **Air Directional Louvers**

Air directional louvers control air flow direction. Your air conditioner has the louver type described below.

#### **2-Way air directional louvers**

The 2-Way air directional louvers allow you to direct the air flow Left or Right throughout the room as needed. To adjust the air directional louvers side-to-side, use the center handle as you move it side-to-side.

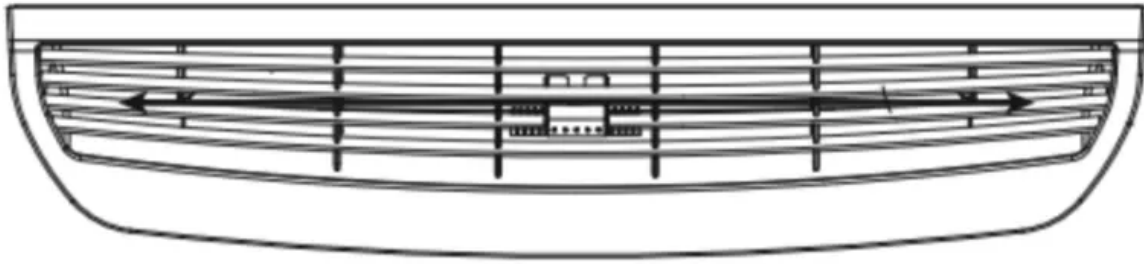

(2-WAY)


## Care and Cleaning

Clean your air conditioner occasionally to keep it looking new. **Be sure to unplug the unit before cleaning to prevent shock or fire hazards.**

### Air Filter Cleaning

The air filter should be checked at least once a month to see if cleaning is necessary. Trapped particles in the filter can build up and cause an accumulation of frost on the cooling coils.

- Pull out the alveolate grille from the front panel.
- Grasp the filter(filter handle engraved with "filter" characters) by the center and pull up and out.
- Wash the filter using liquid dishwashing detergent and warm water. Rinse filter thoroughly. Gently shake excess water from the filter. Be sure filter is thoroughly dry before replacing.
- Or instead of washing, you may vacuum the filter clean.

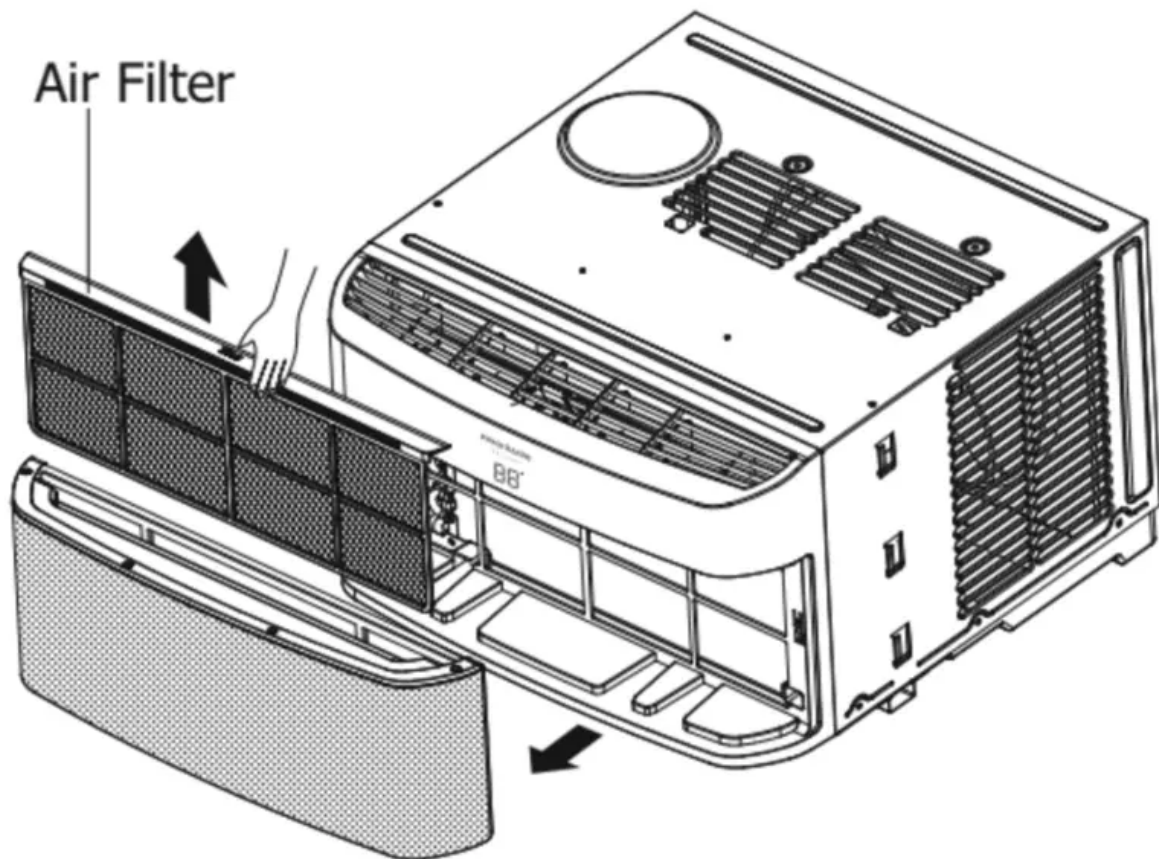

### **Cabinet Cleaning**

- Be sure to unplug the air conditioner to prevent shock or fire hazard. The cabinet and front may be dusted with an oil-free cloth or washed with a cloth dampened in a solution of warm water and mild liquid dishwashing detergent. Rinse thoroughly and wipe dry.
- Never use harsh cleaners, wax or polish on the cabinet front.
- Be sure to wring excess water from the cloth before wiping around the controls. Excess water in or around the controls may cause damage to the air conditioner.
- Plug in air conditioner.

### **Winter Storage**

If you plan to store the air conditioner during the winter, remove it carefully from the window according to the installation instructions. Cover it with plastic or return it to the original carton.

## **Before You Call**

Before calling for service, review this list. It may save you time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

OCCURRENCE	SOLUTION
<p><b>Air conditioner will not operate.</b></p>	<ul style="list-style-type: none"> <li>• Wall plug disconnected. Push plug firmly into wall outlet.</li> <li>• Plug Current Device Tripped. Press the RESET button.</li> <li>• House fuse blown or circuit breaker tripped. Replace fuse with time delay type or reset circuit breaker.</li> <li>• Control is OFF. Turn Control ON and set to desired setting.</li> </ul>
<p><b>Air from unit does not feel cold enough.</b></p>	<ul style="list-style-type: none"> <li>• Room temperature below 60°F (16°C). Cooling may not occur until room temperature rises above 60°F (16°C).</li> <li>• Temperature sensing element touching cold coil, located behind air filter. Straighten away from coil.</li> <li>• Reset to a lower temperature.</li> <li>• Compressor shut-off by changing modes. Wait approximately 3 minutes and listen for compressor to restart when set in the COOL mode.</li> </ul>
<p><b>Air conditioner cooling, but room is too warm - ice forming on cooling coil behind decorative front</b></p>	<ul style="list-style-type: none"> <li>• Outdoor temperature below 60 F (16 C). To defrost the coil, set FAN ONLY mode.</li> <li>• Air filter may be dirty. Clean filter. Refer to Care and Cleaning section. To defrost, set to FAN ONLY mode.</li> <li>• Temperature is set too low for night-time cooling. To defrost the coil, set to FAN ONLY mode. Then, set temperature to a higher setting.</li> </ul>
<p><b>Air conditioner cooling, but room is too warm - NO ice forming on cooling coil behind decorative front.</b></p>	<ul style="list-style-type: none"> <li>• Dirty air filter - air restricted. Clean air filter. Refer to Care and Cleaning section.</li> <li>• Temperature is set too high. Set temperature to a lower setting.</li> </ul>



	<ul style="list-style-type: none"> <li>• Air directional louvers positioned improperly. Position louvers for better air distribution.</li> <li>• Front of unit is blocked by drapes, blinds, furniture, etc. - restricts air distribution. Clear blockage in front of unit.</li> <li>• Doors, windows, registers, etc. open - cool air escapes. Close doors, windows, registers, etc.</li> <li>• Unit recently turned on in hot room. Allow additional time to remove "stored heat" from walls, ceiling, floor and furniture.</li> </ul>
<b>Air conditioner turns on and off rapidly.</b>	<ul style="list-style-type: none"> <li>• Dirty air filter - air restricted. Clean air filter.</li> <li>• Outside temperature extremely hot. Set FAN speed to a faster setting to bring air through cooling coils more frequently.</li> </ul>
<b>Noise when unit is cooling.</b>	<ul style="list-style-type: none"> <li>• Air movement sound. This is normal. If too loud, set to lower FAN setting.</li> <li>• Window vibration - poor installation. Refer to installation instructions or check with installer.</li> </ul>
<b>Water dripping INSIDE when unit is cooling.</b>	Improper installation. Tilt air conditioner slightly to the outside to allow water drainage. Refer to installation instructions or check with installer.
<b>Water dripping OUTSIDE when unit is cooling.</b>	Unit removing large quantity of moisture from humid room. This is normal during excessively humid days.
<b>Remote Sensing Deactivating Prematurely (some models).</b>	<ul style="list-style-type: none"> <li>• Remote control not located within range. Place remote control within 20 feet &amp; 120° radius of the front of the unit.</li> <li>• Remote control signal obstructed. Remove obstruction.</li> </ul>
<b>Room too cold.</b>	<ul style="list-style-type: none"> <li>• Set temperature too low. Increase set temperature.</li> <li>• Remote Sensing activated (on some models) and remote control located in Hot Spot -</li> </ul>



	Relocate remote control or deactivate remote sensing.
<b>Trouble connecting the smart appliance to your wifi network or experiencing an issue with the app.</b>	Please visit <a href="http://Frigidaire.com">Frigidaire.com</a> and select the Owner Support section to view Frequently Asked Questions.

**If These Solutions Fail, Call 1-800-944-9044 For Frigidaire Service.**

**Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

---

Document generated by [ManualsFile](http://ManualsFile)

