

TABLE OF CONTENTS

All about the Use & Care of your Refrigerator

Important Safety Instructions .2

Features At A Glance .4

Installation 5

Door Removal/Reversal Instructions 7

Handle Installation ..10

Connecting Water Supply ..12

Ice Service ..14

807876507 (October 2016)

Controls 15

Optional Features .17

Normal Operating Sounds and Sights 20

Care and Cleaning 21

Before you Call ..23

Major Appliance Warranty .24

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

IMPORTANT

IMPORTANT indicates installation, operation or maintenance information which is important but not hazard-related.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

Definitions

This is the safety alert symbol. It is used to alert you to potential personal injury hazards.

Obey all safety messages that follow this symbol to avoid possible injury or death.

Doors Handles are secure and tight Door seals completely to cabinet on all sides Freezer door is level across the top

Leveling Refrigerator is level, side-to-side and

Toe grille is properly attached to refrigerator Cabinet is setting solid on all corners Anti-tip bracket set

Electrical Power House power turned on Refrigerator plugged in

Ice Maker House water supply connected to refrigerator No water leaks present at all connections

Ice maker is turned ON Ice & water dispenser operates correctly Front filter must be flush with filter

Final Checks Shipping material removed Refrigerator and freezer temperatures set Crisper humidity controls set Registration card sent in

Installation Checklist

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

IMPORTANT SAFETY INSTRUCTIONS

For your Safety

- DO NOT store or use gasoline, or other
- DO NOT operate the refrigerator in the
- Avoid contact with any moving parts of
- Remove all staples from the carton. Staples

WARNING

Please read all instructions before using this refrigerator.

Child Safety

Destroy or recycle the carton, plastic bags, and any exterior wrapping material immediately after the refrigerator is unpacked. Children should never use these items to play. Cartons covered with rugs, bedspreads, plastic sheets or stretch wrap may become airtight chambers, and can quickly cause suffocation.

Proper Disposal of your Refrigerator or Freezer

Risk of child entrapment

Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators or freezers are still dangerous – even if they will sit for “just a few days”. If you are getting rid of your old refrigerator or freezer, please follow the instructions below to help prevent accidents.

IMPORTANT SAFETY INSTRUCTIONS

Grounding type wall receptacle

Power cord with 3-prong grounded plug

Do not, under any circumstances, cut, remove, or bypass the grounding prong.

Electrical information

- The refrigerator must be plugged into its own
- If the power cord is damaged, it should
- Never unplug the refrigerator by pulling on
- Unplug the refrigerator before cleaning
- Performance may be affected if the voltage

WARNING

These guidelines must be followed to ensure that safety mechanisms in this refrigerator will operate properly.

IMPORTANT

Turning the Refrigerator controls to “0” (Mechanical controls) or “OFF” (Electronic controls) will disable your refrigerator’s cooling system, but does not disconnect the power to the light bulb and other electrical components. To turn off power to your refrigerator you must unplug the power cord from the electrical outlet.

CAUTION

To avoid personal injury or property damage, handle tempered glass shelves carefully. Shelves may break suddenly if nicked, scratched, or exposed to sudden temperature change.

Proper Disposal of Refrigerators/Freezers

We strongly encourage responsible appliance recycling/disposal methods. Check with your utility company or visit www.energystar.gov/recycle for more information on recycling your old refrigerator.

Before you throw away your old refrigerator/ freezer:

- Remove doors.
- Leave shelves in
- Have refrigerant

IMPORTANT

CFC/HCFC Disposal Your old refrigerator may have a cooling system that used CFCs or HCFCs (chlorofluorocarbons or hydrochlorofluorocarbons). CFCs and HCFCs are believed to harm stratospheric ozone if released to the atmosphere. Other refrigerants may also cause harm to the environment if released to the atmosphere.

If you are throwing away your old refrigerator, make sure the refrigerant is removed for proper disposal by a qualified technician. If you intentionally release refrigerant, you may be subject to fines and imprisonment under provisions of environmental legislation.

- Do not plug the unit into an electrical outlet

WARNING

Do not attempt to replace LED lights due to high voltage exposure. Call customer service to replace.

FEATURES AT A GLANCE

Ice Maker Ice Bucket

Freezer Shelf

Auxiliary Freezer

Control Refrigerator Control (Some Models) Deli Drawer Cover

Deli Drawer (Some Models) Half Shelf

Crisper Cover

Crisper Drawers

Ice Tray

Fixed Door Bin

Door Rack

Dairy Door

Fixed Door Bin

Door Rack

Toe Grille

Full Width Deli (Some Models)

Deli Drawer Cover

Upper Door Rack

Features may vary according to model

IMPORTANT

Cleaning your Refrigerator Remove tape and glue residue from surfaces before turning on the refrigerator. Rub a small dry with a soft cloth.

Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your refrigerator.

After you remove all of the package materials, clean the inside of your refrigerator before using it. See the “Care & Cleaning” section in this manual.

See important information about cleaning glass shelves and covers in the “Optional Features” section of this manual.

IMPORTANT

Moving your Refrigerator Your refrigerator is heavy. When moving the refrigerator for cleaning or service, be sure refrigerator straight out when moving it. Do not wiggle or “walk” the refrigerator when trying to move it as floor damage could occur.

INSTALLATION

NOTE

If your refrigerator is placed with the door hinge side against a wall, you may have to allow additional space for the handle so the door can be opened wider.

CAUTION

Do not install the refrigerator where the surrounding air temperature may fall to 39°F (4°C) or below. The refrigerator compartment contents may freeze. Do not install the refrigerator where the surrounding air temperature may reach 110°F (43°C) or above.

The refrigerator and freezer compartments may rise to above normal operating temperatures.

Do not block the toe grille on the lower front of for the proper operation of your refrigerator.

This Use & Care Guide provides general operating instructions for your model. Use the refrigerator only as instructed in this Use & Care Guide. Before starting the refrigerator, follow these important first steps.

Location

- Choose a place that is near a grounded
- If possible, place the refrigerator out of
- The refrigerator must be installed on a floor
- Consider water supply availability for models

Installation

Installation clearances

- Allow the following clearances for ease

Sides & Top $\frac{3}{8}$ inch

Back

1 inch

2. Attach toe grille to cabinet.

Guidelines for final positioning of your refrigerator:

- All four corners of the cabinet must rest
- The cabinet should be level at the front and rear.
- The sides should tilt $\frac{1}{4}$ -inch (6 mm) from
- Doors should align with each other and be level.

To install the toe grille:

1. The toe grille is packaged with the covers

NOTE

For additional instructions on garage installation, refer to "Controls" section.

NOTE

In case of future door reversals, save the toe grille cover not being used.

WARNING

The anti-tip device must be installed according to the instructions in your Use & Care Manual. Failure to do so will result in injury.

WARNING

When reversing the door swing:

You MUST move the anti-tip bracket to align with the hinges of the door. Failure to do so will result in injury.

NOTE

Raise the front of the refrigerator enough so the doors close freely when opened halfway.

The refrigerator should slope $\frac{1}{4}$ inch to $\frac{1}{2}$ inch from front-to-back. Then level the refrigerator from side-to-side.

To level the cabinet using the front rollers:

1 Remove the toe grille.

2 Use a flat-blade screwdriver or $\frac{3}{8}$ inch

Figure 4 (some models)

Lower

Anti-tip Bracket

Raise

9/16" (14 mm) Max

Figure 3

9/16" (14 mm) Max

Raise

Figure 2

3 Use adjustable wrench to adjust leveling

4 Some models are equipped with an anti

INSTALLATION

NOTE

The direction in which your refrigerator doors open (door swing) can be reversed. from left to right or right to left. by moving the door hinges from one side to the other. Reversing the

DOOR REMOVAL/REVERSAL INSTRUCTIONS

Door removal and reversal instructions:

1. Remove toe grille.
2. Remove top hinge cover. Trace around the
3. Unscrew center hinge pin using adjustable

IMPORTANT

Before you begin. turn the refrigerator temperature control to "0" (Mechanical controls) or "OFF" (Electronic controls) and remove the electrical power cord from the wall outlet. Remove any food from door shelves.

Tools Necessary:

Phillips™ Head

Socket Wrench Set

Adjustable Wrench

3/8" (10mm) Fixed Wrench

Top Hinge Cover Front Screw

Top Hinge Cover Rear Screw

Bottom Hinge Screw

Top Hinge Screw

Top Hinge Cover

Top Hinge

WARNING

When reversing the door swing:

You MUST move the anti-tip bracket to align with the hinges of the door and install the toe grille support for proper balance. Failure to do so will result in injury.

Washer Hinge Pin Bottom Hinge Screws

Toe Grille

Door Stop Screw

Door Stop

7. Remove three screws on bottom hinge

8. Remove toe grille support and screws (if

DOOR REMOVAL/REVERSAL INSTRUCTIONS

Lower

Anti-tip Bracket

4. Lift refrigerator door off of bottom hinge

5. Remove center hinge and shim by

6. Loosen two outside screws on opposite

Door Stop

Shim Washer Hinge Pin Center Hinge

Screws Hinge Hole Plug Handle Hole Plug

Door Stop Screw

9. Install bottom hinge and anti-tip bracket

(if equipped) on opposite side with the three screws removed from step 7.

10. Unscrew bottom hinge pin using

11. Install toe grille support and screws on

12. Reverse door handles (see Handle

Installation section).

13. Move freezer and refrigerator door stops

14. Position refrigerator door onto bottom

15. Tighten center hinge pin with adjustable wrench.

16. Remove cabinet and hinge hole plugs and

17. Lower freezer

18. Close freezer

IMPORTANT

Should open seal condition exist. try working the gasket by hand to make sure it is seated into the channel.

If the condition still exist. try heating the gasket with a hair dryer with the door closed. Be careful not to damage the interior door panel or the gasket by applying too much heat.

If the open seal condition still exist. it may be necessary to flip the gasket. In this case. remove the gasket from the door by pulling it out. Rotate the gasket half a turn (180 degrees). Reinstall work towards the middle assuring that the dart is fully seated in the channel. NOTE

In case of future door reversals. save the toe grille cover not being used.

20. After the screws have been tightened.

21. Remove the toe grille cover corresponding

DOOR REMOVAL/REVERSAL INSTRUCTIONS

Toe Grille Cover

Toe Grille Support

Anti-tip Bracket

Toe Grille Cover

Toe Grille Support

Anti-tip Bracket

22. Reinstall toe grille with appropriate cover

(some models).

23. Plug in electrical power cord and turn

Look for open areas between the gasket and the cabinet flange.

Gasket should seal against the

19. Tighten the top hinge screws and check door

IMPORTANT

To ensure proper installation of handles. please review these instructions and illustrations thoroughly prior to installing the handles.

Additionally. before installing the door handles. make sure the door swing is correct. Your model will have either a right hand or left hand door swing. Follow instructions in the Use & Care Guide to reverse the doors. if necessary.

HANDLE INSTALLATION

To attach metal refrigerator handle:

1. Place rounded part of handle onto
2. Install the two screws into the top of the
3. Tighten the set screw on the rounded part

CAUTION

Wear gloves and use extreme CAUTION when installing these handles. The rounded end of the handles may be sharp.

To attach metal freezer handle:

1. Place rounded part of handle onto
2. Install the two screws into the bottom of

Stainless Steel Models

Screw

Handle

Button Plug

Set Screw

Shoulder Screw

Shoulder Screw

Nameplate

Handle

Set Screw

Screw

Screw

Handle

Shoulder Screw

Set Screw

3. Tighten the set screw on the rounded part

Shoulder Screw Set Screw

Handle

Screw

To reverse refrigerator/freezer handles:



Handles may be easier to reverse while doors are off. Reverse freezer and refrigerator handles as shown.

CAUTION

Be sure doors are set aside in a secure position where they cannot fall and cause personal injury.

To attach plastic refrigerator handle:

1. Place bottom of handle over dovetail
2. Secure top of handle with two screws.

To attach plastic freezer handle:

1. Place top of handle over dovetail screw
2. Secure bottom of handle with two screws.

HANDLE INSTALLATION

Screw Handle

Button Plug

Lock Handle over Dovetail Screw

Dovetail Screw

Screw

Dovetail Screw

Lock Handle over Dovetail Screw

Handle

Screw

Nameplate

CONNECTING THE WATER SUPPLY

WARNING

To avoid electric shock, which can cause death or severe personal injury, disconnect the refrigerator from electrical power before connecting a water supply line to the refrigerator.

CAUTION

To Avoid Property Damage:

- Copper or Stainless Steel braided tubing
- DO NOT install water supply tubing in

- Chemicals from a malfunctioning softener

IMPORTANT

Ensure that your water supply line connections comply with all local plumbing codes.

NOTE

Check with your local building authority for recommendations on water lines and associated materials prior to installing your new refrigerator. Depending on your local/ state building codes. Frigidaire recommends for homes with existing valves its Smart Choice water line kit 5305513409 (with a 6 ft. Stainless Steel Water Line) and for homes without an existing valve. Frigidaire recommends its Smart Choice water line kit 5305510264 (with a 20 ft. Copper Water Line with self-tapping saddle valve). Please refer to www.frigidaire.com/store for more information.

Before Installing The Water Supply Line.

You Will Need:

- Basic Tools: adjustable wrench. flat-blade
- Access to a household cold water line with
- A water supply line made of ¼ inch (6.4
- A shutoff valve to connect the water supply
- Do not re-use compression fitting or use
- A compression nut and ferrule (sleeve) for

Figure 2

Steel Clamp

Braided Flexible Stainless Steel Water Line

Water Valve Bracket

Valve Inlet

Water Valve

6 ft (1.8 Meters) Braided flexible stainless steel water line from household water supply.

Plastic Water Tubing to Ice Maker Fill Tube

(Include enough tubing in loop to allow moving refrigerator out for cleaning.)

Figure 1

Plastic Water Tubing to Ice Maker Fill Tube

Steel

Clamp Brass Compression Nut

Ferrule (Sleeve)

Copper water line

Water Valve Bracket

Valve Inlet

Water Valve

Copper water line from household water supply

(Include enough tubing in loop to allow moving refrigerator out for cleaning.)

CONNECTING THE WATER SUPPLY

To Connect Water Supply Line To Ice Maker Inlet Valve

1. Disconnect refrigerator from electric power
2. Place end of water supply line into sink or
3. Remove plastic cap from water valve inlet
4. If you use copper tubing - Slide brass

If you use braided flexible stainless

5. With steel clamp and screw. secure water
6. Coil excess water supply line (copper
7. Turn ON water supply at shutoff valve and
8. Reconnect refrigerator to electrical power
9. To turn ice maker on. lower wire signal

NOTE

These instructions do not cover after market ice maker installation. Instructions in after market ice maker kit should be used.

IMPORTANT

Your ice maker is shipped from the factory with the wire signal arm in the ON position.

To ensure proper function for your ice maker. hook up water supply immediately or turn ice maker OFF by lifting the wire signal arm until it clicks and locks in the UP position. If the ice maker is on and the water supply is not connected. the water valve will make a loud chattering noise.

ICE PRODUCTION: WHAT TO EXPECT

The ice maker will produce 2.5 to 3 pounds of ice every 24 hours depending on usage conditions. Ice is produced at a rate of 8 cubes every 80 to 160 minutes.

CAUTION

Do Not place the ice container in your dishwasher.

ICE SERVICE

If your refrigerator has an automatic ice maker. hours of operation. Air in new plumbing lines may cause the ice maker to cycle two or three times before making a full tray of ice. With no usage. it will take approximately one to two days to fill the ice container.

New plumbing connections may cause the first production of ice cubes to be discolored or have an odd flavor. Discard ice made during the first 24 hours. NOTE

Automatic ice makers are also optional accessories that may be installed in most models at any time. Call your local dealer for information.

Turning your Ice Maker On

After the plumbing connections have been completed. the water supply valve must be opened. Place the ice container under the ice maker. pushing it as far back as possible.

Lower the wire signal arm to its "down" or ON position.

Turning your Ice Maker Off

To stop the ice maker. lift the wire signal arm until it clicks and locks in the "up" or OFF position. The ice maker also turns off automatically when the ice container is full.

Wire Signal Arm

CONTROLS

NOTE

When first turning refrigerator on. adjust the refrigerator control to Normal. This is the recommended initial setting. After 24 hours. adjust the controls as needed.

Auxiliary Freezer Control

Cool Down Period

To ensure safe food storage. allow the refrigerator to operate with the doors closed for at least 8 hours before loading it with food.

Refrigerator & Freezer Controls (some models)

NOTE

Your refrigerator is designed to prevent food stored in the freezer from melting when installed in areas below 55° F such as a garage; however. this low temperature environment can cause less than optimal temperature control in the refrigerator section.

NOTE

Sustained exposure to ambient temperatures below 39° F will likely result in freezing of food and beverages stored in the refrigeration section.

NOTE

If your unit is in a garage or area where the temperature is below 55° F. adjust the freezer control to the coldest setting to improve performance.

IMPORTANT

Adjusting the refrigerator temperature control to "0" turns off the compressor and prevents the refrigerator from cooling. but does not disconnect the power to the light bulb and other electrical components. To turn off power to your refrigerator. you must unplug the power cord from the wall outlet.

NOTE

When first turning refrigerator on. adjust control to recommended. After 24 hours. adjust the controls as needed.

NOTE

It may take up to 15 minutes for normal power interruption.

Refrigerator Control (some models)

Allow 24 hrs for adjustments

Temperature Adjustment (Mechanical Control)

- Adjust temperature gradually: adjust the
- For colder temperatures. adjust the knob
- For warmer temperatures. adjust the knob

Adjusting the refrigerator control will change temperatures in both compartments. The auxiliary freezer control can be left at the factory pre-set (Normal) or adjusted as desired; it has no effect on electrical power to the refrigerator.

To maintain temperatures. a fan circulates air in the refrigerator and freezer compartments.

For good circulation. do not block cold air vents with food items.

Cool Down Period

To ensure safe food storage. allow the refrigerator to operate with the doors closed for at least 8 hours before loading it with food.

Refrigerator & Freezer Controls (some models)

CONTROLS

Refrigerator Control (some models)

Temperature Adjustment (Electronic Control)

- Adjust temperature gradually: adjust the

Adjusting the refrigerator control will change temperatures in both compartments. The auxiliary freezer control can be left at the factory pre-set (Normal) or adjusted as desired; it has no effect on electrical power to the refrigerator.

To maintain temperatures, a fan circulates air in the refrigerator and freezer compartments.

For good circulation, do not block cold air vents with food items.

IMPORTANT

Adjusting the refrigerator temperature control to "off" turns off the compressor and prevents the refrigerator from cooling, but does not disconnect the power to the light bulb and other electrical components. To turn off power to your refrigerator, you must unplug the power cord from the wall outlet.

OPTIONAL FEATURES

Shelf Adjustment

Refrigerator shelves are easily adjusted to suit individual needs. Before adjusting the shelves, remove all food.

To adjust sliding shelves:

1. Remove shelf by pulling forward to stop
2. Lift front edge up and pull out.

To replace shelf, rest side edges on any pair of shelf rails and carefully push shelf back into position.

Sliding Glass Shelf

Sliding Wire Shelf Door Rack

Door storage

Door bins, shelves, and racks are provided for convenient storage of jars, bottles, and cans.

The dairy compartment, which is warmer than the general food storage section, is intended for short term storage of cheese, spreads, or butter.

Door rack

Some models have door racks or bins that can accommodate gallon-sized plastic drink containers and economy-sized jars and containers.

To remove door rack:

1. Push on rack sides to release from locking tabs.
2. Pull straight out.

To install door rack:

1. Push rack straight ahead.
2. You will hear the sides lock into the tabs.

Slide-Under/Flip Shelf

To adjust slide-under/flip shelf:

1. Pull front half shelf forward until its back
2. With front half fully below back half. lift

CAUTION

Do not clean glass shelves or covers with warm water when they are cold. Shelves and covers may break if exposed to sudden temperature changes or impact. such as bumping. Tempered glass is designed to shatter into many small. pebble-size pieces.

This is normal. Glass shelves and covers are heavy. Use both hands when removing them to avoid dropping.

NOTE

Leafy vegetables keep best when stored with the Humidity Control set on High Humidity. or in a drawer without a Humidity Control. This keeps incoming air to a minimum and maintains maximum moisture content. Store non-leafy vegetables and fruits still in their skins at the low humidity setting.

OPTIONAL FEATURES

Crisper Humidity Control (some models)

The crisper humidity control. present on the crisper drawers of some models. allows you to adjust the humidity within the crisper. This can extend the life of fresh vegetables that keep best in high humidity.

Low Humidity

High Humidity

Adjustable door bins

Some models have adjustable door bins that can be moved to suit individual needs.

To move door bin along a rail:

1. Tilt bin up so the back of the bin is off the
2. Slide bin along rail to desired position.
3. Lower bin back into place.

To move door bin from rail to rail:

1. Lift bin up disengaging the hook.

2. Move bin to desired rail location.
3. Push bin hook into rail engaging the hook.

Higher Humidity Lower Humidity

NOTE

Specific detail of front clip may vary by model.

OPTIONAL FEATURES

Crispers (some models)

The crispers, located under the bottom refrigerator shelf, are designed for storing fruits, vegetables, and other fresh produce.

Wash items in clear water and remove excess water before placing them in the crispers.

Items with strong odors or high moisture content should be wrapped before storing.

Pantry Drawer (some models)

Some models are equipped with a Pantry Drawer for storage of luncheon meats, spreads, cheeses, and other deli items. Please be sure to support glass when removing the drawer.

Store-More Drawer (some models)

The Store-More Drawer is located at the top of the refrigerator cabinet directly under the freezer.

To install the Store-More Drawer:

1. Fully extend drawer slides. Position rear

Apply

Downward Pressure

Clip Passes Through Opening

Tab Fits into Pocket

Lift Drawer and Separate

Slide Drawer

Hold "Slide"

"Rear Upper

Side Tab"

"Rear Upper Side Tab"

Pocket on "Clip" Pocket on "Clip"

3. For removal, hold slide with one hand and

2. Apply pressure to drawer while supporting

NOTE

Understanding the sounds you may hear

Your new, high-efficiency refrigerator may introduce unfamiliar sounds. These sounds normally indicate your refrigerator is operating correctly. Some surfaces on floors, walls, and kitchen cabinets may make these sounds more noticeable.

IMPORTANT

During the automatic defrost cycle, you may notice a red glow in the vents on the back wall of your freezer compartment. This is normal during the defrost cycle.

Following is a list of major components in your refrigerator and the sounds they can cause:

A Evaporator Refrigerant through the

B Evaporator fan You may hear air being

C Defrost heater During defrost cycles.

D Automatic ice maker When ice has

E Electronic defrost control These parts

F Condenser fan You may hear air being

G Compressor Modern, high-efficiency

H Water valve If your refrigerator is

I Drain pan (not removable) You may hear

J Condenser May create minimal sounds

NORMAL OPERATING SOUNDS AND SIGHTS

IMPORTANT

If the refrigerator door is left open for more than 5 minutes, an alarm will sound. The alarm will sound for 2 minutes and then stop. If the "Door Ajar" condition remains, the alarm will repeat every 30 minutes for two intervals.

After 15 minutes of a "Door Ajar" Condition, the unit will turn the refrigerator light off until the door is closed. The door switch in the refrigerator can be pressed and released to reset the alarm and light.

IMPORTANT

If you store or move your refrigerator in freezing temperatures, be sure to completely drain the water supply system. Failure to do so could result in water leaks when the refrigerator is put back into service. Contact a service representative to perform this operation.

CAUTION

- Pull the refrigerator straight out to move
- Damp objects stick to cold metal surfaces.

Do not touch refrigerated surfaces with wet or damp hands.

NOTE

If you set your temperature controls to turn off cooling, power to lights and other electrical components will continue until you unplug the power cord from the wall outlet.

Protecting your investment

Keeping your refrigerator clean maintains appearance and prevents odor build-up. Wipe up any spills immediately and clean the freezer and refrigerator compartments at least twice a year. When cleaning, take the following precautions:

- Never use CHLORIDE or cleaners with
- Do not wash any removable parts in a
- Always unplug the electrical power cord
- Remove adhesive labels by hand. Do not
- Do not remove the serial plate.

Do not use abrasive cleaners such as window sprays, scouring cleansers, brushes, flammable fluids, cleaning waxes, concentrated detergents, bleaches or cleansers containing petroleum products on plastic parts, interior doors, gaskets or cabinet liners. Do not use paper towels, metallic scouring pads, or other abrasive cleaning materials or strong alkaline solutions.

CARE & CLEANING

Care & Cleaning Tips

Part What To Use Tips and Precautions

Interior & Door Liners

- Soap and water
- Baking soda and

Door Gaskets

- Soap and water Wipe gaskets with a clean soft cloth.

Drawers & Bins

- Soap and water Use a soft cloth to clean drawer runners and tracks.

Glass Shelves

- Soap and water
- Glass cleaner

- Mild liquid sprays

Allow glass to warm to room temperature before immersing in warm water.

Toe Grille

- Soap and water
- Mild liquid sprays
- Vacuum attachment

Vacuum dust from front of toe grille. Remove toe grille (see Installation Instructions). Vacuum backside. wipe with sudsy cloth or sponge. Rinse and dry.

Exterior & Handles

- Soap and water
- Non Abrasive Glass

Cleaner

Do not use commercial household cleaners containing ammonia, bleach or alcohol to clean handles. Use a soft cloth to clean smooth handles.

DO NOT use a dry cloth to clean smooth doors.

Exterior & Handles

(Stainless Steel Models Only)

- Soap and water
- Stainless Steel

Cleaners

Never use CHLORIDE or cleaners with bleach to clean stainless steel.

Clean stainless steel front and handles with non abrasive soapy water and a dishcloth. Rinse with clean water and a soft cloth. Use a non-abrasive stainless steel cleaner. These cleaners can be purchased at most home improvement or major department stores. Always follow manufacturer's instructions. Do not use household cleaners containing ammonia or bleach.

NOTE: Always clean, wipe and dry with the grain to prevent scratching. Wash the rest of the cabinet well, and wipe dry with a clean soft cloth.

Replacing Light Bulbs

- Unplug refrigerator
- Wear gloves
- Remove light cover

(some models)

- Replace old bulb
 - Replace light cover
- (some models)

- Plug in the

CAUTION: Wear gloves when replacing light bulbs to avoid getting cut. Use same wattage when replacing bulb

LED Bulbs

- Call customer service

WARNING: Do not attempt to replace LED lights due to high voltage exposure.

CARE & CLEANING

Common Occurrences Before calling for service. review this list. It may save you time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Refrigerator does not run.

- Ensure plug is tightly pushed into electrical outlet.
- Check/replace fuse with a 15 amp time-delay fuse. Reset
- The refrigerator control is turned to "0" (Mechanical
- Refrigerator may be in defrost cycle. Wait 20 minutes

Compressor and/or fan does not run

- Refrigerator is going through a self diagnostic test. Allow 15 minutes to complete self test.

Freezer temperature is colder than preferred. Refrigerator temperature is satisfactory.

- Set auxiliary freezer control to a warmer setting until

Refrigerator temperature is too cold. Freezer temperature is satisfactory.

- Set refrigerator control to a warmer setting. Allow 24

Freezer temperature is warmer than preferred. Refrigerator temperature is satisfactory.

- Set auxiliary freezer control to a colder setting until

Refrigerator temperature is too warm. Freezer temperature is satisfactory.

- Set refrigerator control to a colder setting. Allow 24 hours

Refrigerator is noisy or vibrates.

- The cabinet is not level.

- Floor is weak.
- See Normal Operating Sounds and Sights section.

Odors in refrigerator.

- Interior needs to be cleaned.
- Foods that produce odors should be covered or wrapped.

Cabinet light not working.

- Replace light bulb.
- Ensure plug is tightly pushed into electrical outlet.
- Light switch may be stuck. Push in light switch. located

Automatic ice maker not working (some models)

- Ensure the wire signal arm is not in UP position.
- Ice maker should produce 2.5 to 3 pounds of ice in a 24
- Water supply is turned off.
- Water pressure is too low.
- The freezer is not cold enough.

Refrigerator makes beeping sound.

- Close door.
- Press light switch.

BEFORE YOU CALL

Visit our web site at www.frigidaire.com.

1-800-944-9044 (United States)

1-800-265-8352 (Canada)

MAJOR APPLIANCE WARRANTY

Your appliance is covered by a one year limited warranty. For one year from your original date of purchase. Electrolux will pay all costs for repairing or replacing any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions.

Exclusions

If You Need Service

This warranty does not cover the following:

1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
2. Product that has been transferred from its original owner to another party or removed outside
3. Rust on the interior or exterior of the unit.
4. Products purchased "as-is" are not covered by this warranty.
5. Food loss due to any refrigerator or freezer failures.
6. Products used in a commercial setting.
7. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances
8. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
9. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards,
11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry
13. Damages caused by: services performed by unauthorized service companies; use of parts other than

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES,

INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES,

OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES. SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

This warranty only applies in the USA and Canada. In the USA, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person

to change or add to any obligations under this warranty. Obligations for service and parts under this warranty as described or illustrated are subject to change without notice.

Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.

USA 1.800.944.9044 Frigidaire 10200 David Taylor Drive Charlotte, NC 28262

Canada

1.800.265.8352

Electrolux Canada Corp.

5855 Terry Fox Way

Mississauga, Ontario, Canada

L5V 3E4

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.