

Owner's manual Free-Standing, Slide-In, and Drop-In Electric Ranges GE JB850ST1SS

Contents

- Safety Instructions
- Operating Instructions
- Kitchen Timer
- Oven
- Adjust Oven Thermostat
- Baking or Roasting
- Broiling, Broiling Guide
- Controls
- Convection Oven
- Preheating
- Probe
- Sabbath Feature
- Self-Cleaning
- Slow Cook and Warming Features
- Special Features
- Steam Clean
- Timed Baking and Roasting
- Warming Drawer
- Surface Units
- Bridge Burner
- Cookware
- Glass Cooktop
- Warming Zone
- Care and Cleaning
- Aluminum Foil
- Control Knobs
- Control Panel
- Glass Cooktop
- Lift-Off Oven Door
- Light
- Oven Floor



- Oven Heating Elements
- Racks
- Removable Warming Drawer Pan
- Storage Drawer
- Surfaces
- Vent
- Troubleshooting Tips
- Accessories
- Consumer Support
- Warranty

Caution

- Do not store items of interest to children above a range or on the backguard of a range- children climbing on the range to reach items could be seriously injured.
- Use only dry pot holders - moist or damp pot holders on hot surfaces may result in burns from steam. Do not let pot holders touch hot surface units or heating elements. Do not use a towel or other bulky cloth in place of pot holders.
- Never use your appliance for warming or heating the room.
- Do not touch the surface units, the heating elements or the interior surface of the oven. These surfaces may be hot enough to burn even though they are dark in color. During and after use, do not touch, or let clothing or other flammable materials contact the surface units, areas nearby the surface units or any interior area of the oven; allow sufficient time for cooling first. Other surfaces of the appliance may become hot enough to cause burns. Potentially hot surfaces include the cooktop, areas facing the cooktop, oven vent opening, surfaces near the opening and crevices around the oven door.
- Do not heat unopened food containers. Pressure could build up and the container could burst, causing an injury.

Manual Cleaning

Do not use oven cleaners, abrasive cleaners, strong liquid cleansers, steel wool, scouring pads, or cleaning powders on the interior of the oven. Clean with a mild soap and water or vinegar and water solution. Rinse with clean water and dry with a soft cloth. When cleaning surfaces, make sure that they are at room temperature and not in direct sunlight.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

