 
 


# User Manual Hand Blender

## Parts and features

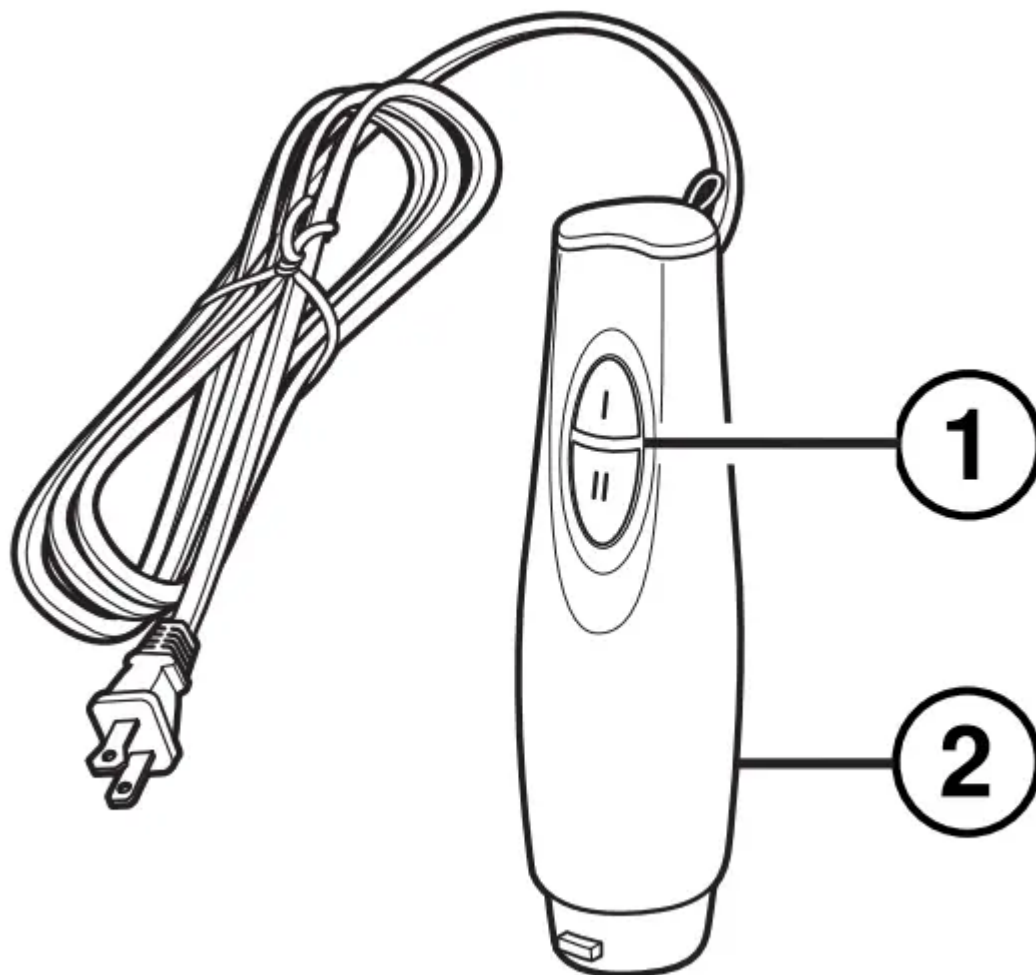

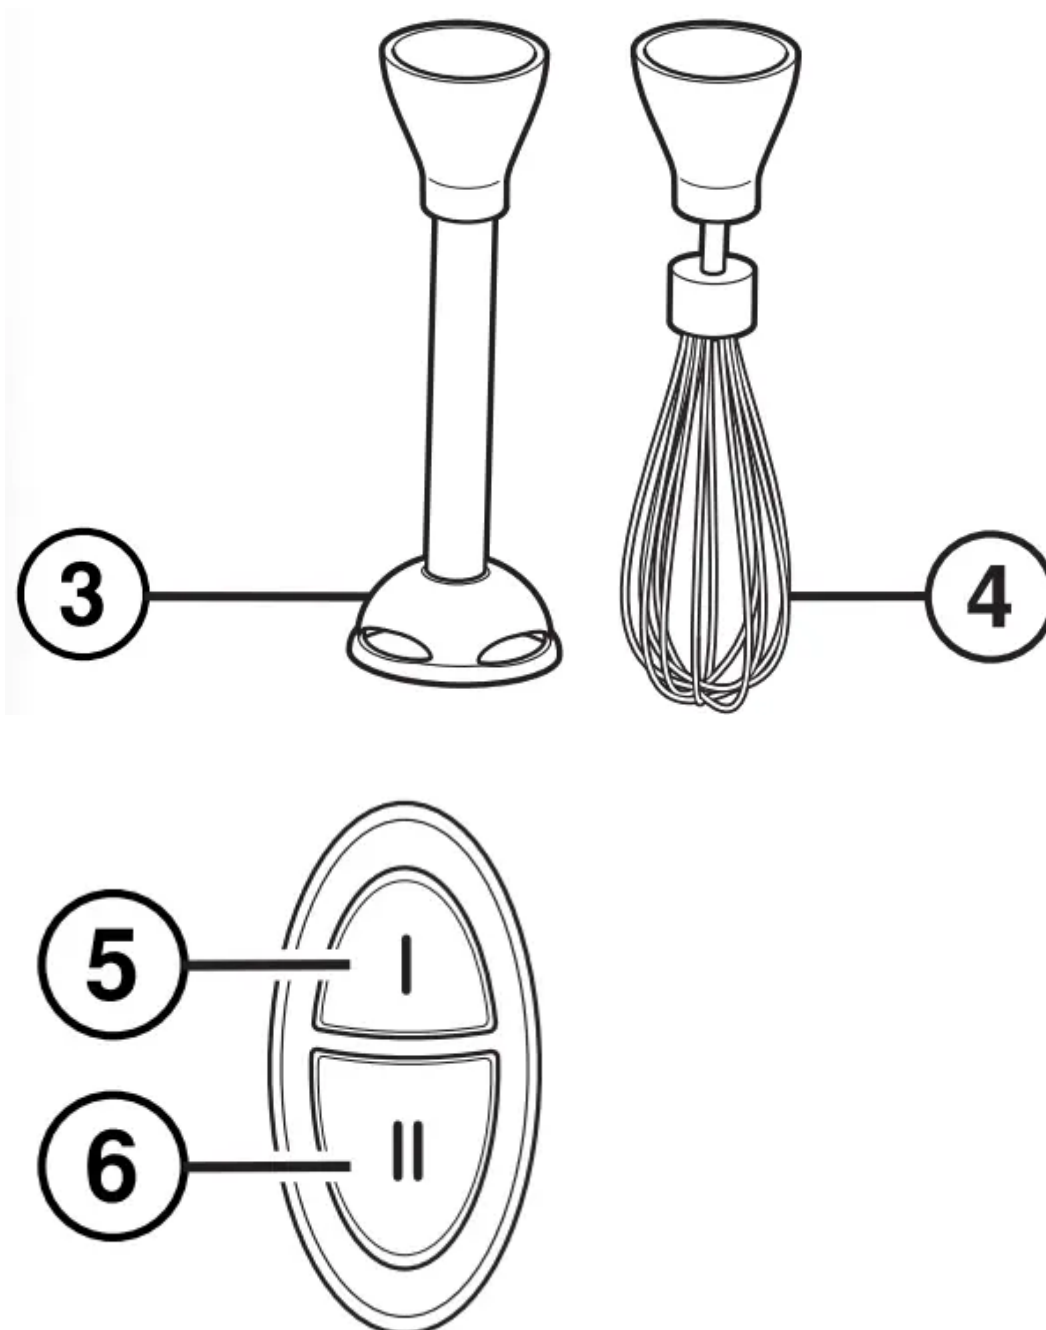


1. Speed Control Buttons
2. Motor Housing
3. Blending Attachment
4. Whisk Attachment
5. Low-Speed Button
6. High-Speed Button

**NOTE:** The maximum power rating is based on the blade attachment. The whisk attachment and chopper may draw significantly less power.

## Optional Accessories

(on select models)

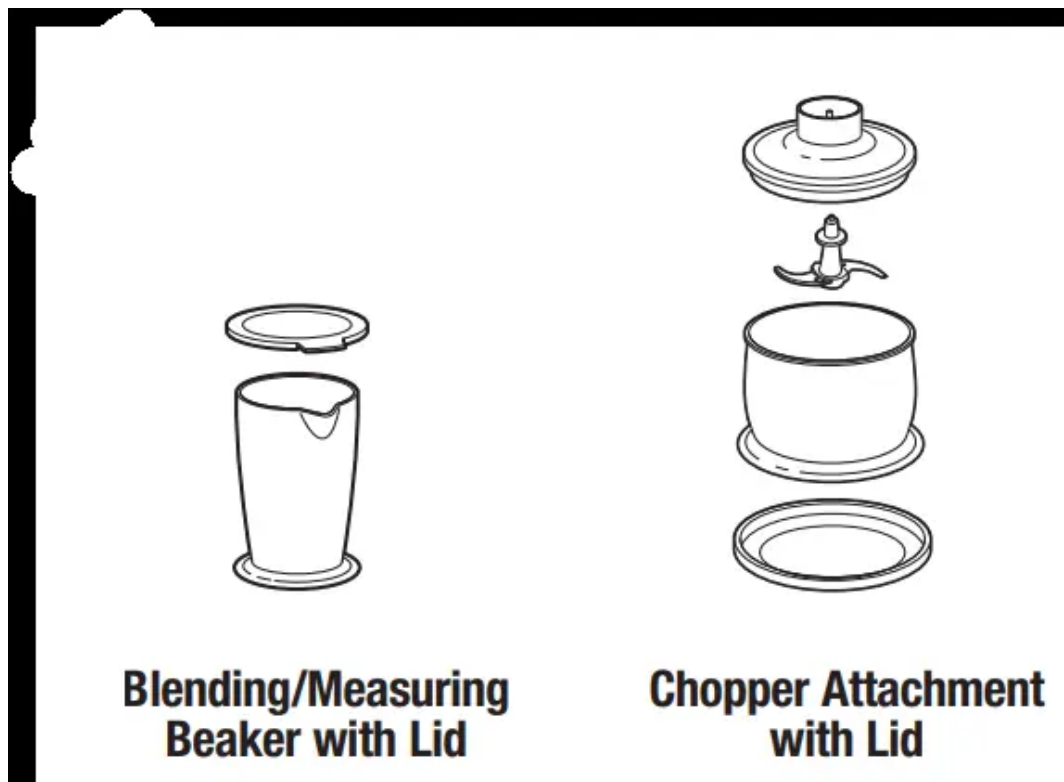

**Blending/Measuring  
Beaker with Lid**

**Chopper Attachment  
with Lid**

### How to use the hand blender/ whisk attachment

**WARNING Cut Hazard.** Always inspect attachments before each use. Do not use cracked, bent, or damaged attachments.

- The hand blender is not designed for use over a heat source.
  - This appliance is not intended to chop ice. Add ice to beverage after blending.
  - Do not immerse the motor housing past the top metal portion of each blending attachment.
1. Place food in a tall, deep container for blending. For best results, solid foods should be no larger than 1-inch (2.5-cm) chunks.
  2. Attach blending or whisk attachment to motor housing. Hold hand blender upright and turn motor housing clockwise to tighten and counterclockwise to loosen while holding the attachment.
  3. Plug into outlet.
  4. Grasp unit in hand. Push speed control button. Slowly move the attachment up, down, and sideways through the food.
  5. Do not immerse the motor housing past the top metal portion of each blending attachment.


6. Unplug from outlet when not in use.

## **How to use the chopper (optional accessory on select models)**

1. Place chopping blade into bowl, ensuring blade is seated securely. Put food into chopper bowl and place the motor housing on top, lining up the plastic notches. Twist clockwise to locked position.
2. Choose desired chopping speed (I or II) and process until food has reached desired consistency. Running the chopper continuously will yield smoother food consistency, while pulsing will yield chunkier results.
3. The rubber lid/base may also be used as a nonskid base under the chopper while in use.
4. Remove motor housing from chopper and food from chopping bowl. Unplug from outlet when finished.

## **Helpful hints**

- To use the hand blender in a saucepan, be sure to remove the pan from the stove.
- To puree foods, liquid is needed. Add cooking liquid, broth, juice, milk, or cream until desired consistency is reached.
- For thorough blending, move hand blender up and down in mixture until smooth.
- To achieve best blending results, use deep, tall containers.
- For easy cleanup, unplug hand blender and rinse attachments under running water immediately after using.
- The plastic lid of the measuring jar may be flipped upside down and placed underneath the base of the jar in order to provide a more stable surface while blending.

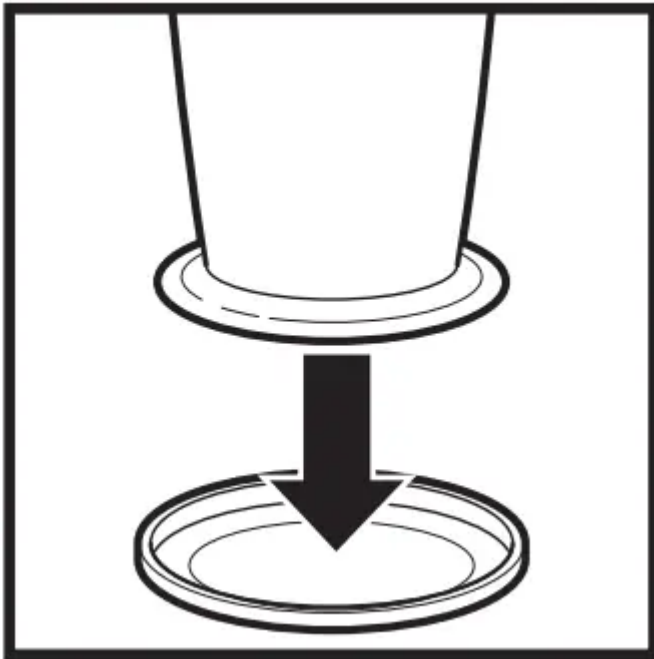

## How to clean the hand blender

1. Unplug unit from outlet.
2. Remove attachment from motor housing. Wash attachment in hot, soapy water. Rinse; then dry. Blending attachments may also be placed in the top rack of the dishwasher.

**WARNING Electric Shock Hazard.** Never hold motor housing portion of hand blender under running water. Simply wipe clean with a damp cloth.




## Blending guide

FOOD	SPEED	ATTACHMENT
Cake Mixes	LO	Blade
Eggs	HI	Whisk
Frozen Juice Concentrate	HI	Blade
Gravy or Sauces	LO	Whisk
Pureed Soups	LO	Blade
Milk Shakes	HI	Blade
Pancake Mix	LO	Whisk
Onions	LO	Chopper
Whipping Cream	HI	Whisk
Carrots	HI	Chopper

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
4. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
5. To protect against risk of electrical shock, do not put motor housing, cord, or plug in water or other liquid.

6. Avoid contact with moving parts. Keep hands, hair, clothing, and utensils away from blades and out of container during operation to prevent the possibility of severe injury to persons and/or damage to the appliance. A scraper may be used but must be used only when the unit is not running.
7. The use of attachments not recommended or sold by the appliance manufacturer for use with this model may cause fire, electric shock, or injury.
8. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
9. Blades are sharp; handle carefully.
10. Do not use over a stove or other heat source.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter.
13. Do not let cord contact hot surfaces, including the stove.
14. Turn the appliance OFF , then unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
15. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
16. Check that the appliance is OFF  before plugging cord into wall outlet. To disconnect, turn the control to OFF ; then remove plug from wall outlet. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

### SAVE THESE INSTRUCTIONS

#### Other consumer safety information

**This appliance is intended for household use only.**

**WARNING Shock Hazard:** This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

**BEFORE FIRST USE:** Wash attachments according to instructions.

## Limited warranty

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use.

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you. To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit [hamiltonbeach.com](http://hamiltonbeach.com) in the U.S. or [hamiltonbeach.ca](http://hamiltonbeach.ca) in Canada. For faster service, locate the model, type, and series numbers on your appliance

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.