

 
WARNING




CAUTION



DESCRIPTION OF COMPONENTS

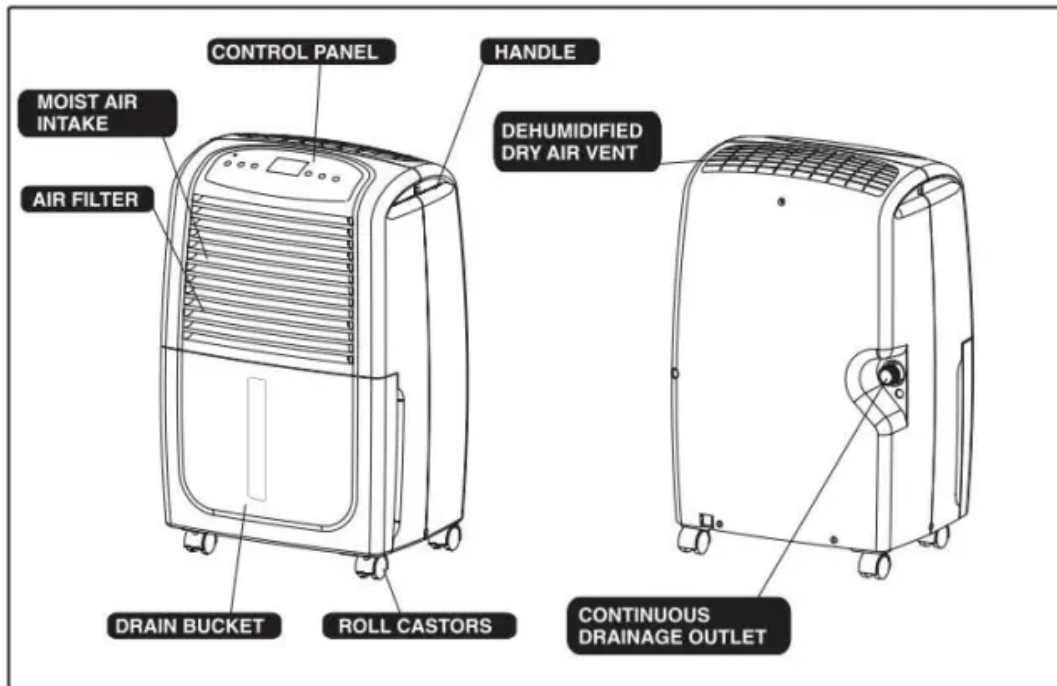

FUNCTION EXPLANATION

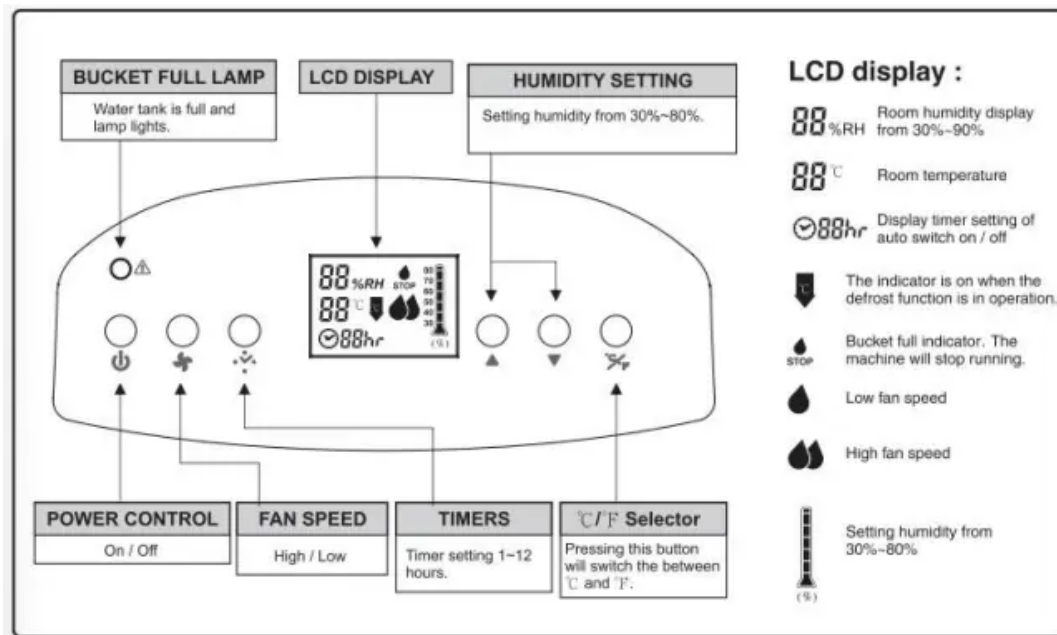 


OPERATING INSTRUCTIONS

Start Operation

1. Ensure that the unit is connected to the power socket



 2. Make sure the water tank is placed in proper position. (When plugged in for the first time the full tank lamp may light up. If so, just pull out the water tank then push it back to the proper position.)

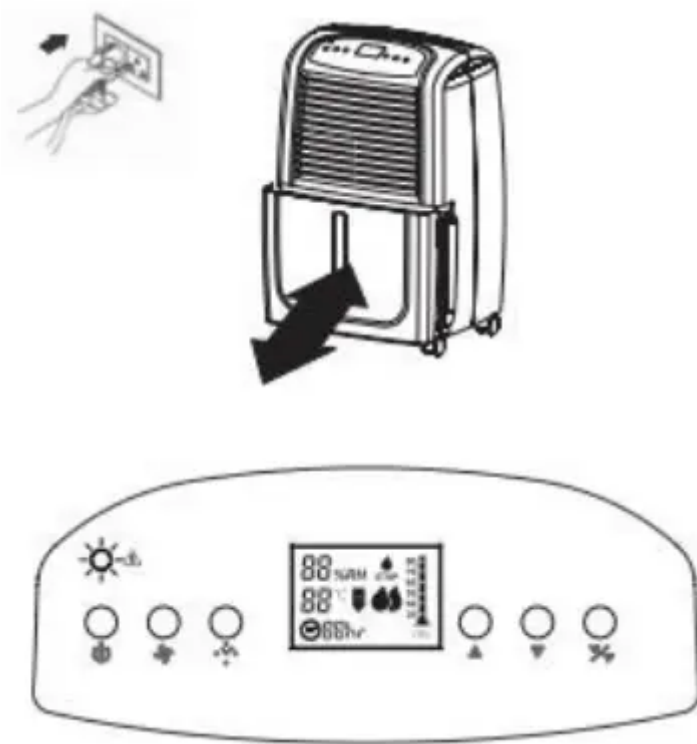


When Bucket Full Lamp Is On

When the water tank is full, the indication lamp will light up, and the dehumidifier will stop operating. Remove the water in the tank, then place the water tank back to its proper position and the machine will start operating again.



DEFROST

When operating in low temperatures the surface of the dehumidifier's coil may accumulate ice and affect the efficiency of the dehumidifier. When this happens the machine will go into periodic

 
defrost mode automatically. This is quite normal. Defrost icon  will come on, the compressor will cease operating and the fan will continue to operate until the ice has thawed. As soon as the ice has melted, the compressor will restart and continue the dehumidifying process. Defrost time may vary depending on room temperature and humidity.

The dehumidifier will operate in temperatures down to 5°C, however it is not recommended to use the dehumidifier in temperatures below 5°C. If the dehumidifier freezes up, turn the machine off for a few hours and then restart.

CASTOR WHEEL INSTALLATION







Castor wheel installation is recommended to avoid damage to floors .

1. Remove the castors from the bucket of the dehumidifier .
2. Position the dehumidifier on its side .
3. Locate the arrow on the bottom of the dehumidifier and insert the castor according to the arrow direction .
4. Slide the castor in as far as it will go. The castor will snap into place.
5. Repeat steps 1 to 4 for the other 3 castors.

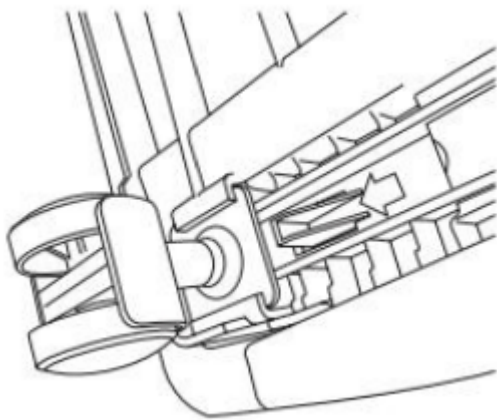



CONTINUOUS DRAINAGE

The function of continuous drainage can be started in following steps when there is a good conditions for drainage near by the dehumidifier.
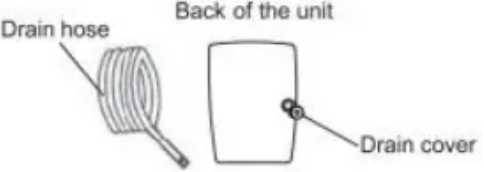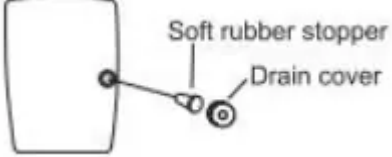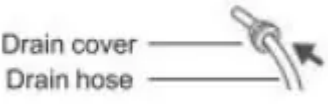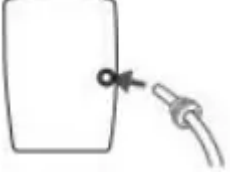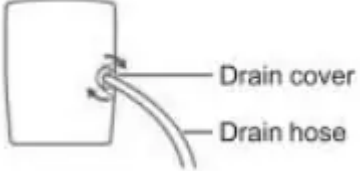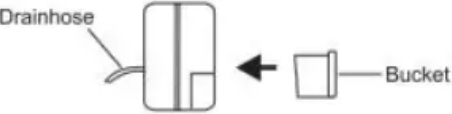
<p>1. To save having to periodically empty the water tank, this unit can be configured for continuous drainage. You can use the supplied drain hose to connect to the continuous drainage connector.</p>	 <p>Drain hose</p> <p>Back of the unit</p> <p>Drain cover</p>
<p>2. Unscrew and remove the drain cover at the rear of the unit.</p> <p>3. Remove the soft rubber stopper. Put it into the water tank for safe keeping.</p>	 <p>Soft rubber stopper</p> <p>Drain cover</p>
<p>4. Insert the drain hose through the hole of the drain cover.</p>	 <p>Drain cover</p> <p>Drain hose</p>
<p>5. Connect the drain hose to the drain port.</p>	
<p>6. Tighten the drain cover in clockwise direction onto the rear of the unit.</p>	 <p>Drain cover</p> <p>Drain hose</p>
<p>7. Place the water bucket back into its original position.</p>	 <p>Drainhose</p> <p>Bucket</p>

INSTALLING DRAINAGE PVC HOSE

  When using the function of continuous drainage, the PVC hose must be placed horizontally below the level of the drainage hole. Avoid uneven ground and kinking the hose.

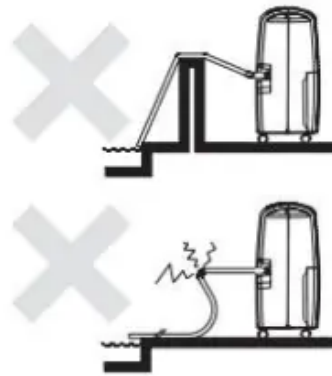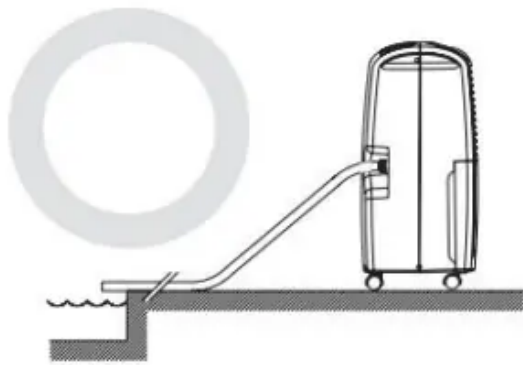

CAUTIONS

- Do not pull the power cord to avoid breaking cord, which may lead to danger.



 
- Do not use insect, oil or paint spray around the machine, it might cause damage to the plastic parts or start a fire.

 


- Do not place the machine on an uneven surface, to avoid shaking, noise and leakage of water.



- Always keep the unit 20 cm away from the wall to dissipate the heat properly.

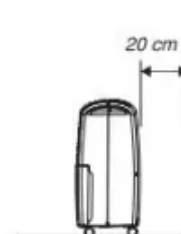

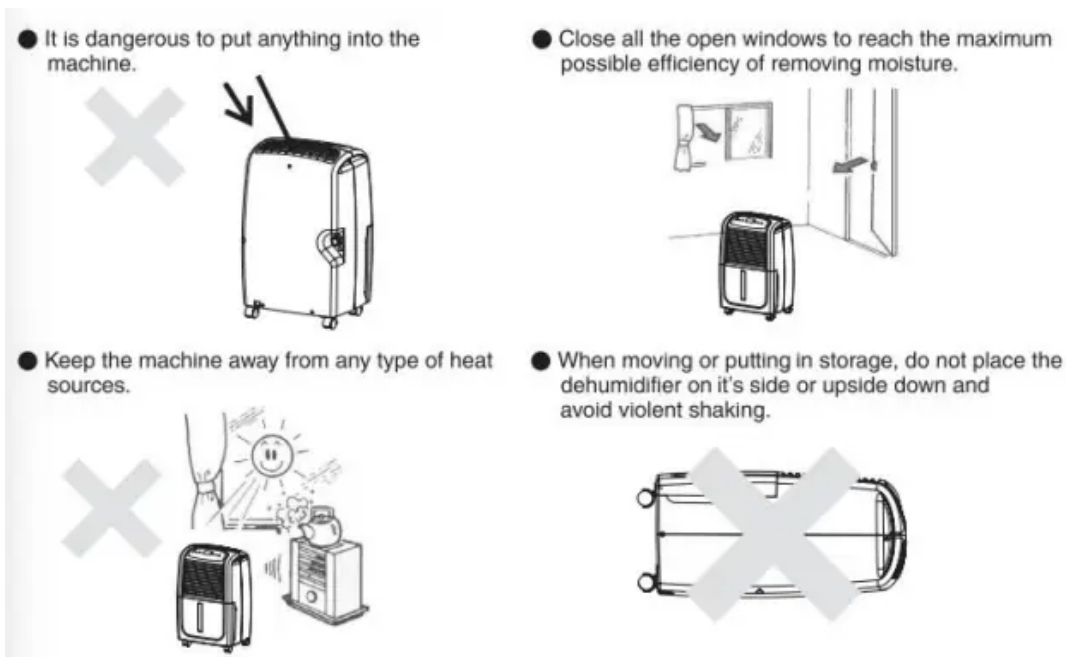

MAINTENANCE

For safety reasons, make sure the dehumidifier is unplugged before servicing or cleaning the machine.



1. Cleaning the shell

- A. Wipe the shell with a clean, soft cloth.
- B. If the dehumidifier is very dirty, use mild detergent then wipe off the detergent with semi dried cloth.
- C. Do not wash the machine with a hose or immerse it in water.

2. Cleaning the air filter

 
The air filter filtrates the dust and impurities in the air. For optimum dehumidifying efficiency clean the air filter every two weeks or as required.

Cleaning Steps :

- A. Pull the air filter out gently.



B. Clean the filter with a vacuum cleaner or wash it with clean water and dry with a dry cloth.

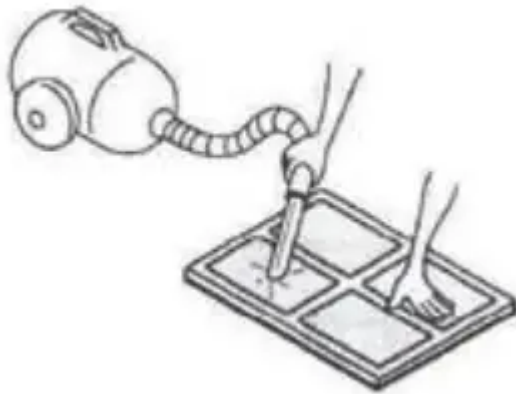

C. Put the clean air filter back in place and continue to operate the dehumidifier.

SPECIFICATION

MODEL	WDH-930DA
POWER	220-240V~ 50Hz
MOISTURE REMOVAL	20 L/D (27°C 60%RH) 35 L/D (30°C 80%RH)
POWER INPUT	520W
SIZE OF SHELL (W*H*D)	340*545*250
WEIGHT	13.5 kg
OPERATING TEMPERATURE	5°C~32°C

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)